Installation Instruction

Linear Drain Collection

Rainlex

1. Please read this installation instructions carefully before proceeding.
2. Thoroughly inspect the product and components, contact our support team with **Service@Rainlex-store.com** to report any damaged or missing components for a replacement, return or repair.
3. Consult local building codes to ensure the installation complies with standards in your area. The warranty will be void if the product is installed with a conspicuous defect.
4. We recommend a flow rate no greater than 12 GPM for use with this product.
5. The information provided in this instruction are general guidelines and a licenced professional should always be used during installation.

Grating and Parts

Three styles of stainless steel grating options available:

Note: Always wipe the Decorative Finish with a soft cloth after each use.

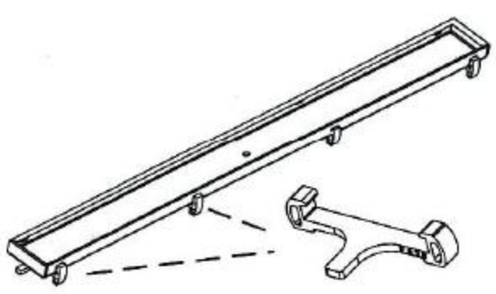

Tile tray clips

A. Tile insert tray

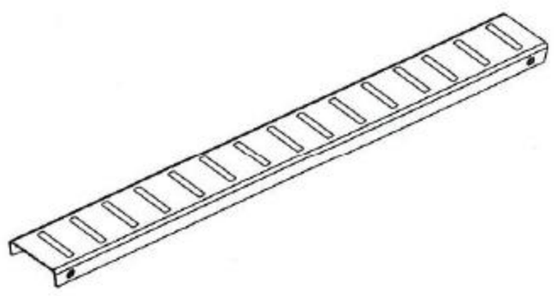

B. Patterned grating

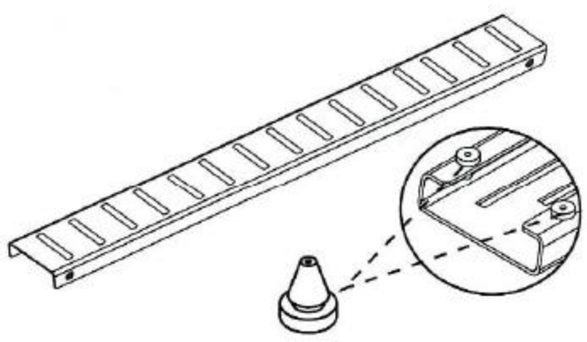

Cushion gaskets

C. Decorative finish grating

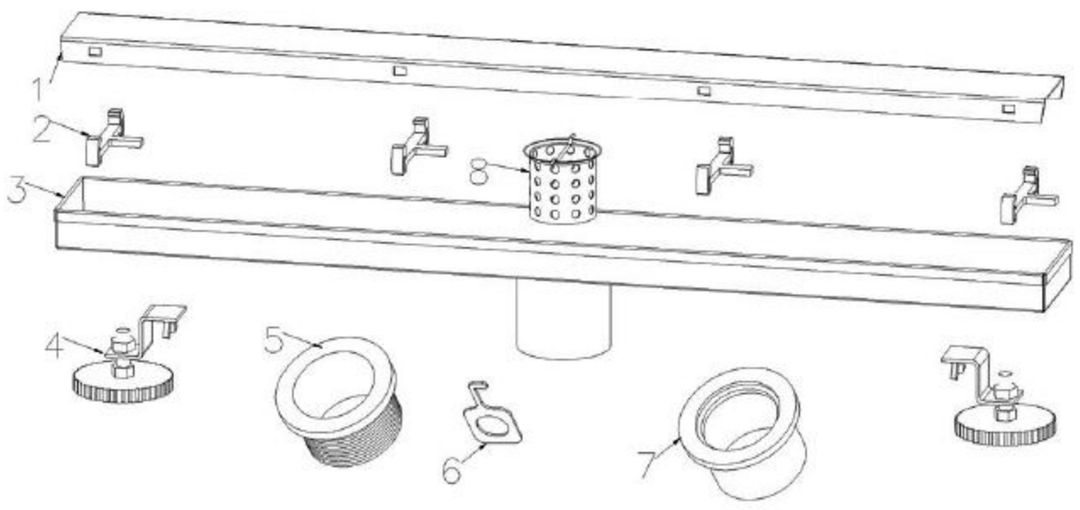

PARTS LIST

1. **Linear Shower Drain Cover**
2. **T-shape Bracket 4 PCS** (Only for Tile-in Drain)
3. **Liner Shower Drain Body**
4. **Leveling Feet 2 PCS**
5. **Threaded Adapter**
6. **Lifting Hook**
7. **Rubber Coupler**
8. **Hair Strainer**

Preparation

The **substrate** should be smooth, level, clean and free of all dirt, oil, laitance, paint, concrete sealers or curing compounds. Dry dusty concrete slabs or masonry should be dampened and excess water swept off.

The following **tools and materials** maybe needed: Hole Saw, Crescent Wrench, Level, Utility Knife, Ruler or Tape measure, Pencil, Notched Trowel, Weep protectors, Silicone, Solvent Cement.

For the traditional type of waterproofing, the professional should build a **shower pan** in the wet/shower area with PVC, Vinyl, Lead or Fiberglass material, then the drain usually connect to the waste line with a mechanical clamp down drain flange (drain base), some model do not include such flange and need separately purchase before installation.