



PROPOSED TOOLS FOR INSTALLATION :

- Large utility knife between tiles
- Grout float
- Glass cutter or
- Manual tile cutter or
- Wet tile saw with diamond blade

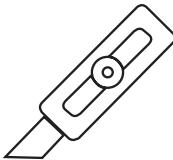

HOW TO INSTALL 2X SPEEDTILES GLASS MOSAICS :

- 1 Please ensure that the wall where you are installing the SpeedTiles is CCLEAN, SMOOTH, LEVELED and NON-POROUS.
- 2 **STICKING TIP: Use a 500 ml to 750 ml bottle filled with water and add 1 to 2 tea spoon(s) of mild dishwashing liquid.**
- 3 Then find the highest countertop point and draw a level line from that point.
This line will serve as a guide to install the first row of tiles.
- 4 Place the tile (pre-cut if needed) with the glass side facing the countertop and remove the Inoxia protection paper.
Spray a SMALL amount of soapy water mix on the adhesive and spread it with your hand over the whole surface. Adding soapy water will allow you to perfectly adjust the tile on the wall by delaying the bonding time.
- 5 Once the tiles are in place, apply the grout of your choice following the manufacturer's instructions.

HOW TO CUT THE GLASS

Use a non-permanent marker to draw a cutting line.

Stick masking tape along the cutting line. The masking tape must be placed on the piece of tile that will be installed.

Cut the surface following the drawn line, according to the instructions for the tool you will be using.




Sand the cut edge (120 grade sandpaper) to soften the edge.

BEFORE INSTALLING!

It is highly recommended to inspect the tiles one by one.

HERRAMIENTAS NECESARIAS:

- Cuchillo multiuso grande entre los azulejos
- Llana para lechada
- Cortadora de azulejos manual o
Cortador de vidrio o
- Sierra de mesa par cortes de losa

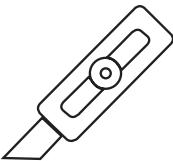

PROCEDIMIENTO PARA INSTALAR LOS 2X SPEEDTILES DE VIDRIO:

- 1 Asegúrese de que la pared donde instalará los azulejos SpeedTiles sea LISA, LIMPIA, NIVELADA y NO POROSA.
- 2 **TRUCO PARA PEGAR: Utilice una botella de entre 500 ml y 750 ml, llénela con agua y agregue 1 a 2 cucharada(s) de té de detergente para vajilla suave.**
- 3 Encuentre el punto más elevado de la encimera y trace una línea a nivel a partir de ese punto.
Esta línea servirá de guía para instalar la primera hilera de azulejos.
- 4 Coloque el azulejo de vidrio (pre-cortado si necesario) con el lado de vidrio hacia la encimera y retire el papel protector Inoxia.
Vaporice una PEQUEÑA cantidad de la mezcla de agua jabonosa sobre el adhesivo y extiéndalo con la mano sobre toda la superficie.
El agregar agua jabonosa le permitirá ajustar perfectamente el azulejo al prolongar el tiempo de adhesión.
- 5 Una vez que los azulejos estén en su lugar, aplicar la lechada elegida siguiendo las instrucciones del fabricante.

PROCEDIMIENTO PARA CORTAR EL VIDRIO

Con un marcador no permanente trace una línea de corte.

Pegue una cinta adhesiva protectora a lo largo de la línea de corte.

La cinta protectora debe ser colocada sobre la parte del azulejo que será instalada.

Proceda a cortar el azulejo siguiendo la línea trazada, según las instrucciones de uso de la herramienta escogida.

Lije el borde cortado (Papel de lija de grano 120) para suavizar el borde cortado.

¡ANTES DE INSTALAR!

Se recomienda encarecidamente examinar cada uno de los mosaicos.