



ASSEMBLY INSTRUCTIONS

TWIN HOUSE BED WITH TRUNDLE












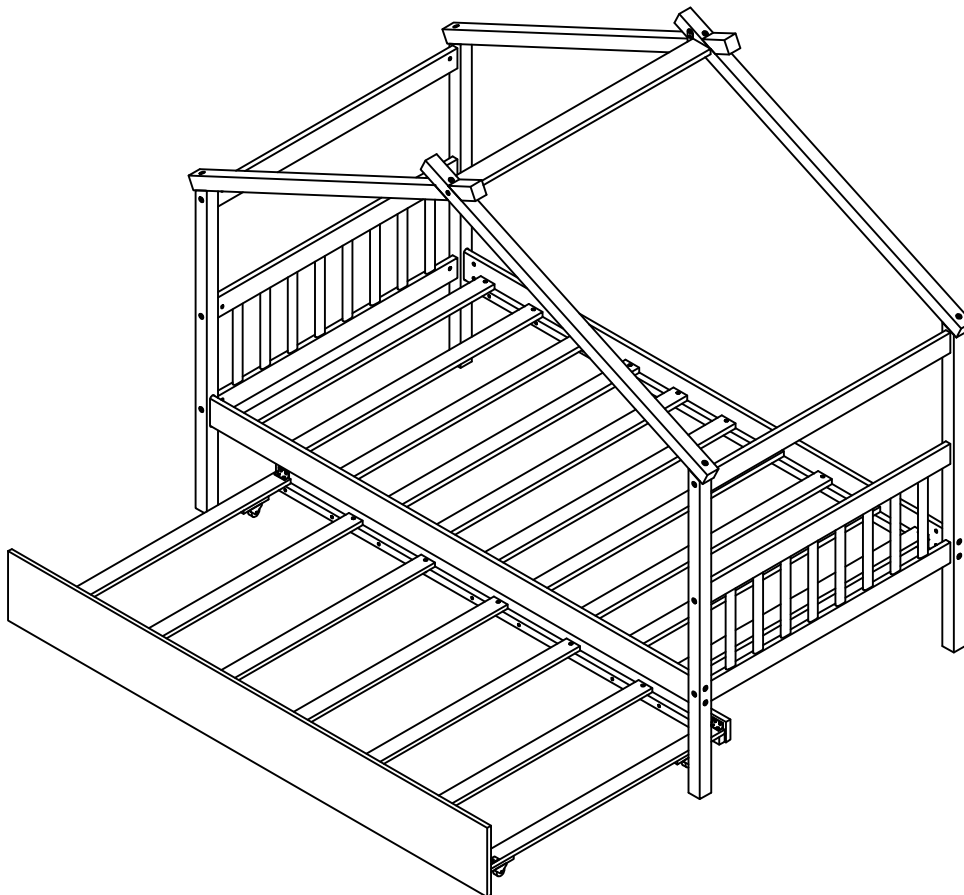


WF300800





Detail View

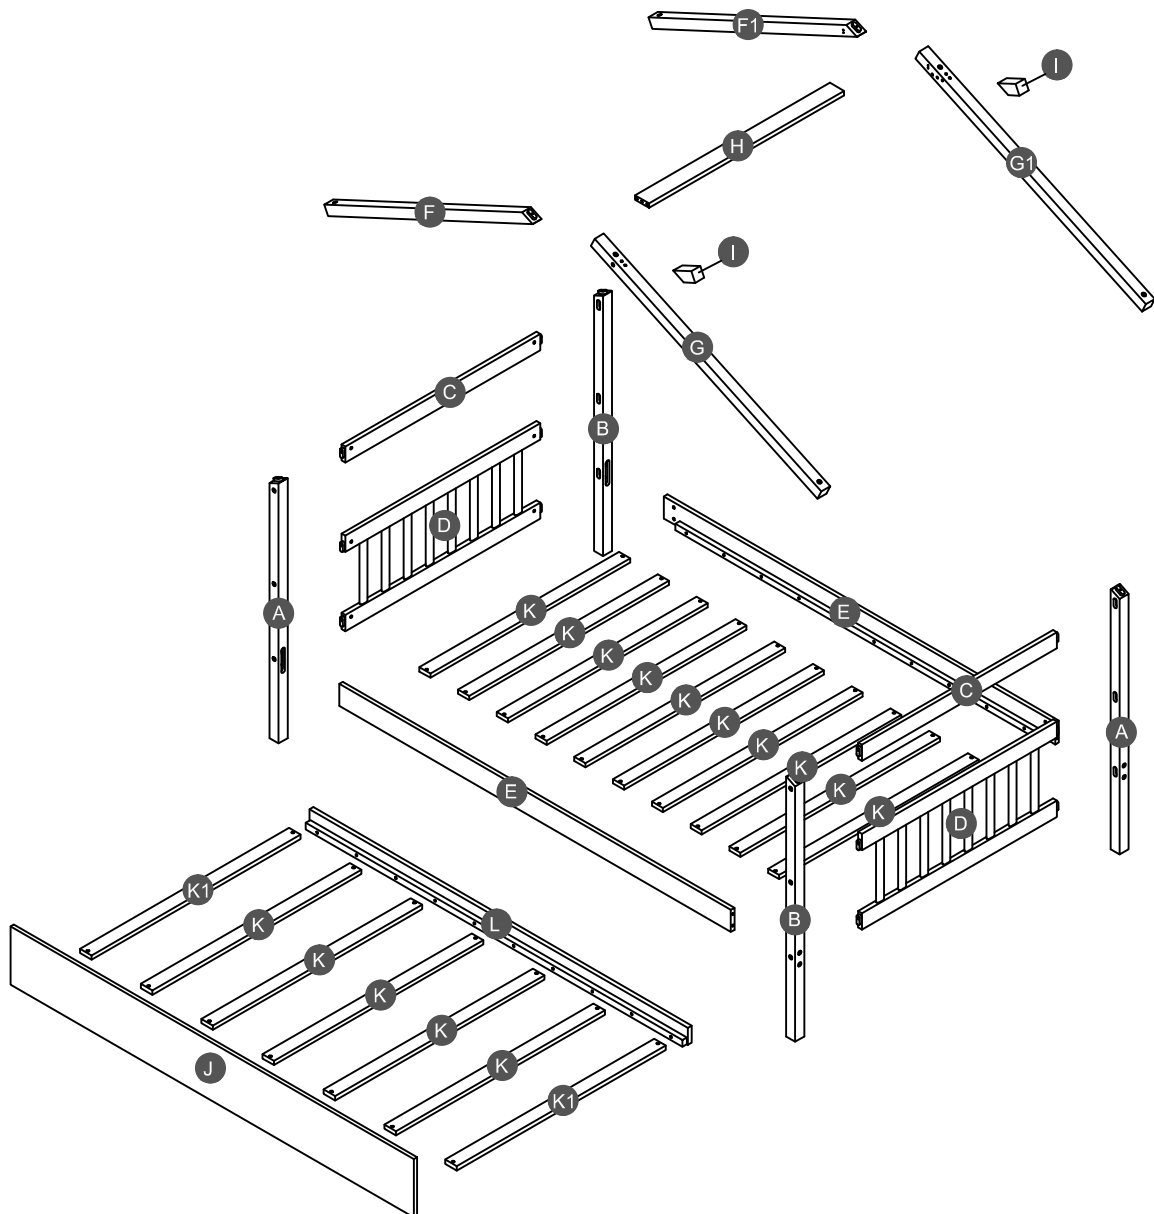


Part List

A  Leg (Left Front/Right Back) - 2pcs	B  Leg (Left Back/Right Front) - 2pcs	C  Horizontal bar HB/FB - 2pcs
D  Frame HB/FB - 2pcs	E  Side rail - 2pcs	F  Upper (Left Front) - 1pc
F1  Upper (Left Back) - 1pc	G  Upper (Right Front) - 1pc	G1  Upper (Right Back) - 1pc
H  Upper horizontal bar - 1pc	I  Block - 2pcs	J  Front panel of Trundle - 1pc
K  Slats - 15pcs	K1  Slats - 2pcs	L  Back panel side rail of Trundle -1pc

Hardware List


1	 Ø8*30mm Wood dowel (6pcs)	2	 (Ø15)1/4"*100mm Hex-Head bolts (8pcs)	3	 (Ø15)1/4"*80mm Hex-Head bolts (14pcs)
4	 (Ø12)1/4"*65mm Hex-Head bolts (8pcs)	5	 1/4"*15 (9.5mm) Horizontal-Hole bolts(22pcs)	6	 (1/4")4.5*58mm Allen key (1pc)
7	 Ø4*30mm Wood screws (42pcs)	8	 Ø3.5*19mm Wood screws (8pcs)	9	 Ø3.5*15mm Wood screws (16pcs)
10	 75*20*2 mm Metal bracket (2pcs)	11	 95*95*18*3mm Metal bracket (2pcs)	12	 40*18*18*2mm Metal bracket (2pcs)
13	 100*63*20mm Wheels (4pcs)				

ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)




PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE POSITION WHEN YOU USE POWER TOOLS !


STEP 1:

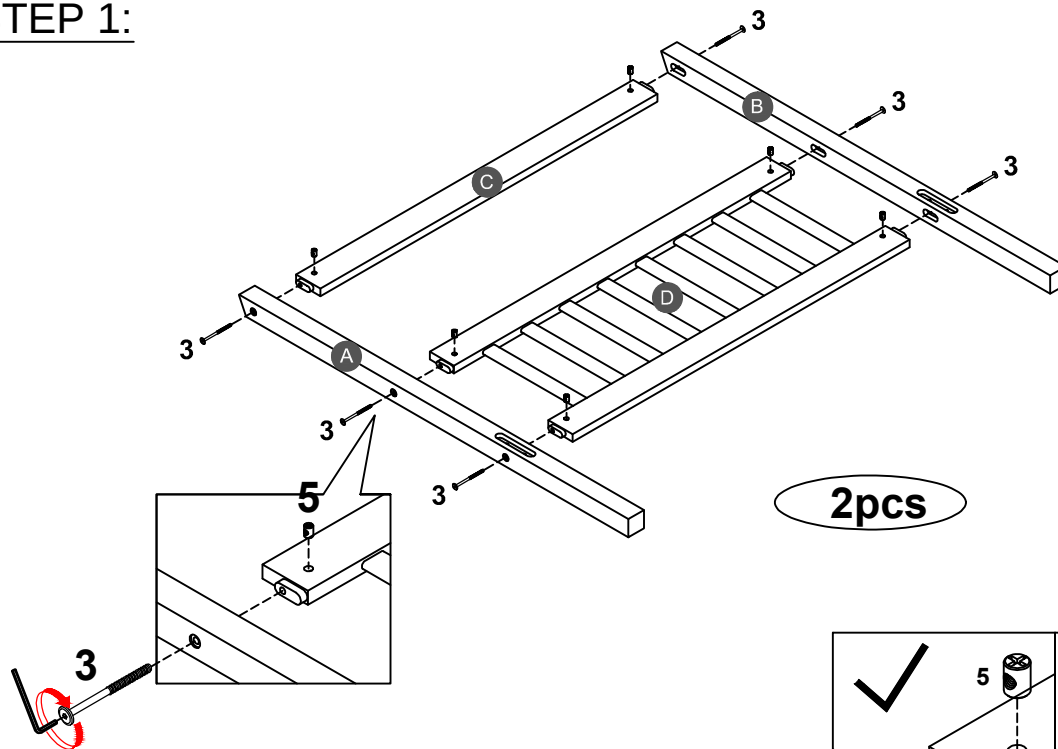


Note: Part 5 will face up with the "x" mark on it, otherwise it cannot be tightened

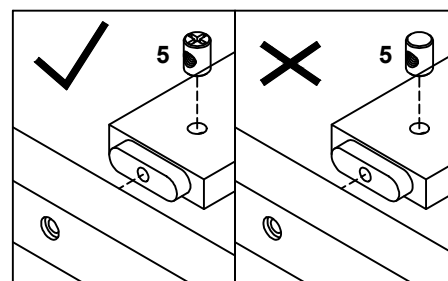


STEP 2:

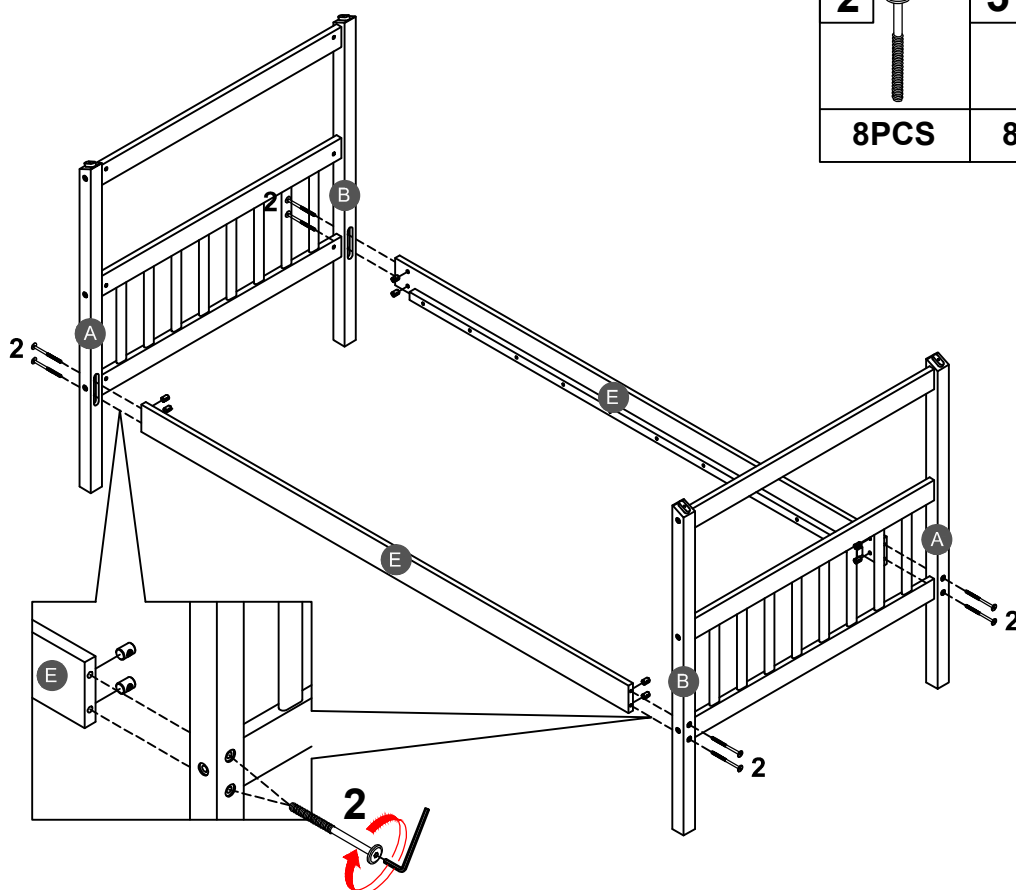


STEP 3:

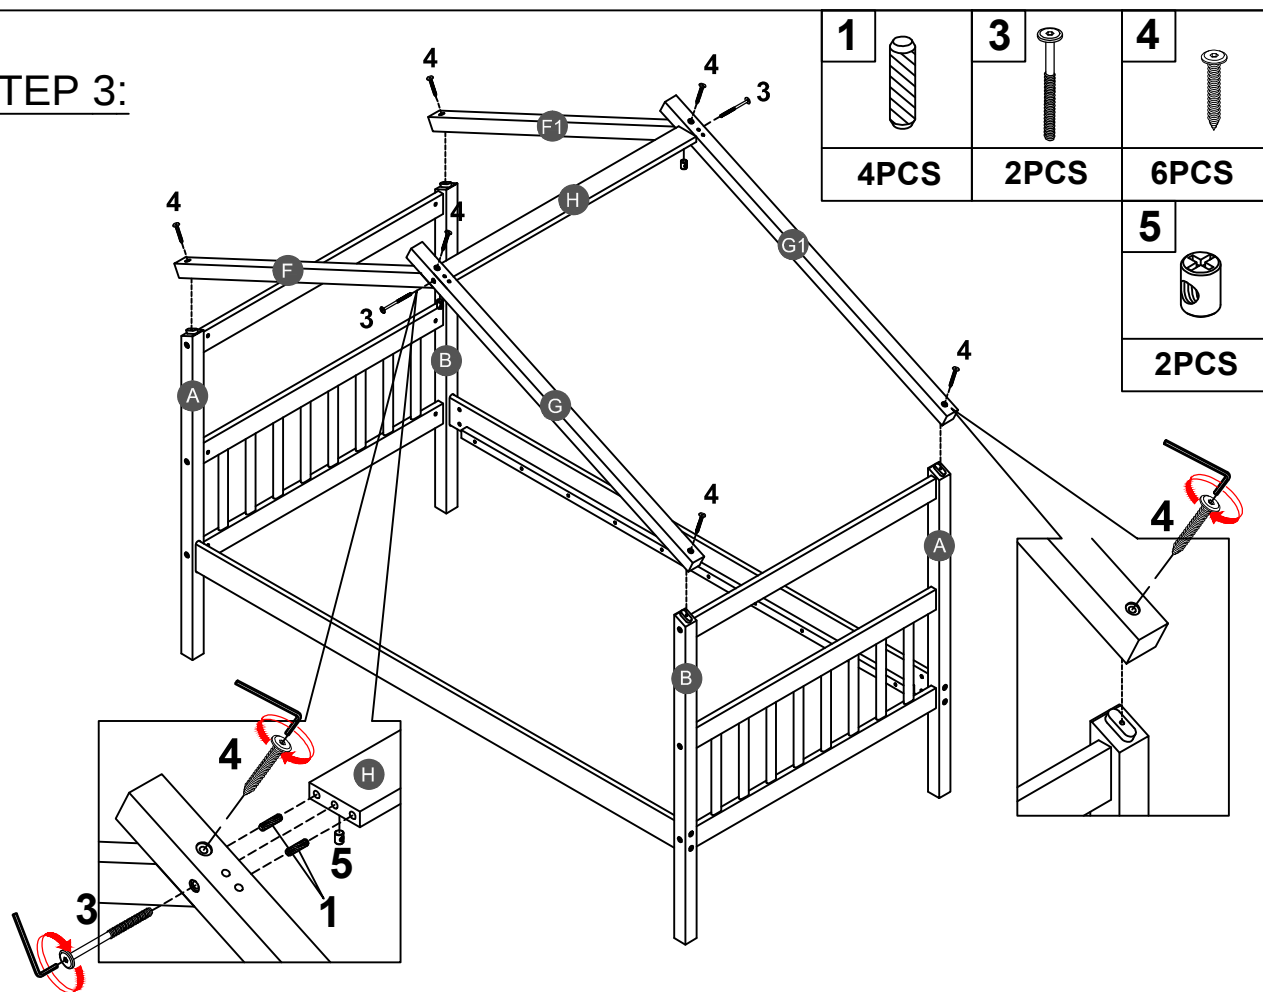


STEP 4:

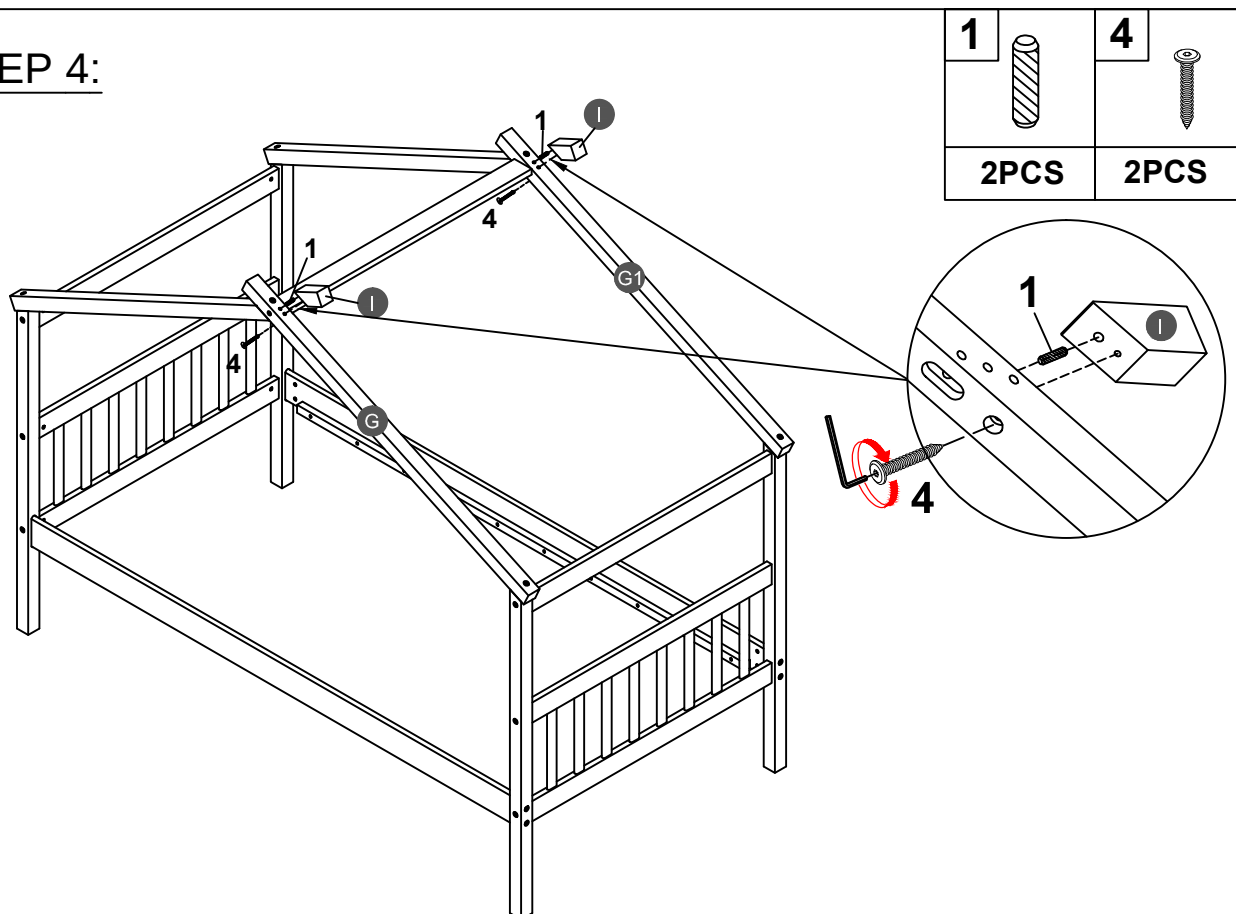



STEP 5:

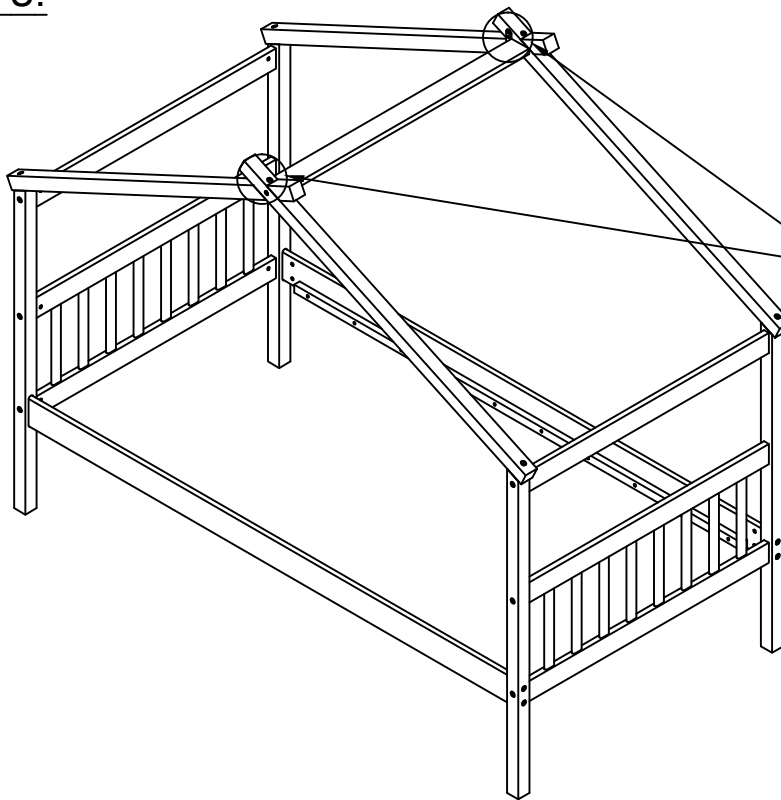

8	10
	
8PCS	2PCS

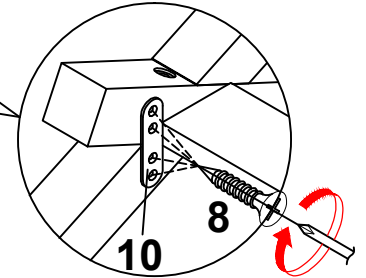


STEP 6:

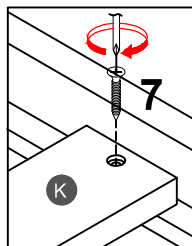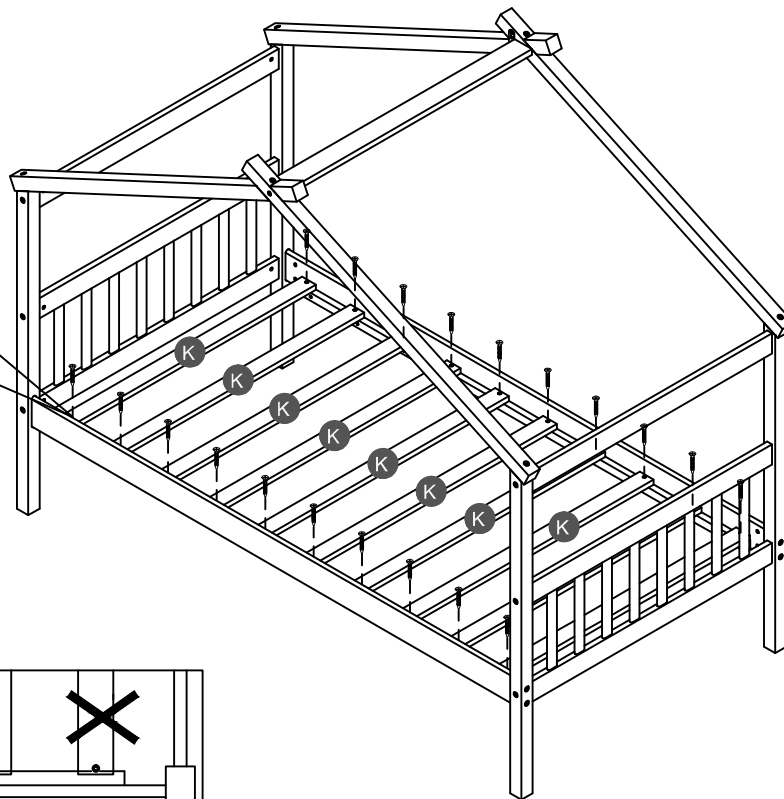


7

20PCS

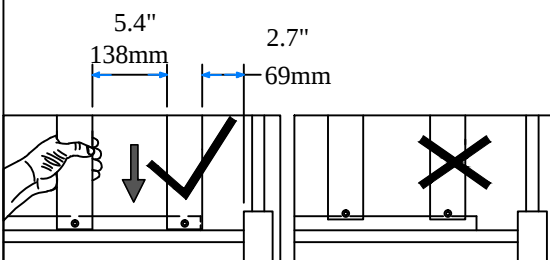

Note: Do not lock the screws of the bed slats to the outermost edge of the bed slats, you need to leave a certain space at the edges, otherwise it will cause the board to break. Do not lock the bed slats on the edge of the wood, please hold firmly before screwing, hold it in place with one hand, then lock the screw.

STEP 7:

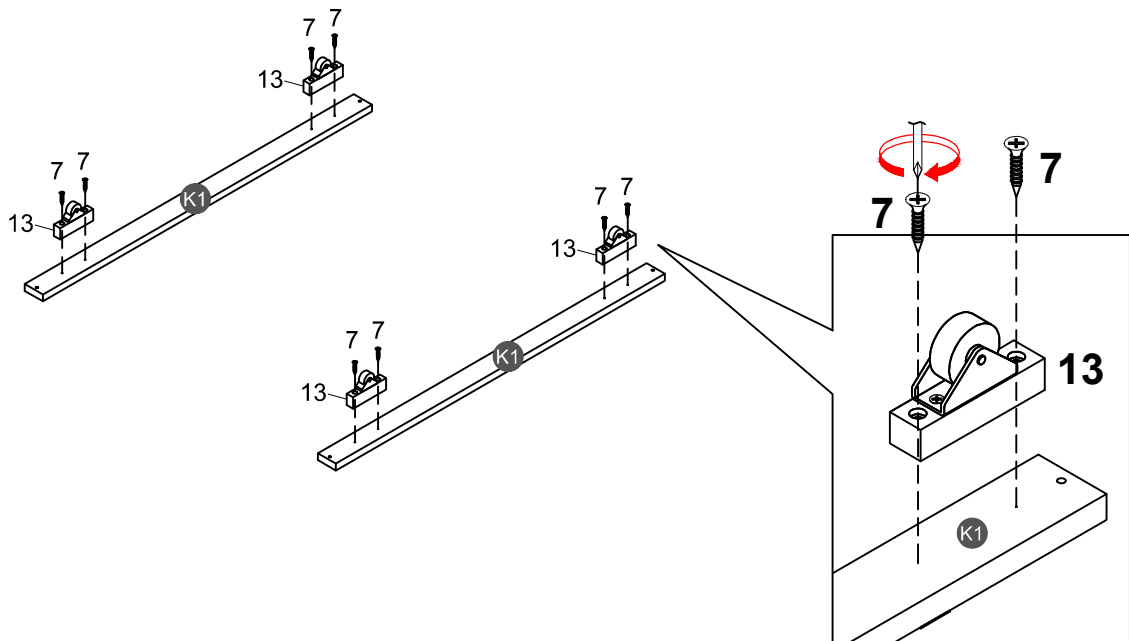

7




8PCS

13



4PCS



STEP 8:

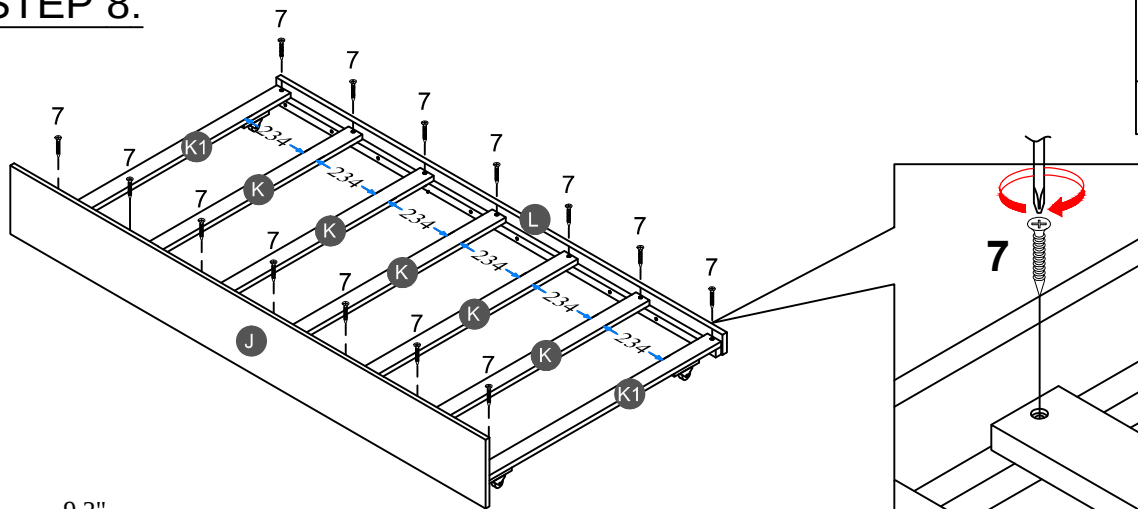

7





14PCS

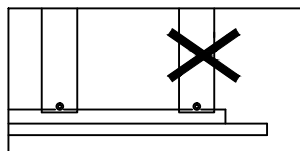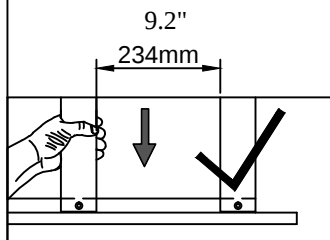

Note: Do not lock the screws of the bed slats to the outermost edge of the bed slats, you need to leave a certain space at the edges, otherwise it will cause the board to break.
Do not lock the bed slats on the edge of the wood, please hold firmly before screwing, hold it in place with one hand, then lock the screw.


STEP 9:

9		11	
8PCS		2PCS	

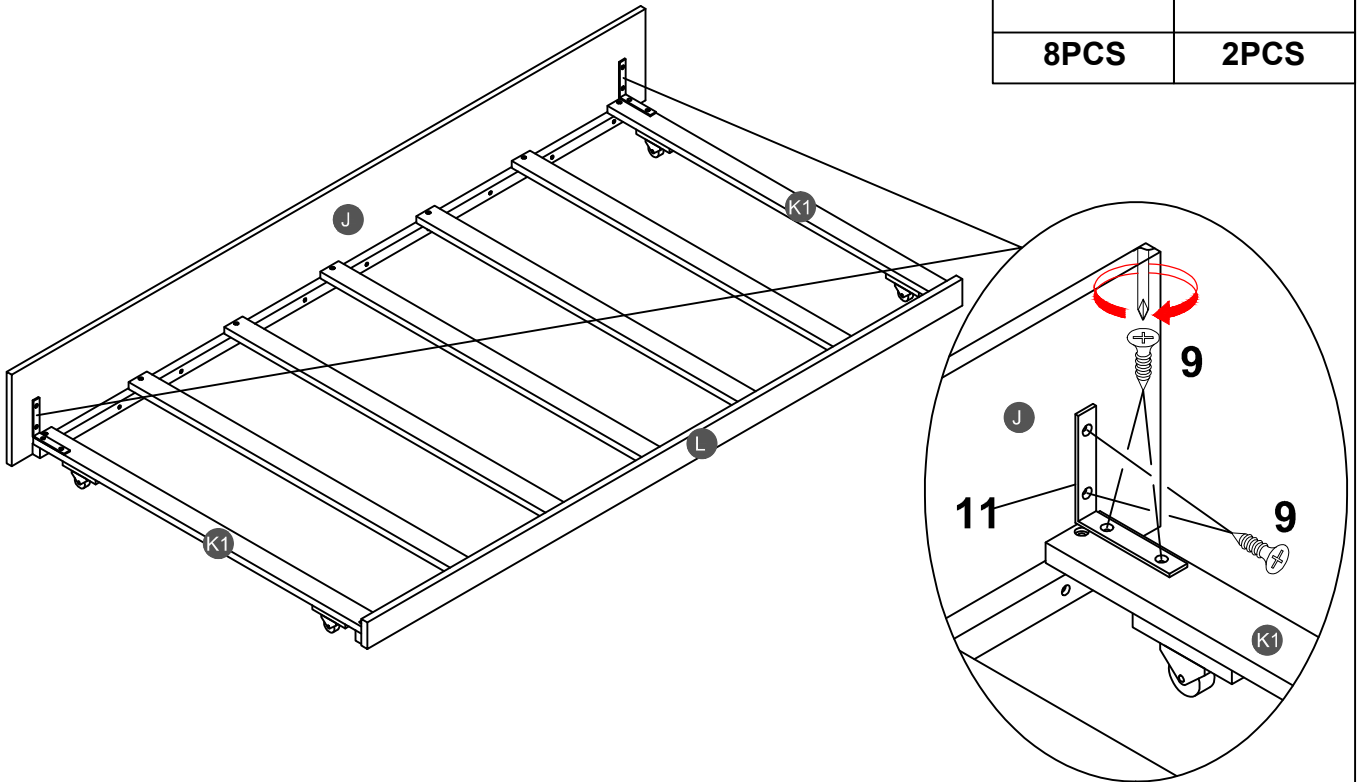


STEP 10:

9		12	
8PCS		2PCS	

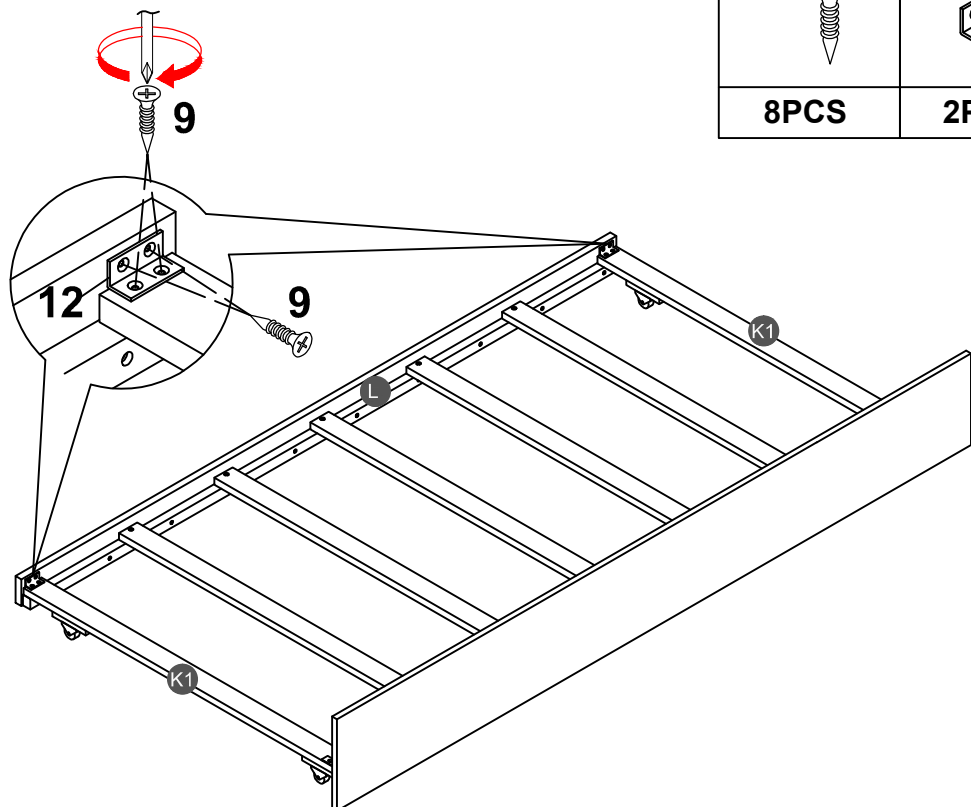

STEP 11:

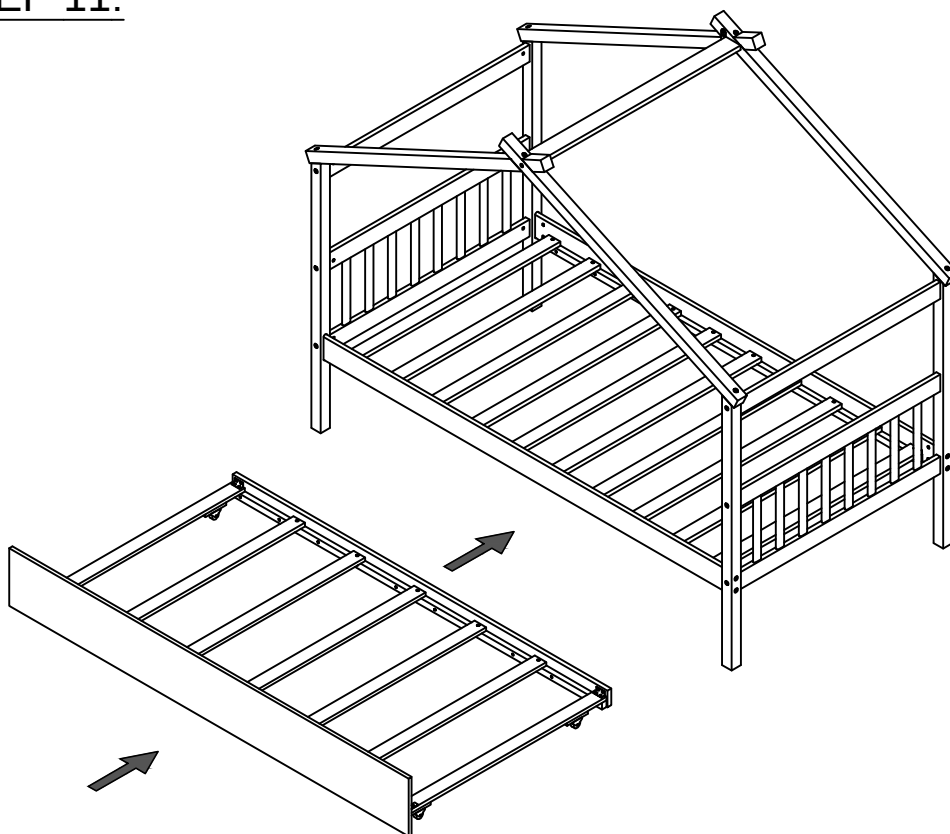

Push Trundle and Drawer under the bottom of Bunkbed.

