
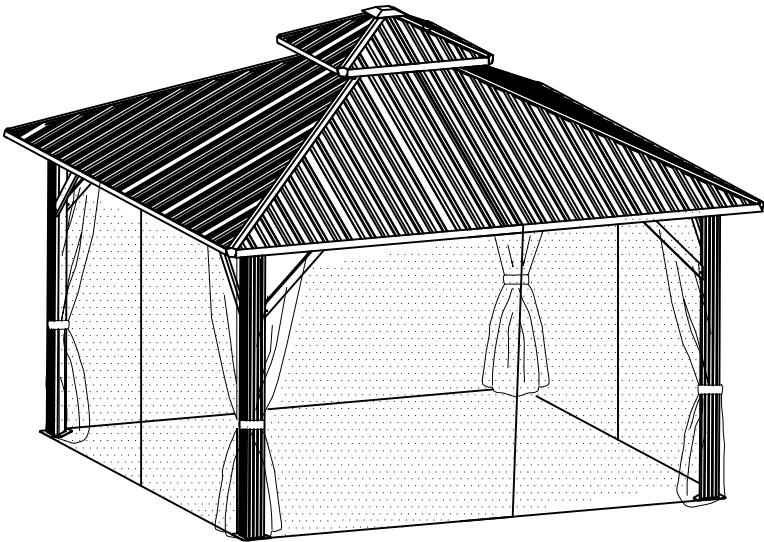





12X12FT






Item no.	Reference Image	Qty.
A		X4
B		X4
B1		X4
E1		X4
Ea		X4
Eb		X4
F1		X8














ASSEMBLY INSTRUCTIONS

Item no.	Reference Image	Qty.
G1		X4
G3		X4
G5		X4
G6		X4
H		X4
H1		X4
J		X4
K		X4
K1		X4
L		X1
M		X1
N		X12
N1		X4

ASSEMBLY INSTRUCTIONS

Item no.	Reference Image	Qty.
P		X4
Q1		X4
Q2		X4
Q3		X4
Q4		X4
Q5		X4
Q6		X4
Q7		X4
Q8		X4
S		X4
Sa		X4
T		X4
T1		X4

ASSEMBLY INSTRUCTIONS

Item no.	Reference Image	Qty.	Item no.	Reference Image	Qty.
U		X112	V1		X2
W		X4	V2		X2
W3		X4	W1		X4
Z		X72	Y		X116
1	 M6X16mm	X144	Z1		X16
3	 M6X25mm	X9	2	  M6X23mm	X72
5	  M6X10mm	X8	4	 ST4.8X12mm	X16
7	  M6X47mm	X32	6	  M6X42mm	X4
9		X12	8		X16
12	 M5X12mm	X12	10	 	X1
14		X12	13		X1
16		X12	15		X1
18		X4	17		X12


ASSEMBLY INSTRUCTIONS

1

X4





Ⓐ 4pcs



ⓙ 4pcs




① 12pcs

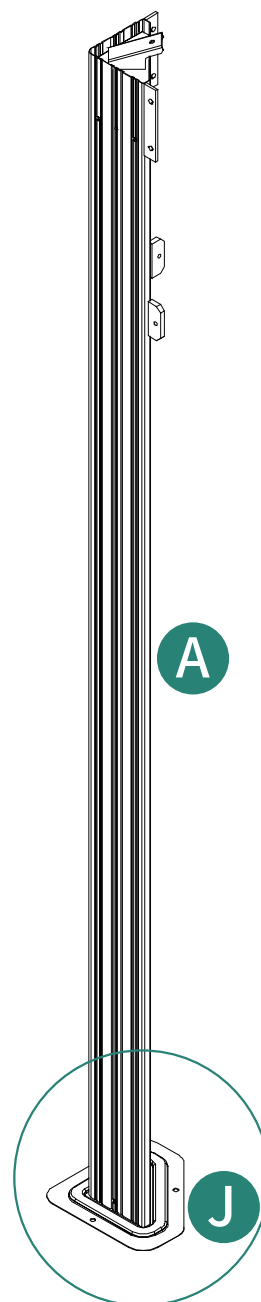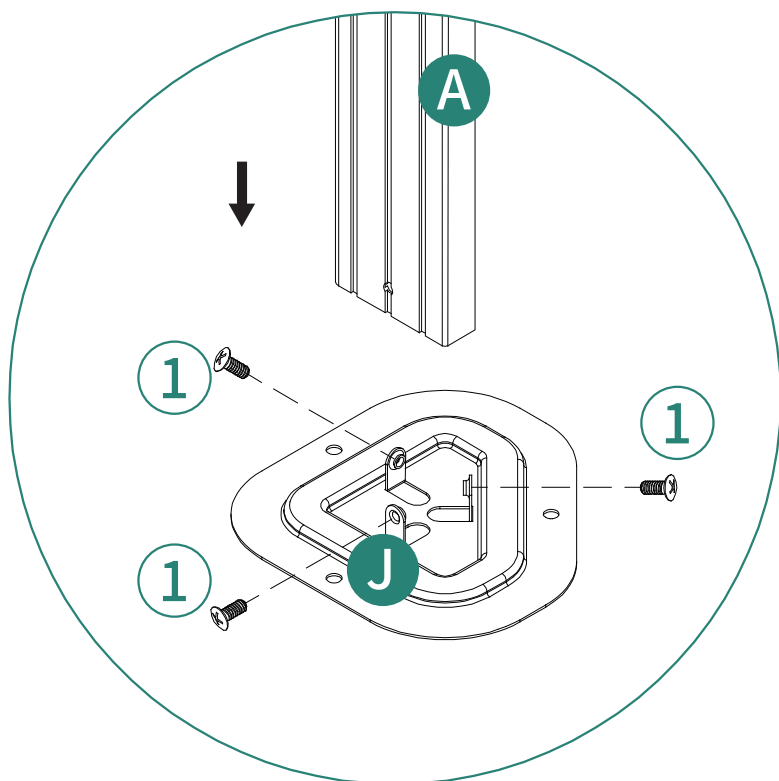

ASSEMBLY INSTRUCTIONS

2


X4



Ⓑ 4pcs



Ⓑ1 4pcs



Ⓟ 4pcs






Ⓢ 112pcs



① 32pcs

When connecting B and B1 via P, make sure that 1 holes on part P (as shown in the picture) should be facing upwards. Do not install it upside down.

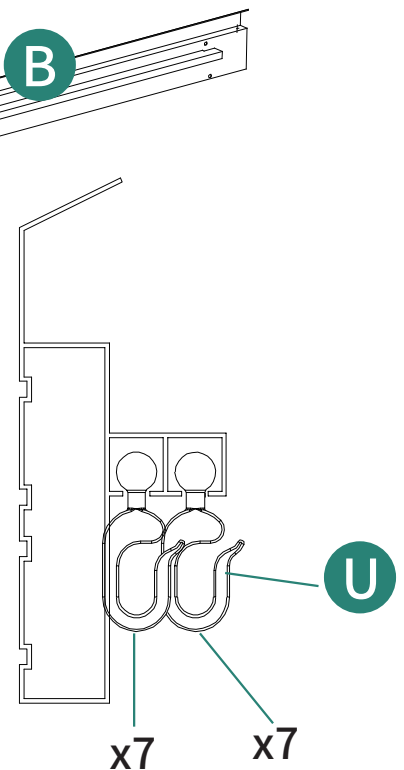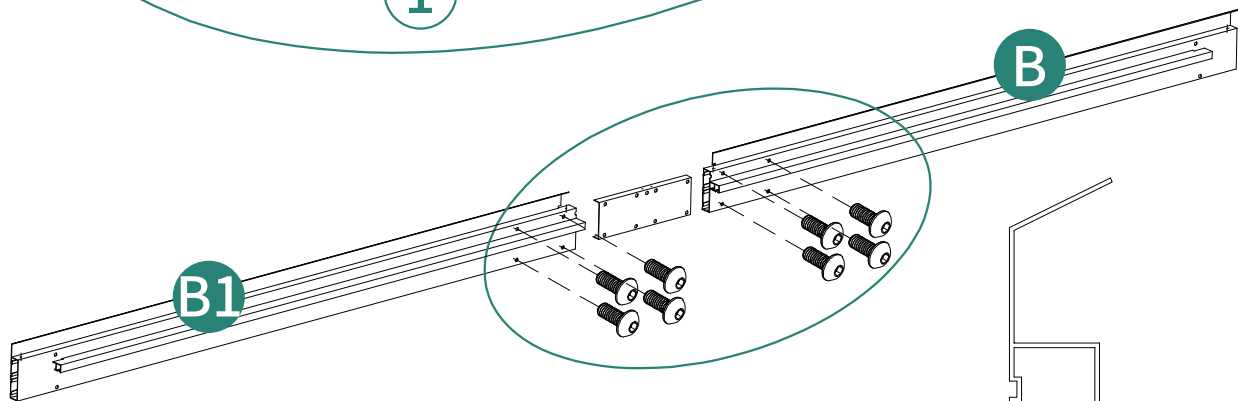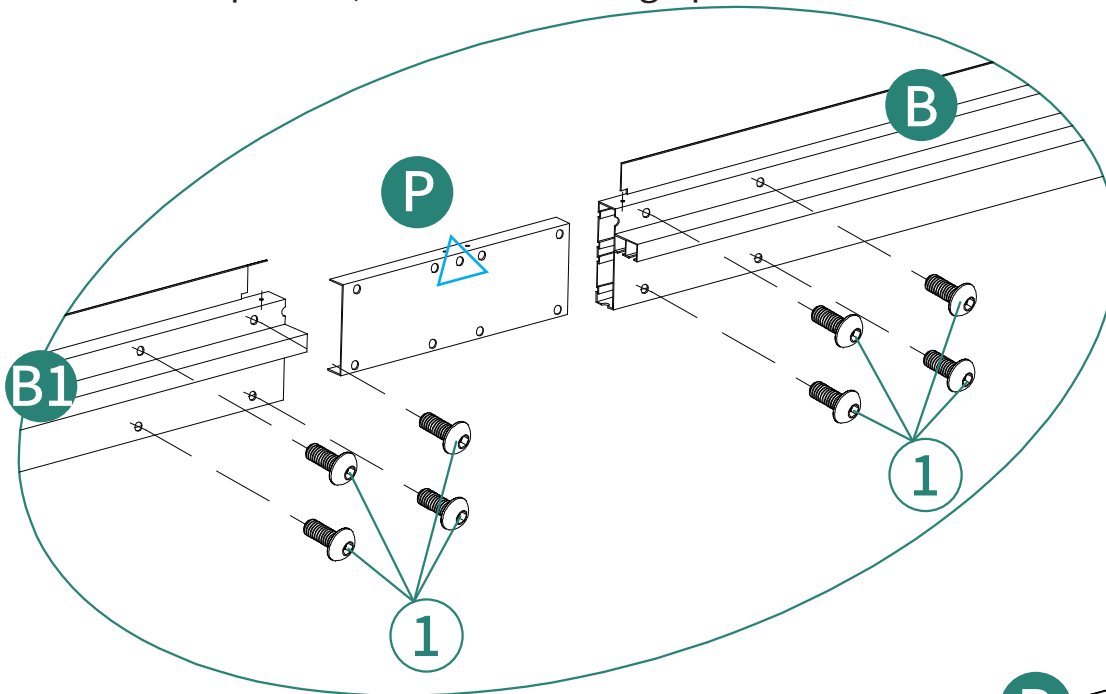


ASSEMBLY INSTRUCTIONS

3



① 16pcs ⑧ 16pcs

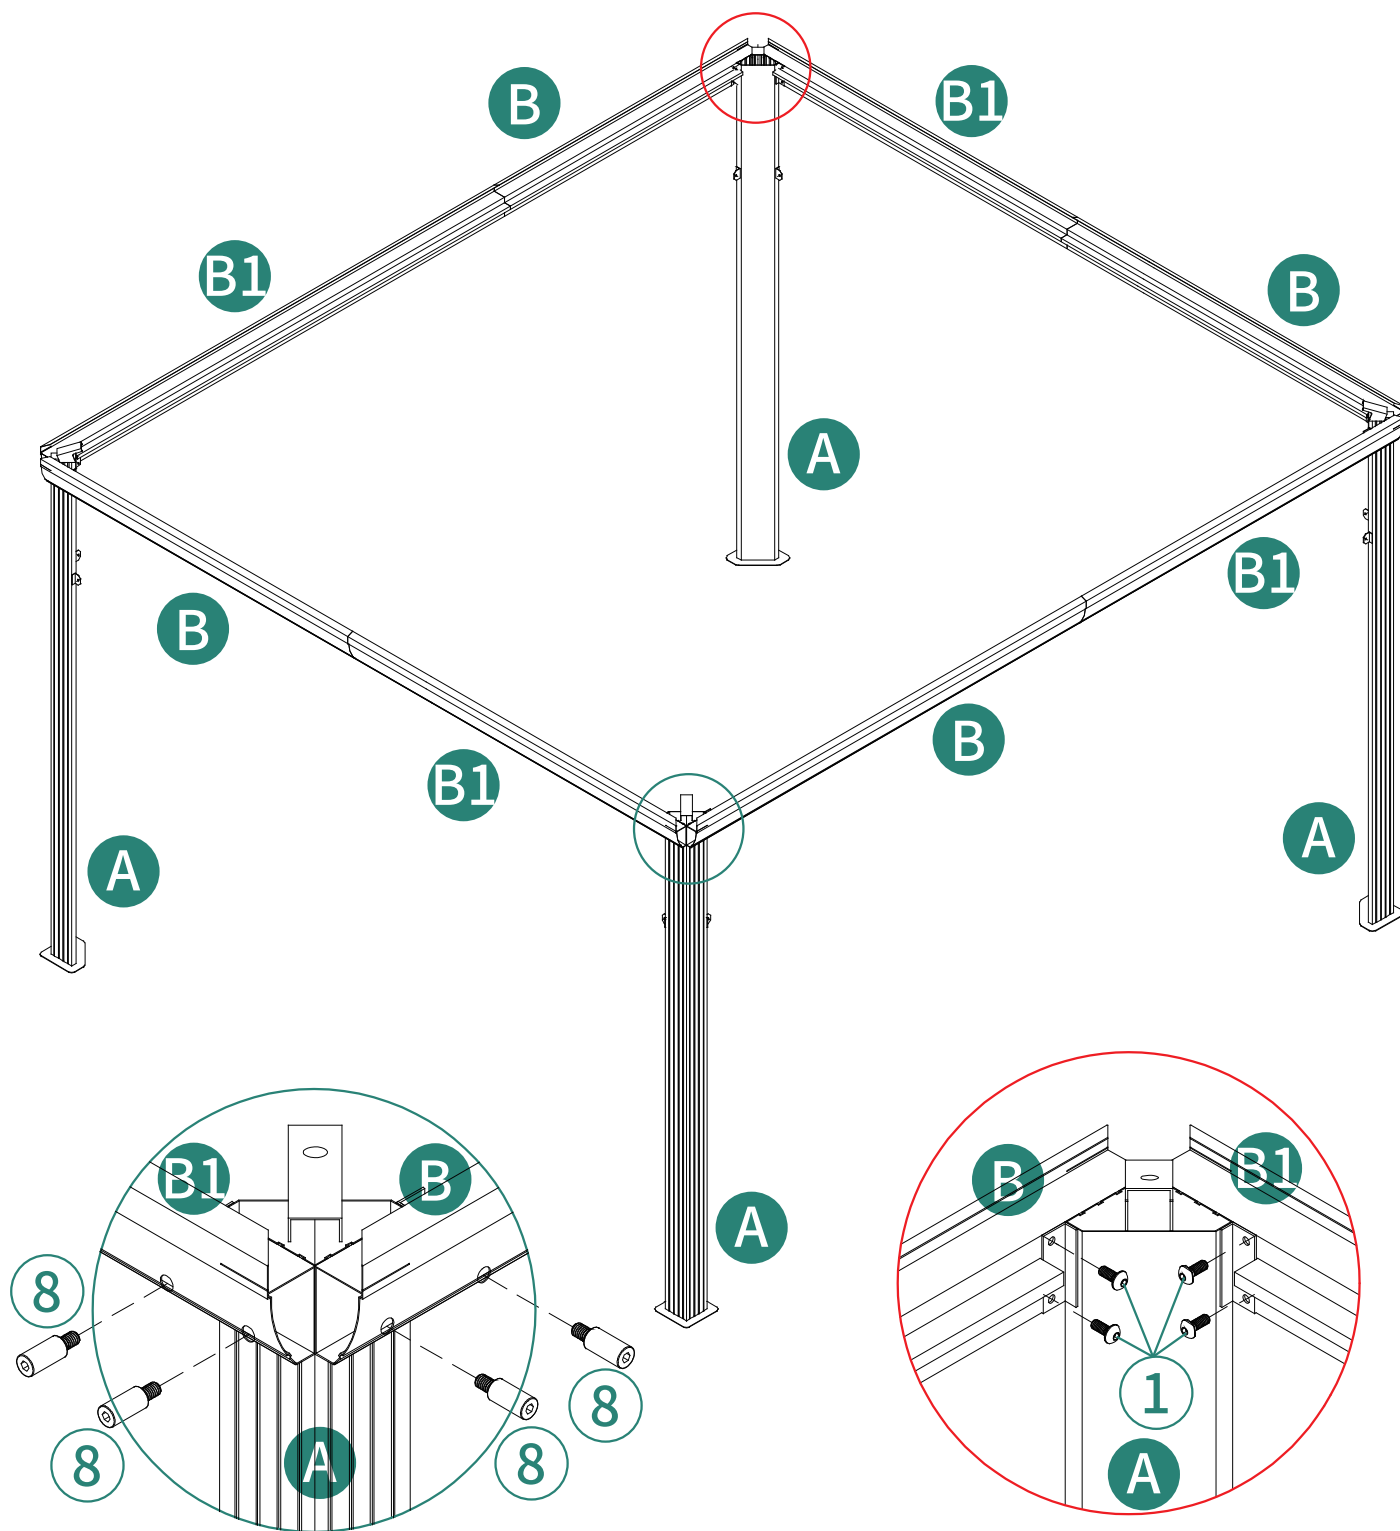

ASSEMBLY INSTRUCTIONS

4




Ⓜ 4pcs



Ⓜ 4pcs



① 16pcs

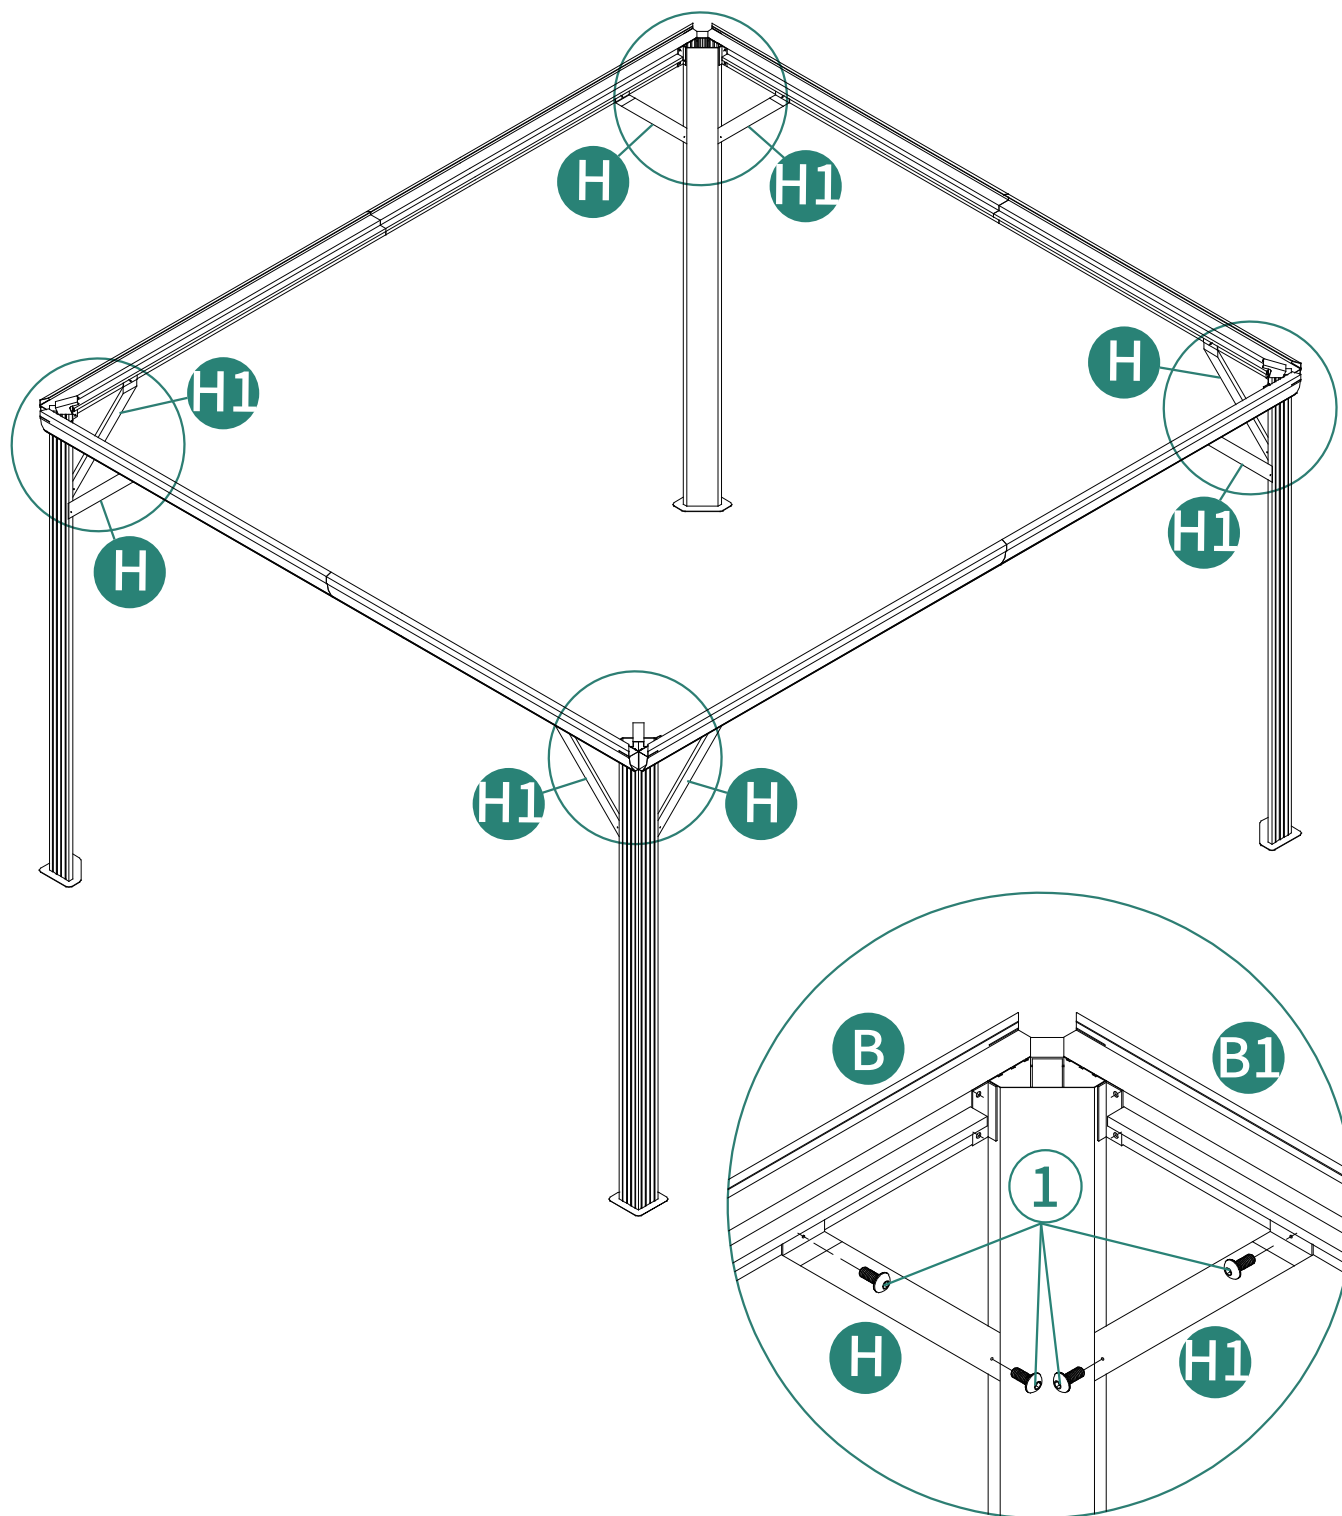

ASSEMBLY INSTRUCTIONS

5



(K) 4pcs




(K1) 4pcs



(4) 24pcs



(12) 4pcs

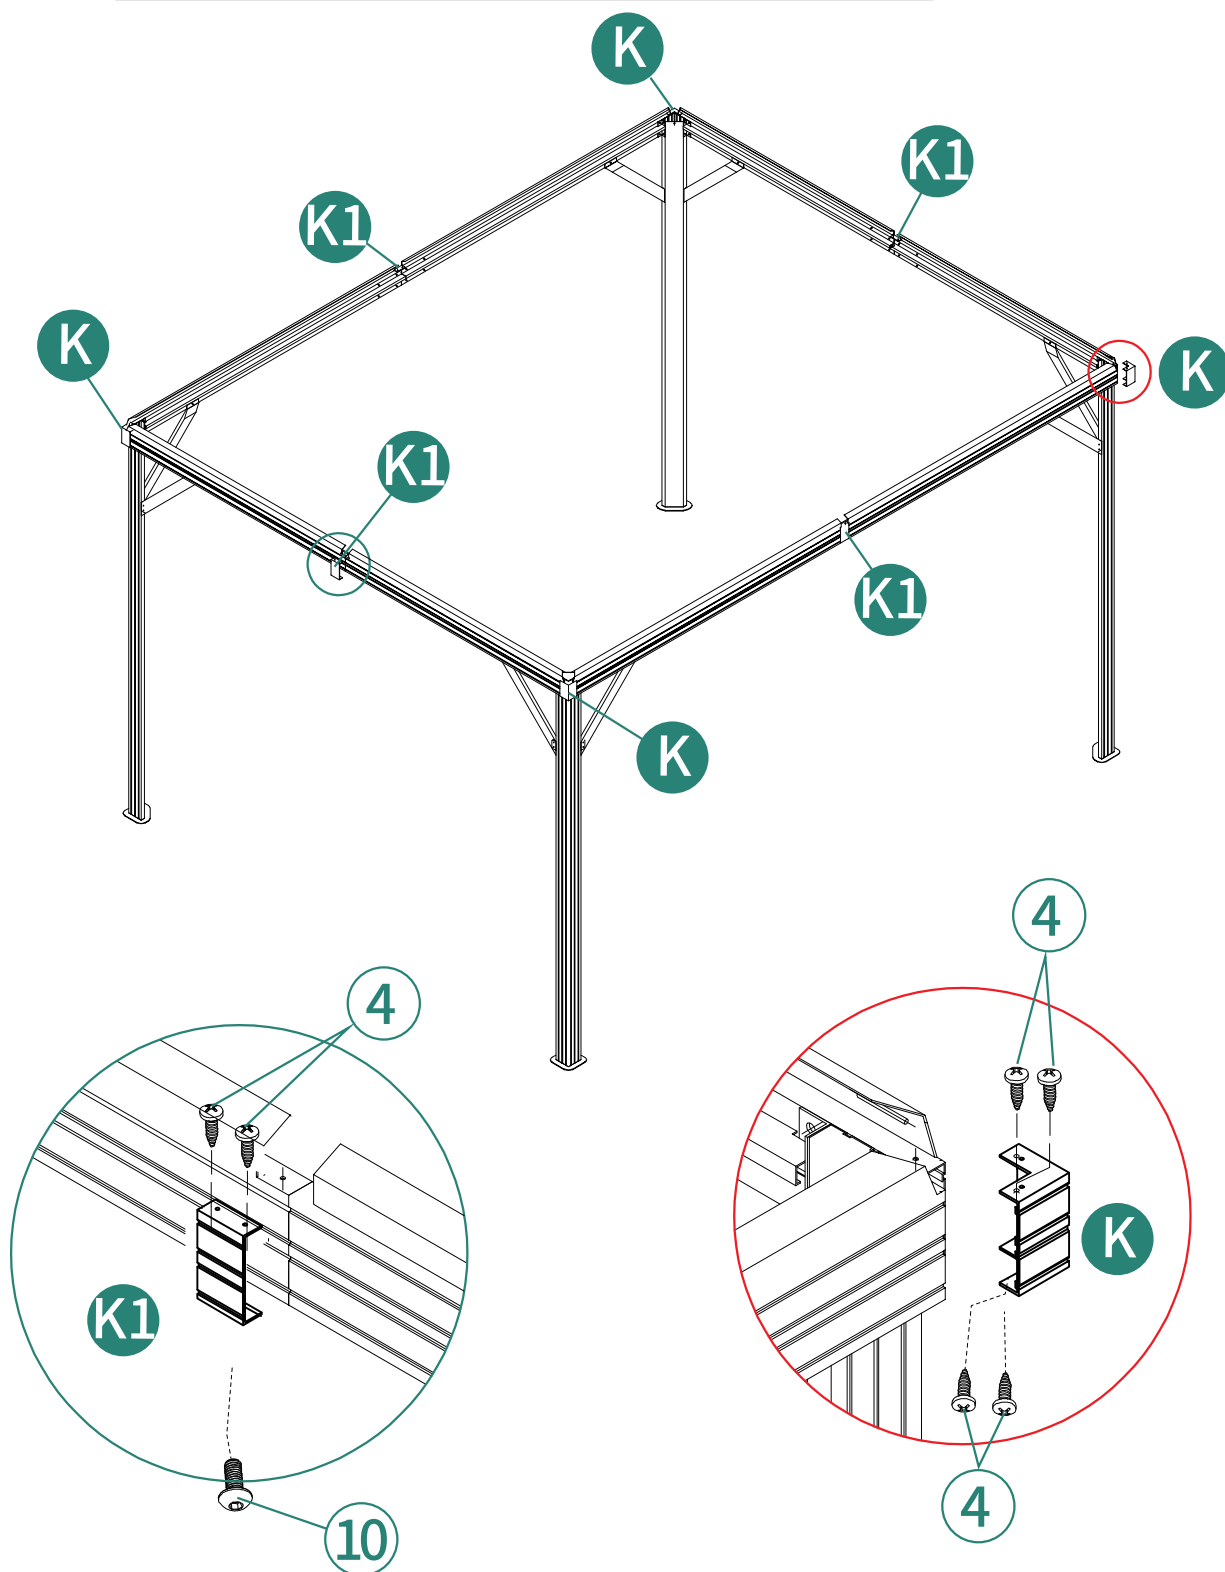

ASSEMBLY INSTRUCTIONS

6

X4



Ⓔa 4pcs




Ⓔb 4pcs




Ⓘ6 12pcs






Ⓘ7 12pcs



Ⓘ8 4pcs

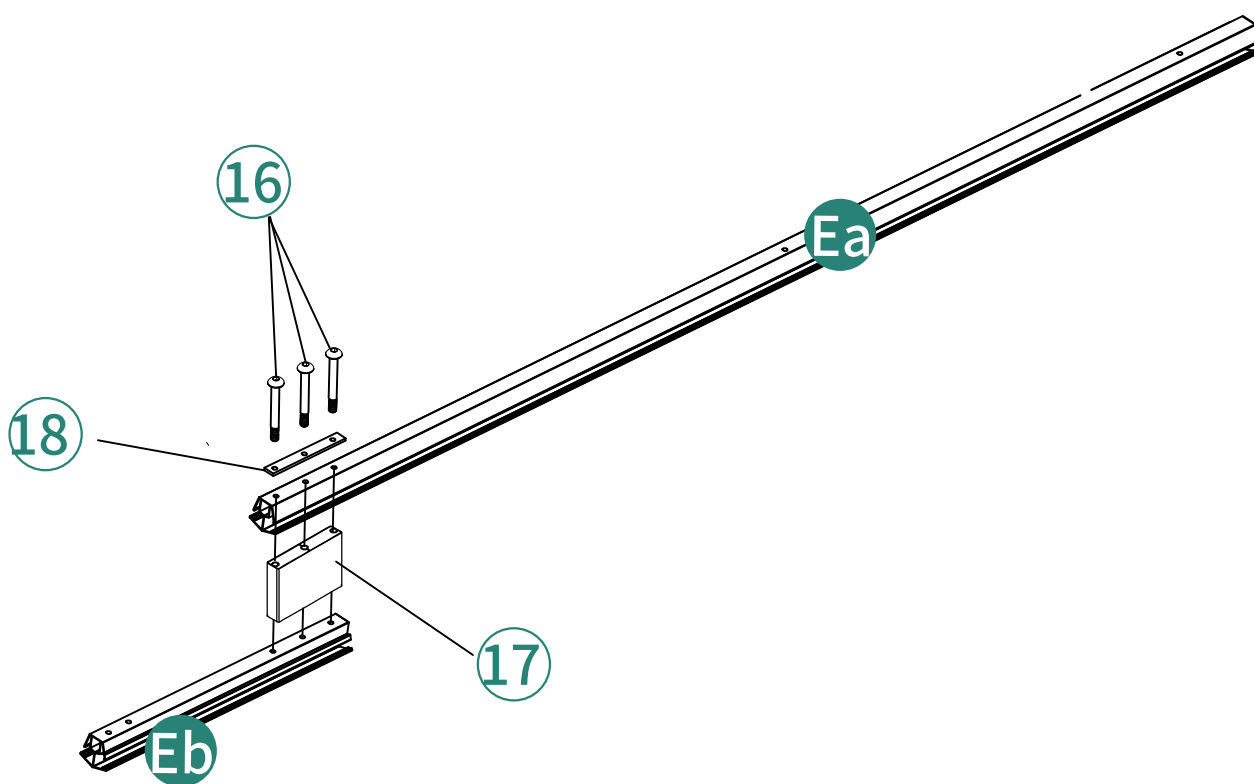

ASSEMBLY INSTRUCTIONS

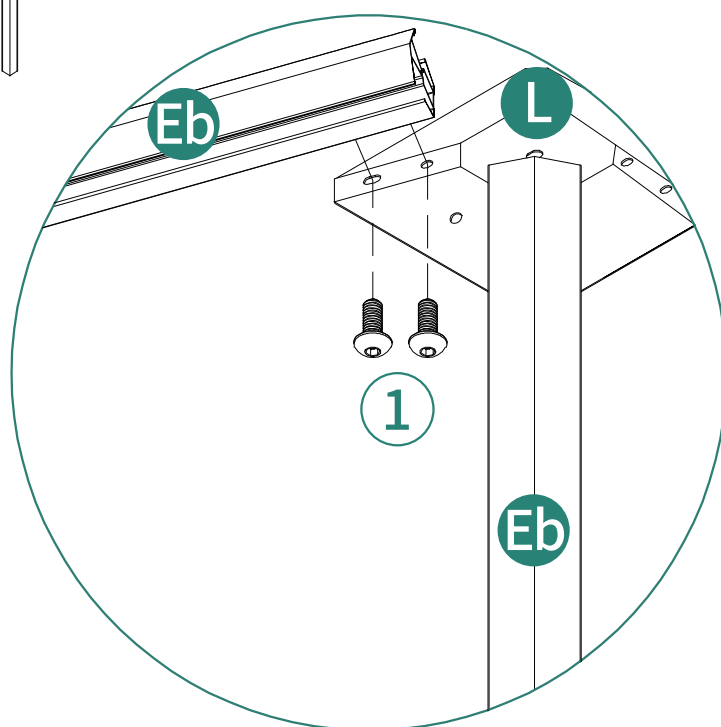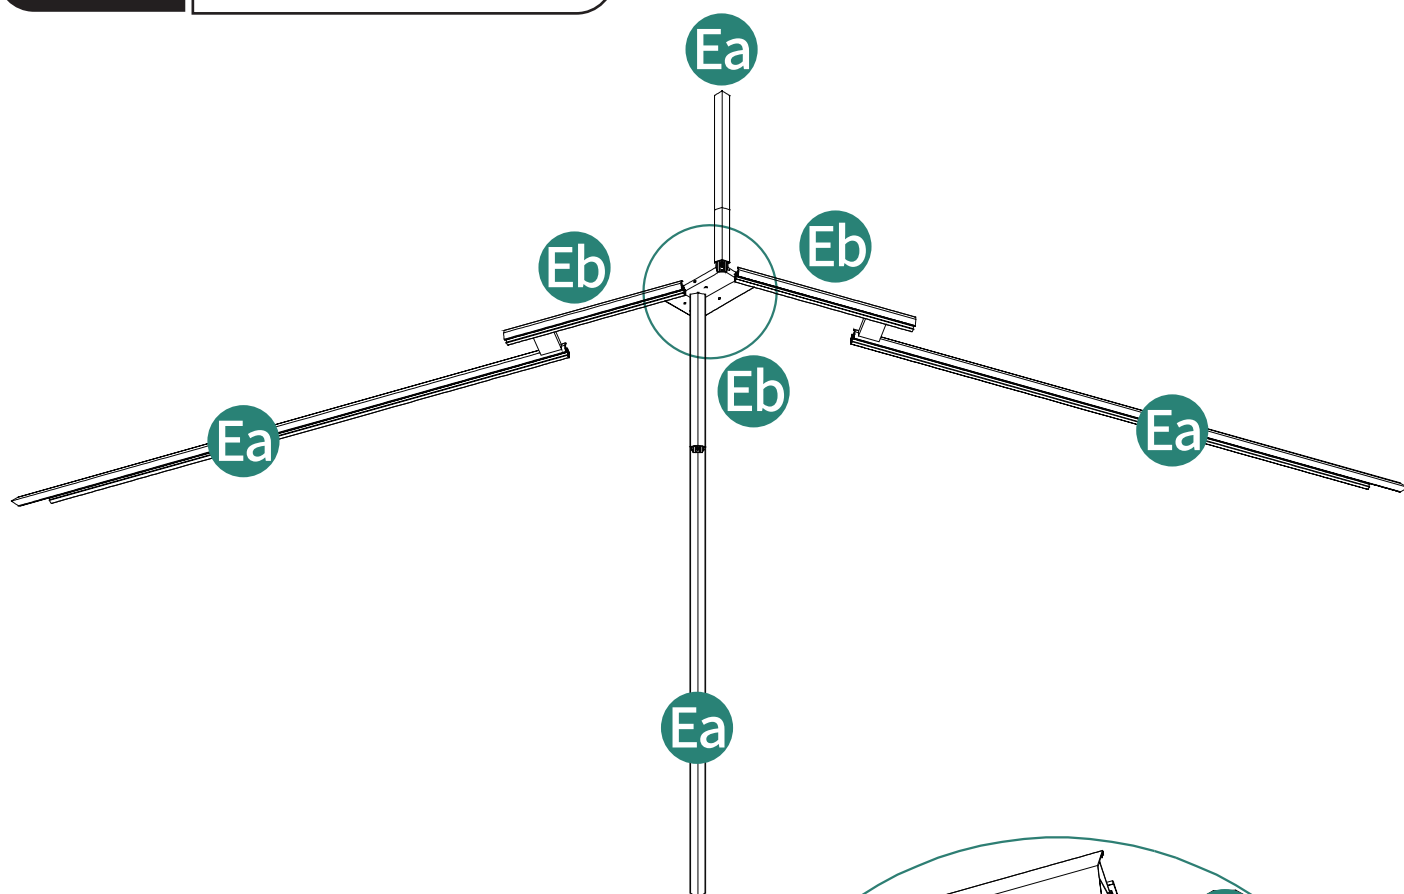
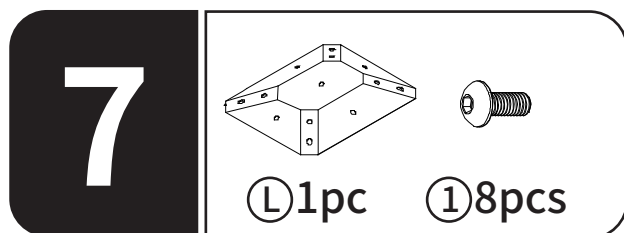


ASSEMBLY INSTRUCTIONS

8




① 4pcs

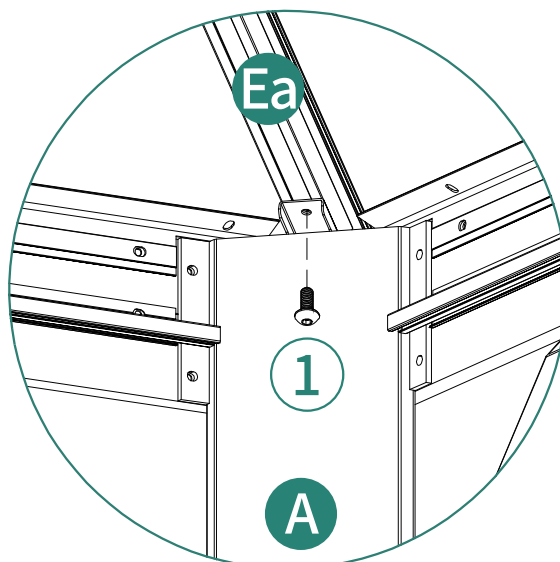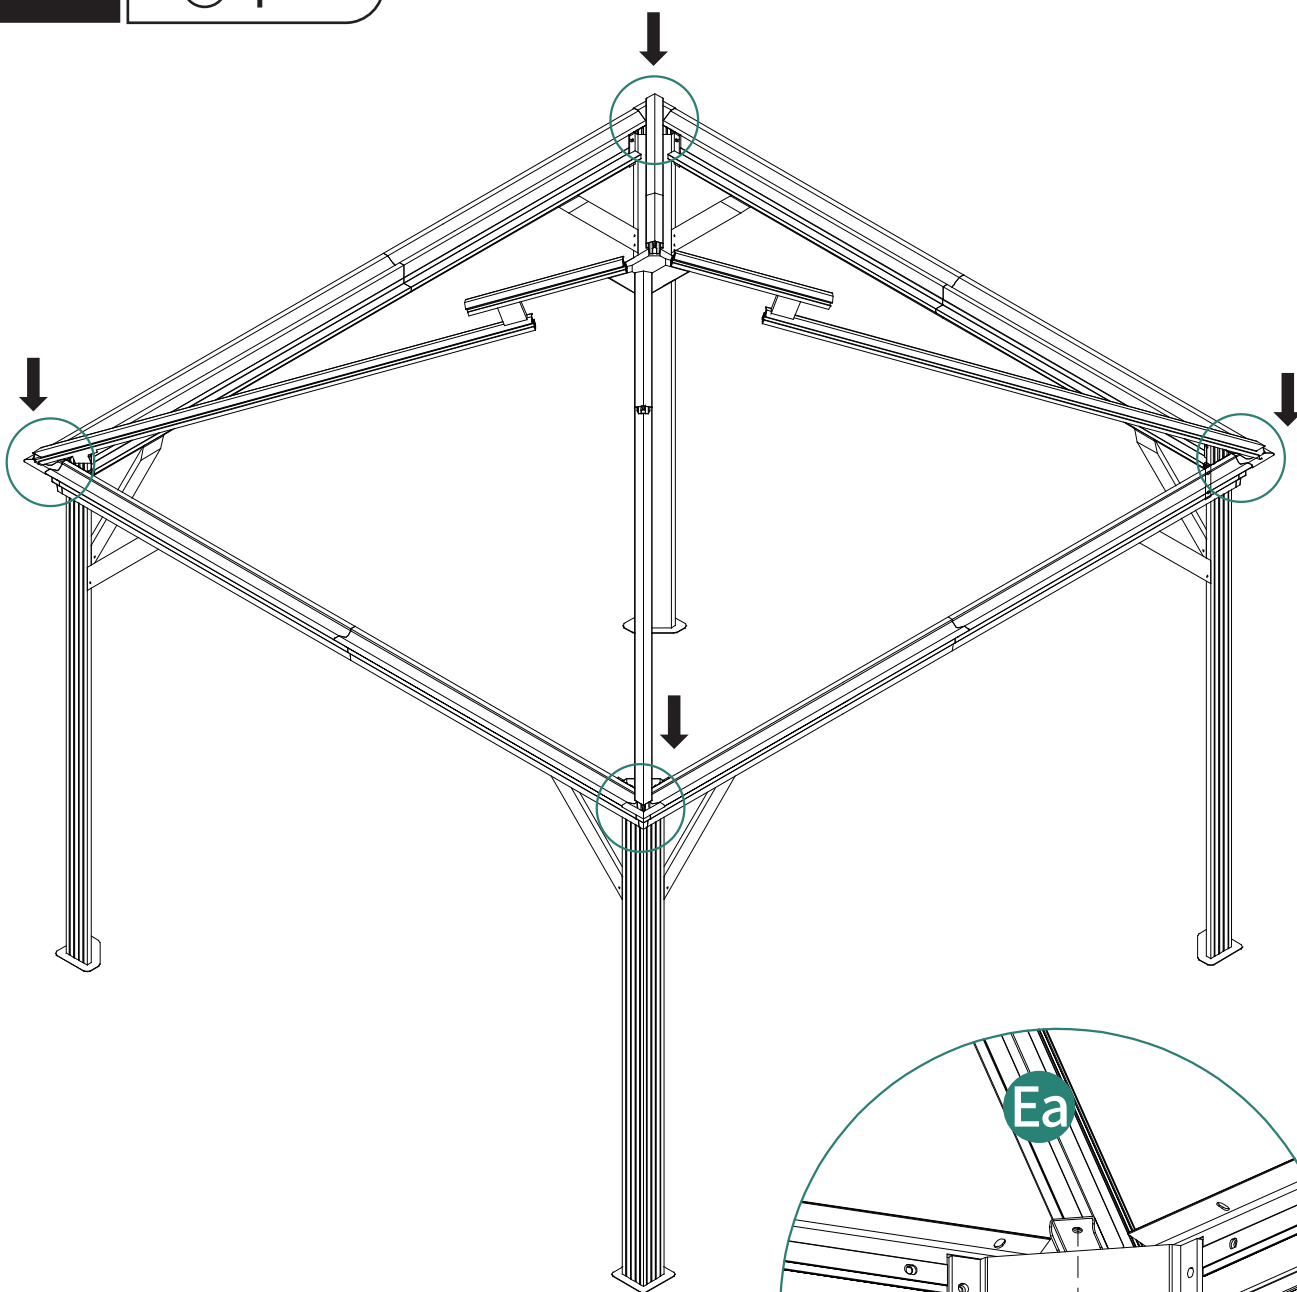


ASSEMBLY INSTRUCTIONS

9

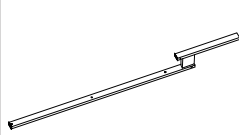

E1 4pcs






W3 4pcs



1 8pcs




12 8pcs

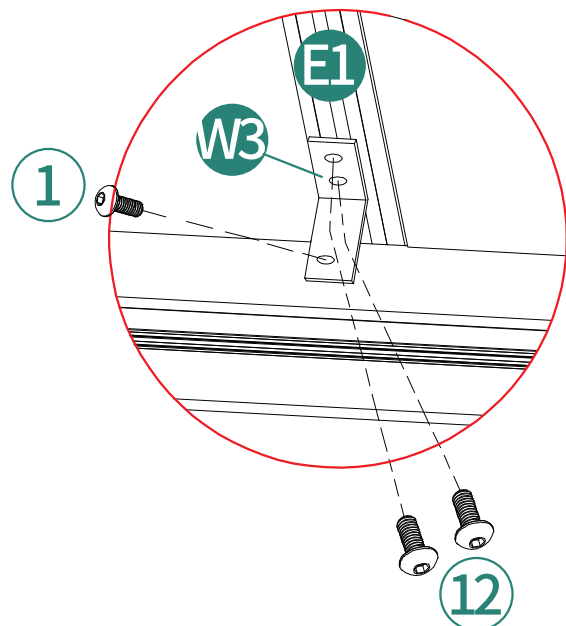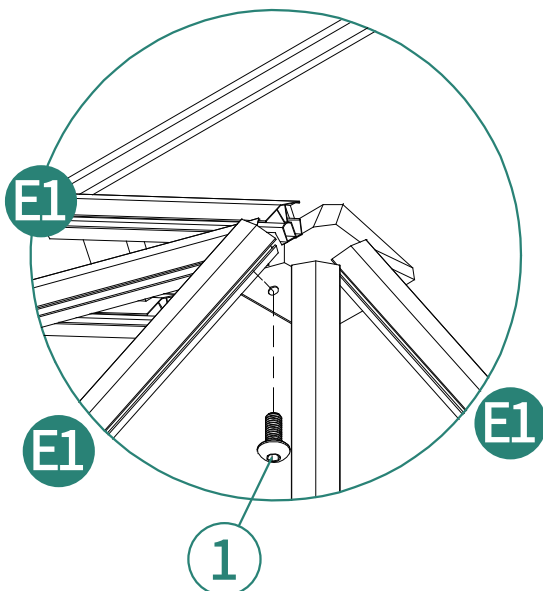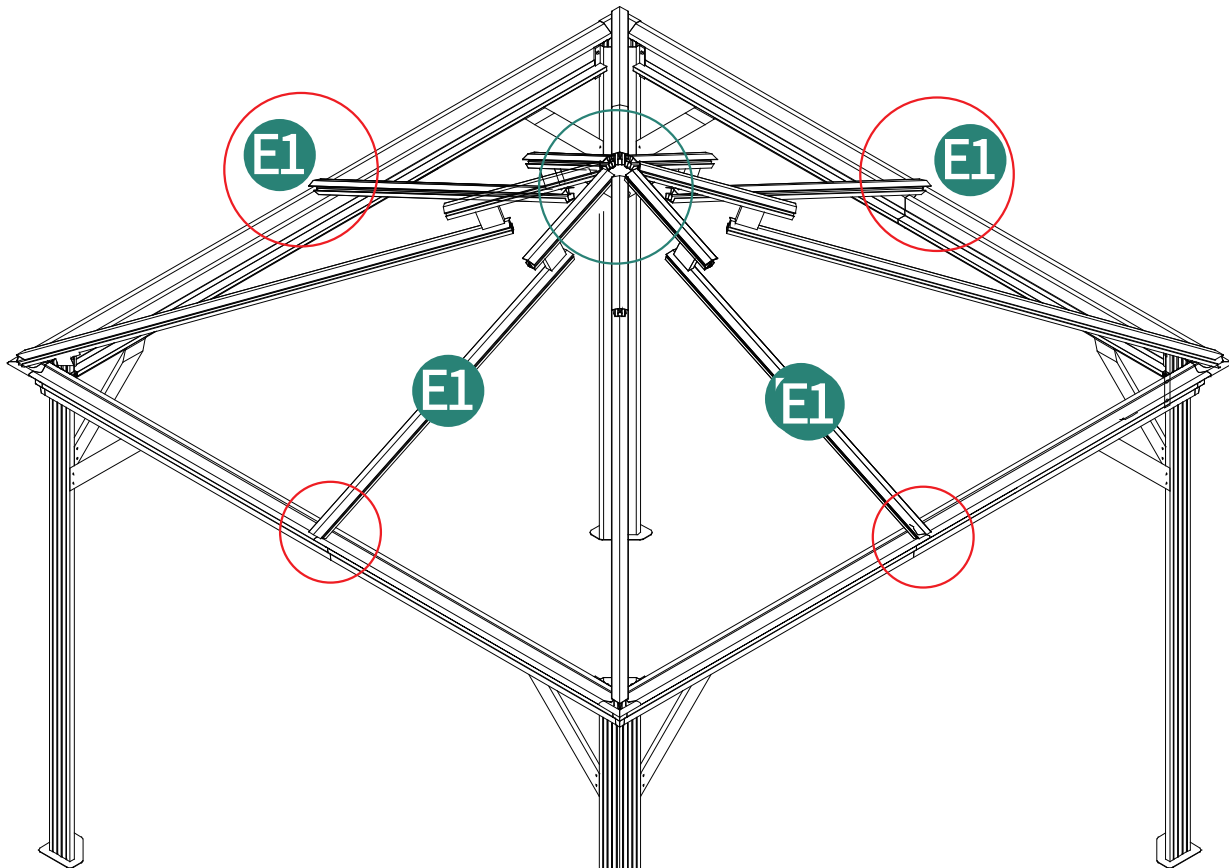


ASSEMBLY INSTRUCTIONS



10



Ⓜ1pc







③1pc

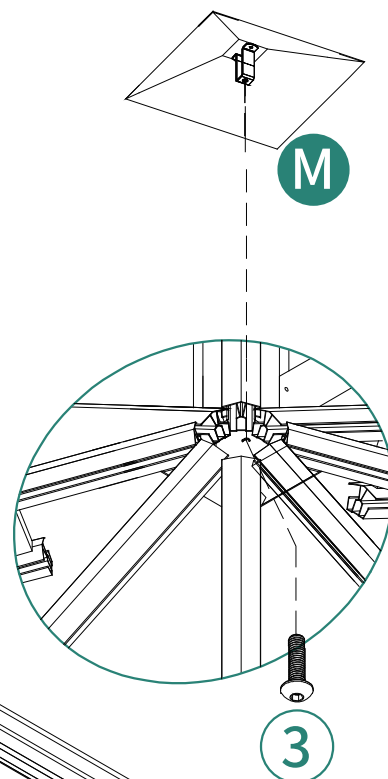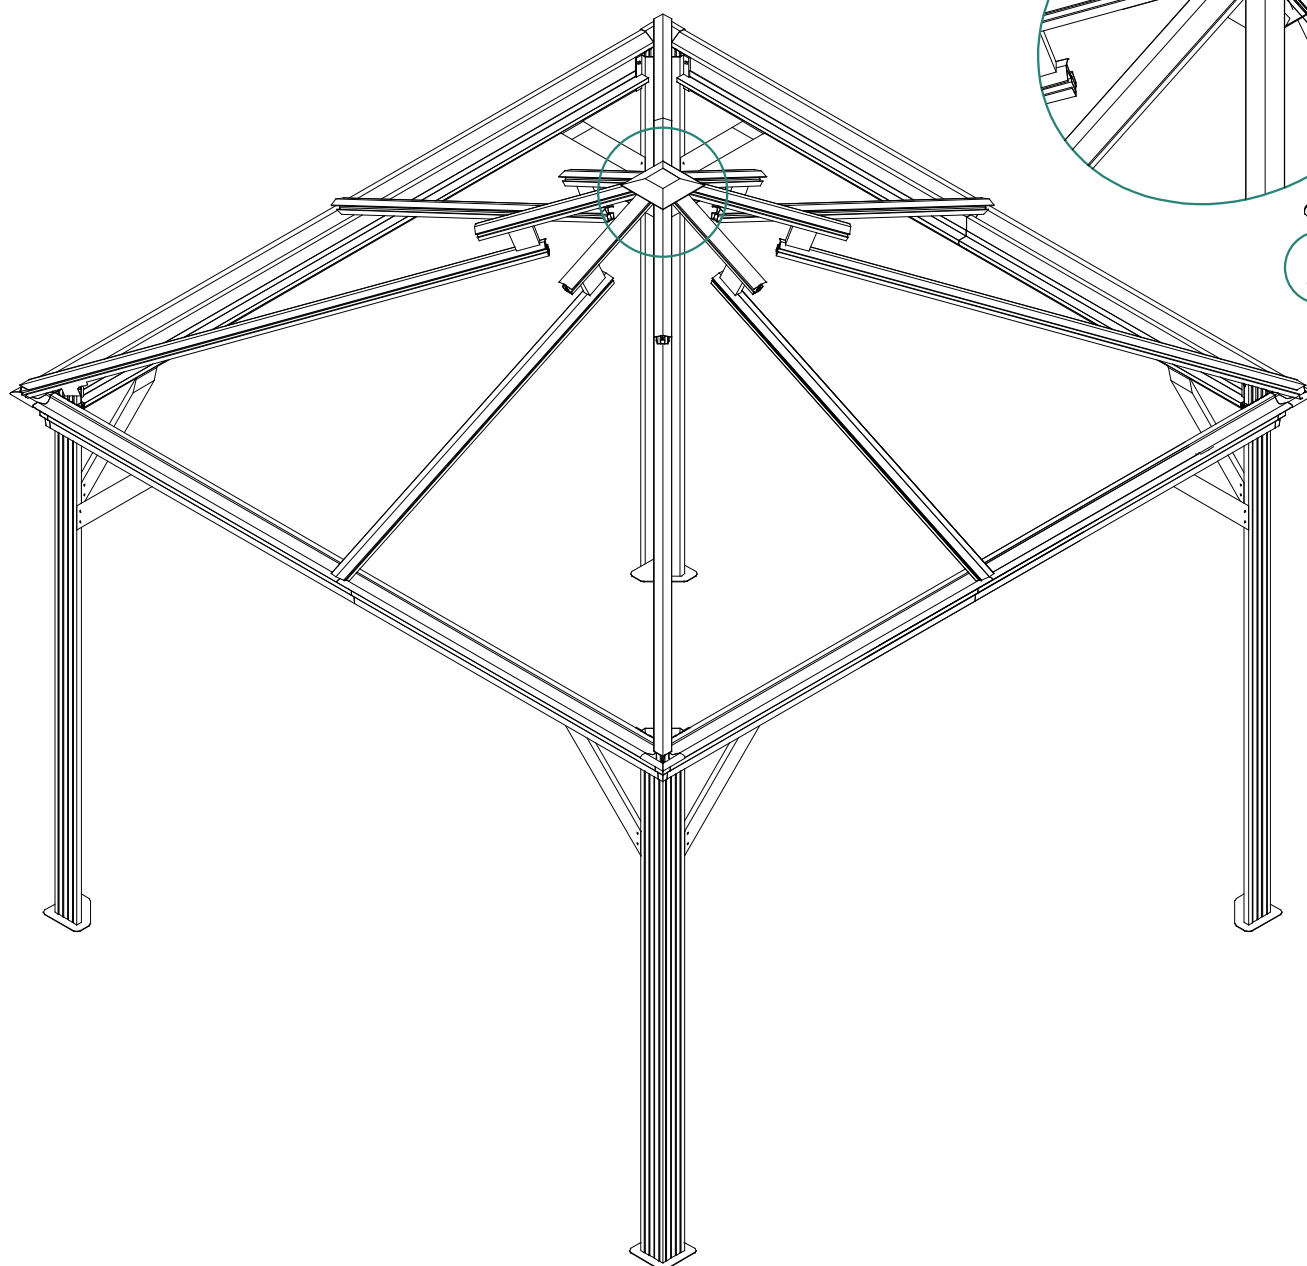

ASSEMBLY INSTRUCTIONS



11

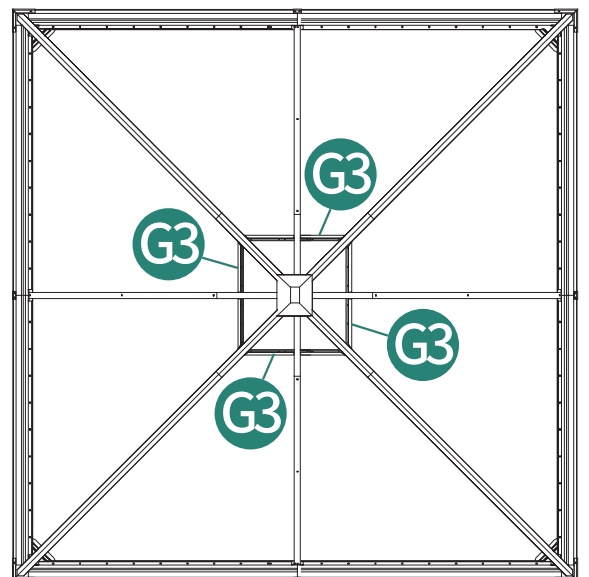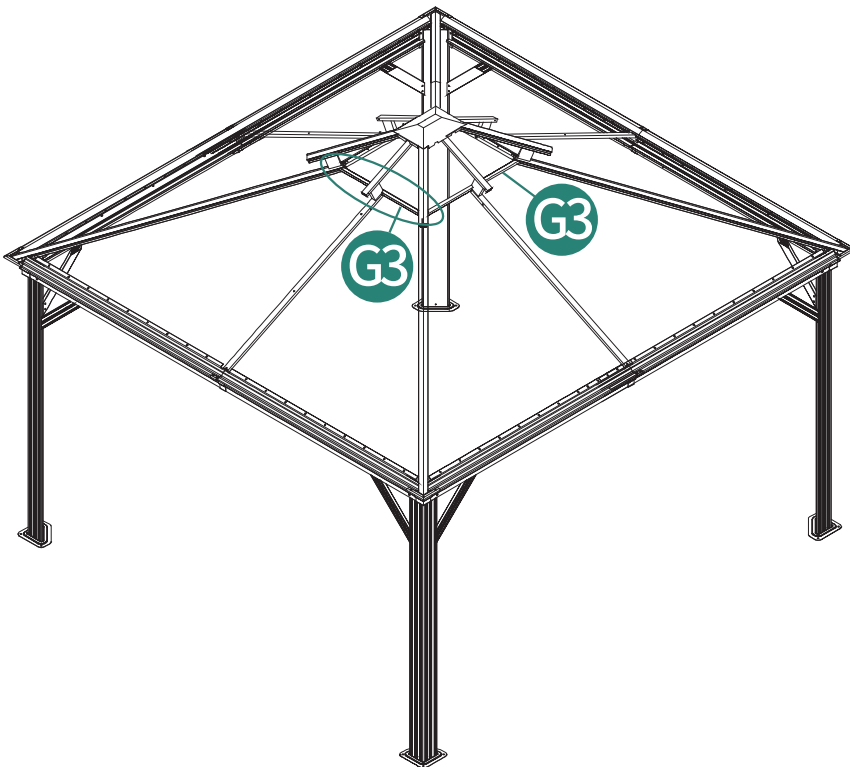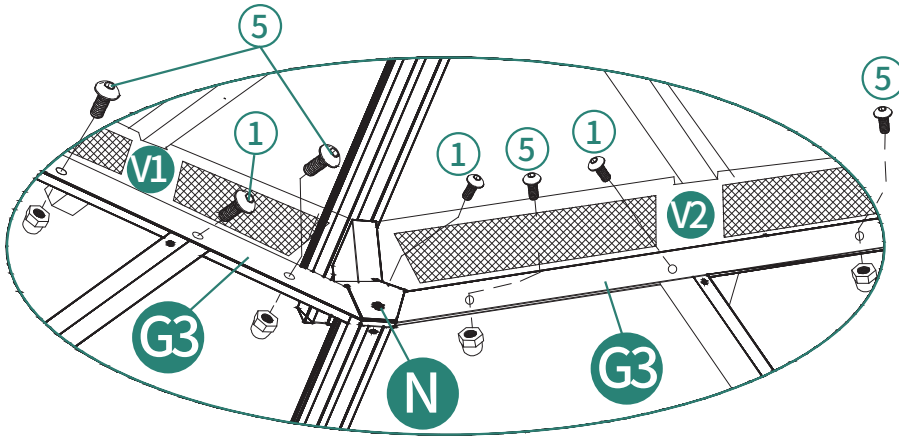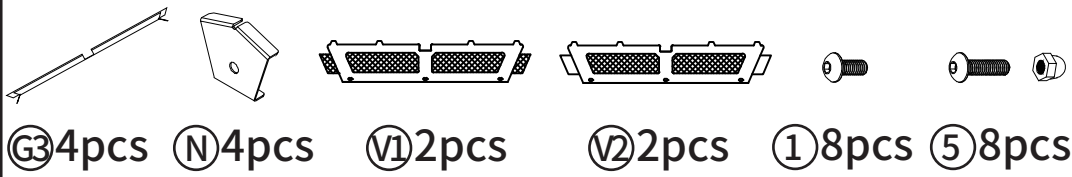


ASSEMBLY INSTRUCTIONS

12

X4




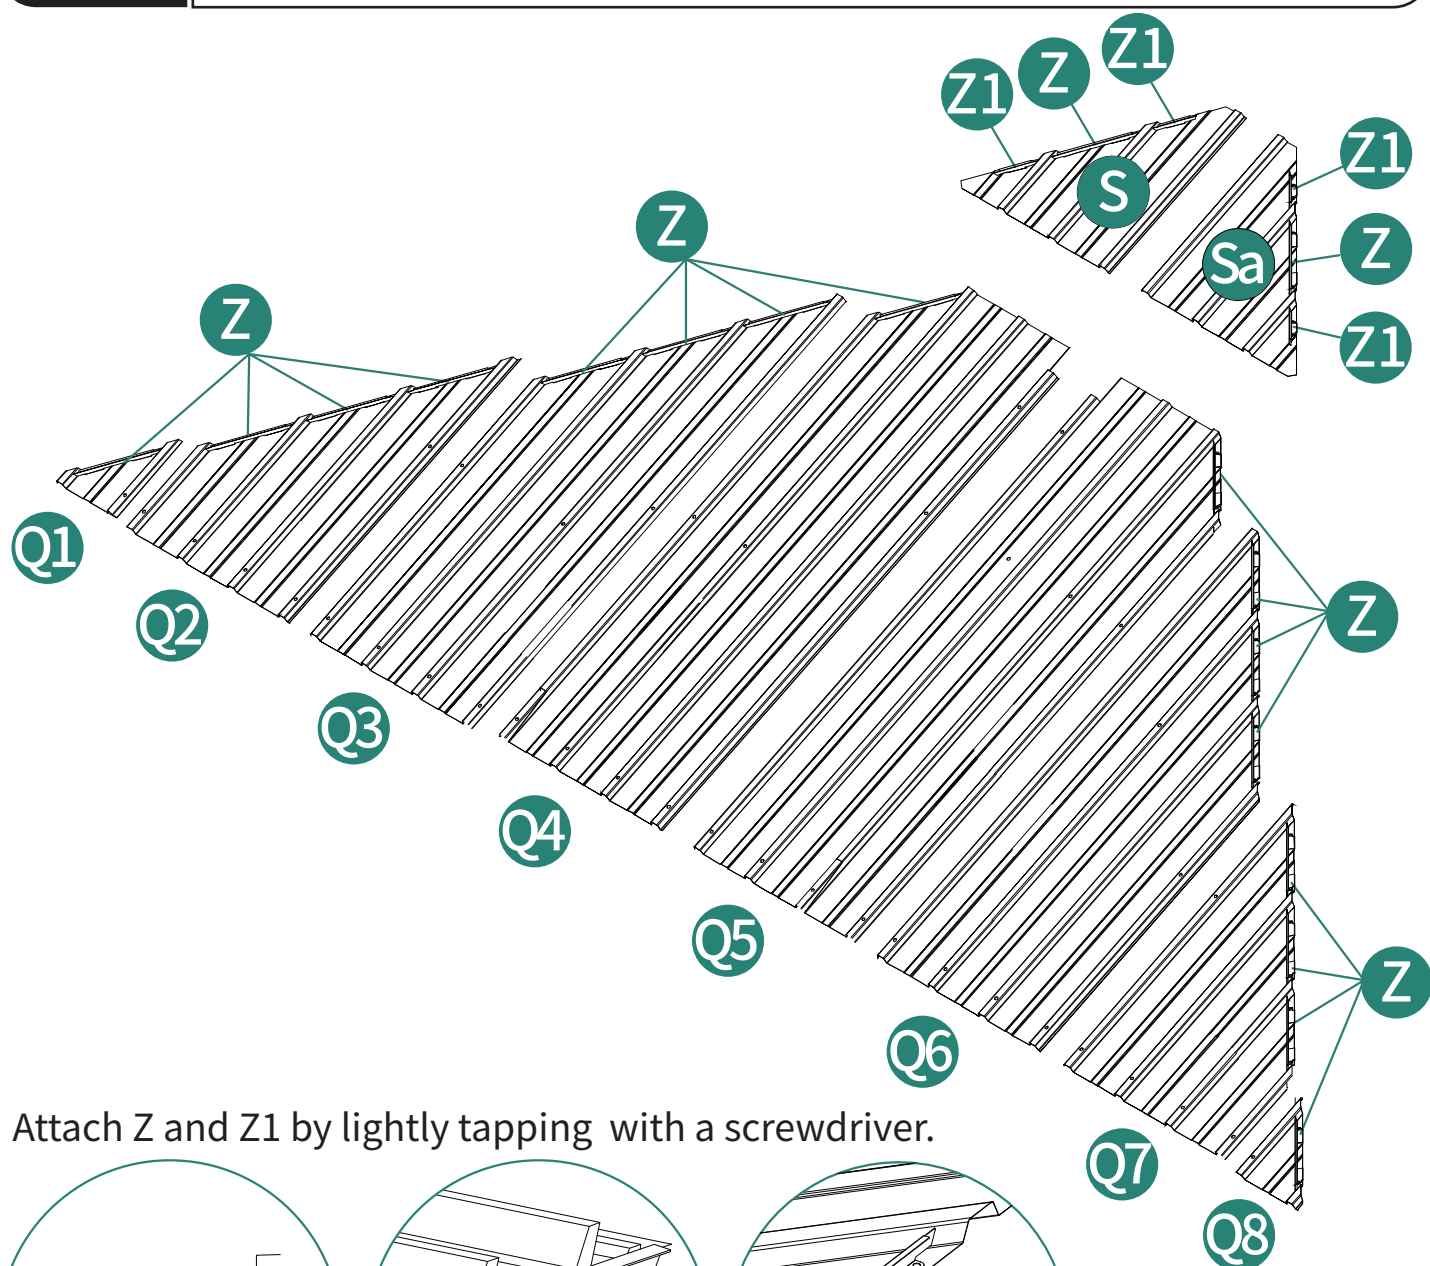
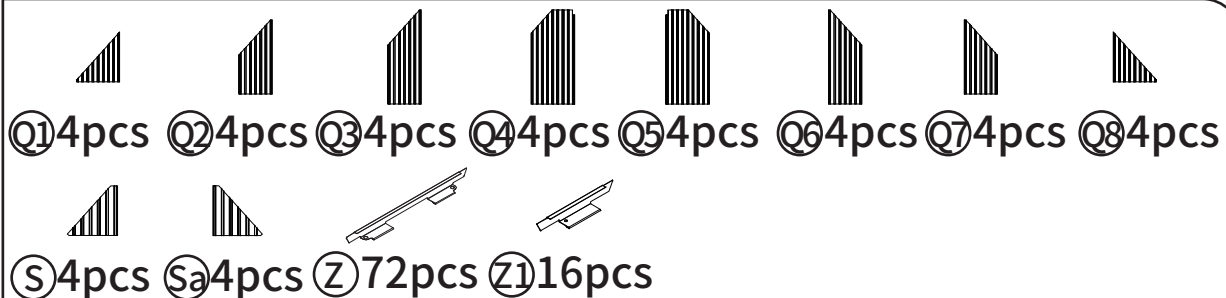


Attach Z and Z1 by lightly tapping with a screwdriver.

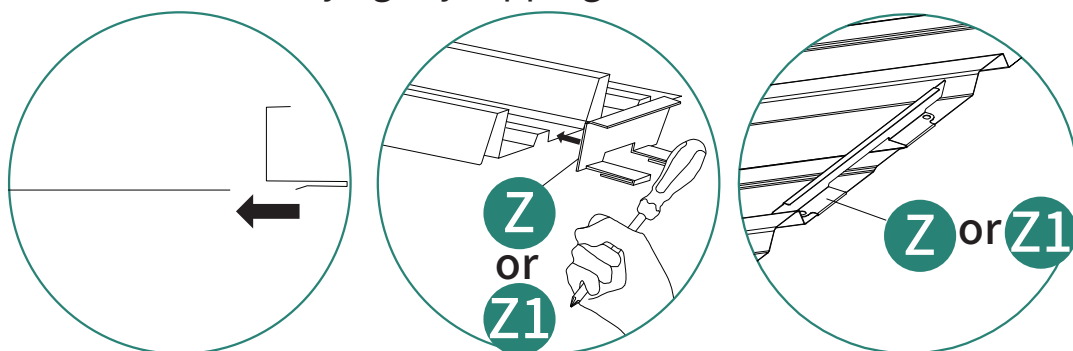


ASSEMBLY INSTRUCTIONS

13

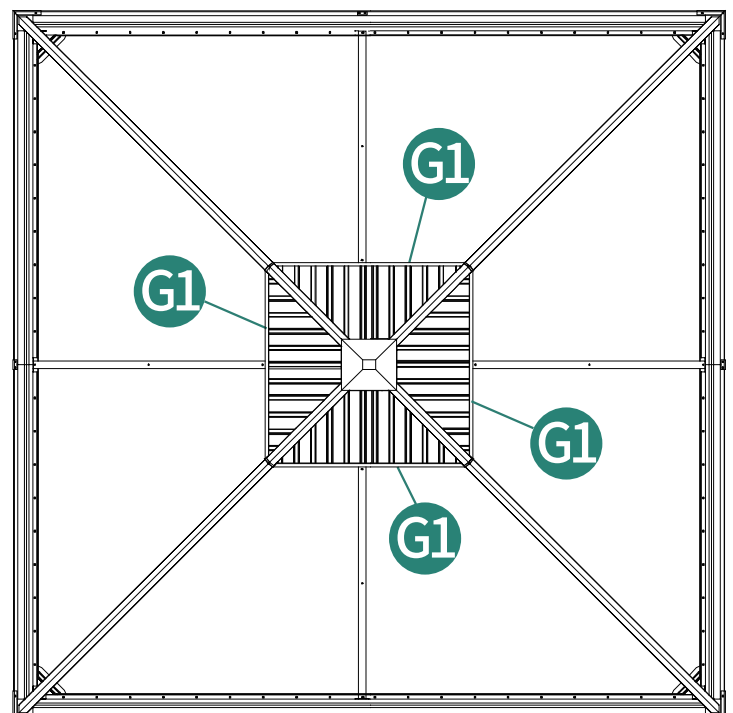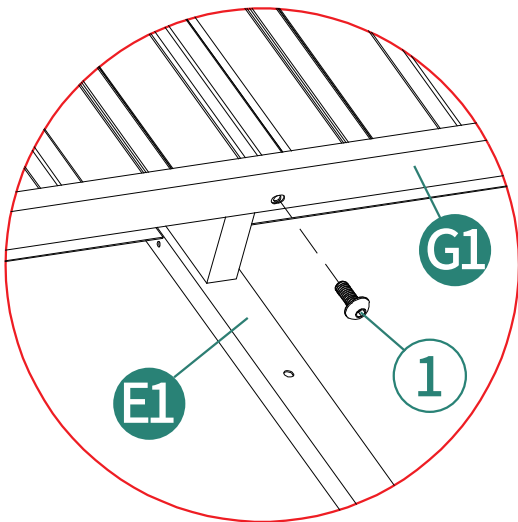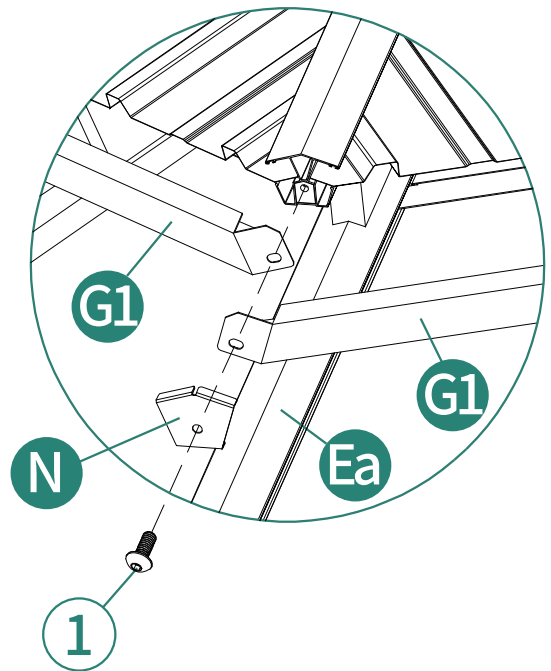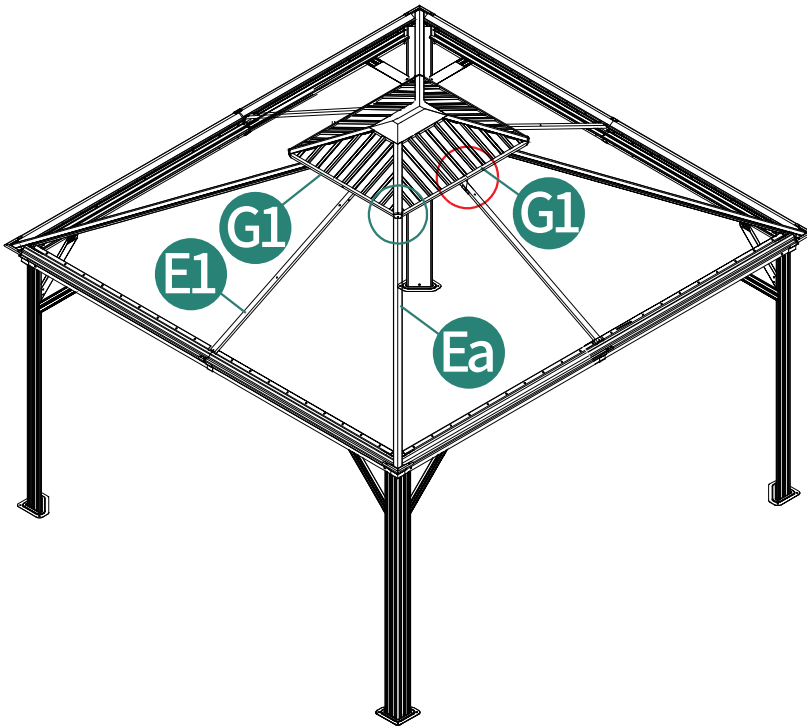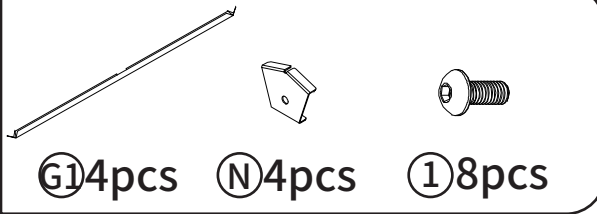


ASSEMBLY INSTRUCTIONS


14



F18pcs







W4pcs




W14pcs




124pcs

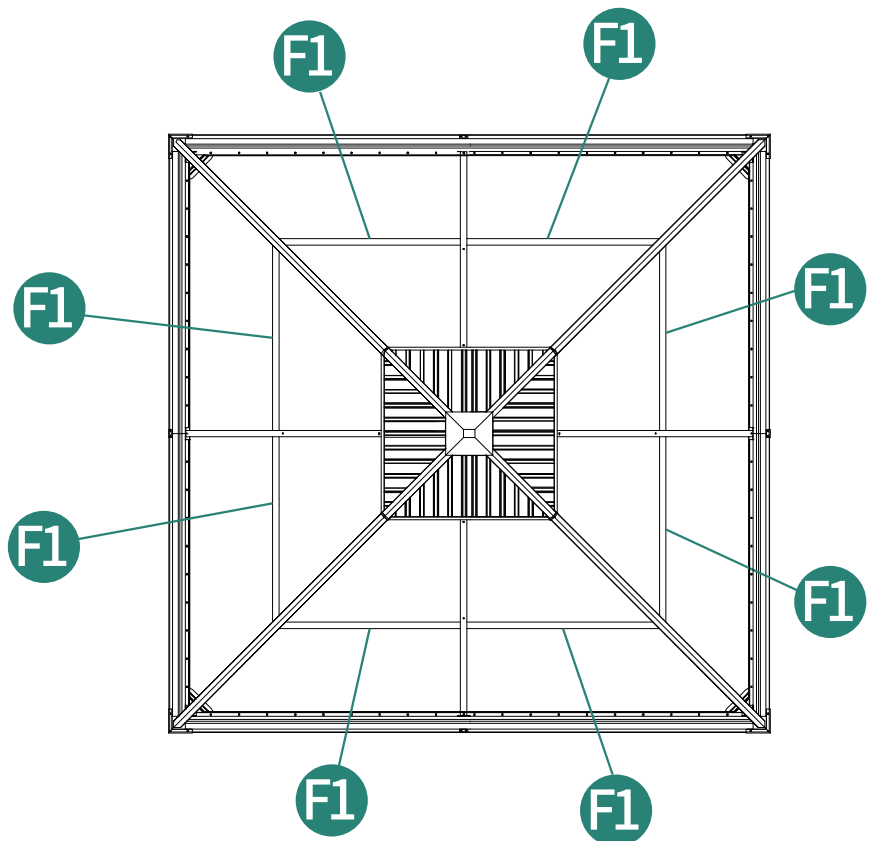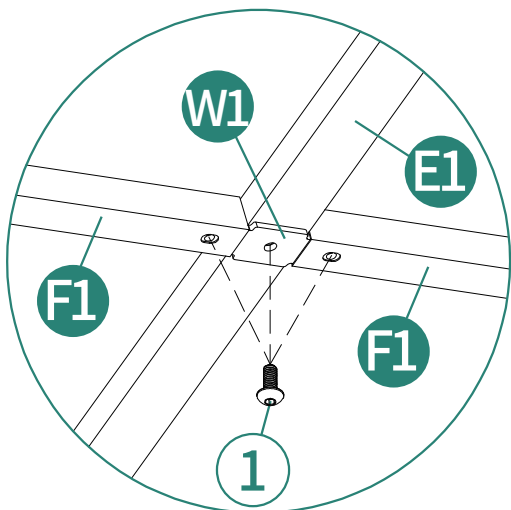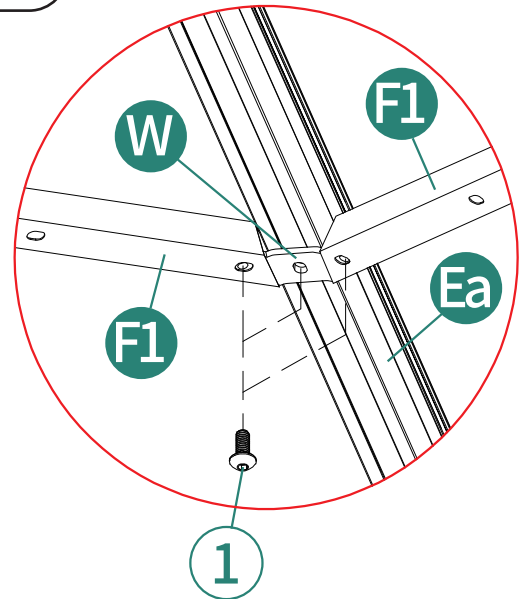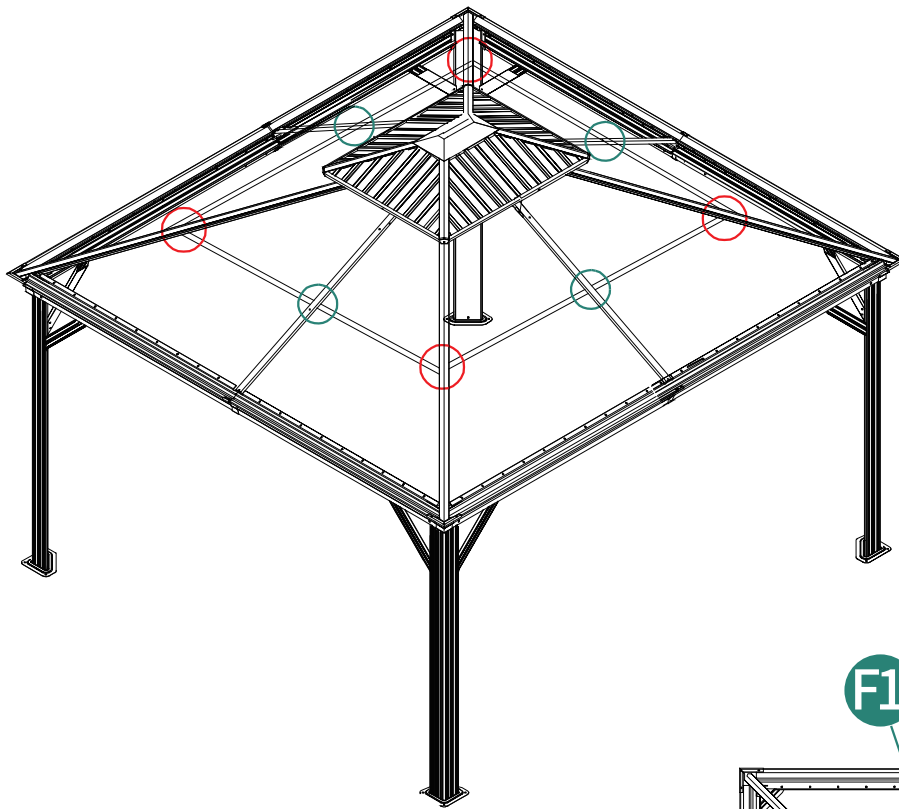

15

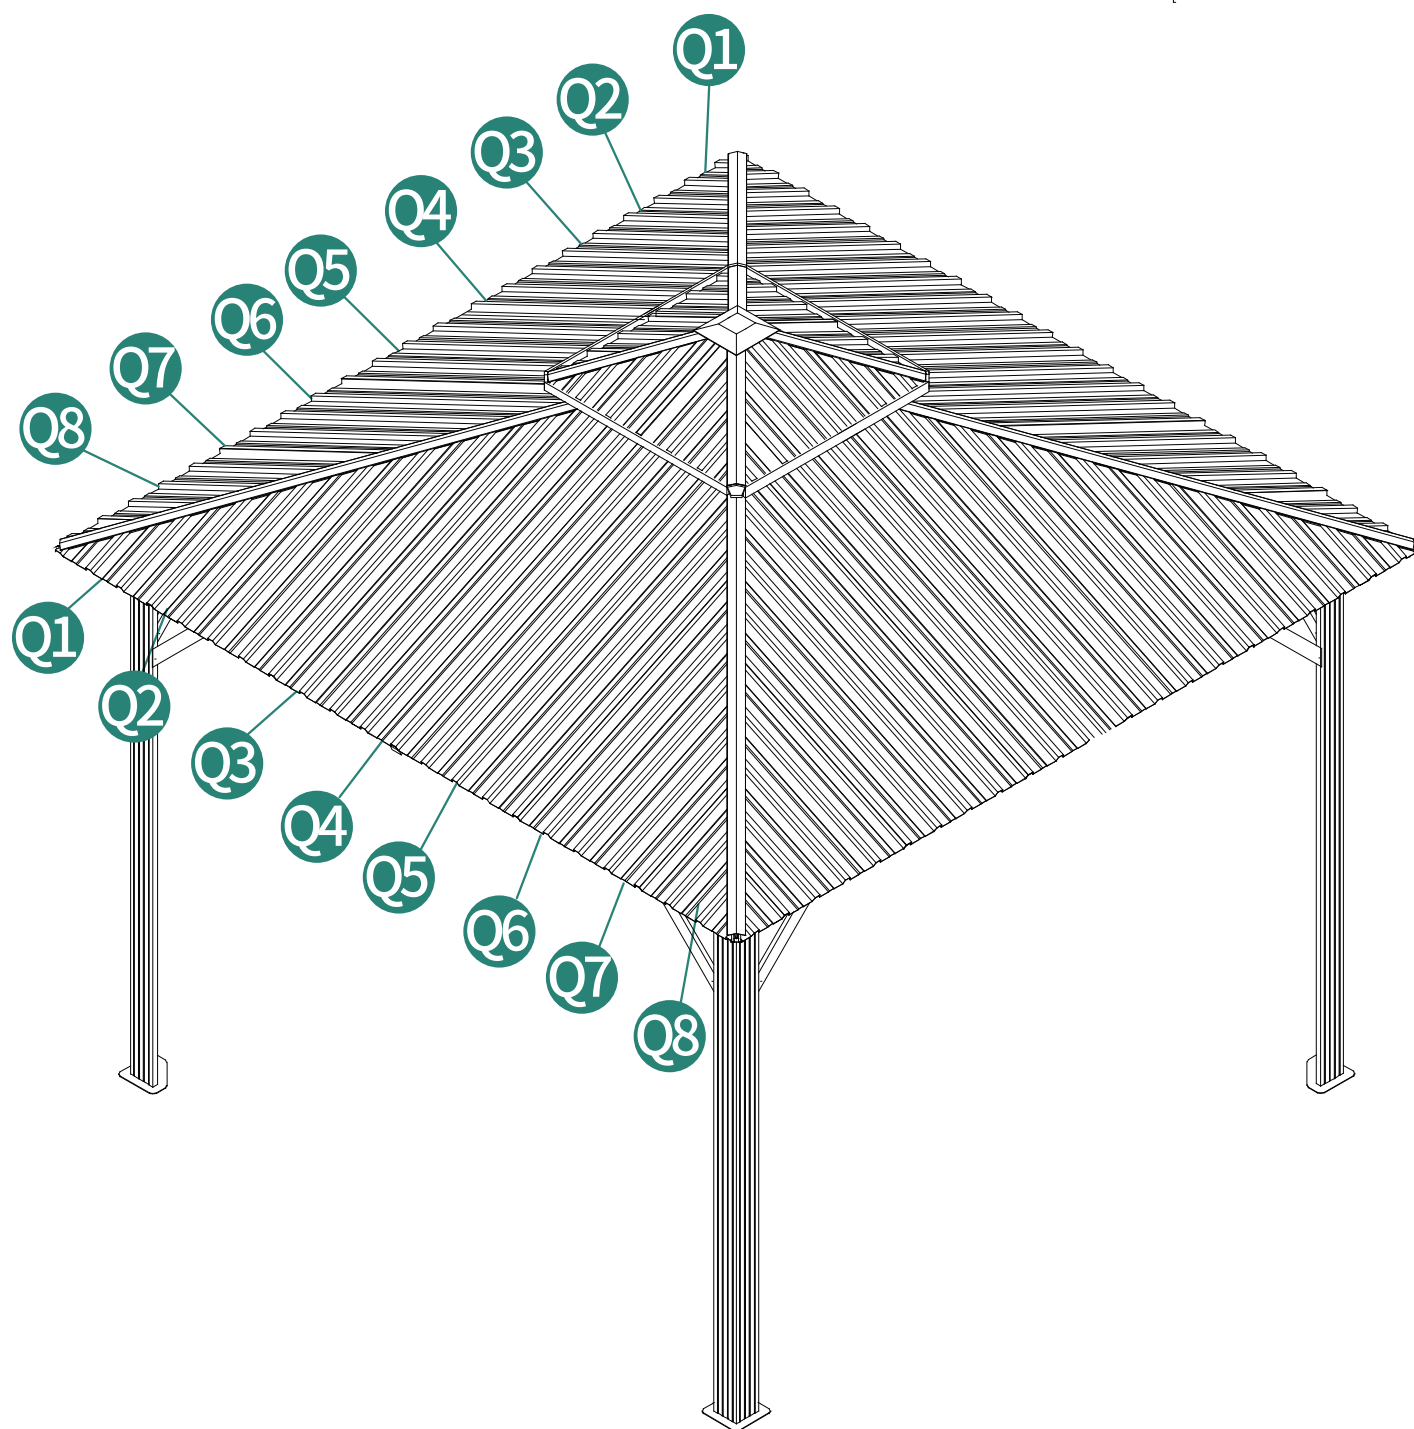

16

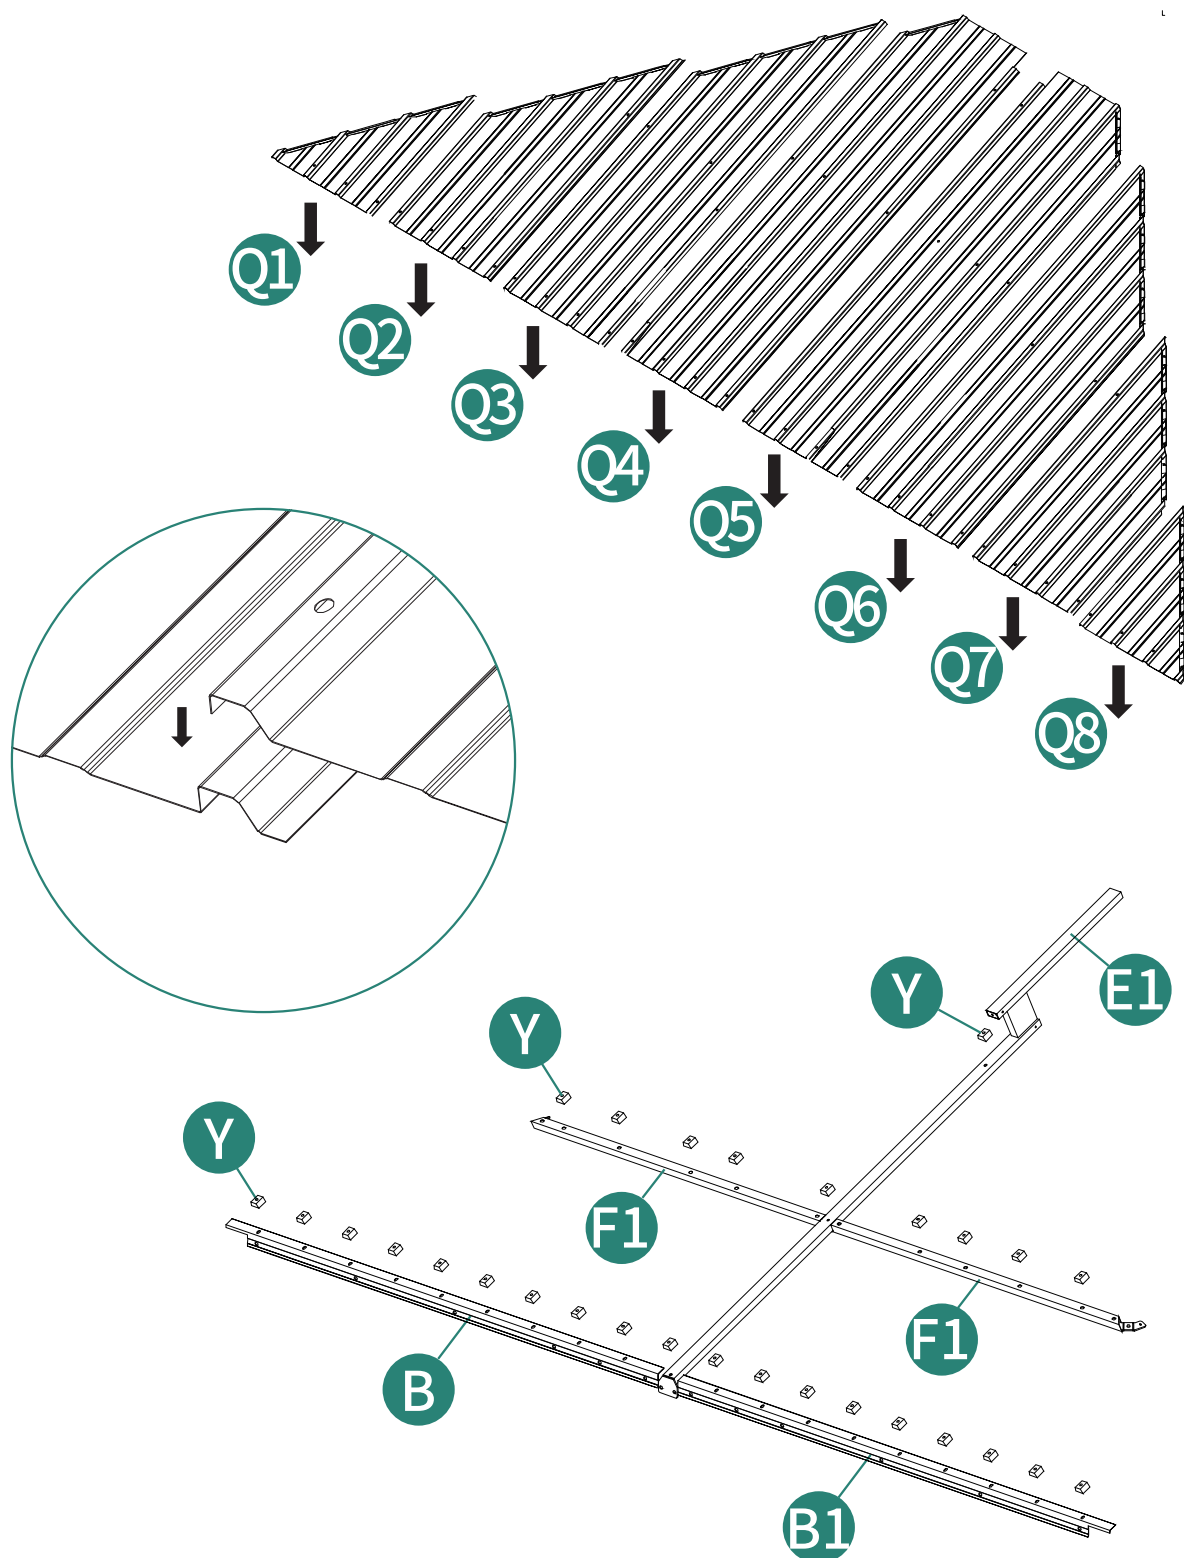

ASSEMBLY INSTRUCTIONS

17



① 116pcs



② 72pcs




③ 8pcs



⑥ 4pcs







⑦ 32pcs

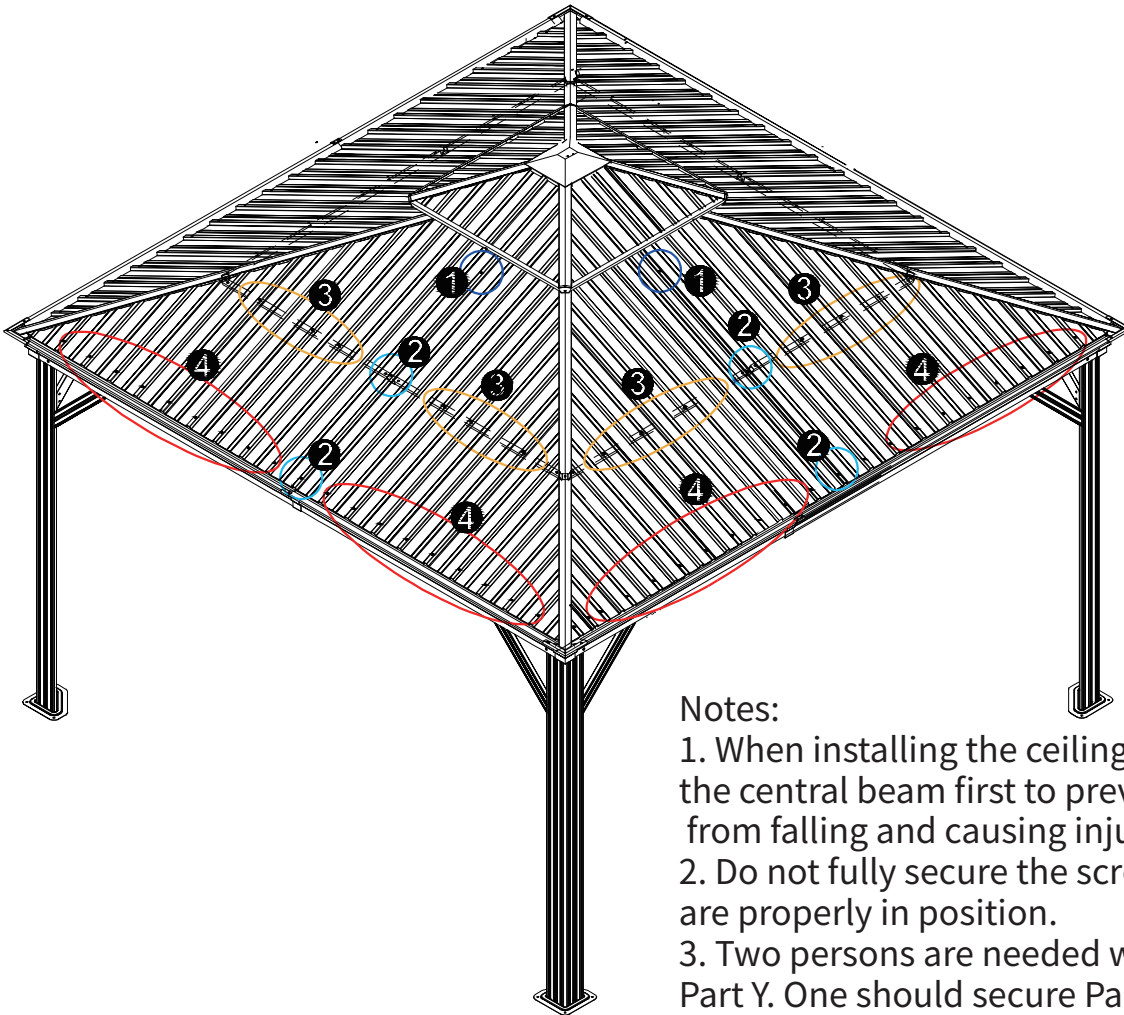






Notes:

1. When installing the ceiling, fix the screws on the central beam first to prevent the iron sheet from falling and causing injury.
2. Do not fully secure the screw until all screws are properly in position.
3. Two persons are needed when installing Part Y. One should secure Part Y's position from inside the gazebo, while the other inserts screws into Part Y from outside the gazebo.

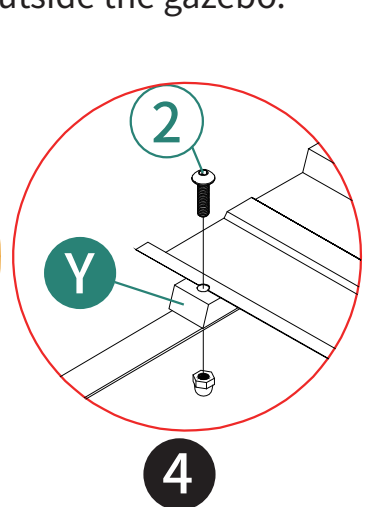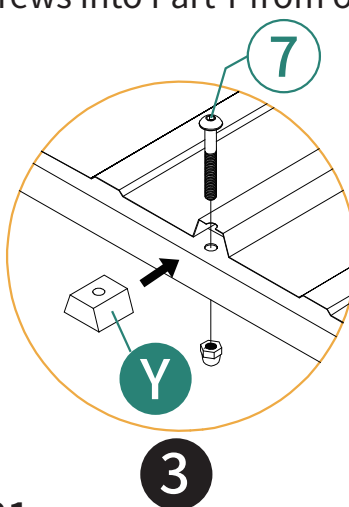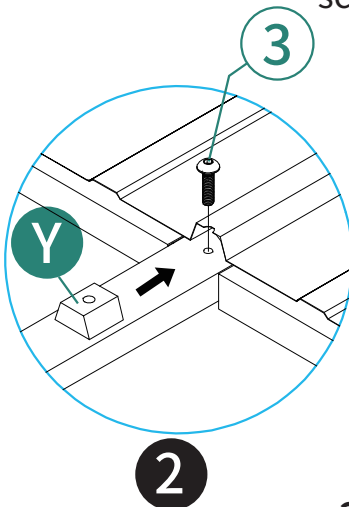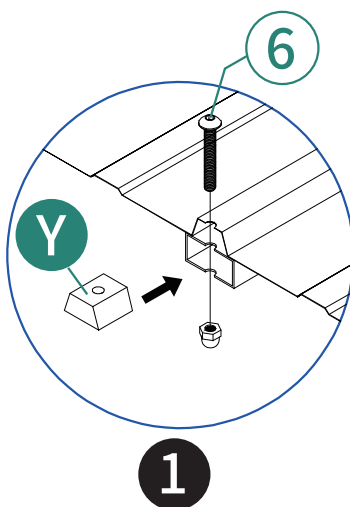





ASSEMBLY INSTRUCTIONS

18

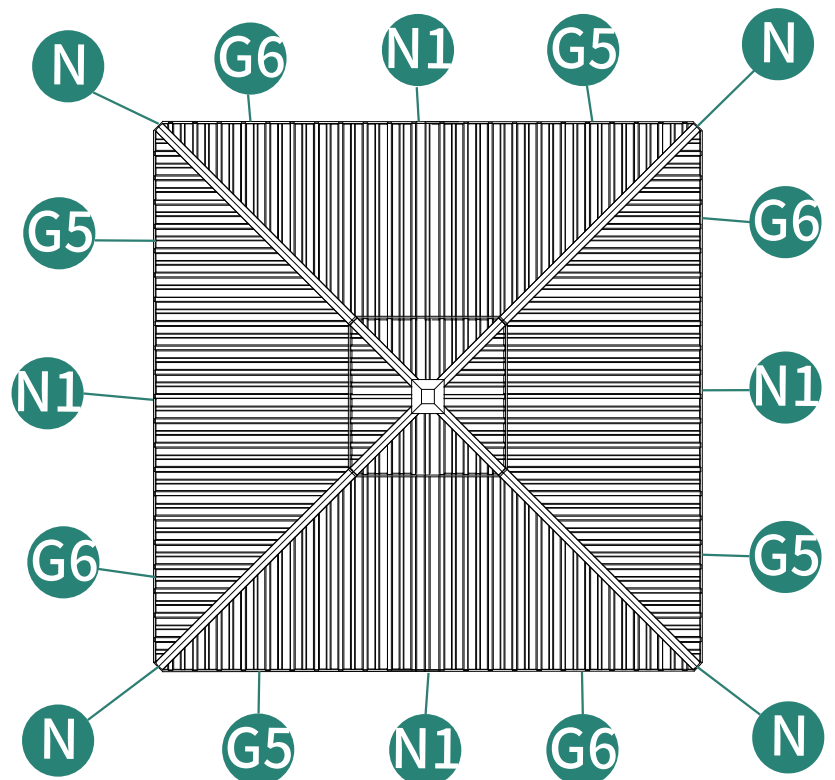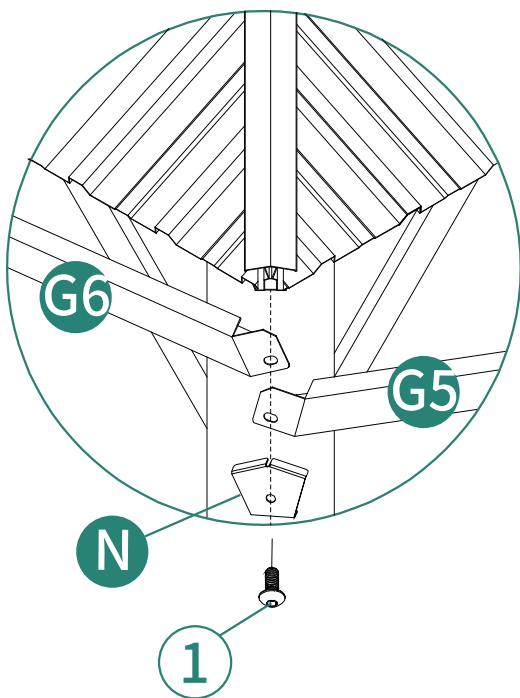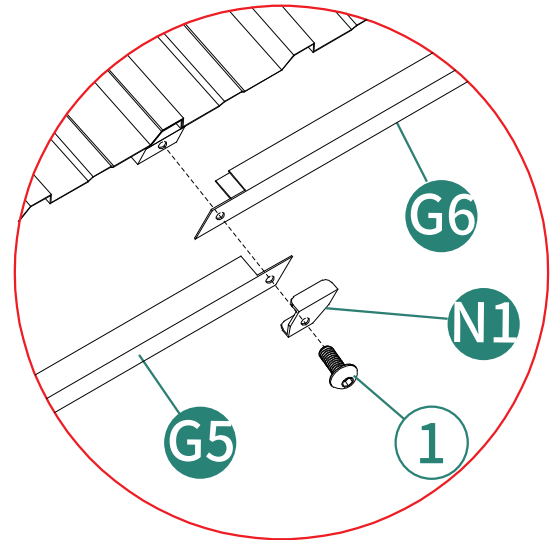
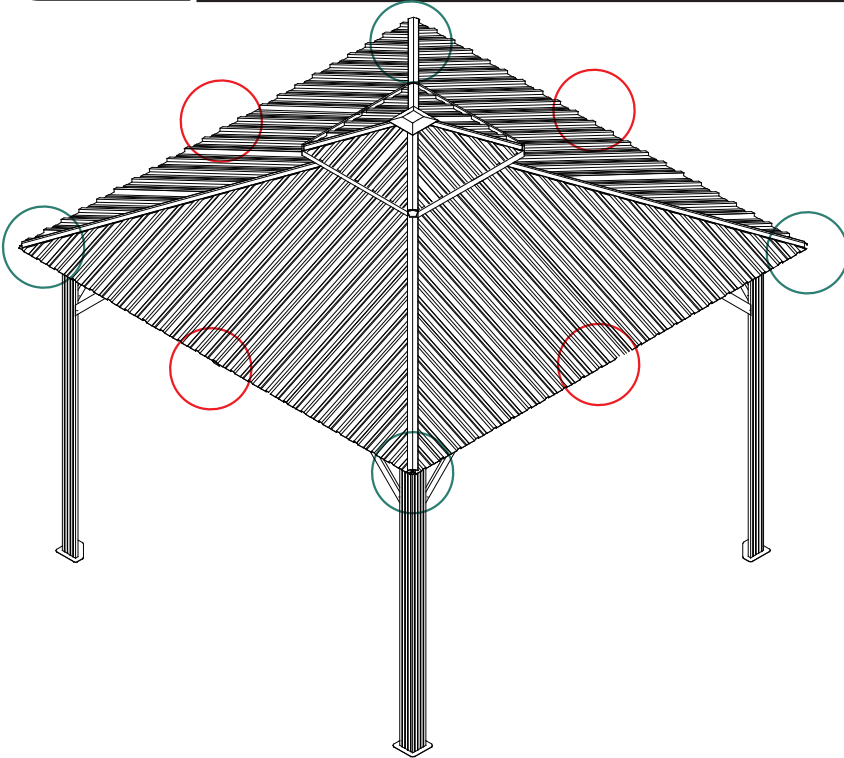
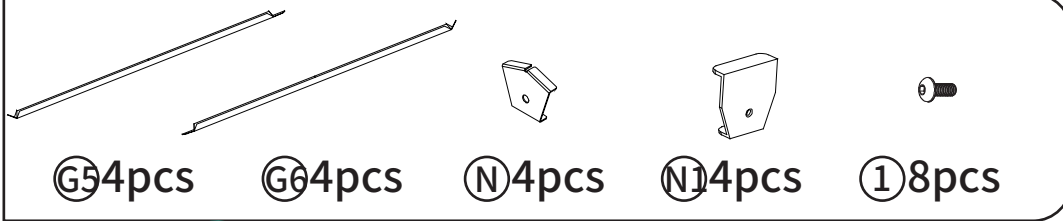


ASSEMBLY INSTRUCTIONS

19

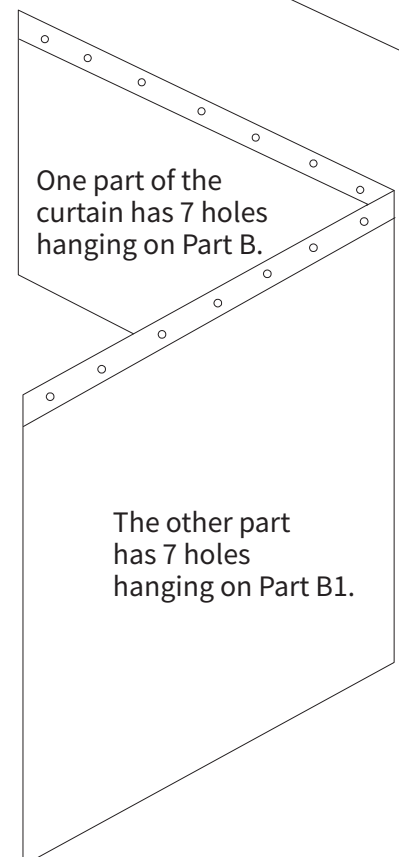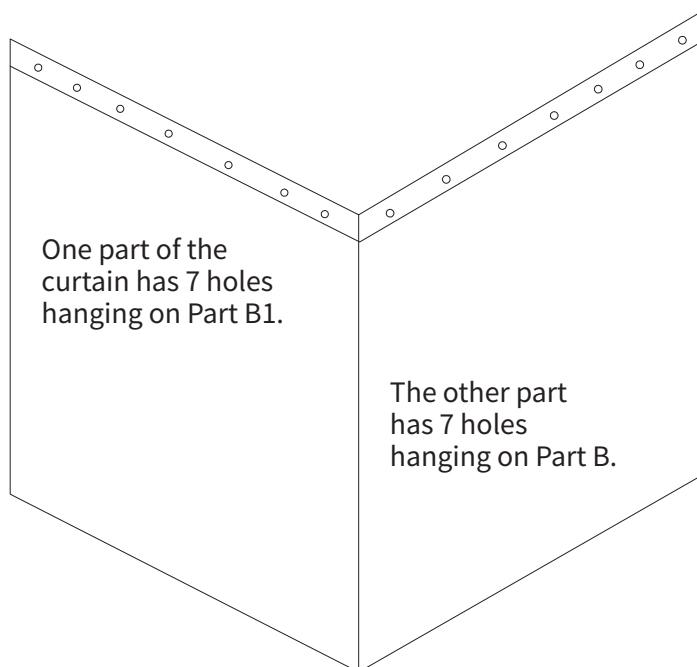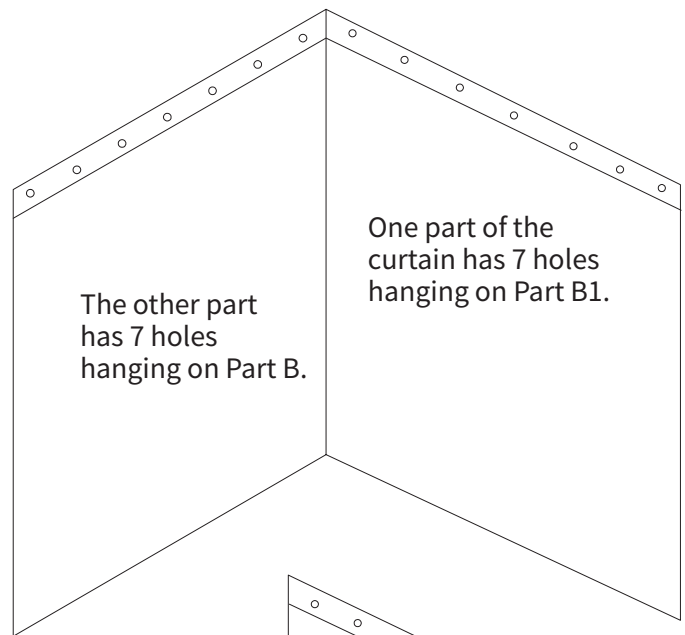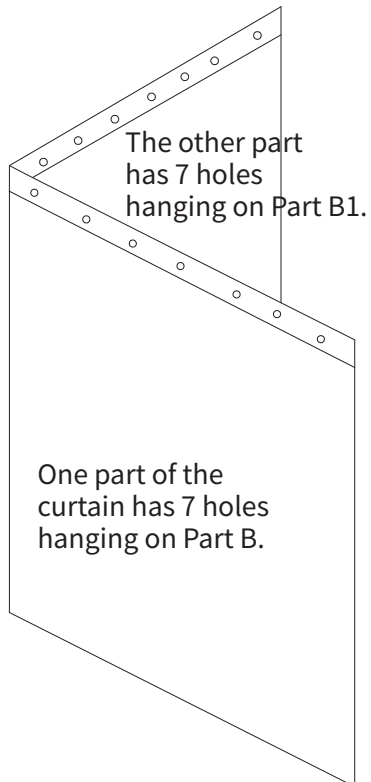


20

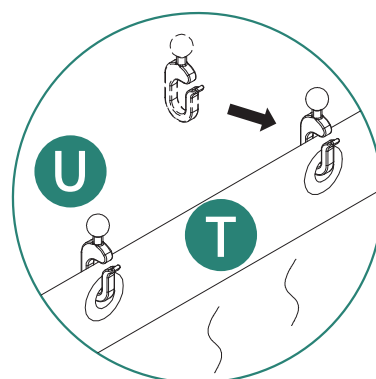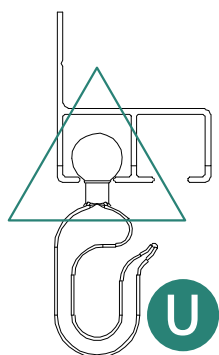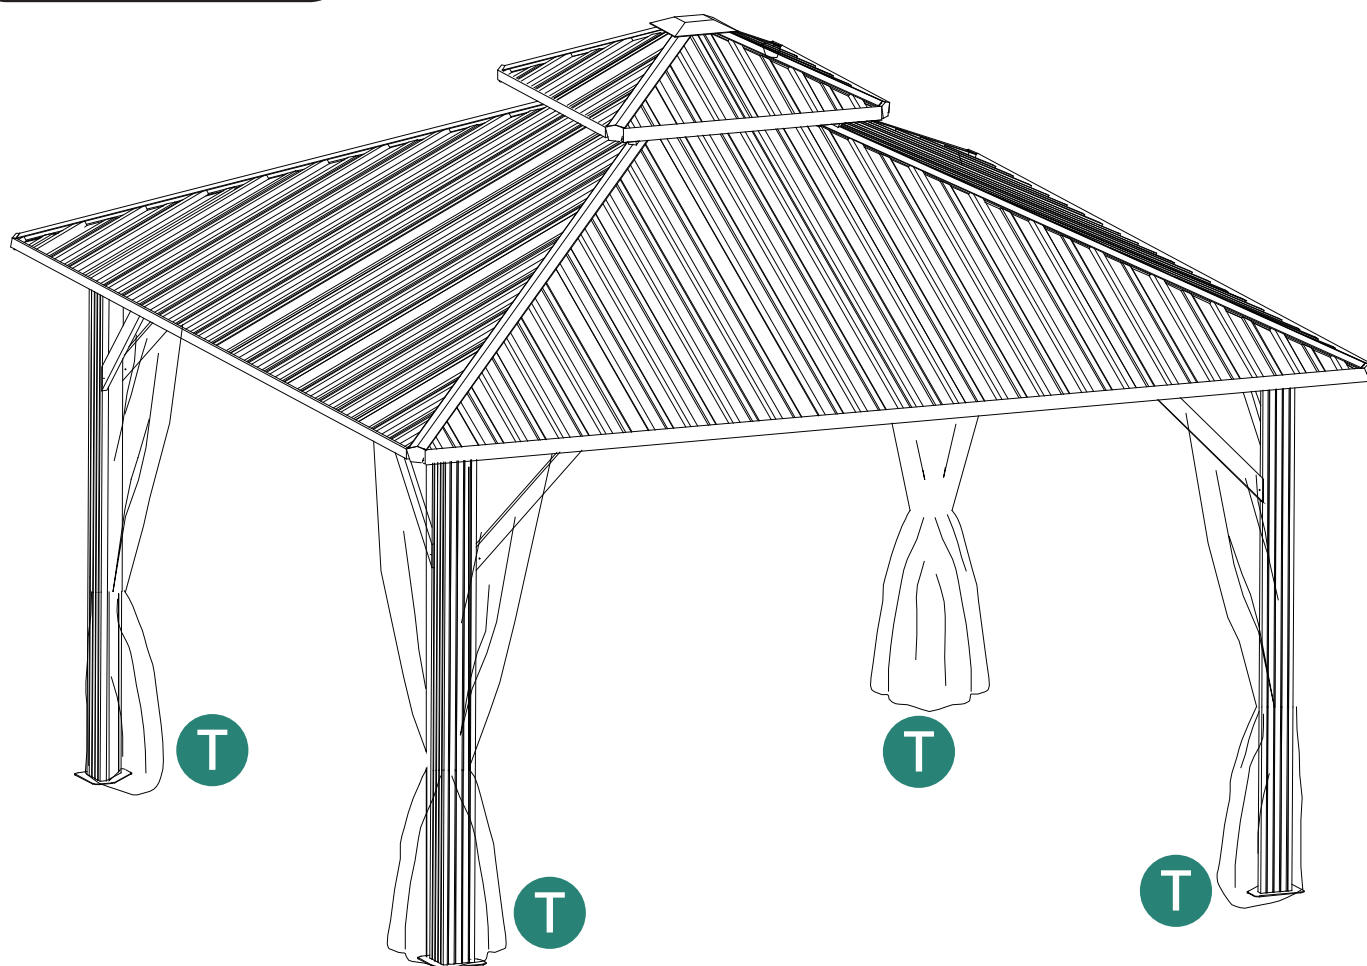





Pay attention to the sidewall curtain's installation position.

ASSEMBLY INSTRUCTIONS

21





T1 4pcs

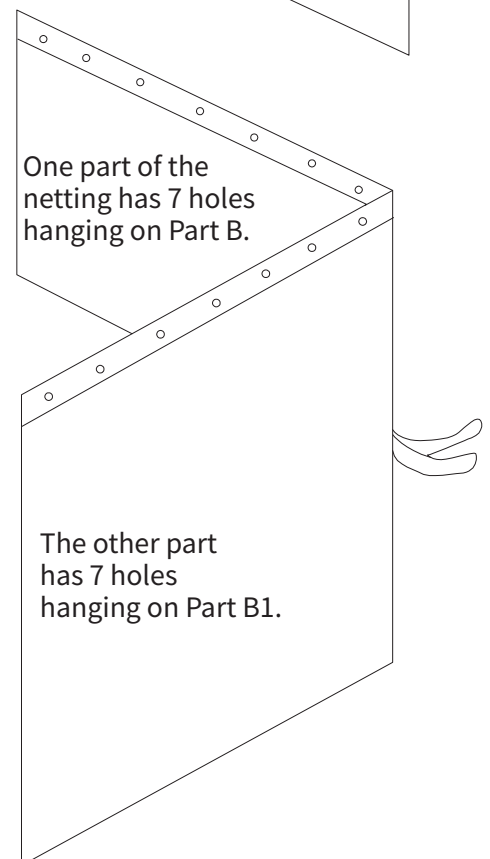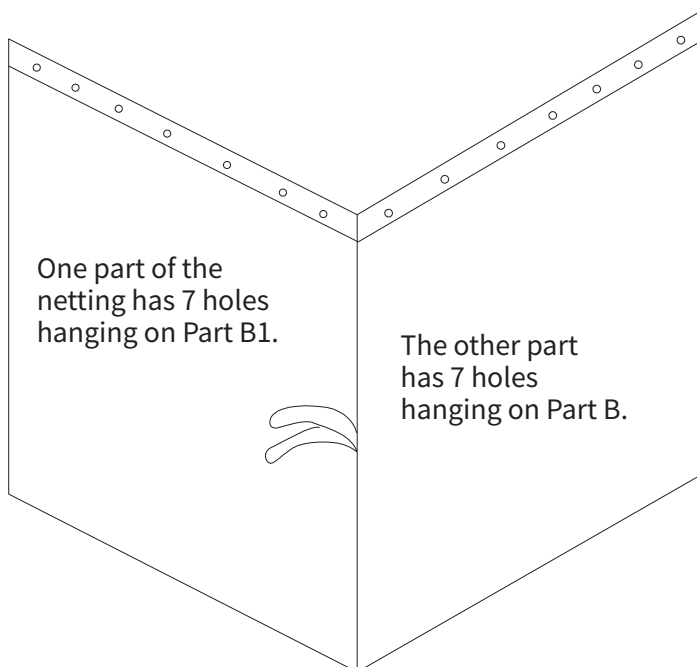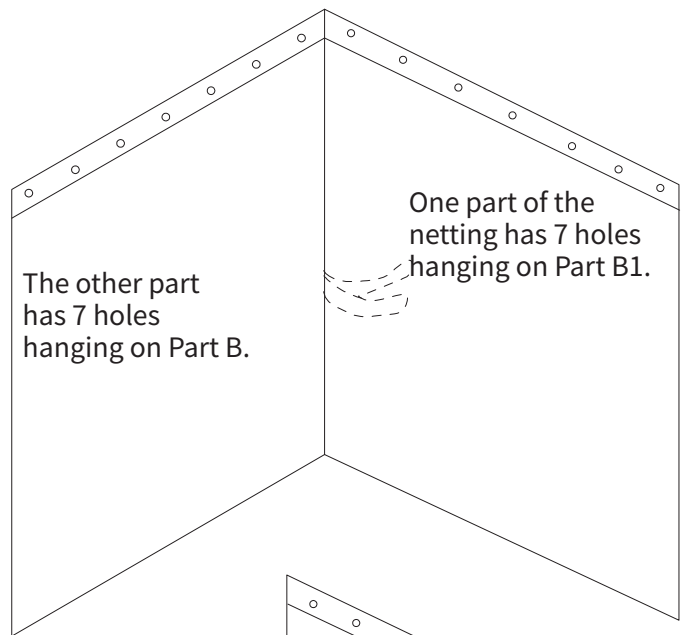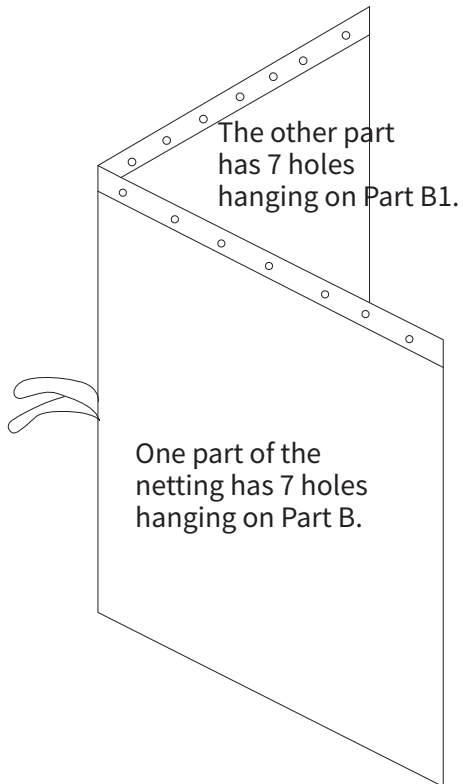


ASSEMBLY INSTRUCTIONS



22

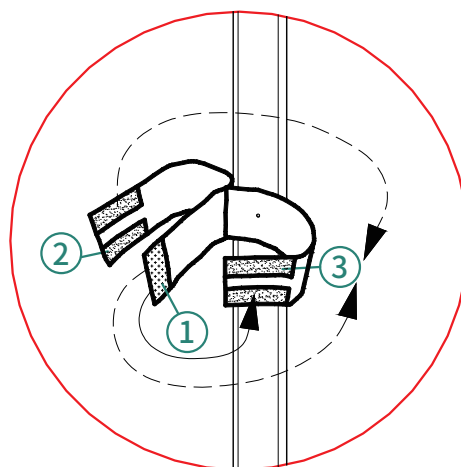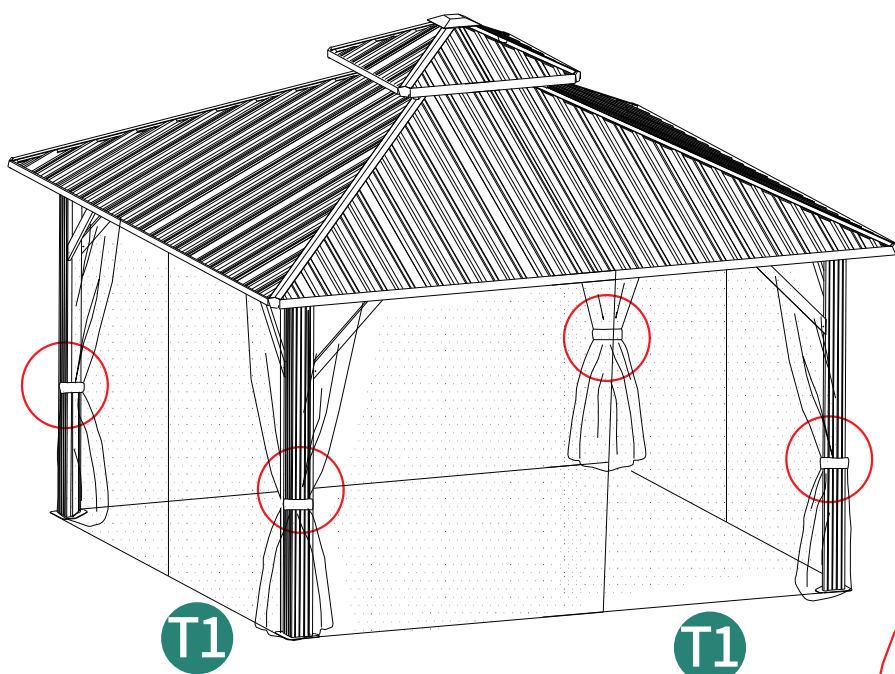

Note:
Attach 1 to 2 to secure parts T1 and T (curtains) together.
Attach 1 to 3 to secure the back curtain (T).
Attach 1 to 3 to secure the front curtain (T1).

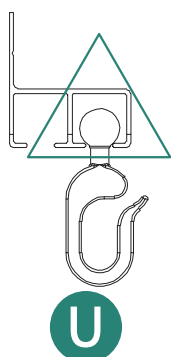

Pay attention to the sidewall netting's installation position.

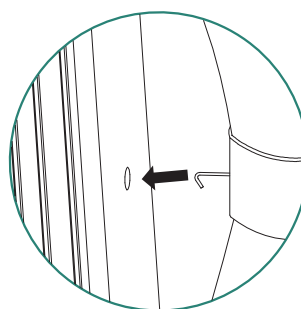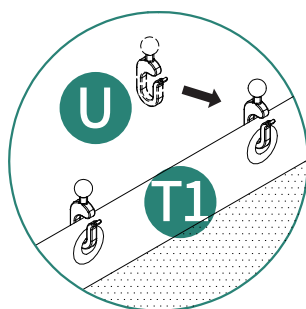


Hang the hook attached to the netting on Part A.

ASSEMBLY INSTRUCTIONS


23



⑨12pcs




⑭12pcs


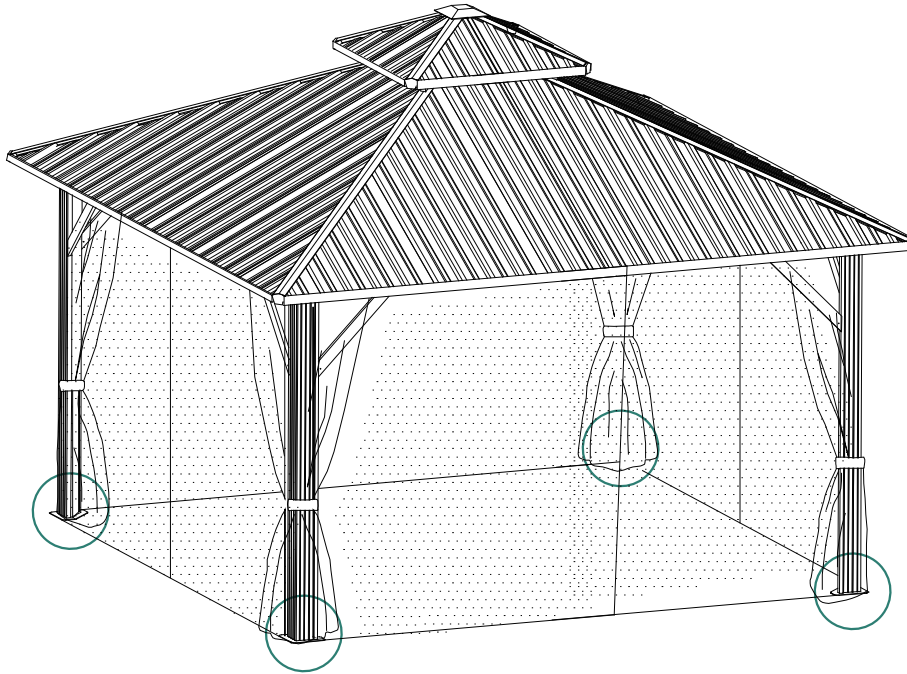


To improve wind resistance, **be sure to complete this installation step. If expansion screws or ground nails are not installed, strong winds may topple the gazebo.**

Expansion screws are essential for stability on cement surfaces, and ground nails are for grassy surfaces. All are included in the accessories package.

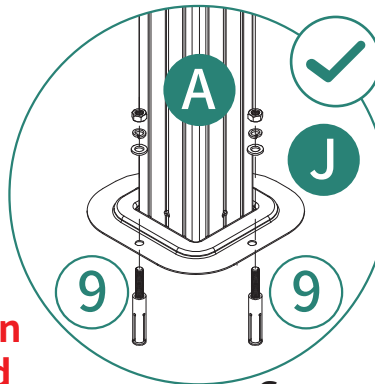

Cement surfaces

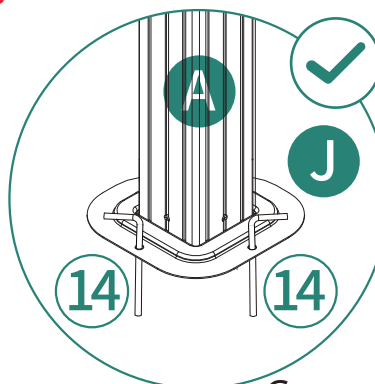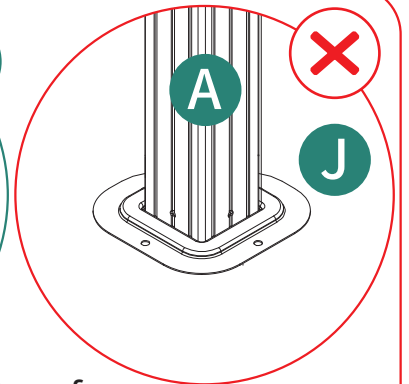

Grassy surfaces

