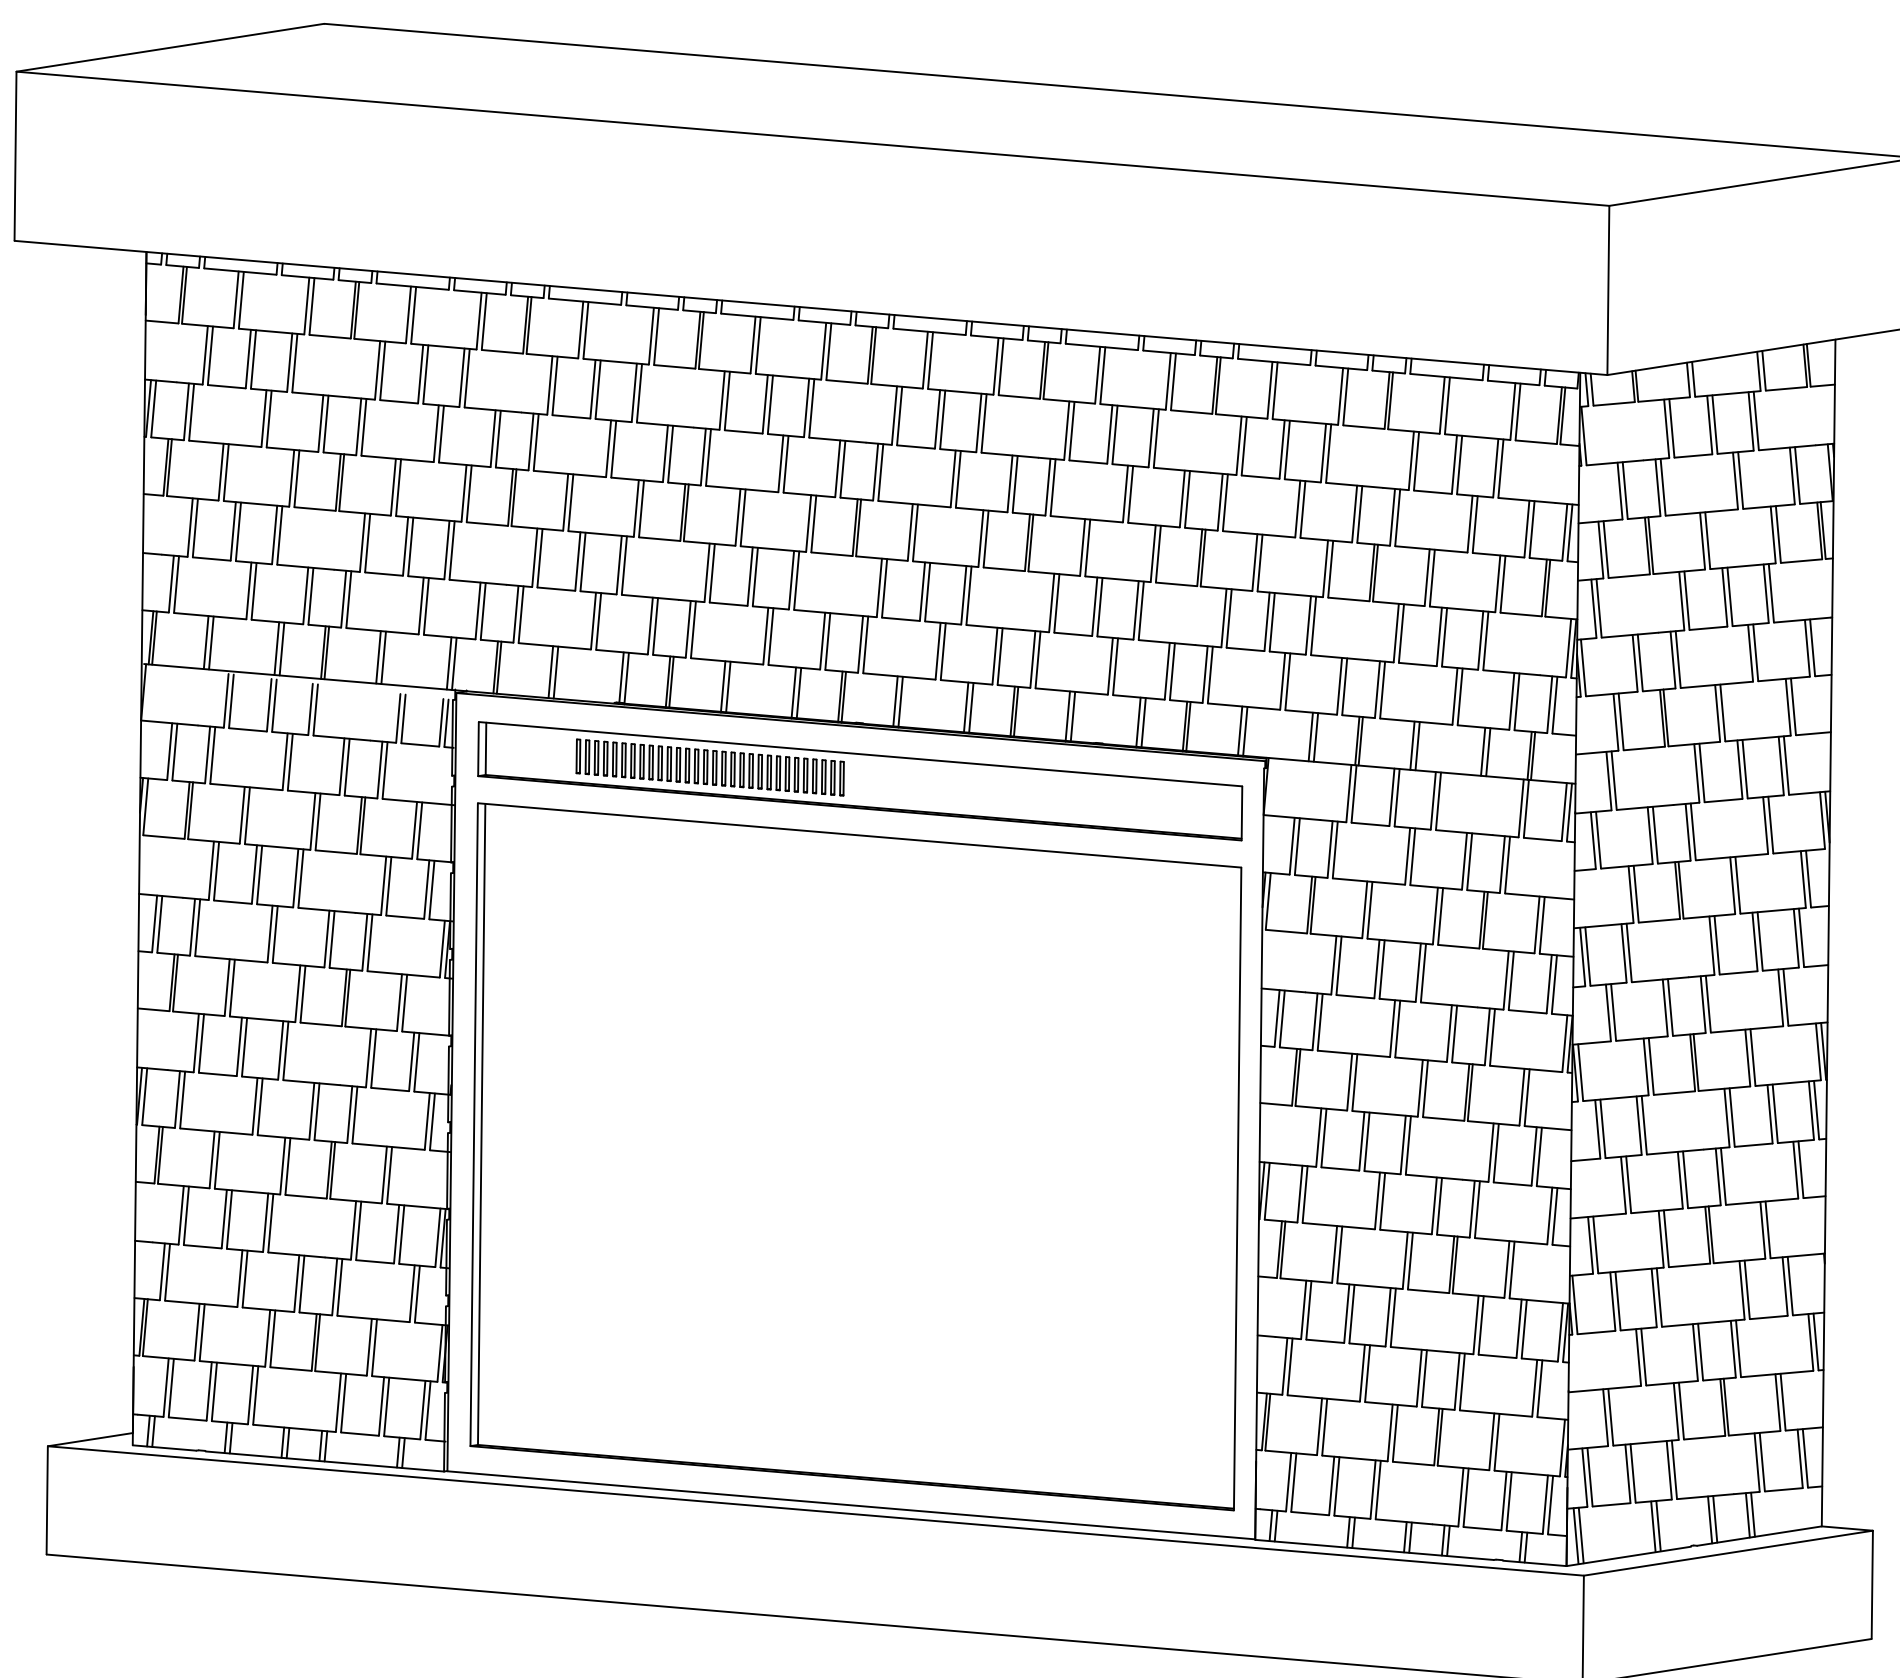


CountryLivingTM

Dixson Stone Mantel

Model: CL-M-STN-2302



SAFETY INFORMATION



Please read and understand the entire manual before attempting to assemble, install, or operate the product.



WARNING! You may need an adult to assist with some steps.



CAUTION!

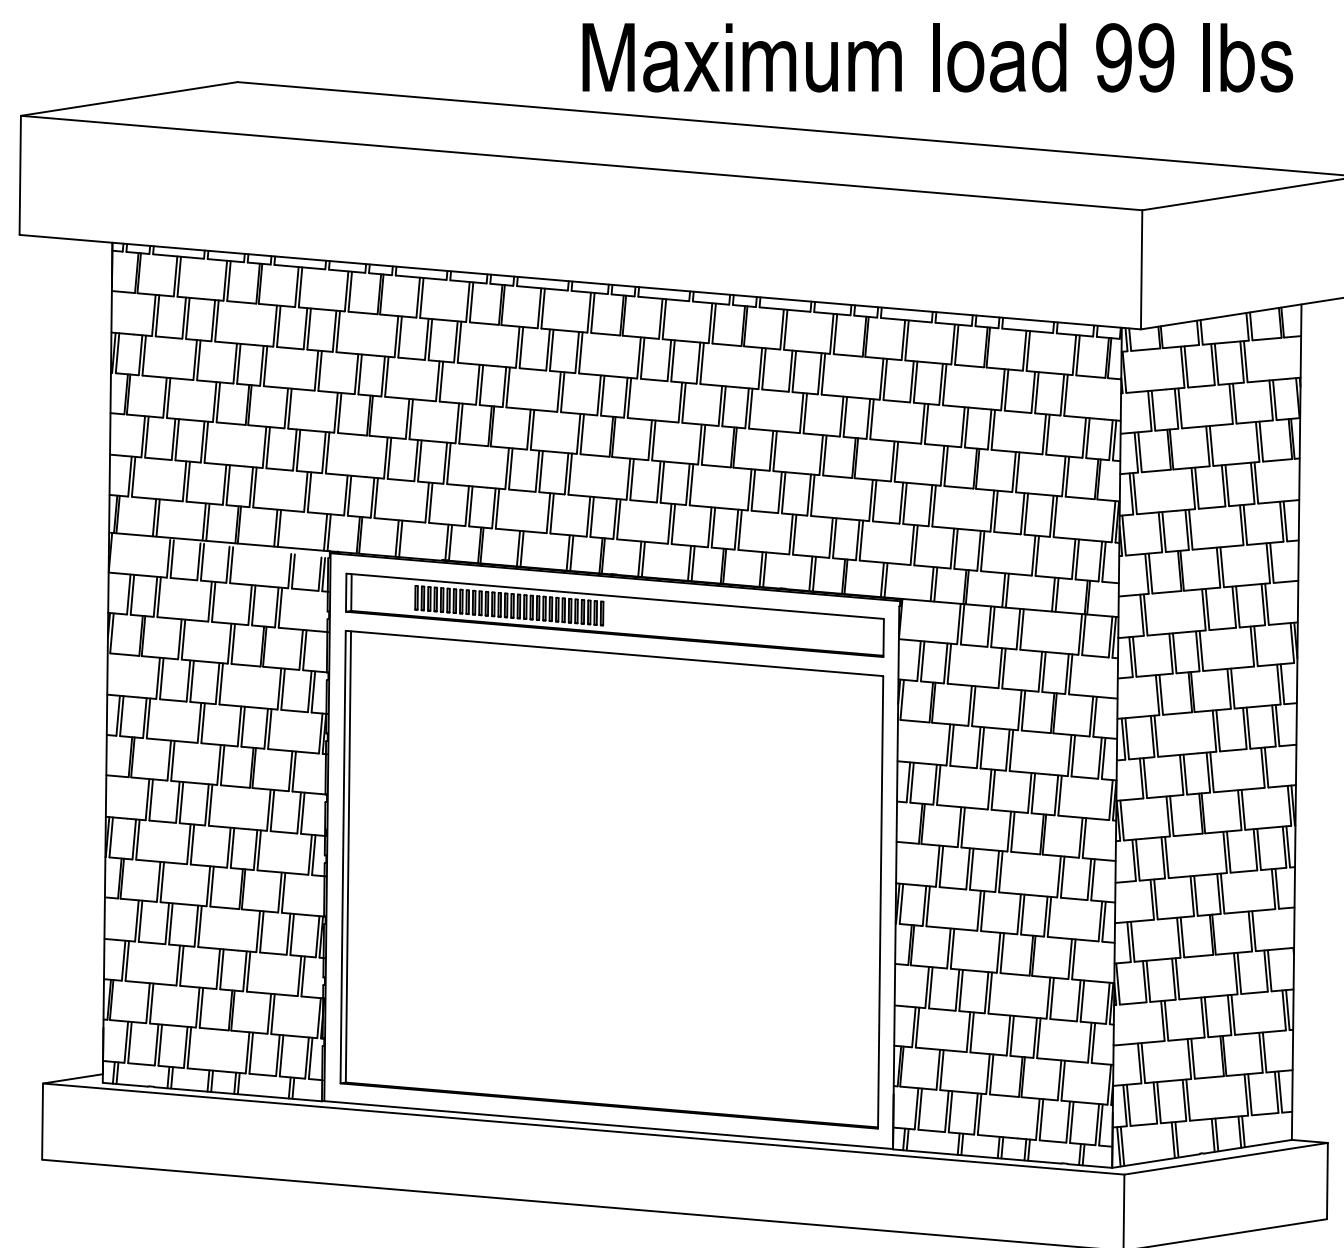
Before assembly and installation, carefully unwrap all parts. Locate and set aside the hardware kit before disposing of the packaging.

Use care when assembling the product. Take your time and follow the instructions closely.



WARNING!

Do not use more than the maximum load as shown in the diagram. The use of TVs or loads heavier than the maximum weights specified may result in instability, causing tip over, which could result in serious injury or death.



Questions, problems, missing parts?

Before returning to store, call

Customer Service:

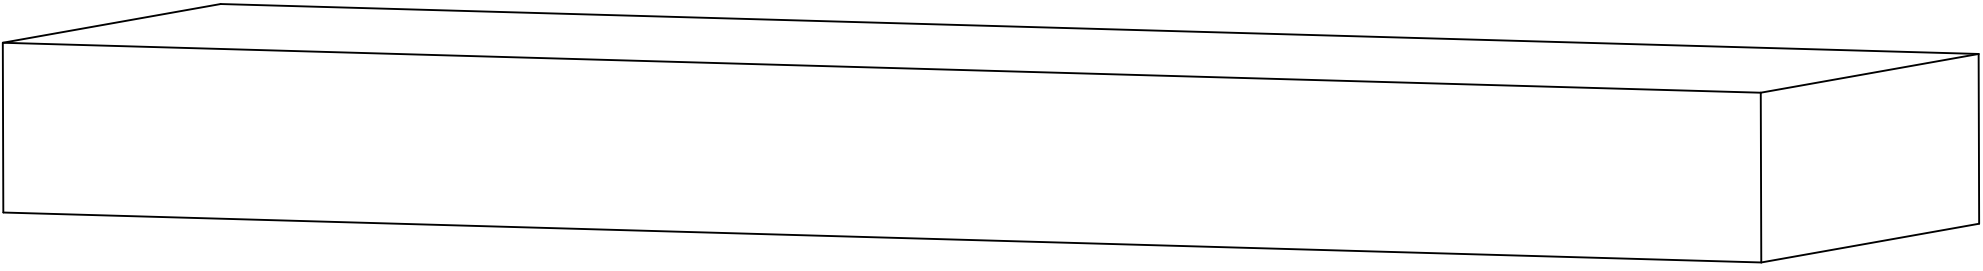
8am-5pm CST, Monday – Friday

Phone: 877-430-0703


Email: resolutions@electricfireplacesdirect.com

Please save these instructions for future reference.


1




2

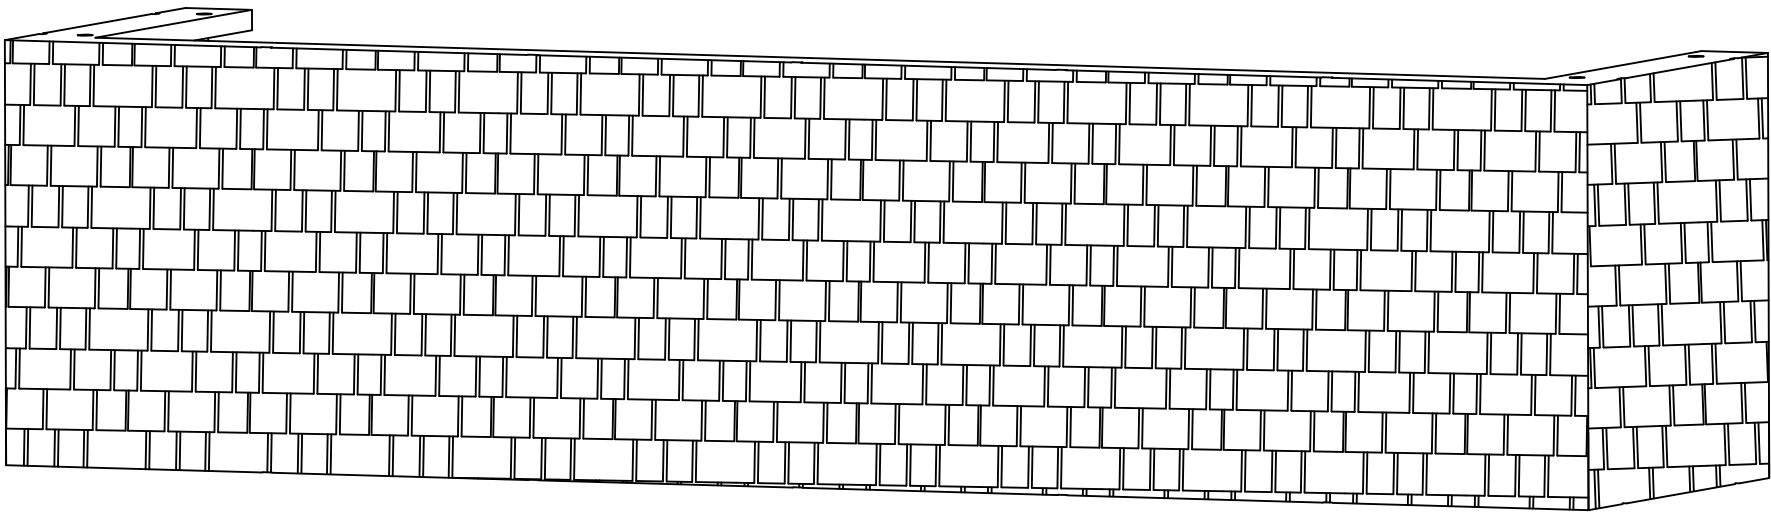


3

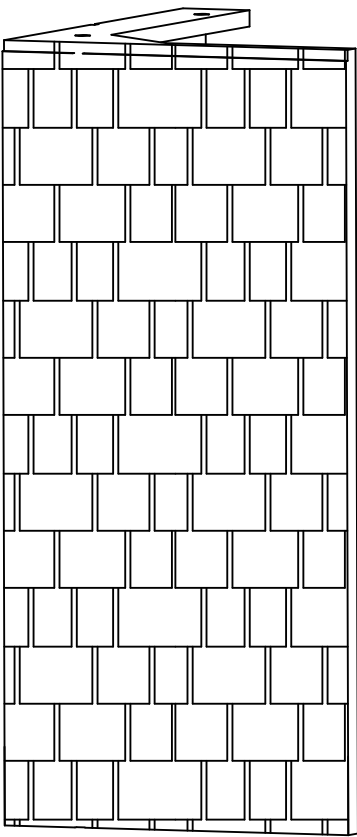

4

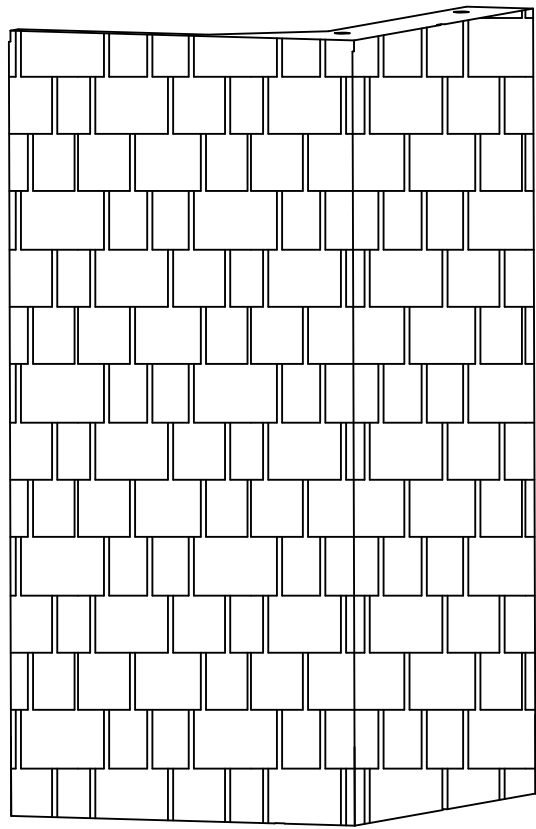

5

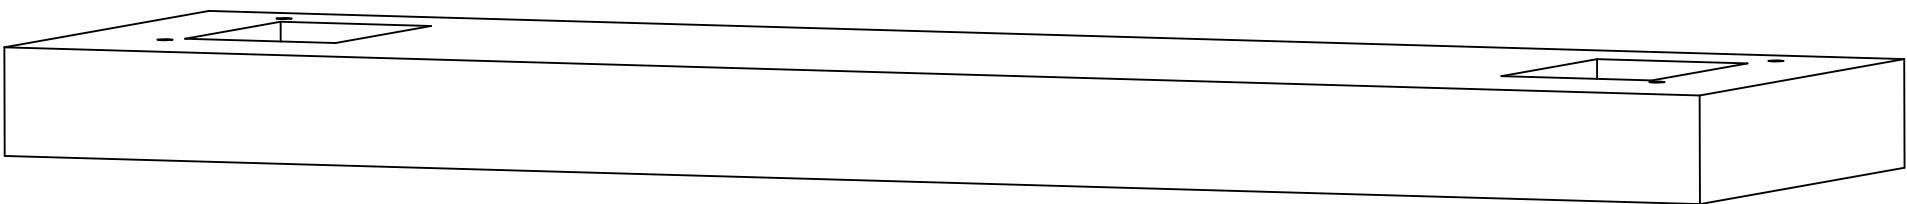

TOOLS NEEDED








Phillips Head Screwdriver
(not included)






Drill
(not included)





PARTS


PART NO.	DESCRIPTION	QTY
1	Top	1
2	Header	1
3	Left Side	1
4	Right Side	1
5	Base	1

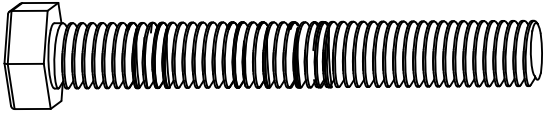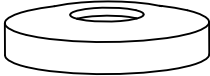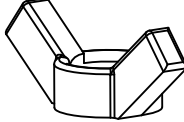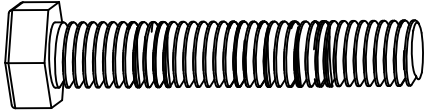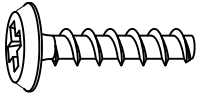HARDWARE		
PART NO.	DESCRIPTION	QTY
A	M8x60mm Bolt 	8
B	25x11mm Gasket 	20
C	22x9mm Gasket 	20
D	M8 Butterfly Nut 	8
E	M8x40mm Bolt 	4
F	4.5x12mm Screw 	4

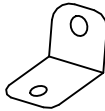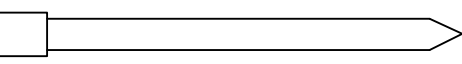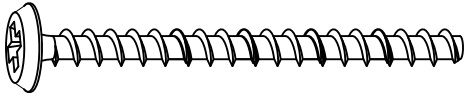SAFETY STRAP KIT		
PART NO.	DESCRIPTION	QTY
G	Bracket 	2
H	260mm Nylon Strap 	1
I	4x50mm Screw 	1
J	4x16mm Screw 	1

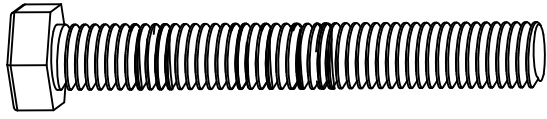
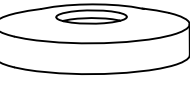

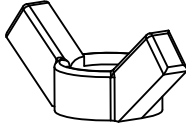
STEP 1


Hardware/Tool	Description	Qty
A	M8x60mm Bolt 	4
B	25x11mm Gasket 	8
C	22x9mm Gasket 	8
D	M8 Butterfly Nut 	4

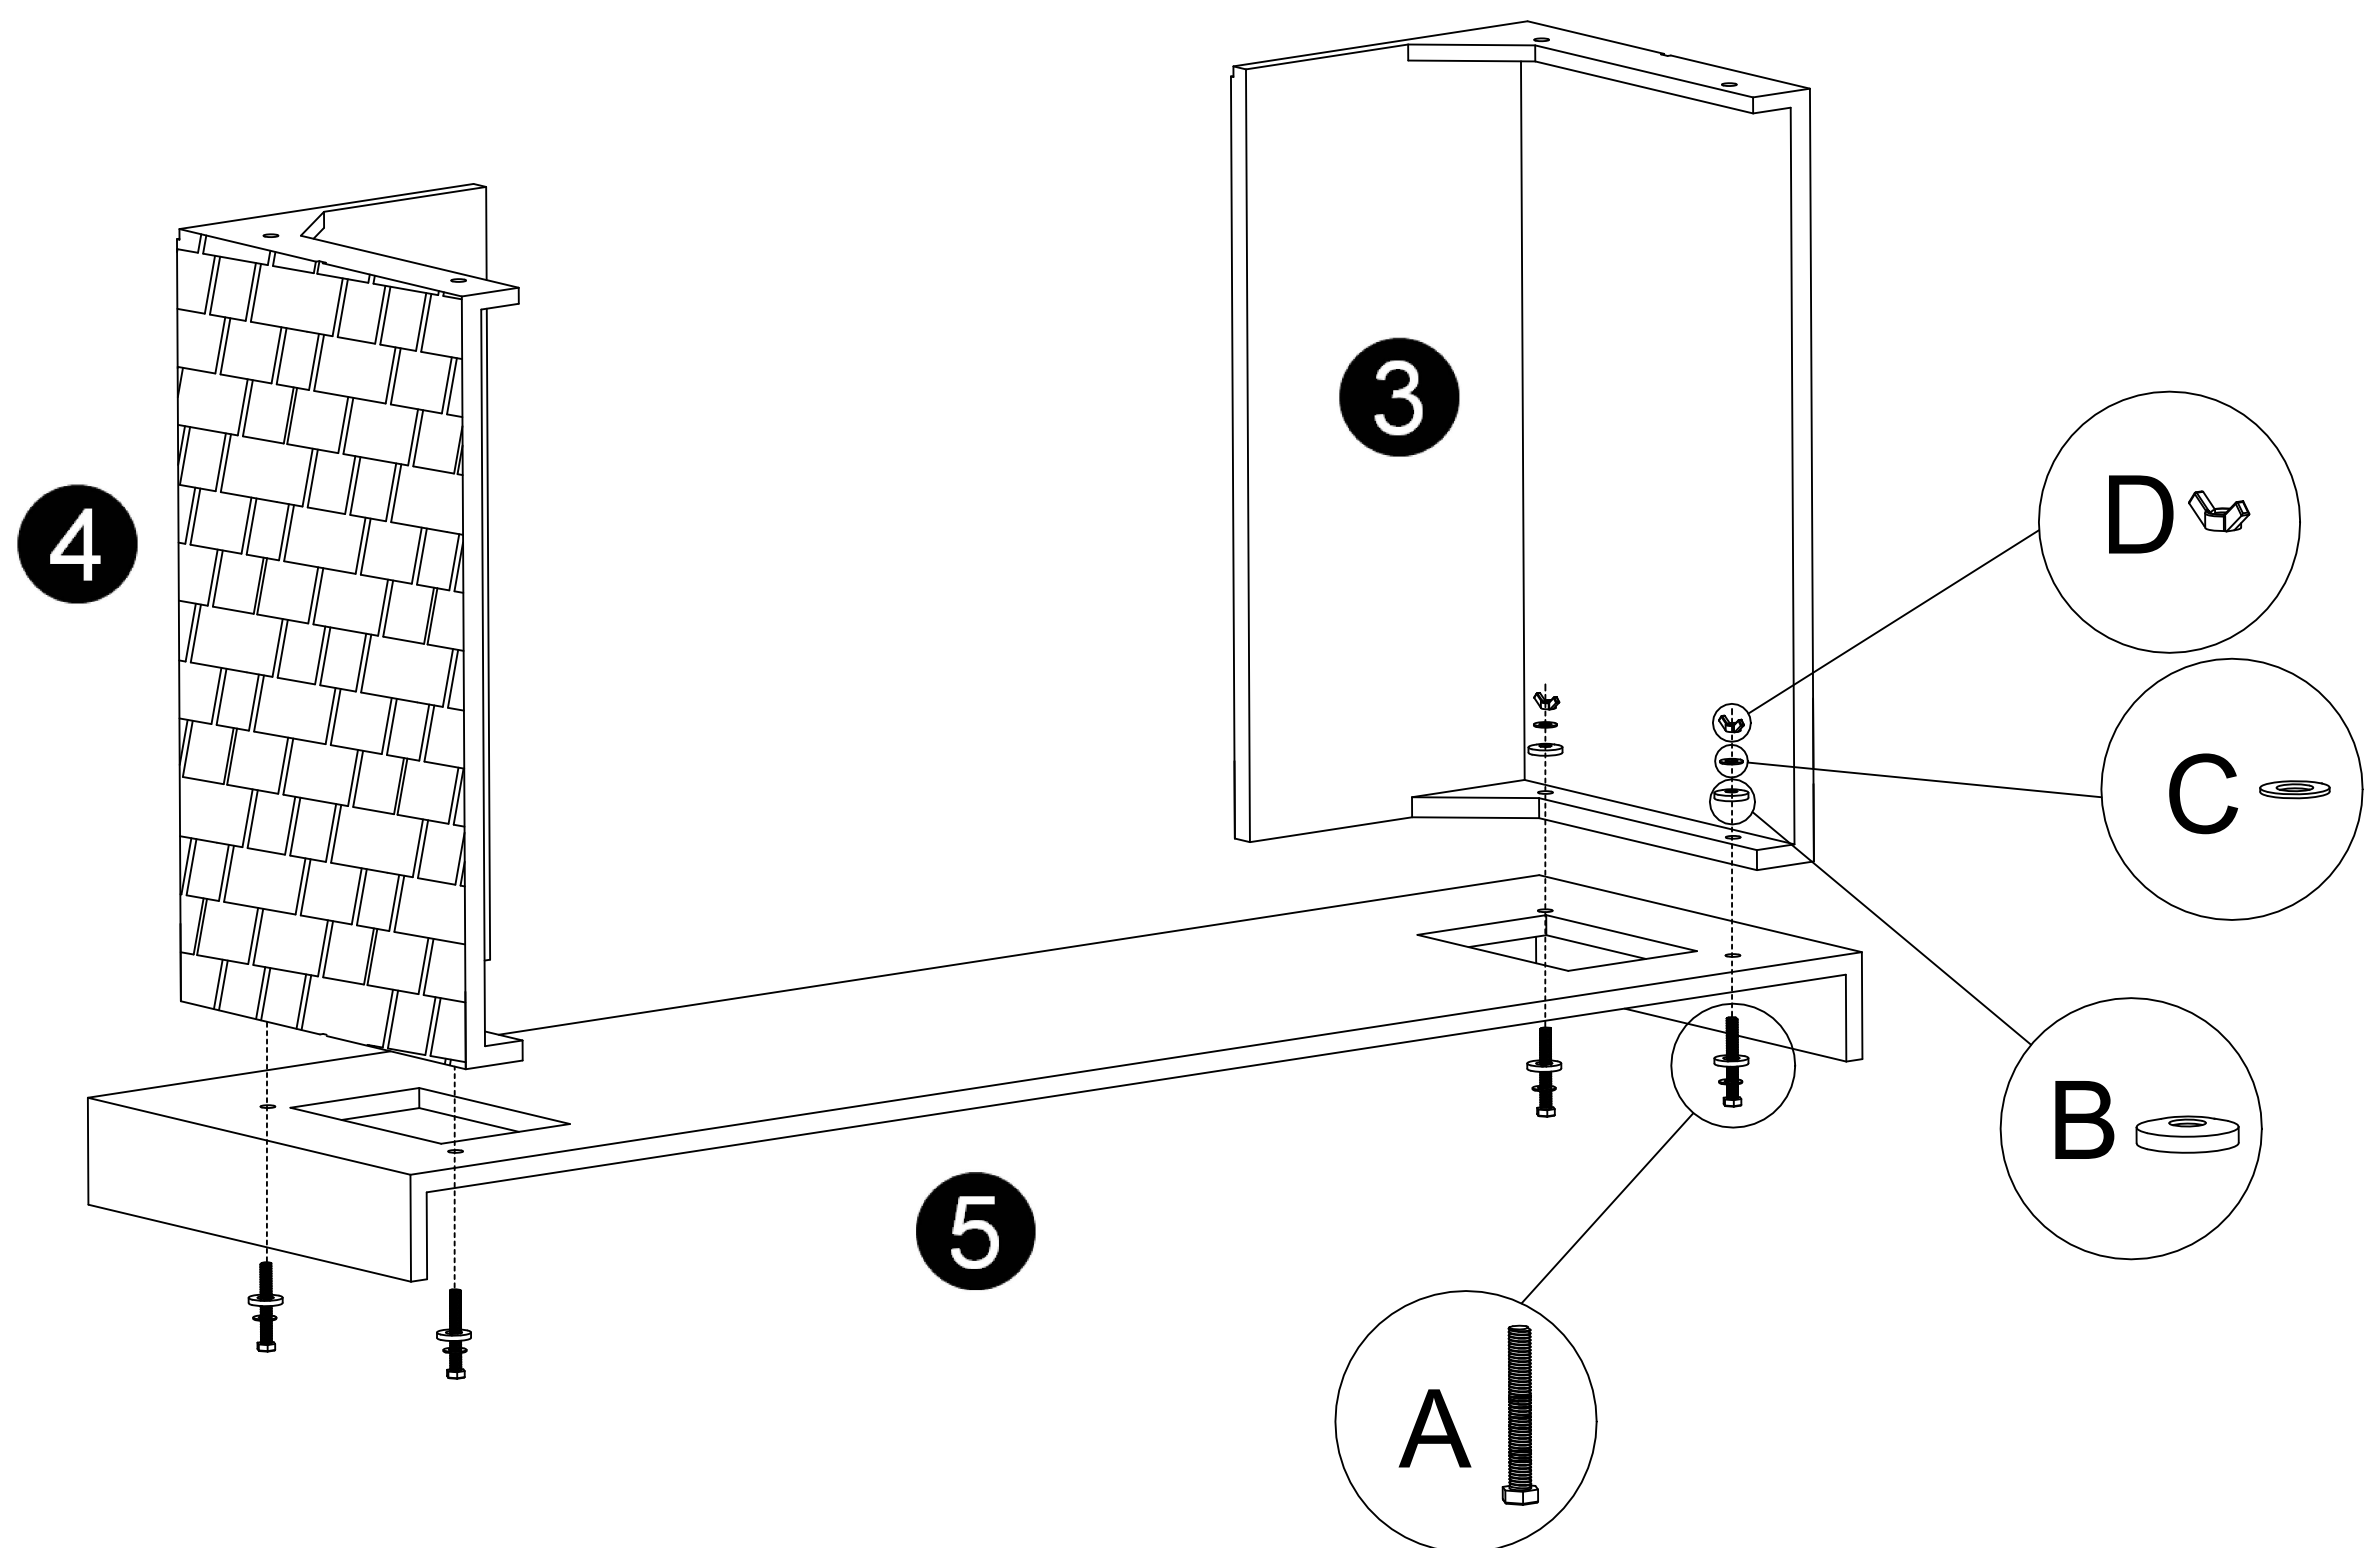

Gently set the left side panel (3) and right side panel (4) on the base (5) as shown in the diagram. Place a gasket (C) on each long bolt (A), and then add a gasket (B) to each bolt. Align the holes on the base (5) with the holes on the side panels (3 & 4). Insert a bolt from the bottom into a hole on the base. For the top of the bolt (A), add a gasket (B) followed by a gasket (C). Add a butterfly nut (D), but do not tighten. Repeat for the other 3 holes. You will tighten the butterfly nuts (D) in Step 5. Do not tighten them before or the mantel parts will be misaligned.

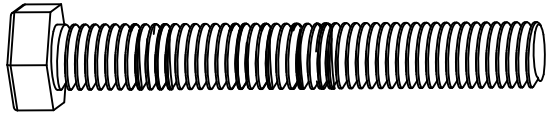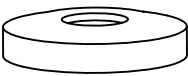
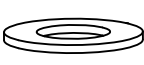
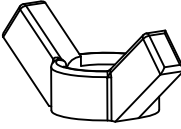
STEP 2


Hardware/Tool	Description	Qty
A	M8x60mm Bolt 	4
B	25x11mm Gasket 	8
C	22x9mm Gasket 	8
D	M8 Butterfly Nut 	4

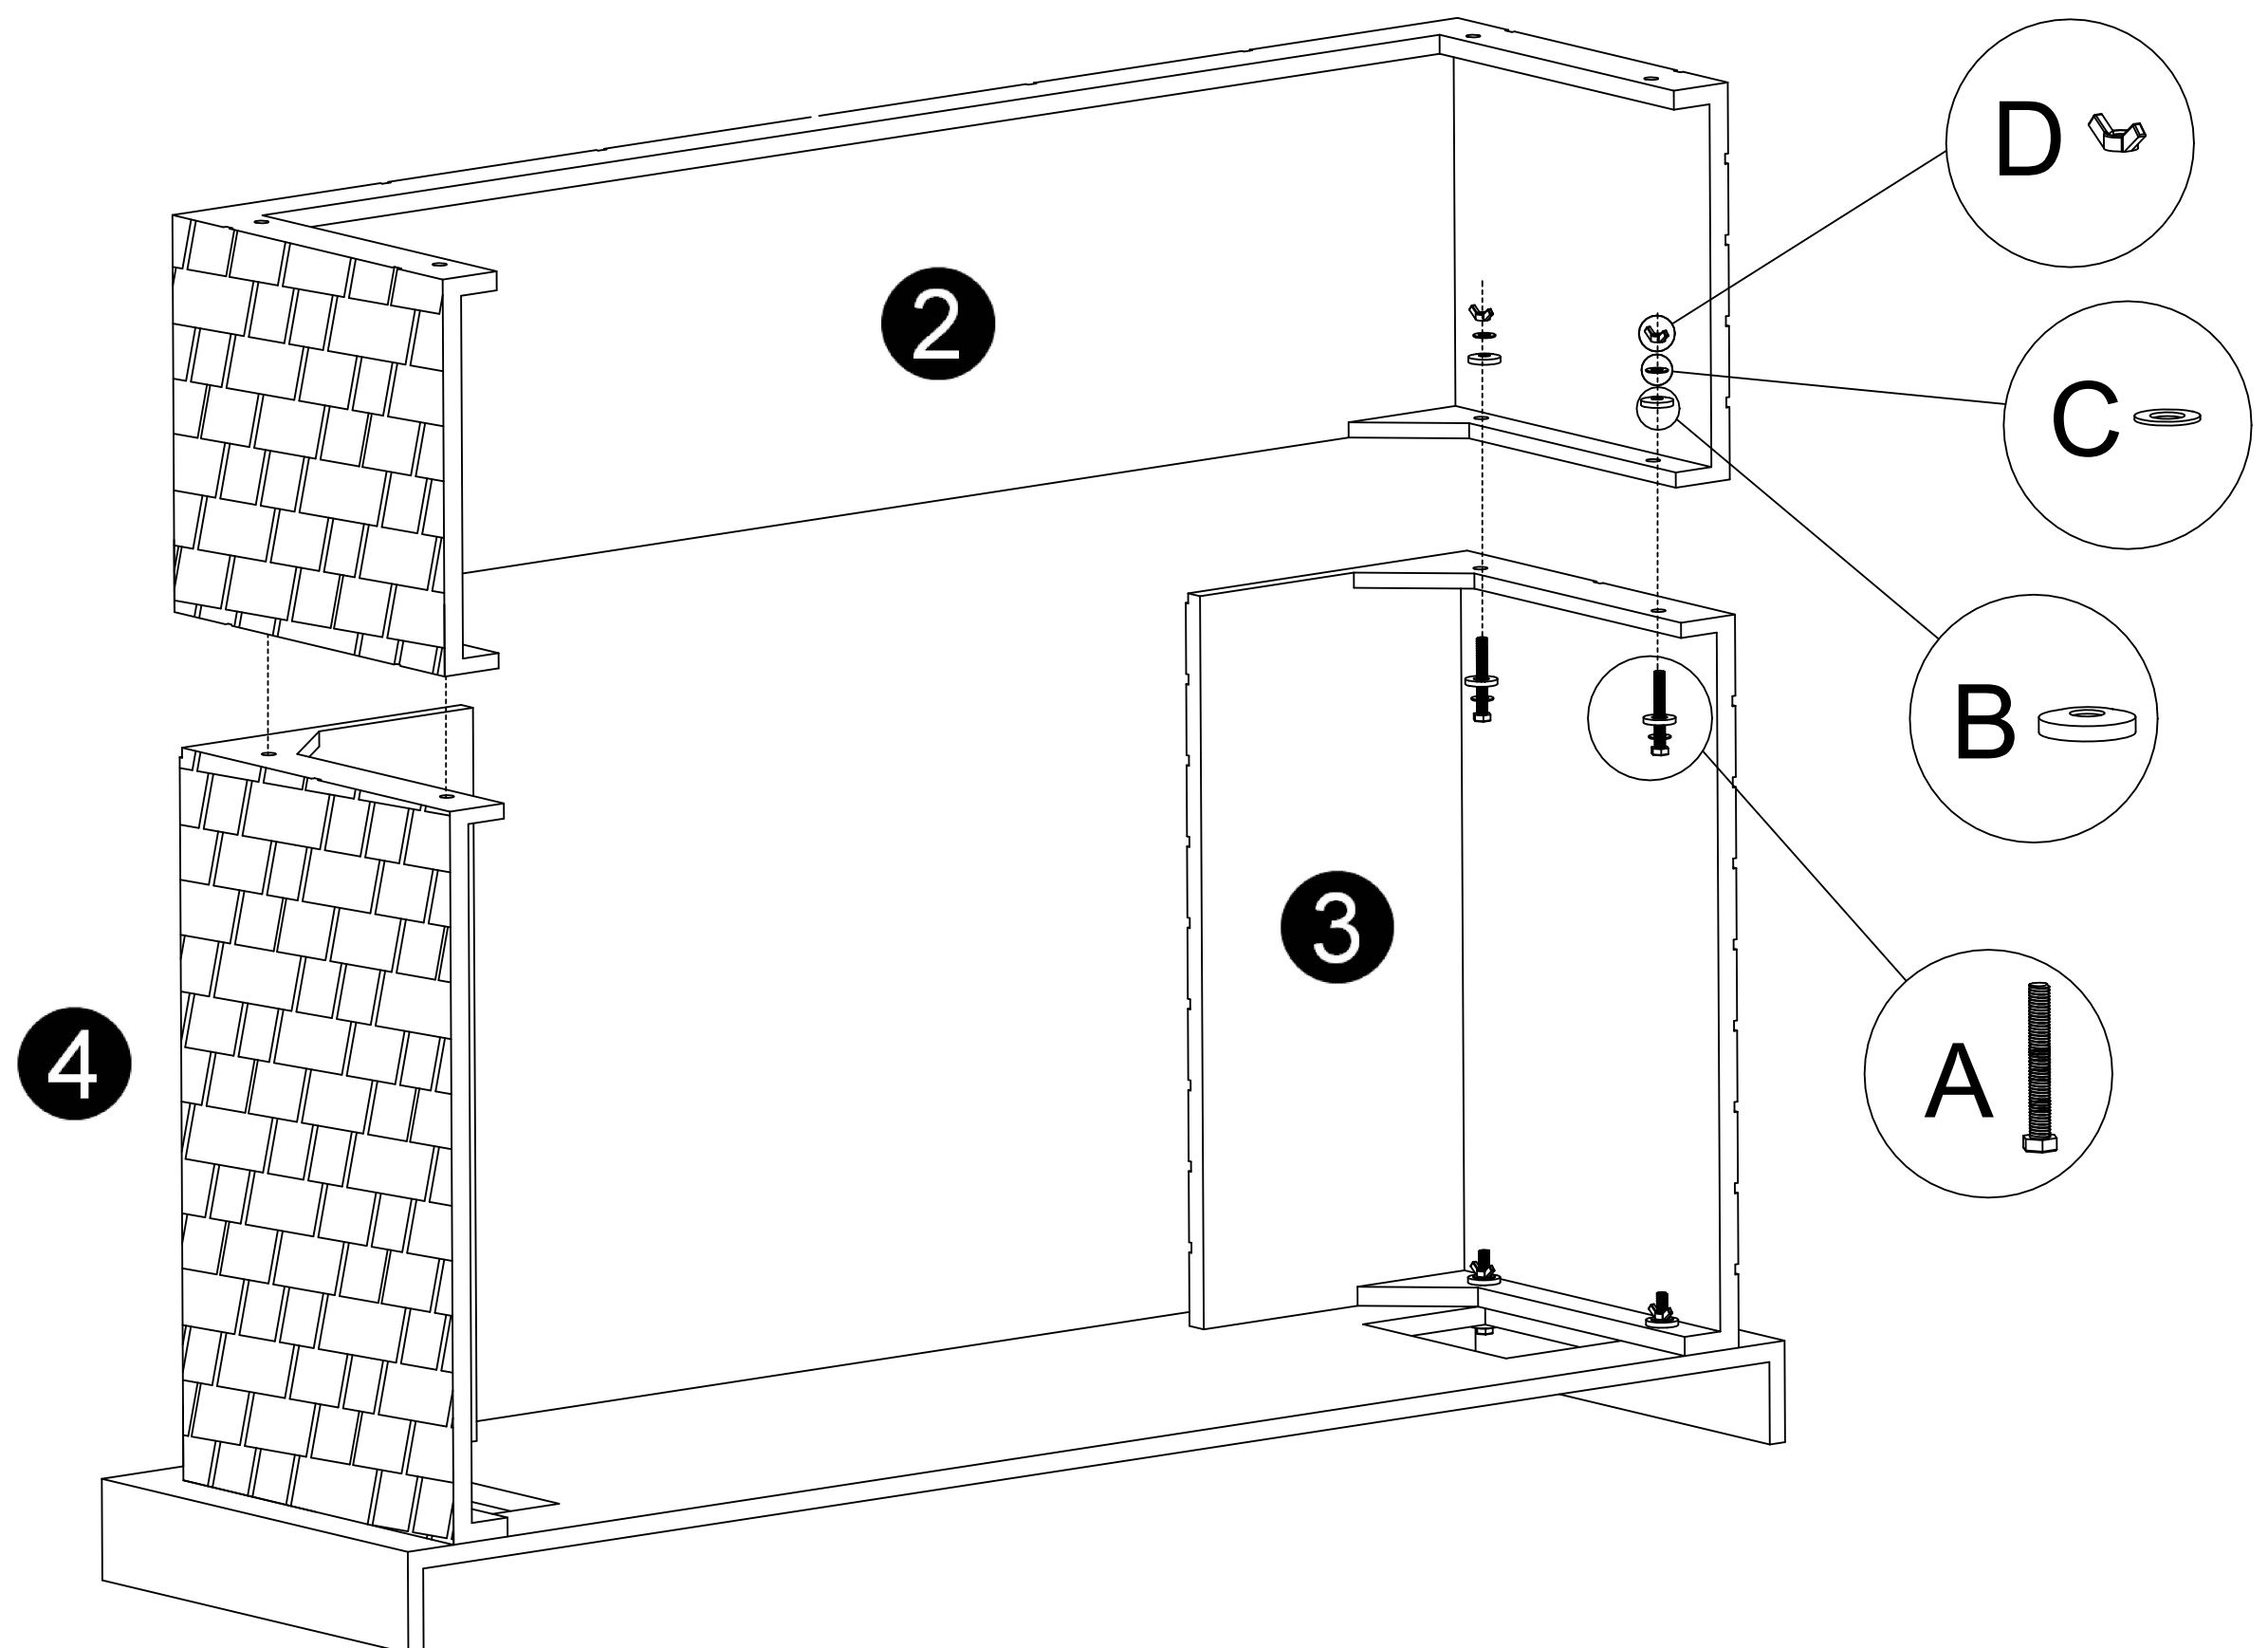

On each long bolt (A), place a gasket (C) and then a gasket (B). Carefully set the header (2) on the top of the side panels (3 & 4), making sure the holes are aligned. From the bottom of the header (2), insert a long bolt (A) into a hole. On the bolt, add a gasket (B), followed by a gasket (C). Add a butterfly nut (D), but do not tighten. Repeat for the other 3 holes. You will tighten the butterfly nuts (D) in Step 5. Do not tighten them before or the mantel parts will be misaligned.

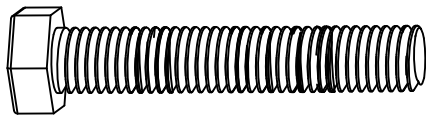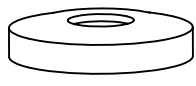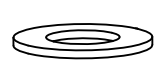
STEP 3

Hardware/Tool	Description	Qty
E	M8x40mm Bolt 	4
B	25x11mm Gasket 	4
C	22x9mm Gasket 	4
Phillips Head Screwdriver		

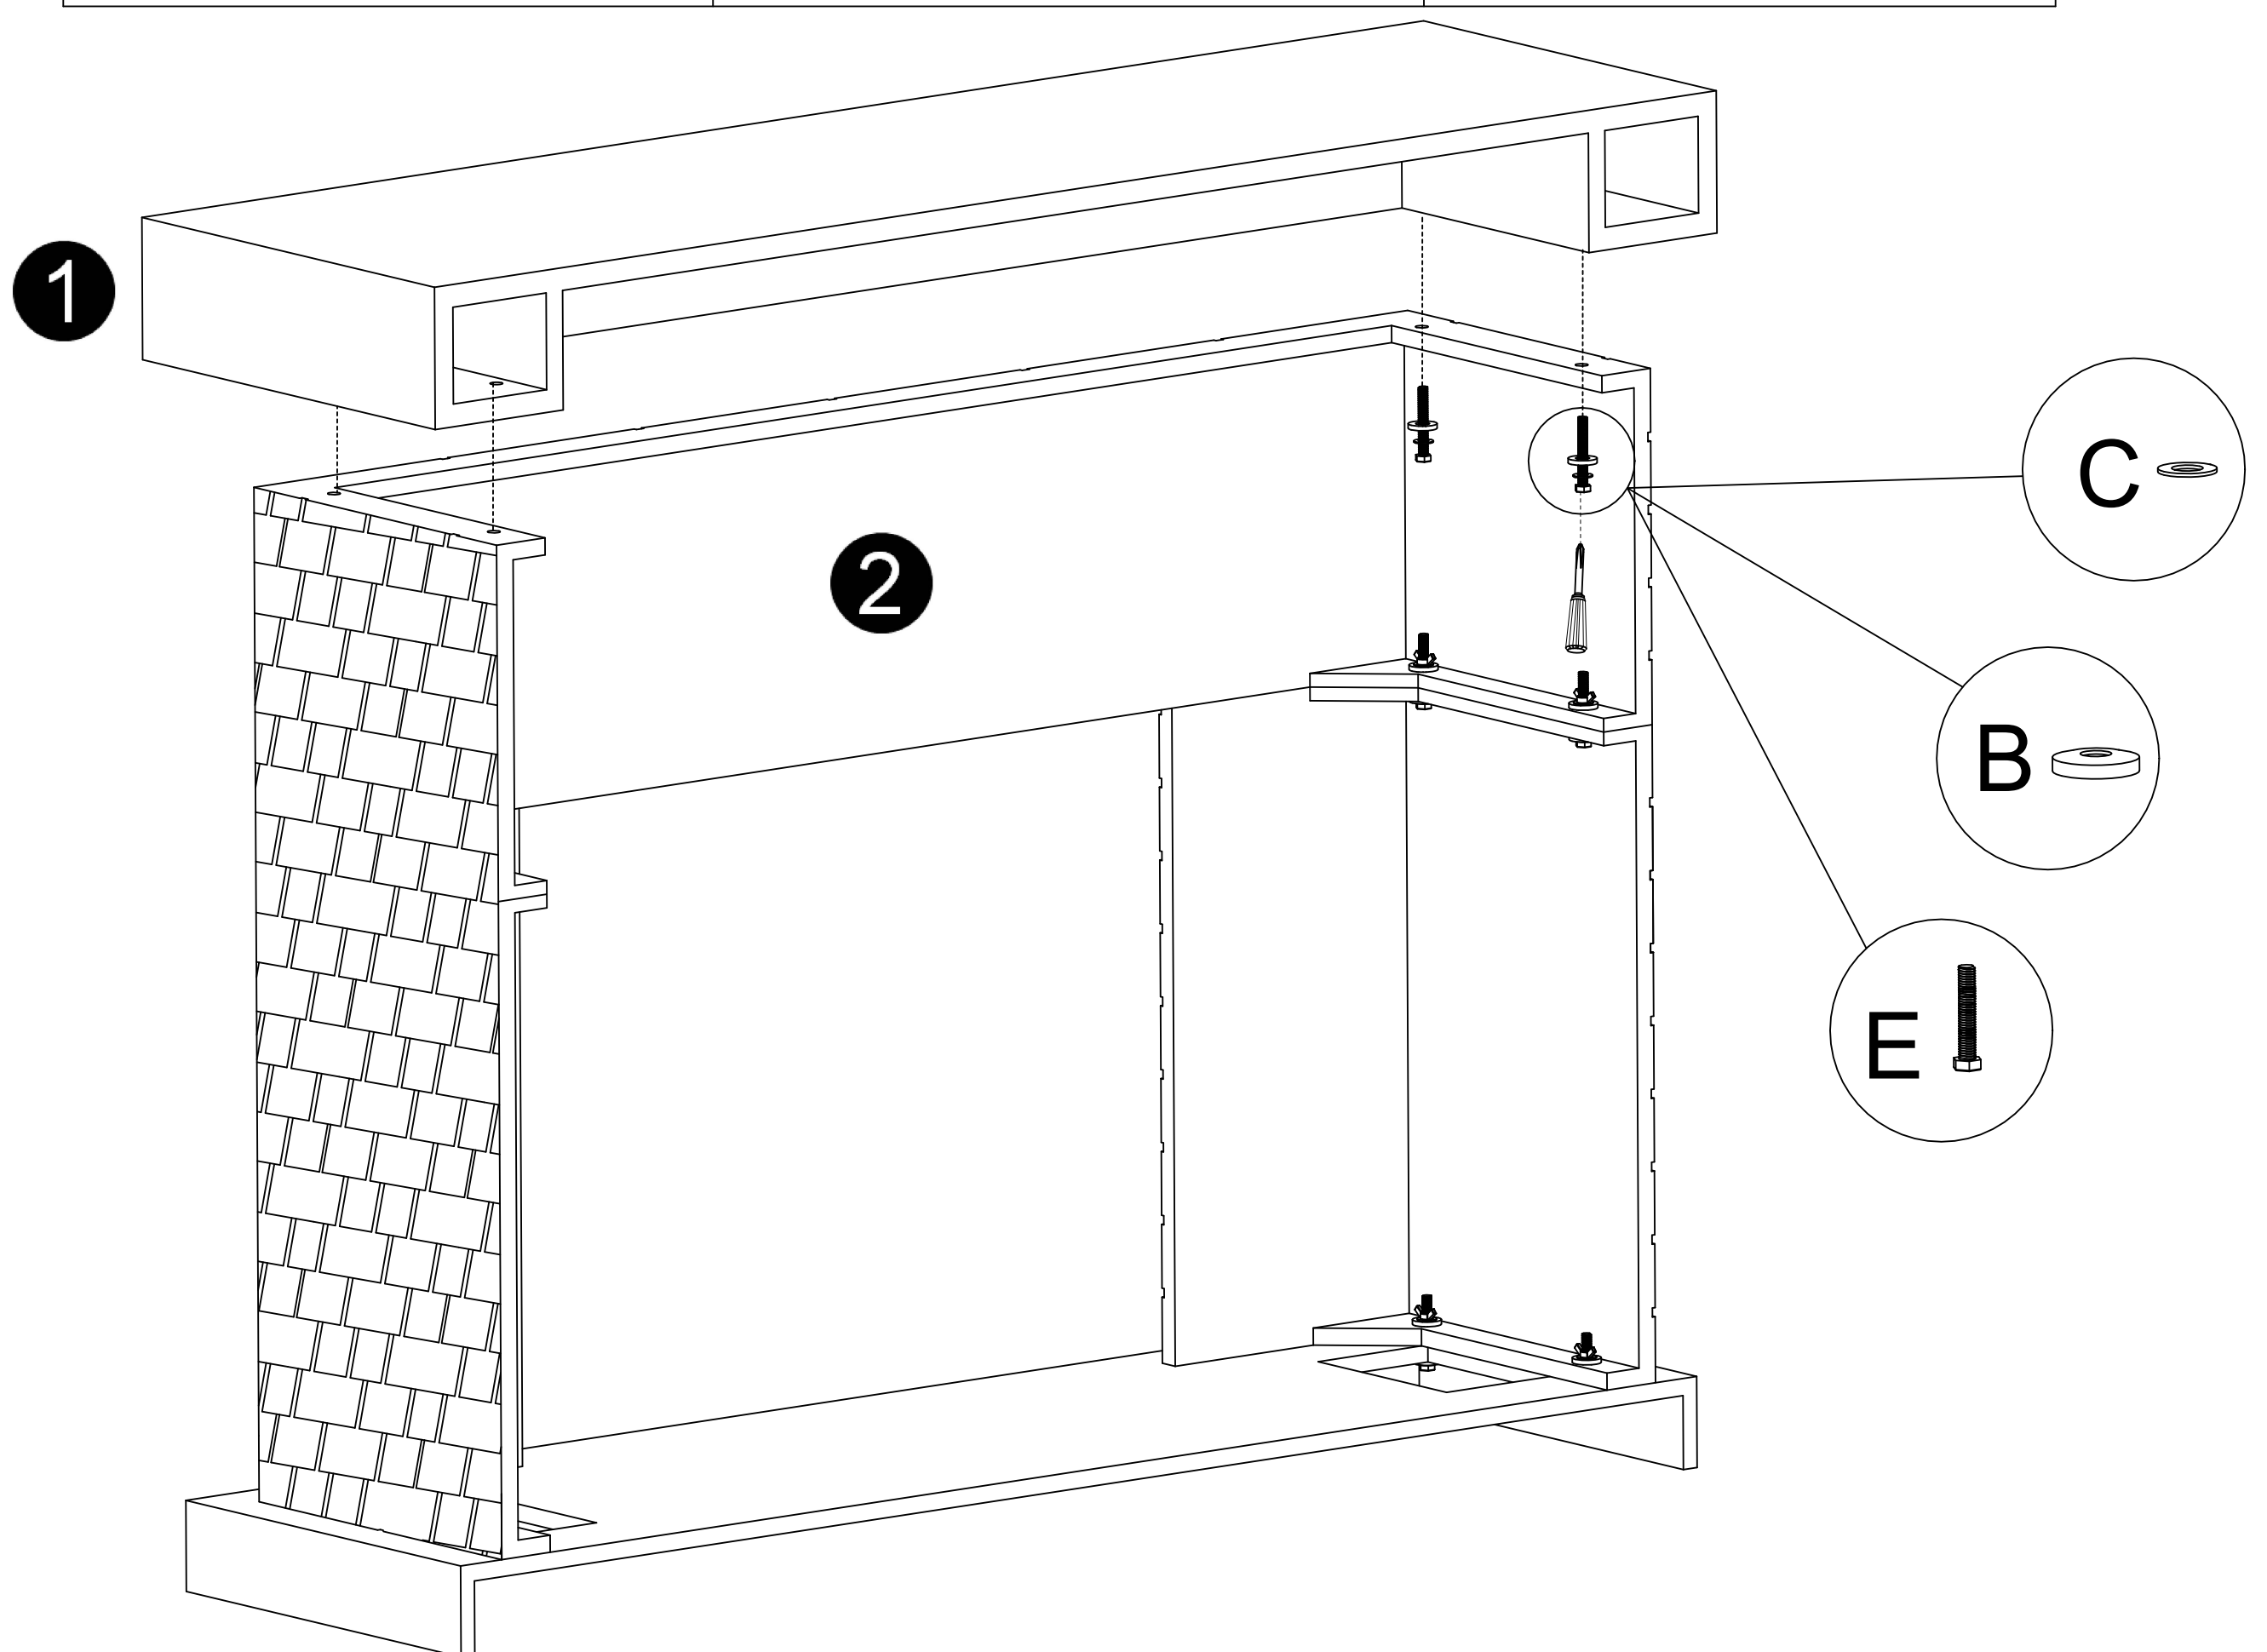


Place a gasket (C), then a gasket (B), on each short bolt (E). Carefully set the top (1) onto the header (2), making sure the holes are aligned. Using a screwdriver, install a bolt (E) into a hole from the bottom of the top (1), but do not tighten. Repeat for the other 3 holes. You will tighten the butterfly nuts (D) in Step 5. Do not tighten them before or the mantel parts will be misaligned.

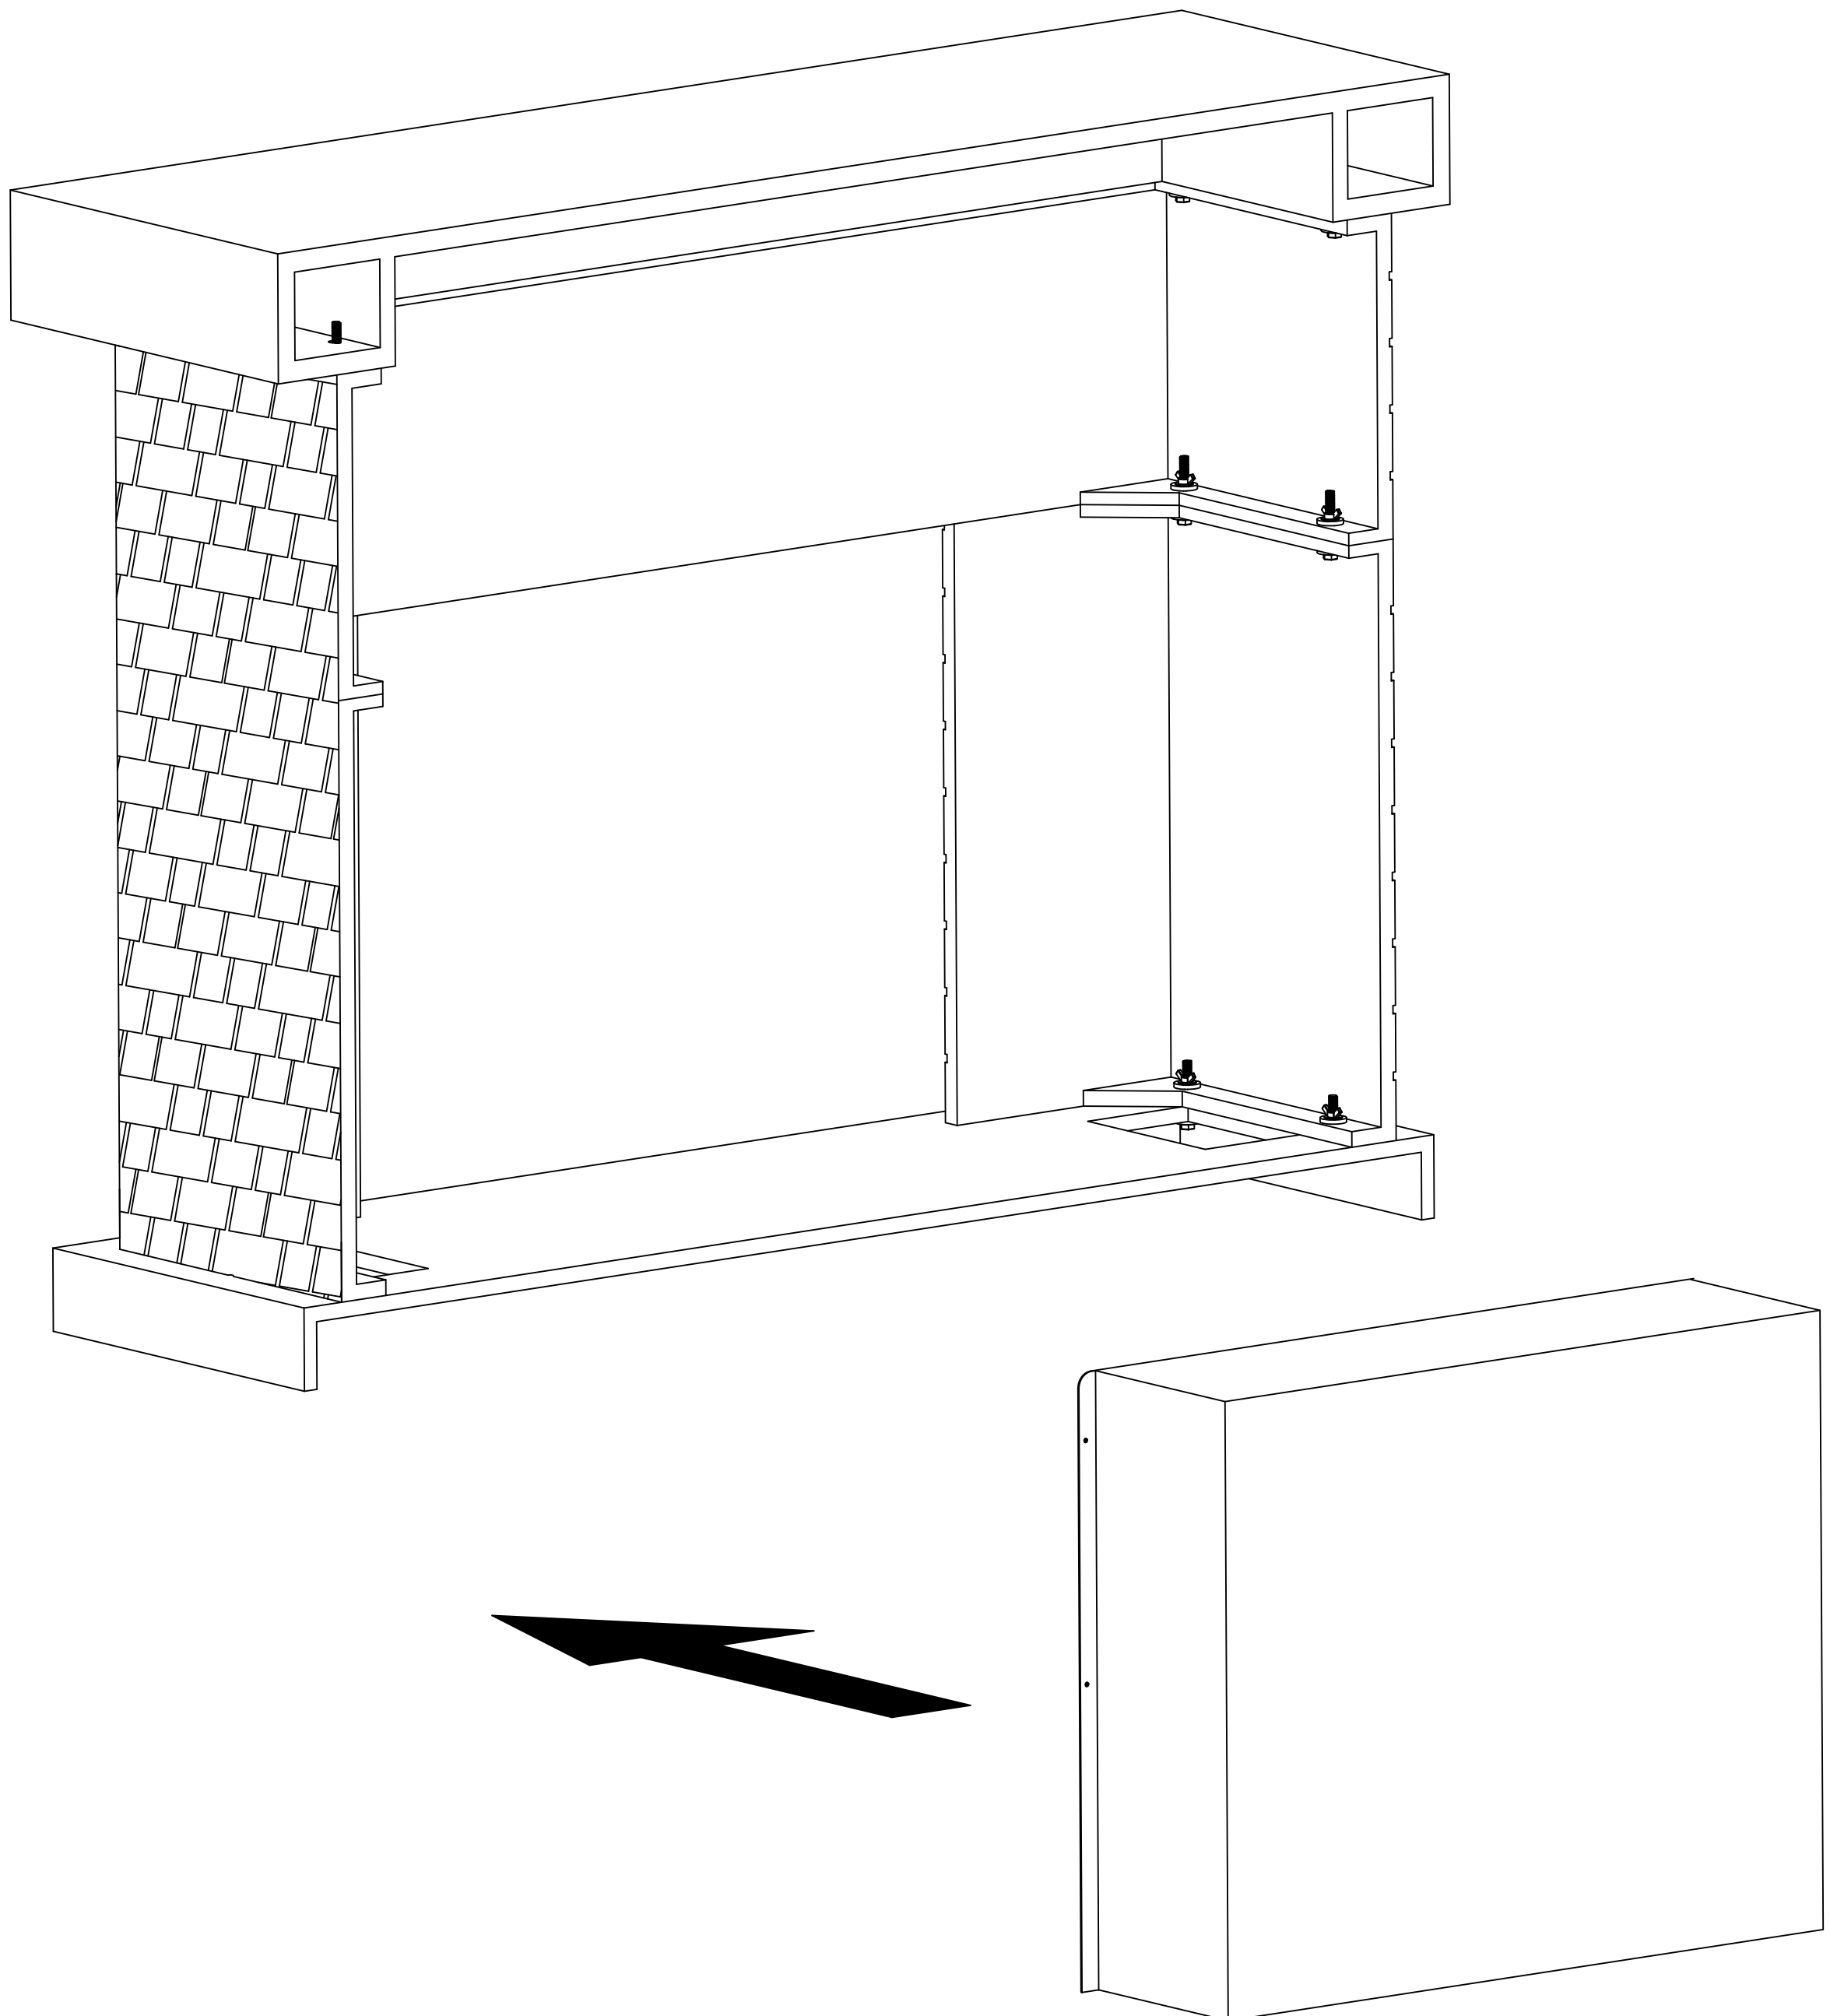
STEP 4



Carefully place the electric fireplace insert on the base of the mantel.




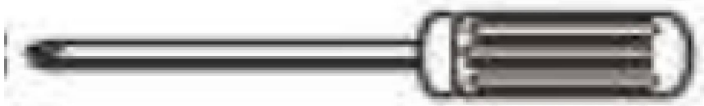
STEP 5


Hardware/Tool	Description	Qty
F	4.5x12mm Screw 	4
Phillips Head Screwdriver		

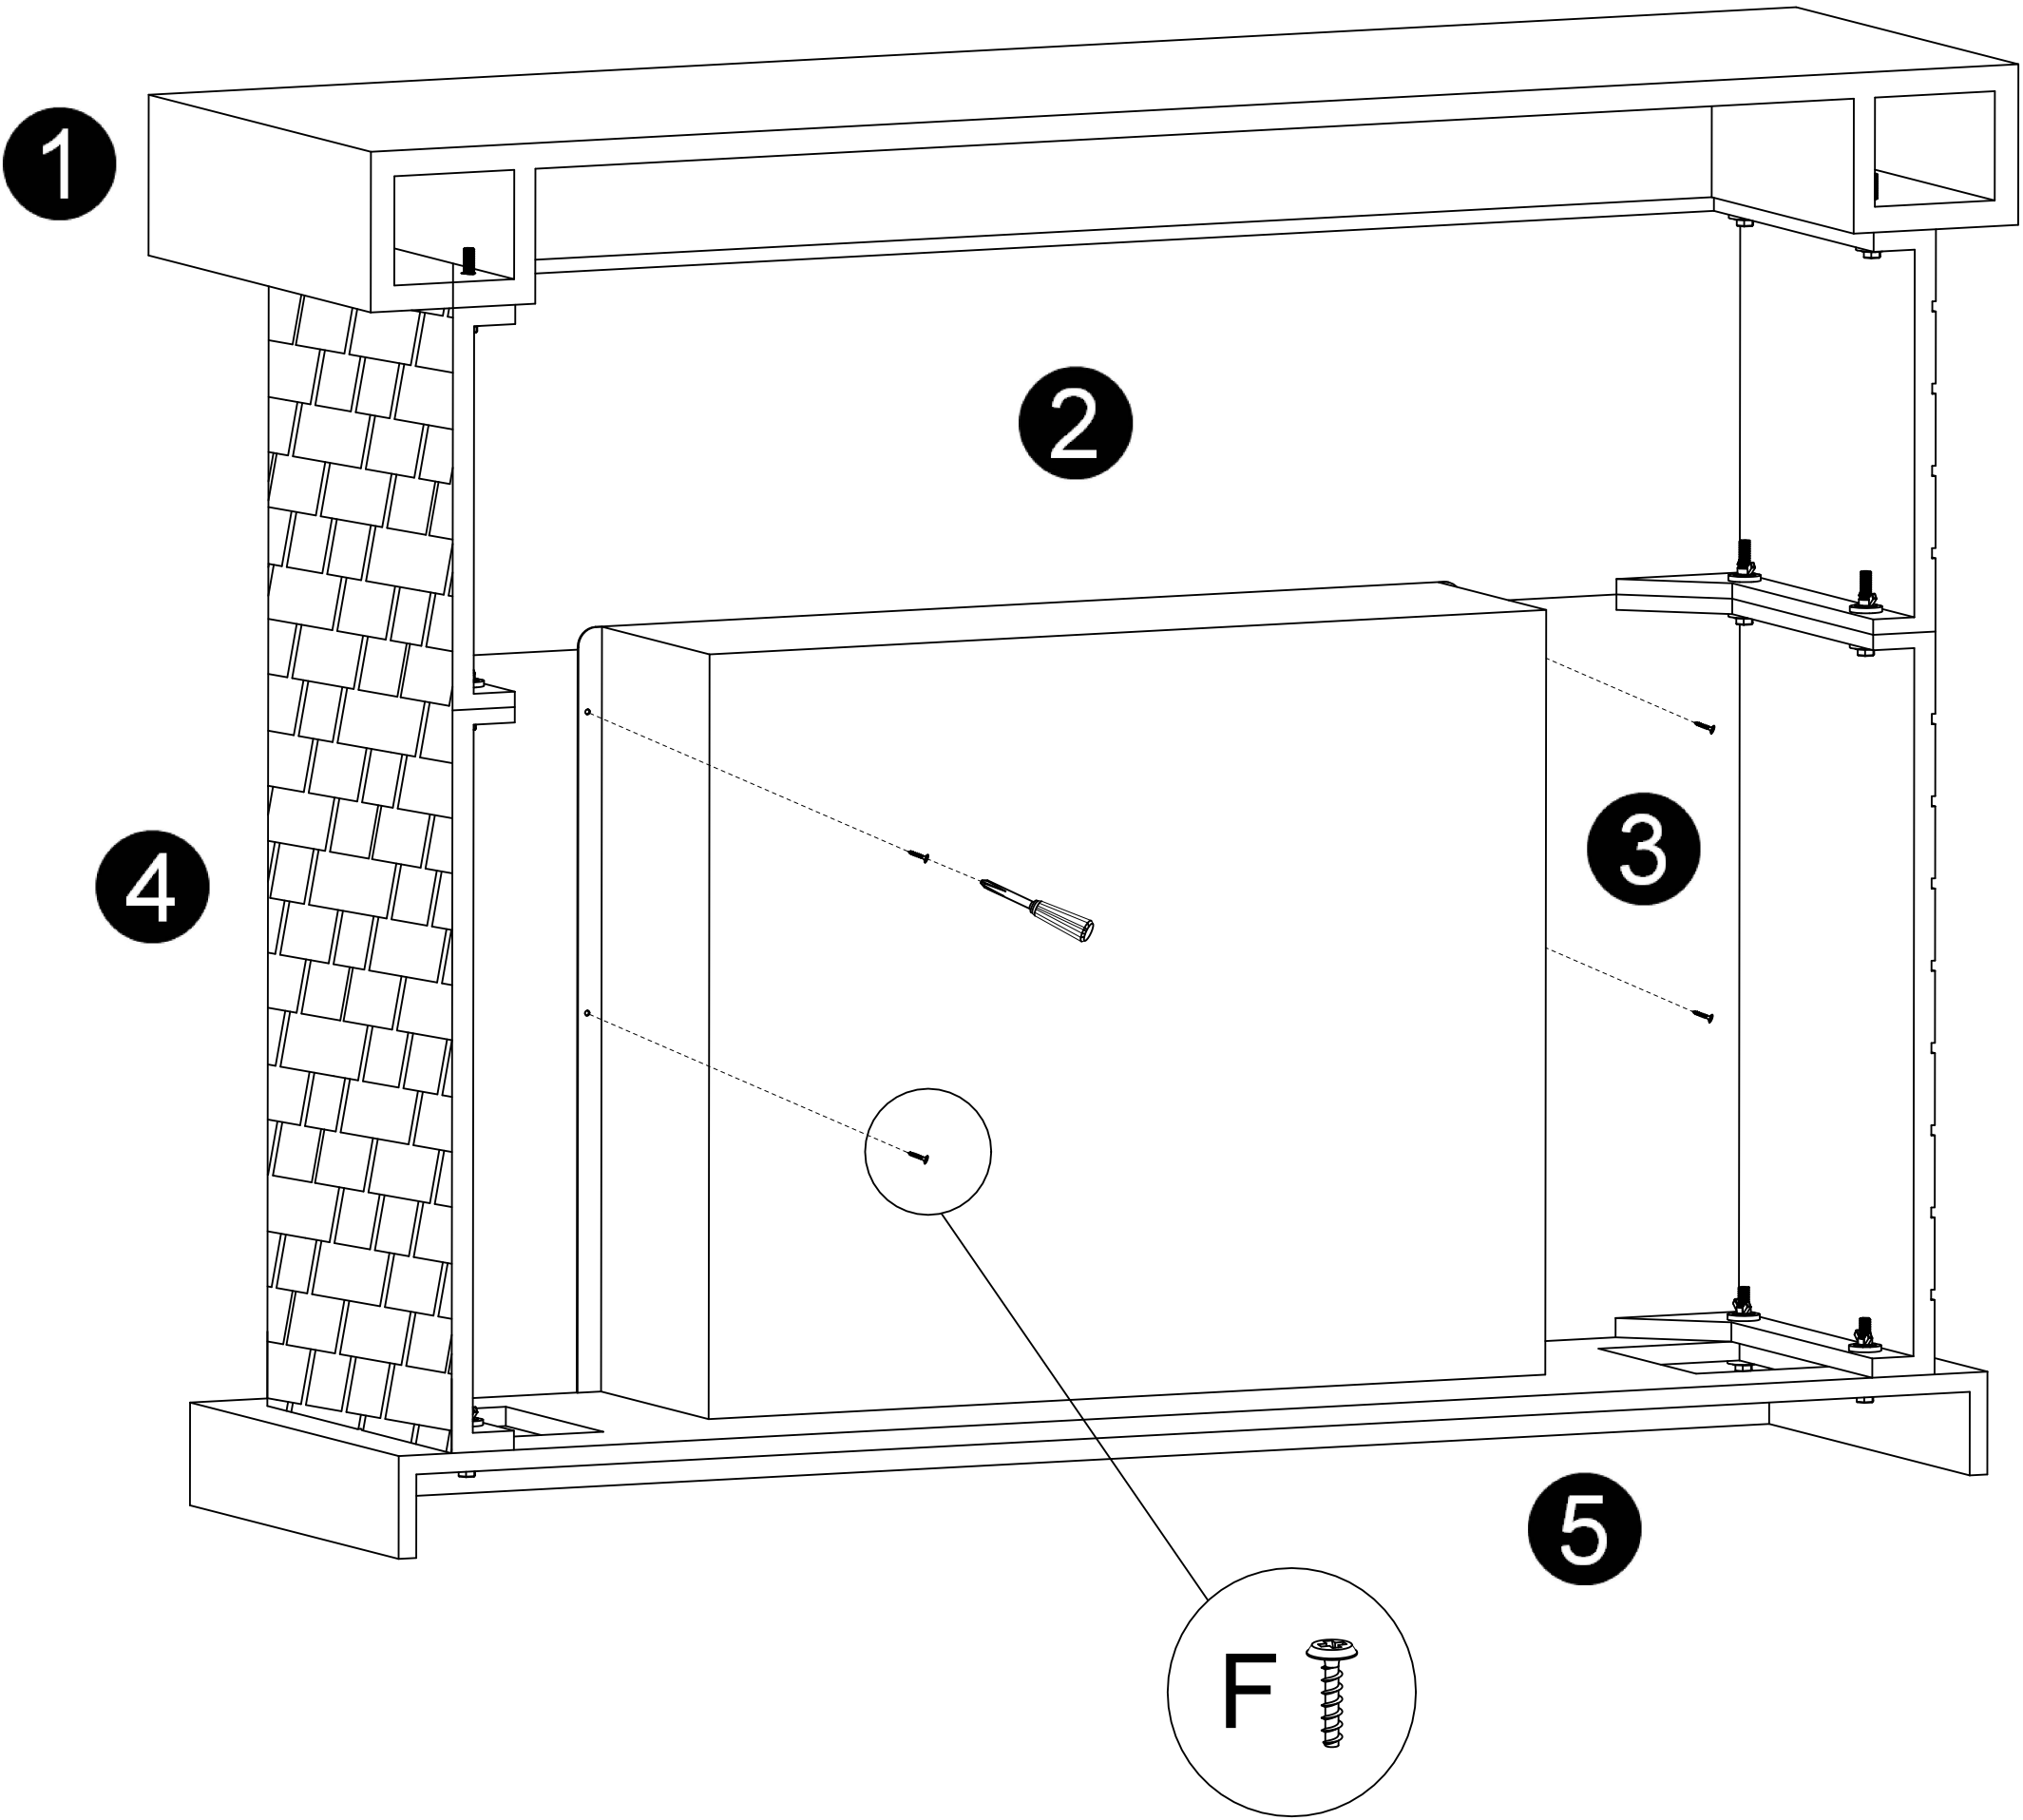

Using the screwdriver, secure the fireplace insert to the mantel with the included screws (F). Make sure the base (5), panels (3 & 4), header (2), and top (1) are in the correct positions. Tighten all the butterfly nuts (D) from steps 1, 2, and 3.

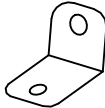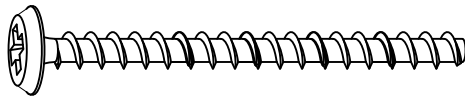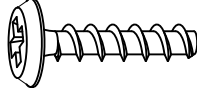STEP 6

Hardware/Tool	Description	Qty
G	Bracket 	2
H	260mm Nylon Strap 	1
I	4x50mm Screw 	1
J	4x16mm Screw 	1
Drill		

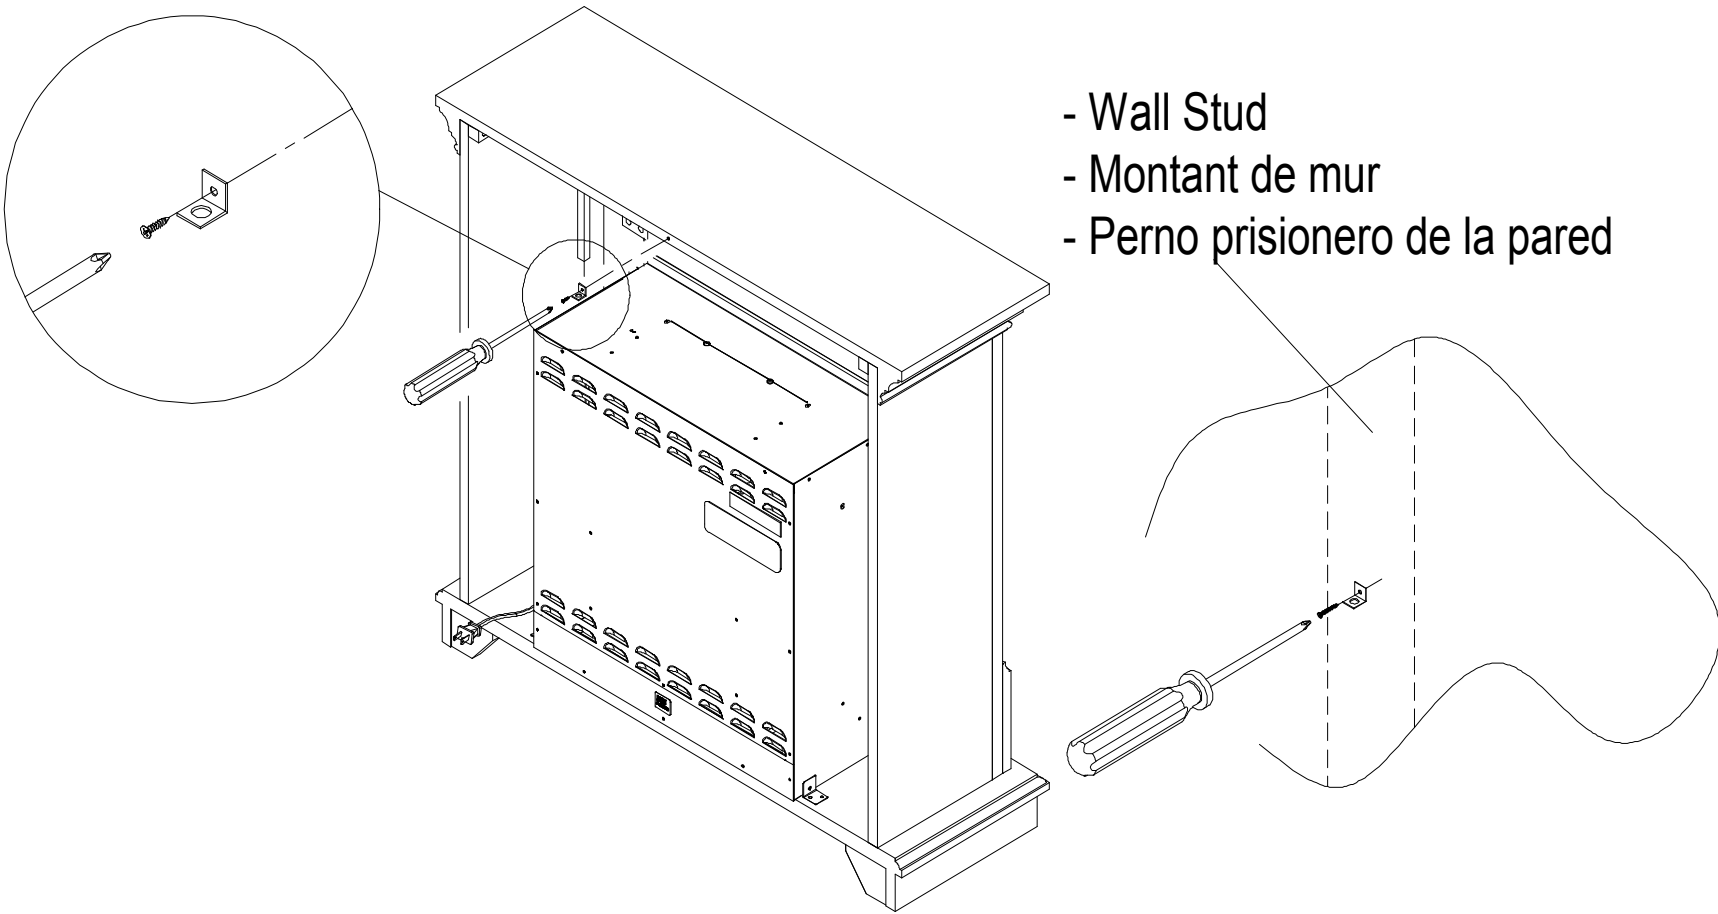

WARNING: This tip restraint must be attached to a wall stud using the 50mm screw (J) enclosed.

a. Attach one bracket (H) securely to the back top wood panel of the mantel using the 16mm screw (K) through the smaller hole of the bracket. It is highly recommended to pre-drill a 1/16" hole into the wood mantel to prevent splitting.

b. Position the other bracket (H) on the wall over a wall stud 2 inches below the bracket secured to the back of the mantel. Attach to the wall stud using the 50mm screw (J) through the smaller hole of the bracket.

c. Place the mantel into position so both brackets are in line vertically.

d. Lace the end of the restraint strap (I) through the larger hole in each bracket. Bring both ends together and slide the flat end through the locking end. Pull it through until all slack is removed.

e. Confirm that the strap is securely laced and locked.

AVERTISSEMENT! Ce dispositif de retenue de pointe doit être fixé à un montant mural à l'aide de la vis de 50 mm (J) fournie.

a. Fixez solidement un support (H) à l'arrière panneau de bois supérieur de la cheminée en utilisant le 16 mm vissez (K) dans le petit trou du support. Il est fortement recommandé de pré-percer un trou de 1/16" dans le manteau en bois pour éviter les fissures.

b. Positionnez l'autre support (H) sur le mur au-dessus un montant mural à 2 pouces sous le support fixé à l'arrière de la cheminée. Fixer au montant du mur en utilisant la vis de 50 mm (J) à travers le plus petit trou du support.

c. Placez le manteau en position de manière à ce que les deux supports sont alignés verticalement.

d. Enfillez l'extrémité de la sangle de retenue (I) à travers le plus grand trou dans chaque support. Apportez les deux extrémités ensemble et faites glisser l'extrémité plate à travers le verrouillage fin. Tirez-le jusqu'à ce que tout le jeu soit éliminé.

e. Vérifiez que la sangle est bien lacée et verrouillé.

¡ADVERTENCIA! Esta sujeción de punta debe fijarse a un montante de pared utilizando el tornillo de 50 mm (J) adjunto.

a. Fije un soporte (H) de forma segura a la parte posterior panel de madera superior de la repisa usando el 16 mm atornille (K) a través del orificio más pequeño del soporte. Se recomienda perforar previamente un orificio de 1/16" en la repisa de madera para evitar que se parta.

b. Coloque el otro soporte (H) en la pared sobre un montante de pared a 2 pulgadas debajo del soporte asegurado hasta la parte trasera de la repisa. Fijar al montante de la pared usando el tornillo de 50 mm (J) a través del orificio más pequeño agujero del soporte.

c. Coloque la repisa en su posición de modo que ambos soportes están alineados verticalmente.

d. Pase el extremo de la correa de sujeción (I) a través el agujero más grande en cada soporte. Trae ambos extremos juntos y deslice el extremo plano a través del bloqueo fin. Tire de él hasta eliminar toda la holgura.

e. Confirme que la correa esté bien atada y bloqueado.

CountryLivingTM

Questions, problems, missing parts?

Before returning to store, call

Customer Service:

8am-5pm CST, Monday – Friday

Phone: 877-430-0703

Email: resolutions@electricfireplacesdirect.com

Please save these instructions for future reference.