


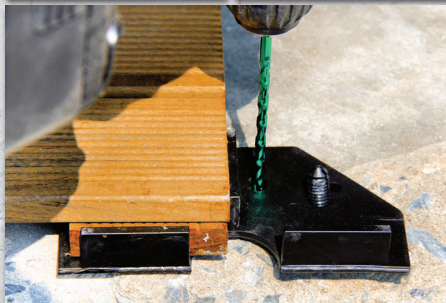

WORK SMART & WORK SAFE!

Always cut in the direction away from your body and hands.

USING TILE CONNECTORS ON EDGES OR CORNERS:

Simply score the connector using a utility knife along the pre-molded grooves that mark the edges of the built in spacers. Bend the edges downward to snap the connector in half. Repeat the process to use a quarter of the connector to install on the corners of your deck tiles.

NOTE: You can use both halves of a halved, or quartered tile connector on either hidden or exposed edges. You can also use the edge with the spacer to provide a gap between your new deck and any adjacent structure such as a house, fence, or wall.

DeckWise® Deck Tile Connectors have pre-drilled countersink holes ready for fastening to an existing surface or sub-structure.

For deck tile coverage calculator go to:
www.deckwise.com/deck-tile-calculator

For installation video go to:
www.deckwise.com/how-to-build-hardwood-decks-videos

NEW!

ALTITUDES PEDESTAL™ FOR HARDWOOD DECK TILES






ADJUSTABLE SCREW-JACK DECK TILE SELF-LEVELING SYSTEM

DeckWise®

INSTALLATION INSTRUCTIONS

HARDWOOD DECK TILE CONNECTORS

DeckWise® • The Ipe Clip® Fastener Company, LLC • 2111 58th Ave. E, Bradenton, FL 34203
Tel: 941-896-9851 • Toll Free: 866-427-2547 • info@DeckWise.com • www.DeckWise.com

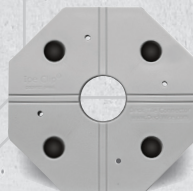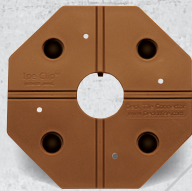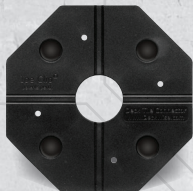

Available in 3 Colors

Patented; D665,657

Shadowline Black, Hardwood Brown, & Concrete Grey



1. PREP THE SURFACE

Make sure the surface being covered is relatively flat and free of anything that may get in the way of installation such as sticks, rocks or furniture. Then choose one corner of the area to begin working in. Another option is to snap a chalk line for a straight line to follow during installation.

2. SET FIRST TILE

Many wood-backed deck tiles are milled with four pre-drilled holes located in each corner. The Deck Tile Connector fits each of these holes with four specially designed ribbed pins (aka Pine tree fasteners). For a secure fit, simply set one of the tiles onto the preinstalled fasteners. If your corner holes are not pre-drilled, see our corner drilling instructions at:

www.deckwise.com/deck-tile-connector-system

3. SET ADDITIONAL TILES

Once the first tile is laid, proceed placing the other tiles onto the remaining pins. The Deck Tile Connector automatically sets the gap spacing to 3/8" so you won't have to worry about an uneven look.

