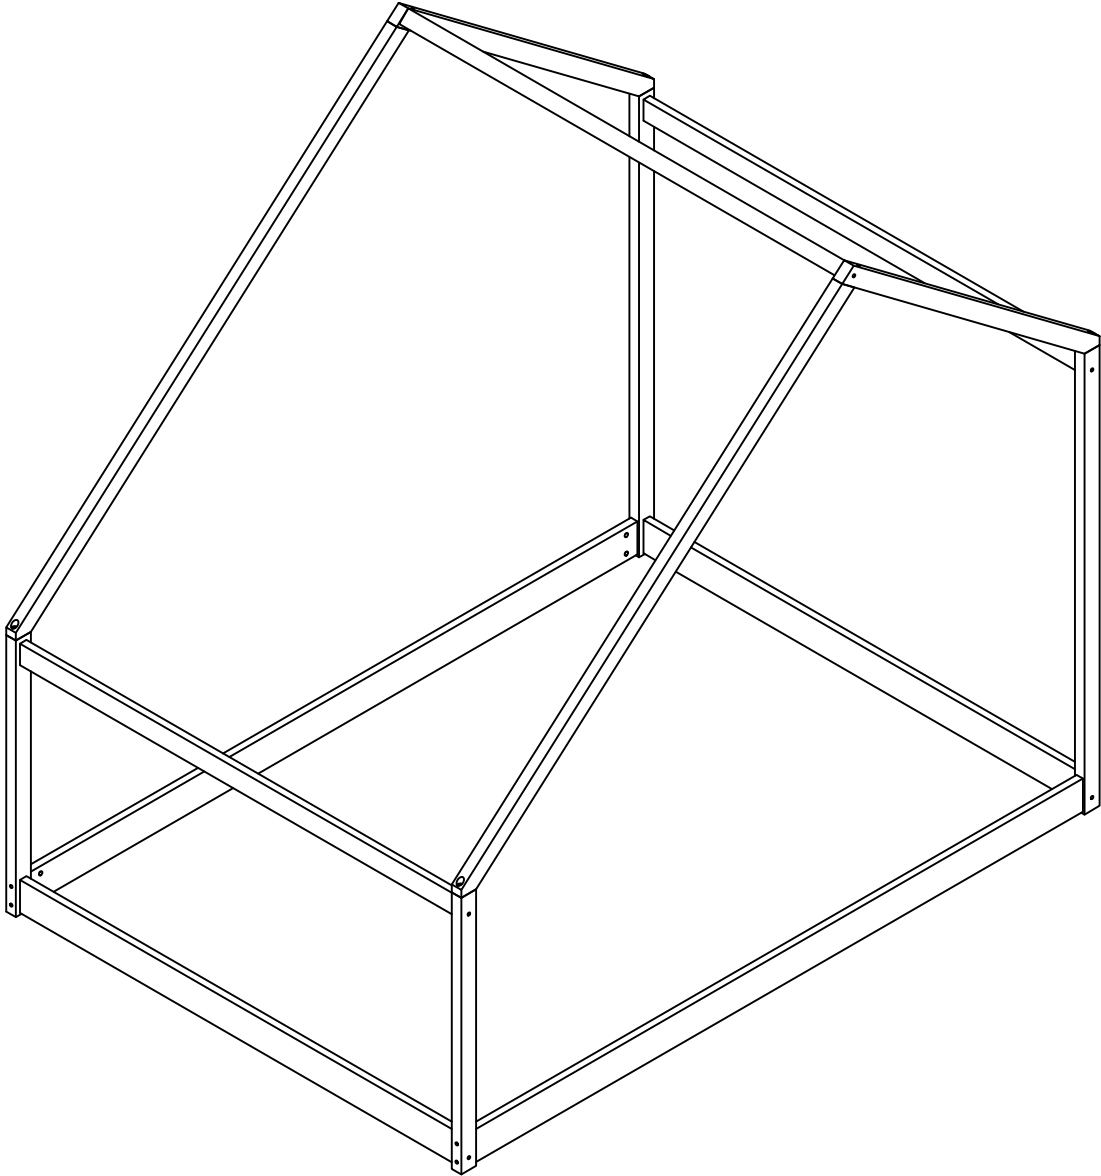


ASSEMBLY INSTRUCTIONS

TWIN BED / FULL BED

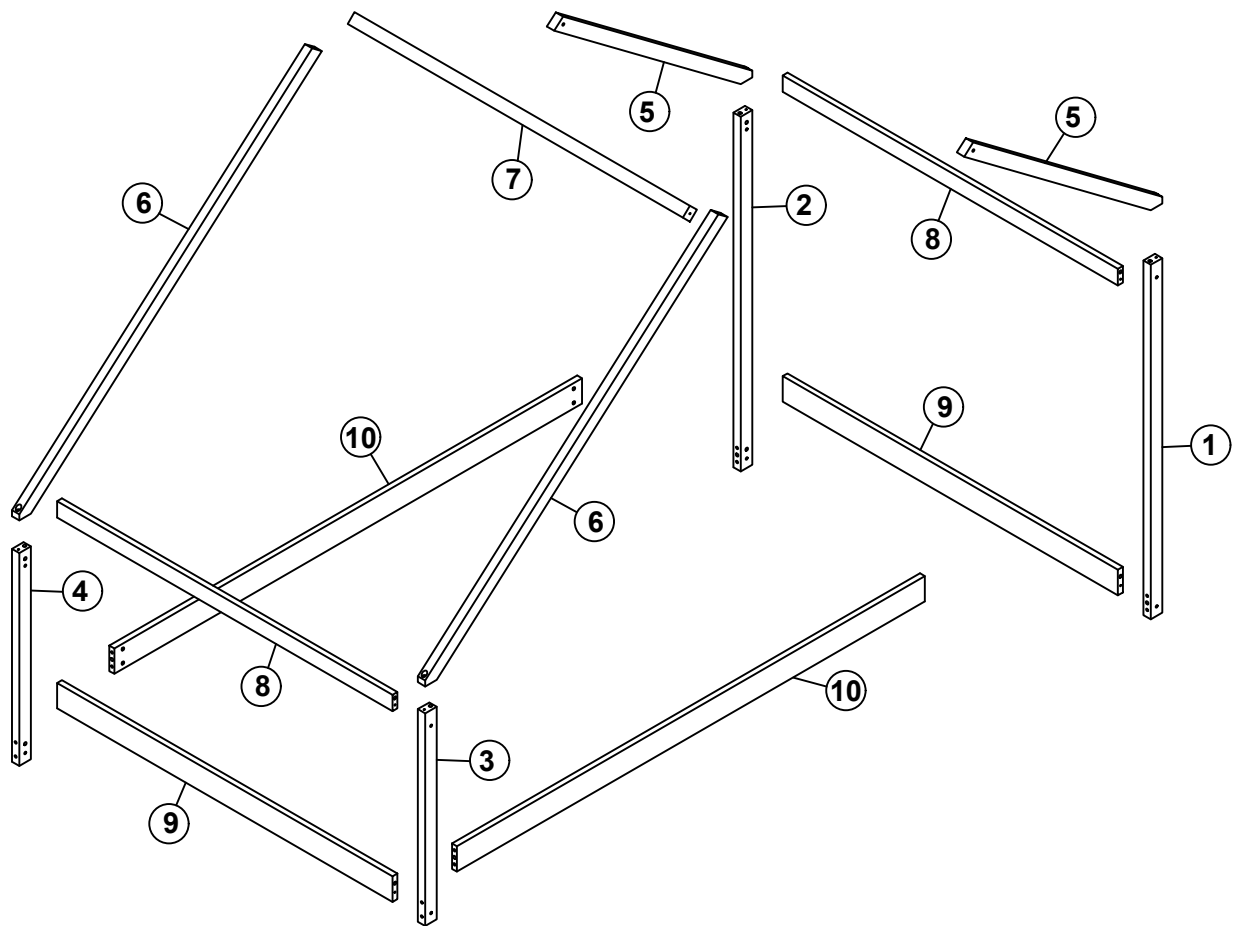


If you have any questions, please feel free to contact us.










Email: service@qualfurn.net

WF199745 / WF199746


ASSEMBLY INSTRUCTIONS



PARTS LIST WF199745/WF199746

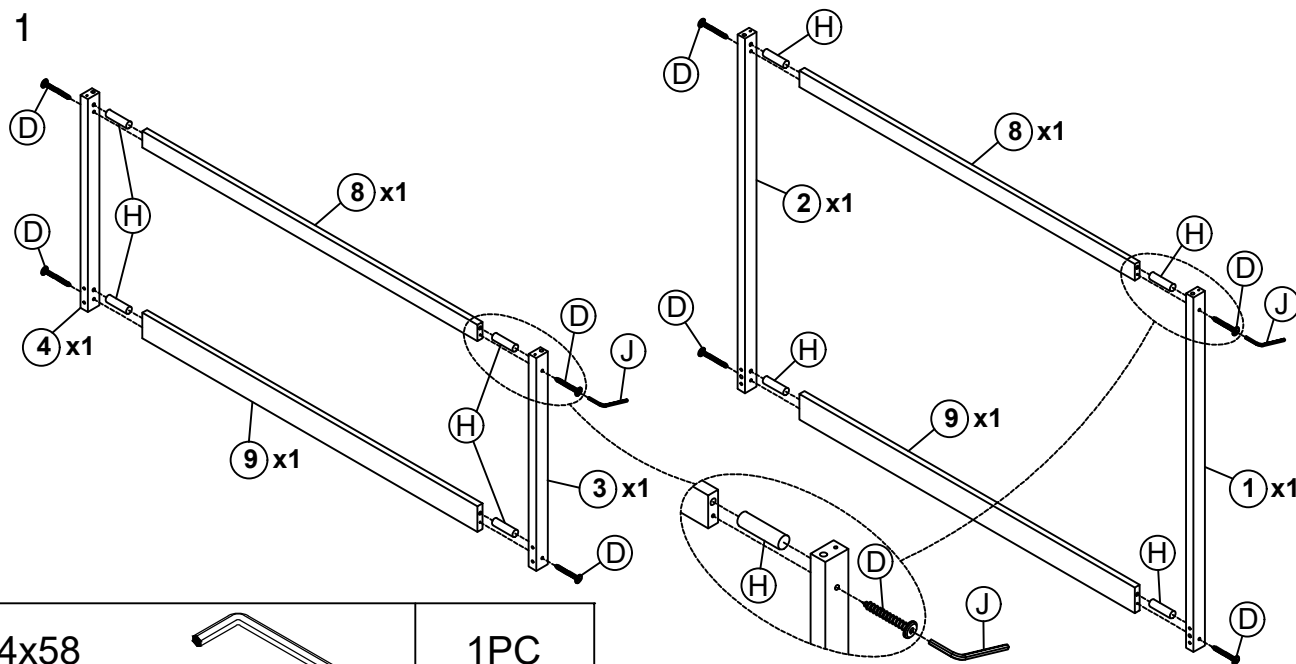
1		1pc	6		2pcs
2		1pc	7		1pc
3		1pc	8		2pcs
4		1pc	9		2pcs
5		2pcs	10		2pcs


HARDWARE LIST WF199745/WF199746

C	6.5x90		2PCS	F	1/4x90		8PCS
D	6.5x80		10PCS	H	Ø10x40		18PCS
E	6.5x60		4PCS	J	4x58		1PC

ASSEMBLY INSTRUCTIONS

Step 1

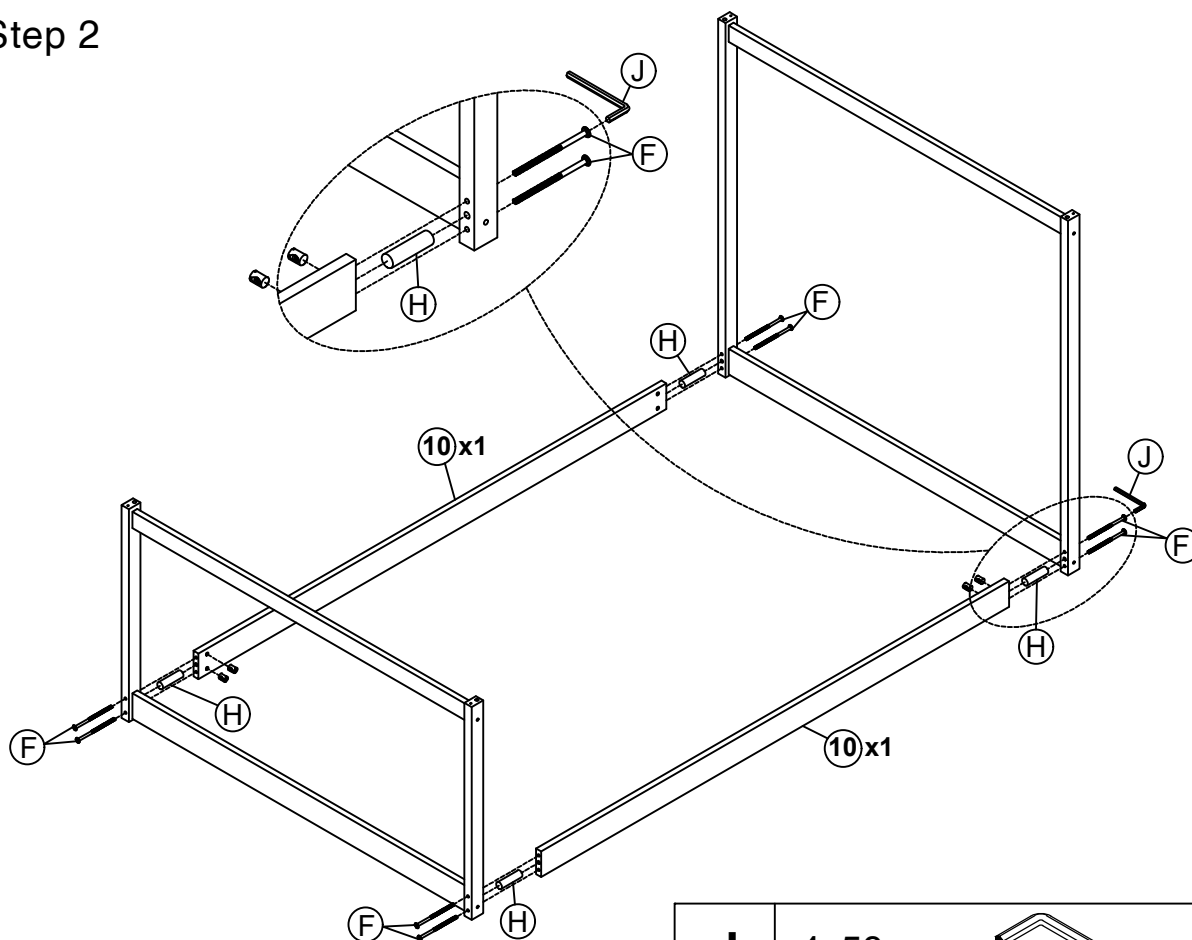



J	4x58		1PC
----------	------	---	-----

H	Ø10x40		8PCS
----------	--------	---	------

D	6.5x80		8PCS
----------	--------	---	------

Step 2



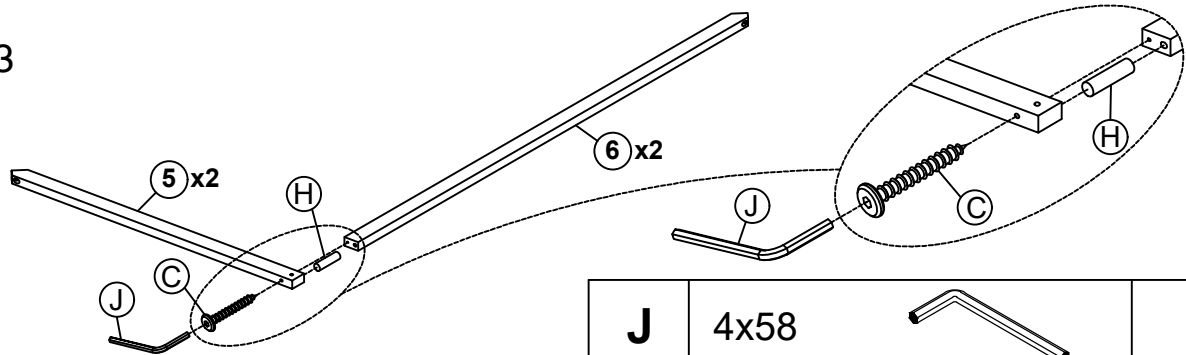
J	4x58		1PC
----------	------	---	-----

H	Ø10x40		4PCS
----------	--------	---	------

F	1/4x90		8PCS
----------	--------	---	------

ASSEMBLY INSTRUCTIONS

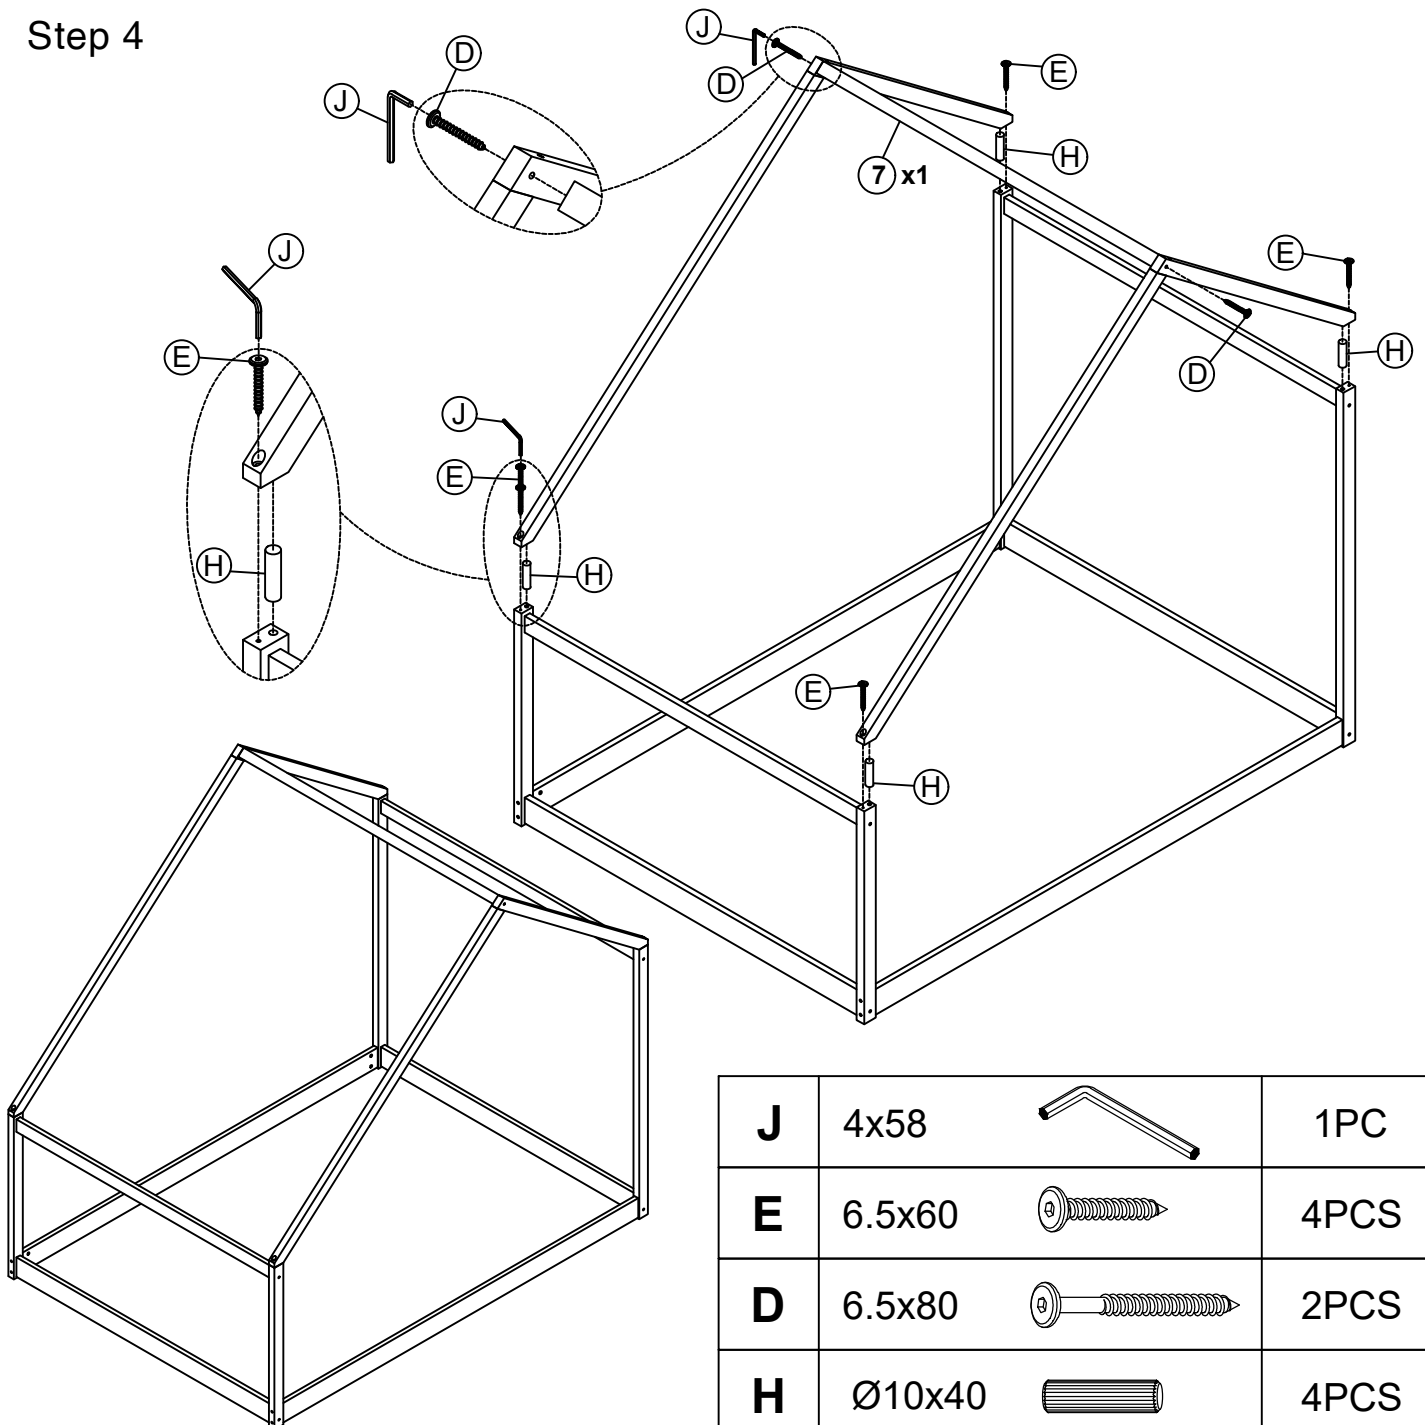
Step 3



J	4x58		1PC
C	6.5x90		2PCS

H	Ø10x40		2PCS
----------	--------	---	------

Step 4



J	4x58		1PC
E	6.5x60		4PCS
D	6.5x80		2PCS
H	Ø10x40		4PCS