

INSTALLATION MANUAL

ACCENT MIRROR

CONTACT US

Thank you for shopping with us! We hope that our products have added a touch of brightness to your life. If you need any assistance, please don't hesitate to reach out. Our dedicated team is available 24/7 to ensure your satisfaction.



BM@ZRSupport.com





1-888-204-3326








ZRSupport

ACCESSORIES LIST

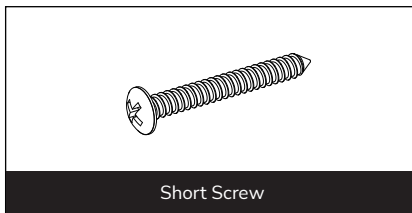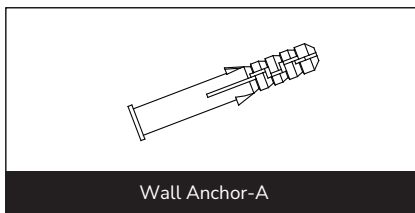


TOOLS REQUIRED

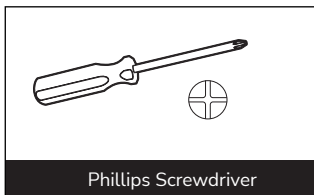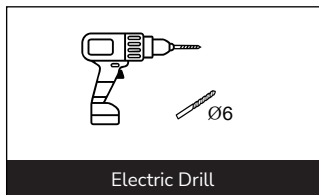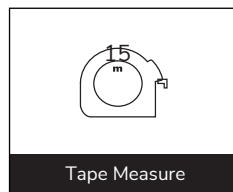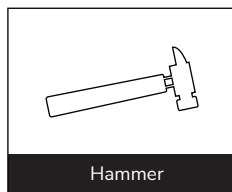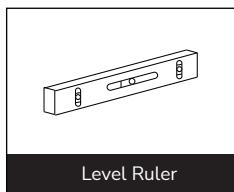


INSTRUCTIONS

1. Confirm the distance between the two ends of the mirror and mark them on the wall(①). And use an electric drill to punch holes at mark spots and then apply wall anchors A with a hammer(②).

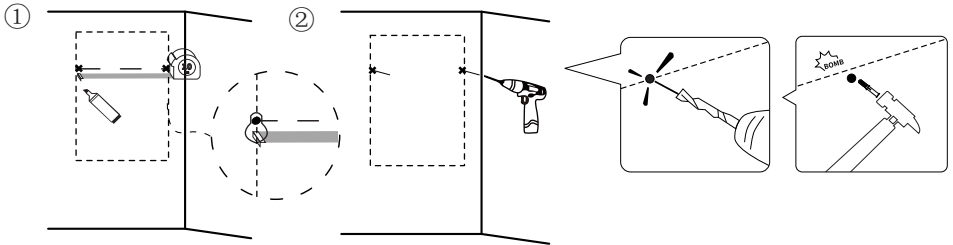

Thickness of Wall

> 16mm



Recommended Drill Bit


1/4" (6mm) drill bit, drilling depth in 1 31/32" (50mm)

< 8mm

Unapplicable

Note: Please wear goggles and pay attention to safety.

2. Screw the short screw into rubber plug to the wall. And reserve 5~10mm for screw and the wall.

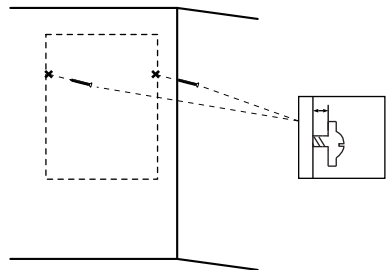

3. Place the mirror against the wall, align the hook with the mounted screw, slowly lower the mirror down, and make sure that it slots into the right position and hangs securely.

