




DESIGNED FOR LIFE

# Assembly Instructions

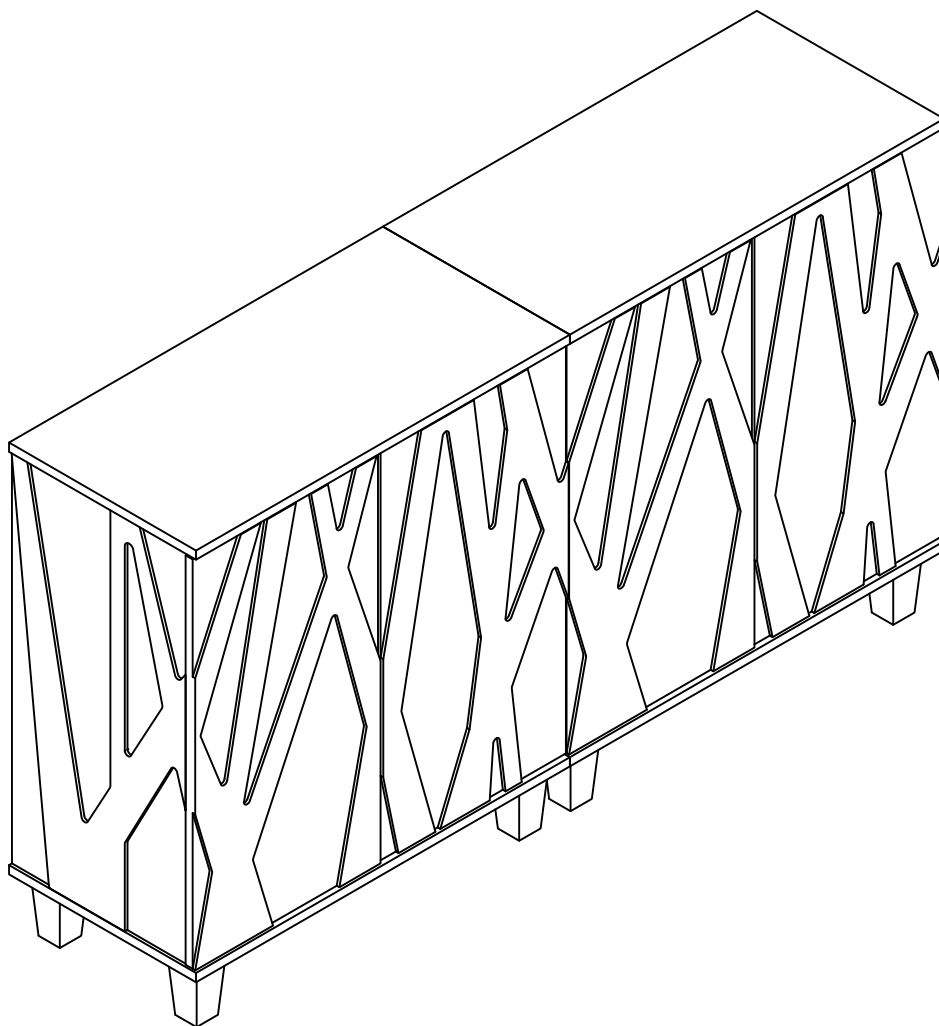

Side board

Model No.  
HOGA-RY0174  
HOGA-RY0178



LITTLE TREE  
Little Tree by Tribesigns

[www.tribesigns.com](http://www.tribesigns.com)

# Contact Us

## We're here to help you.



Your satisfaction is our top priority. If you encounter any issues with this product, such as missing or damaged parts, we're here to help. Please retain the original packaging and take photos of the packaging and the product, then contact us as soon as possible.


## Warm Tips

1. Carefully read these instructions and keep them for future reference.
2. Check the parts list and confirm everything's there before starting assembly.
3. When assembling, put all parts on a soft, smooth surface like a carpet to avoid scratches.
4. Don't fully tighten screws until all parts are confirmed in place to avoid misalignment.

## How to Get the Assembly Video

**Step 1**


Scan the QR code.



Installation Video

**Step2**




Search with the Model No.  
(on the bottom left corner of the title page)

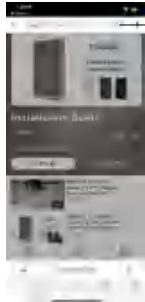

HOGA-RY0174




HOGA-RY0178

Note: If you can't find the assembly video, please contact us.

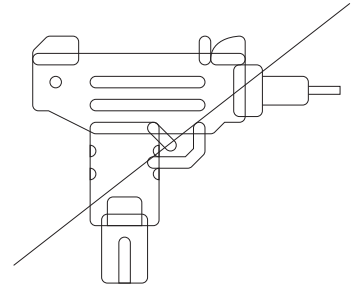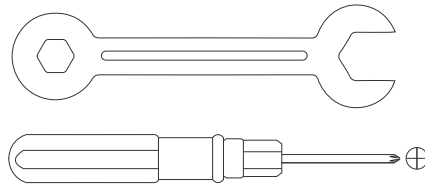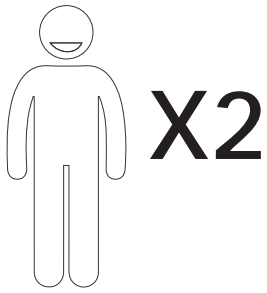


We recommend using hand tools for assembly.

If an electric screwdriver is used, reduce power and torque to avoid damage to the product.

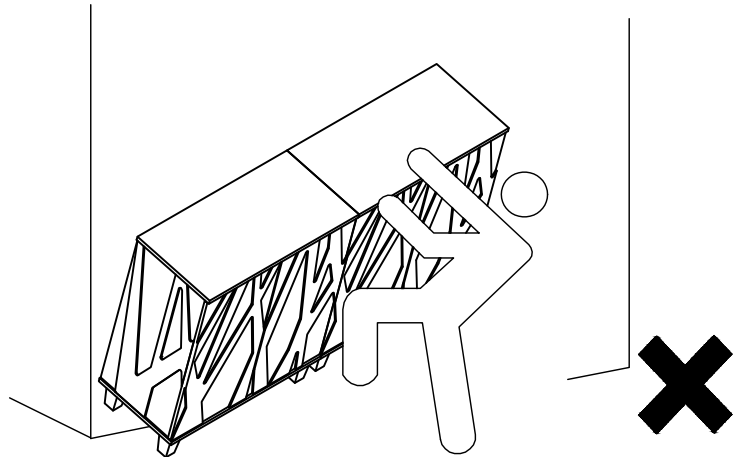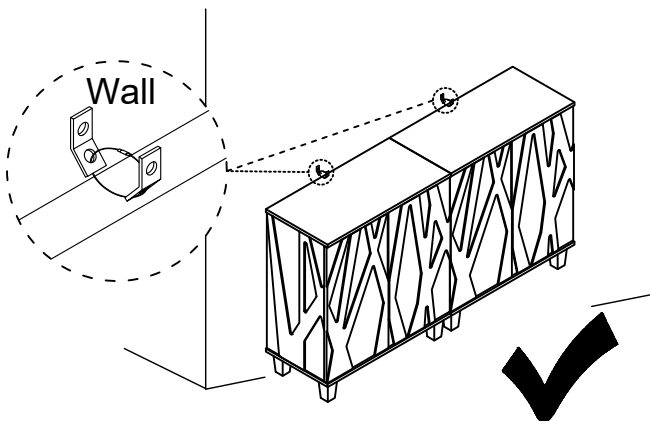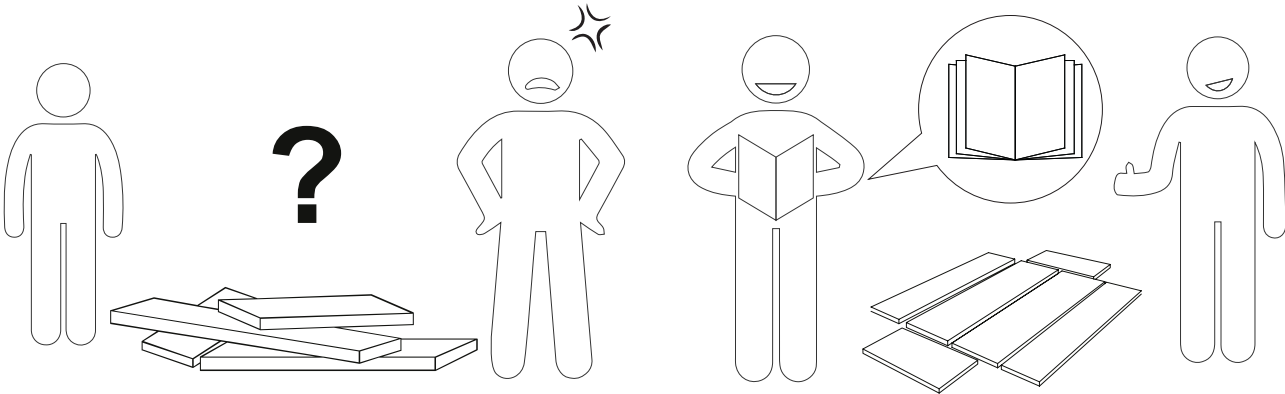

( Install tip-over restraint provided)


Use of tip-over restraints may only reduce but not eliminate, the risk of tip-over.

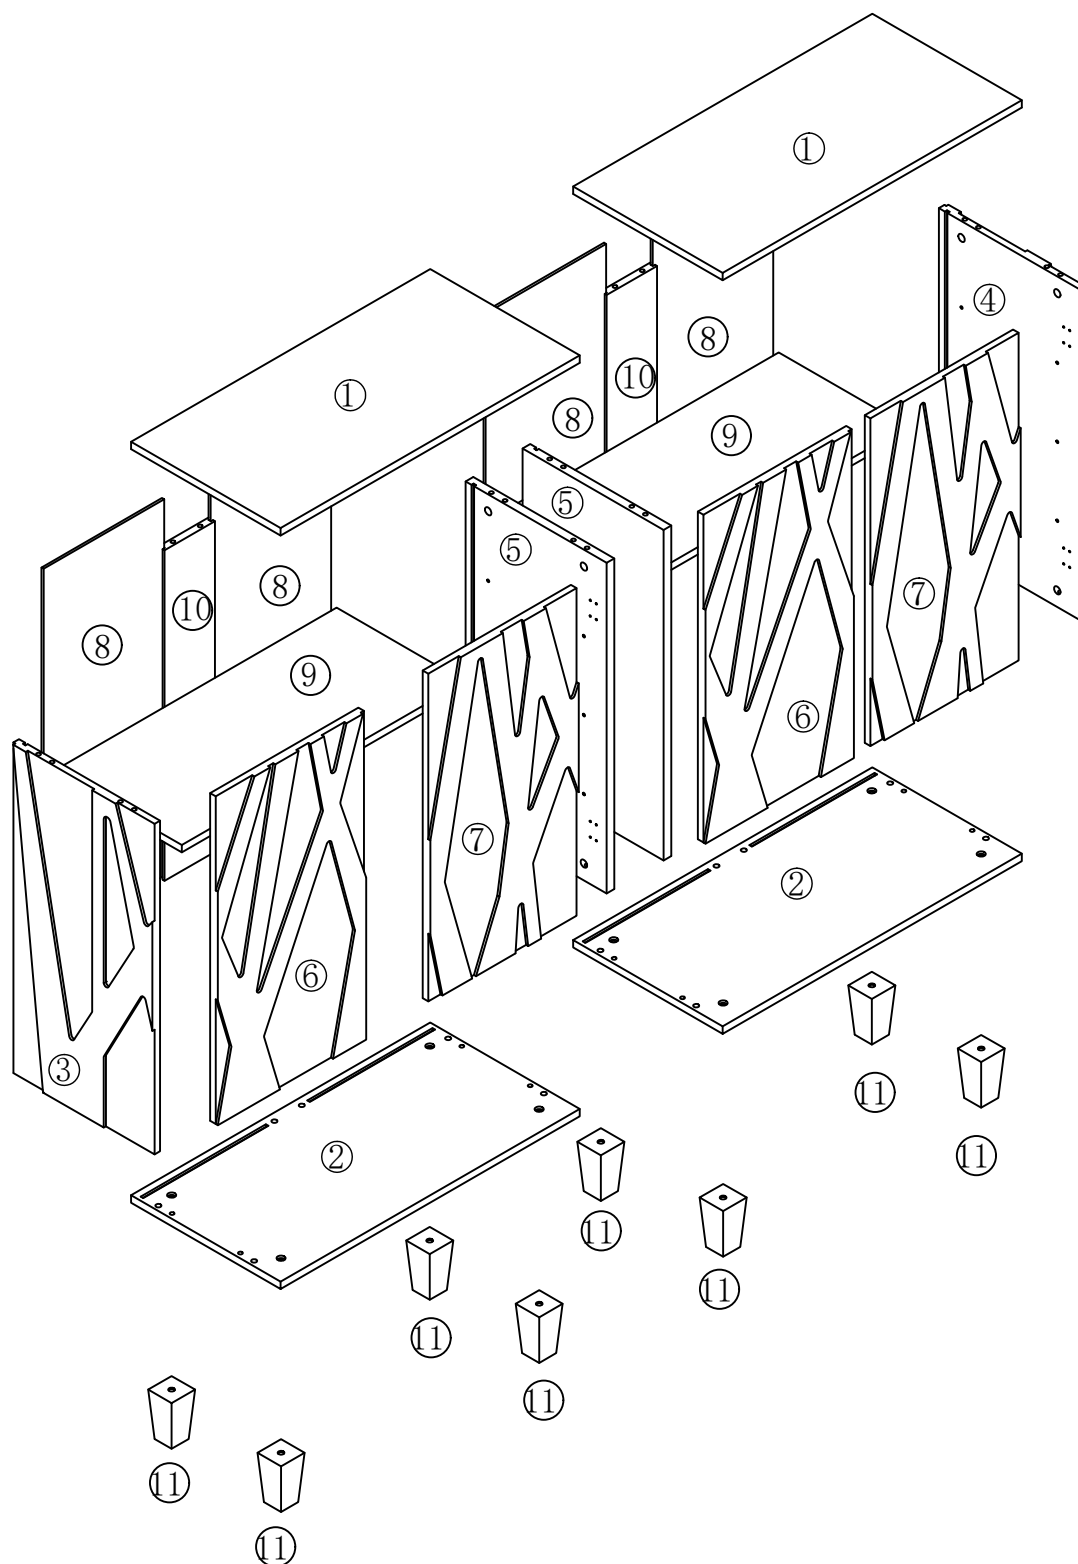









**⚠ Caution**







Make sure all parts are included. Most board parts are labeled or stamped on the raw edge. Contact us for a free replacement if you encounter any damaged or missing parts.

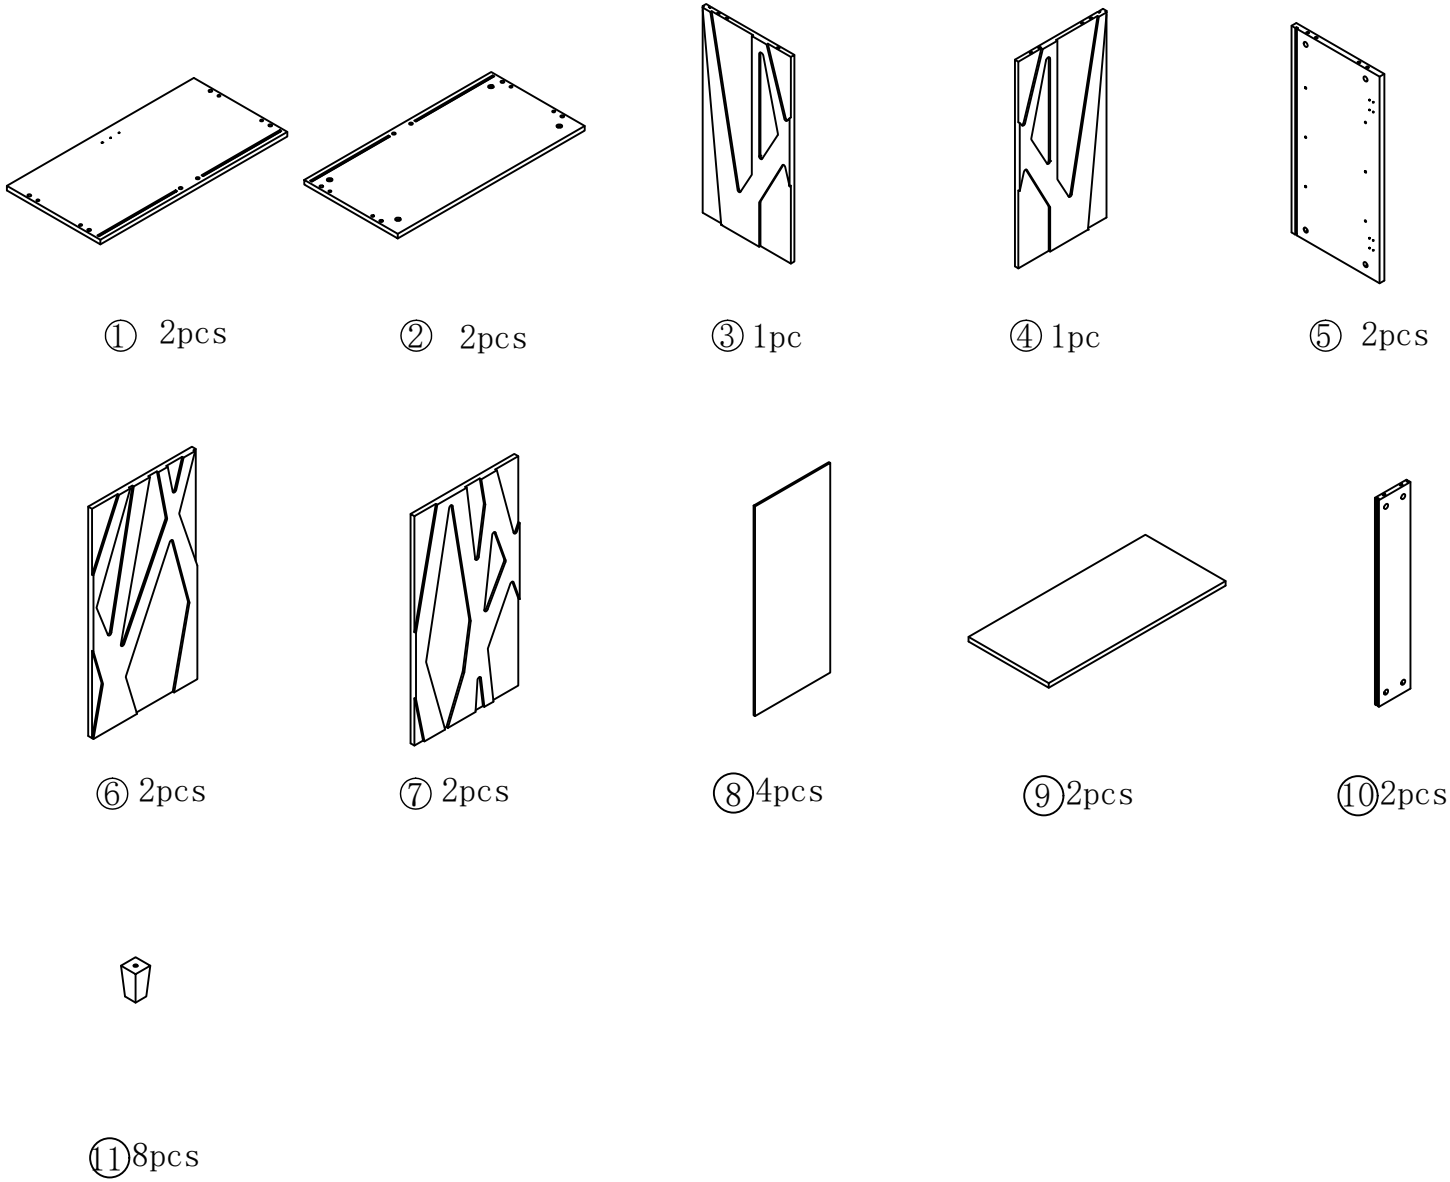Parts List





Hardware List

A	X24+1	B	X24+1	C	X16+1	D	X54+1	E	X24+1	F	X8	G	X8	H	X1
															
φ 6X40		φ 15X12		φ 7. 8X30		3. 5X14FA		17x16x10. 5		M6X15, φ 20X6		M6X30		M4X65X30	


I	X24+1	J	X8	K	X2	L	X2	M	X24+1	N	X8
											
11X16X φ 5X7				80X80X15				3. 5X18FA		φ 20	

## Installation of Cams and Pins


Screw the pin into the hole. To set the cams correctly, ensure that the arrow on the cam is opening to the hole of the pin it is locking. Lock the cam by turning the cam head with a screwdriver until it is tightened. Please do not use an electric screwdriver to assemble the unit.

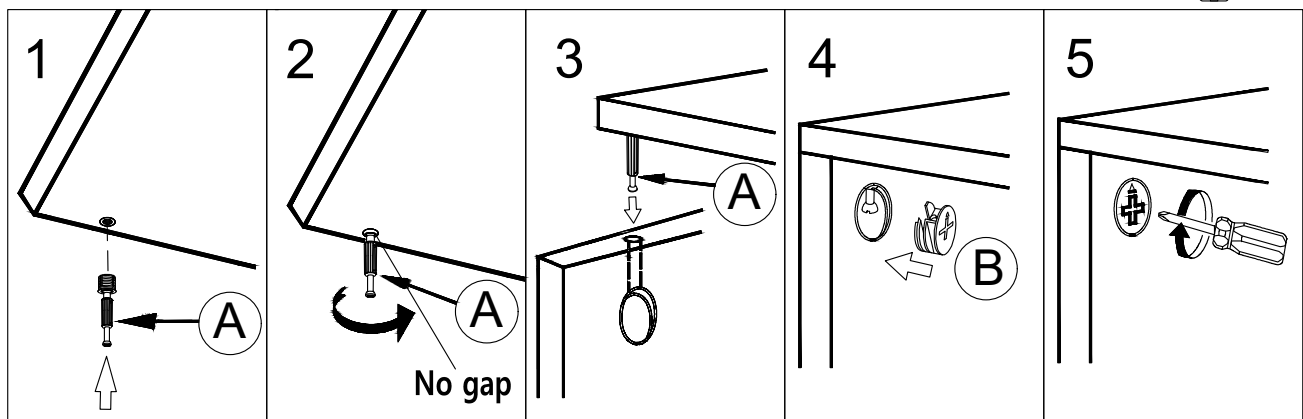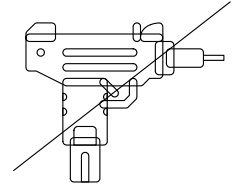


Read each step carefully before starting. It is very important that each step of instruction is performed in the correct order. If these steps are not followed in sequence, assembly difficulties will occur.

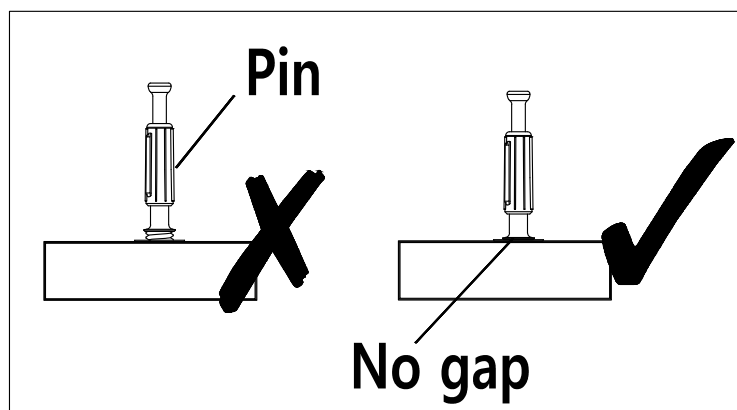

1

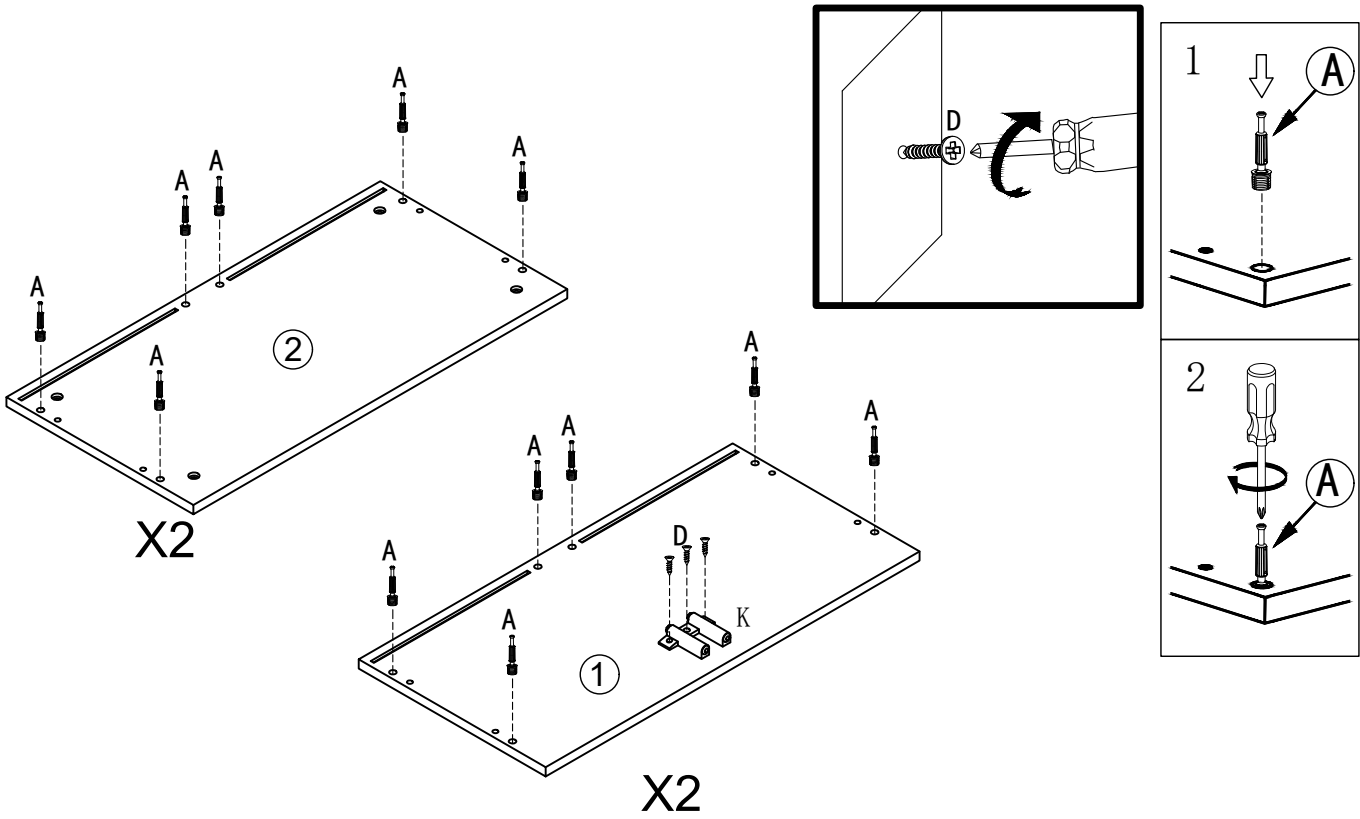



2

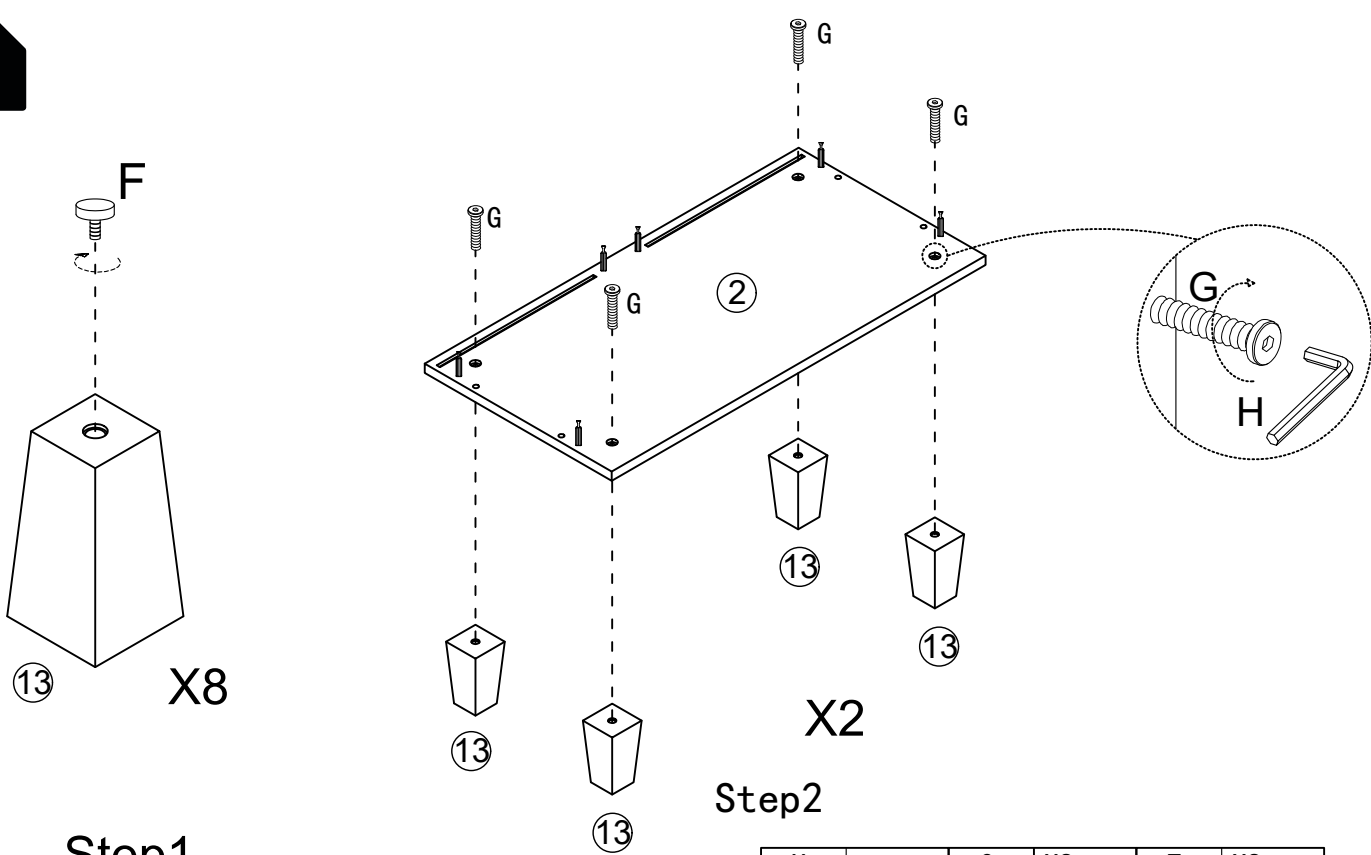

Step1



Step2

3

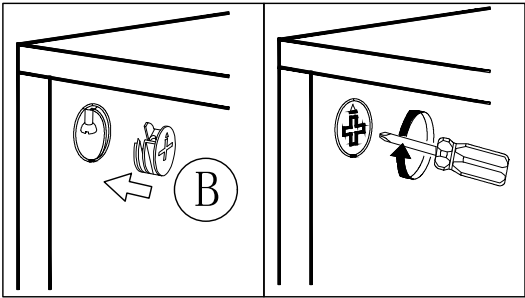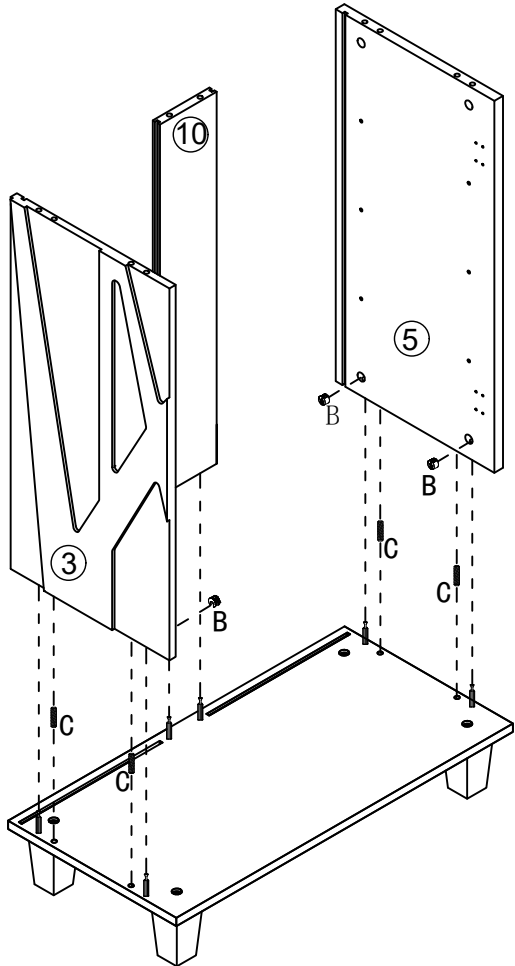

B	X6	C	X4
φ 15X12		φ 7. 8X30	


4

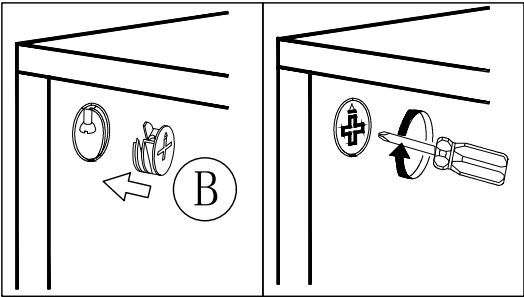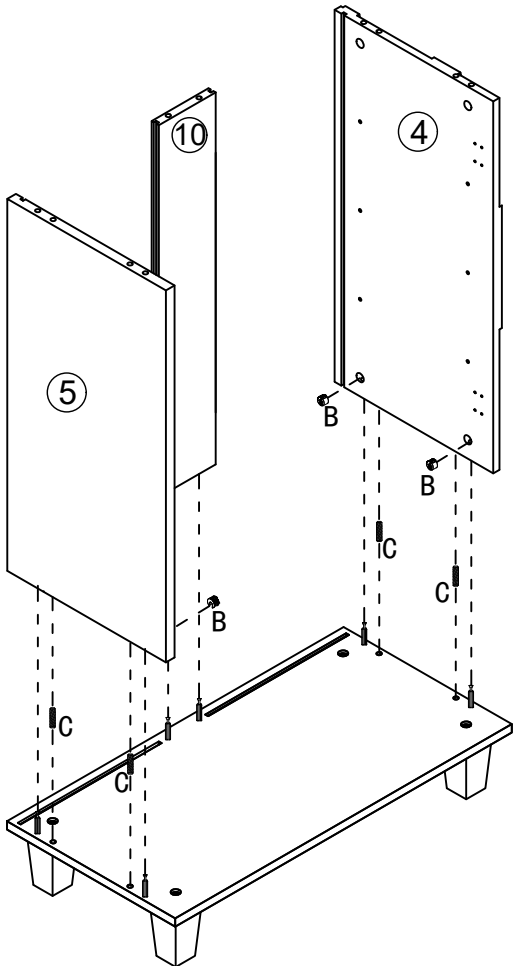


B	X6	C	X4
φ 15X12		φ 7. 8X30	





5

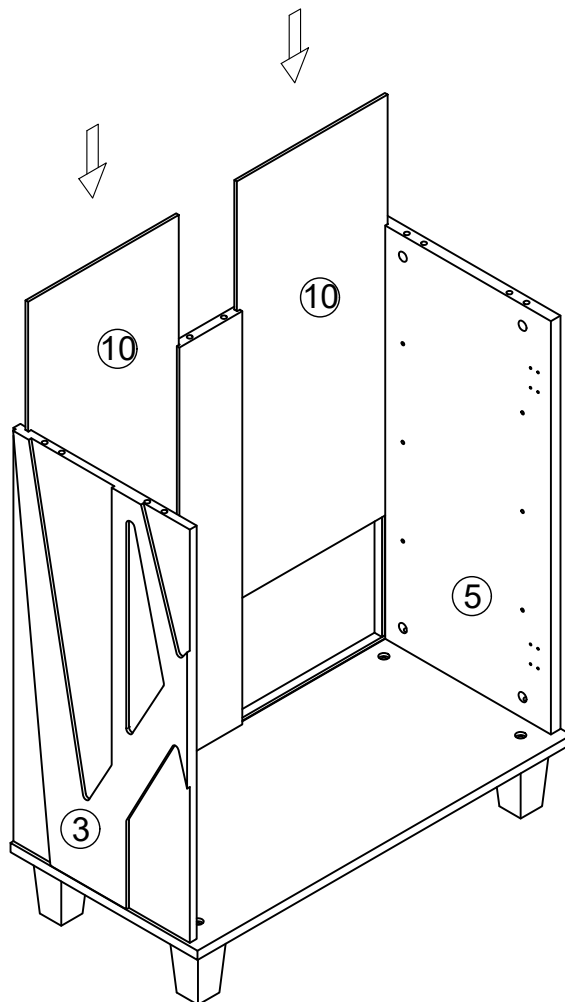

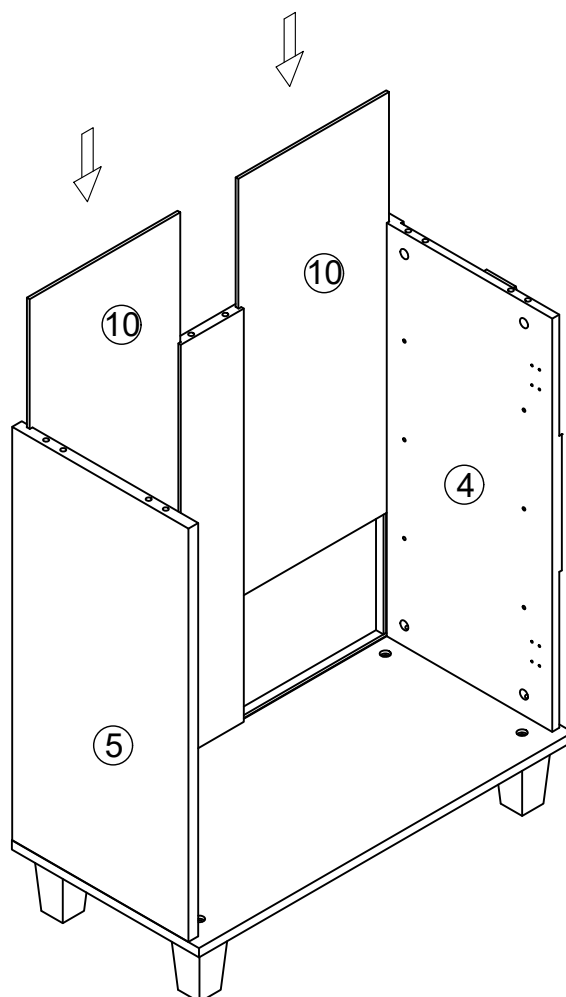

6





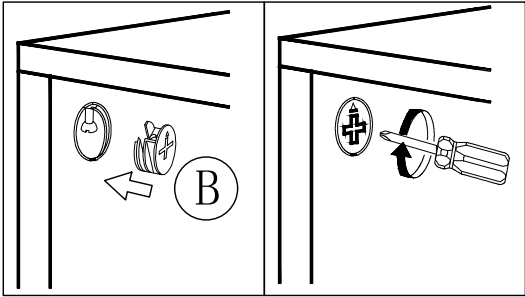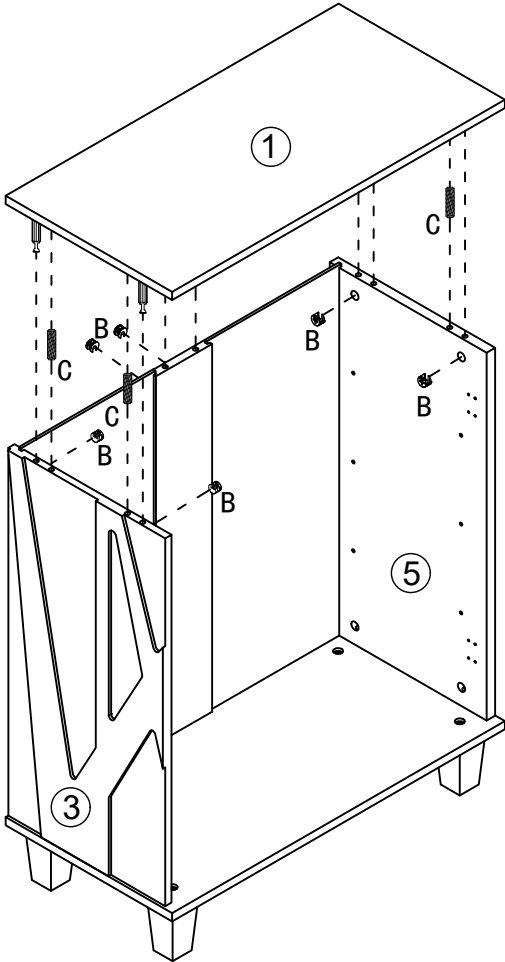

7




B	X6	C	X4
			
$\phi$ 15X12		$\phi$ 7. 8X30	

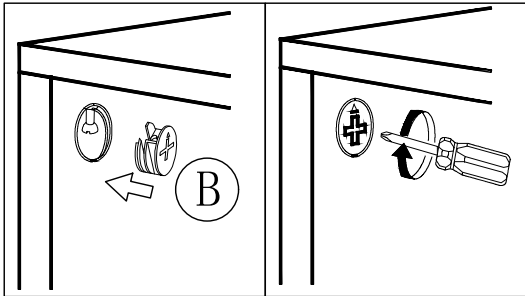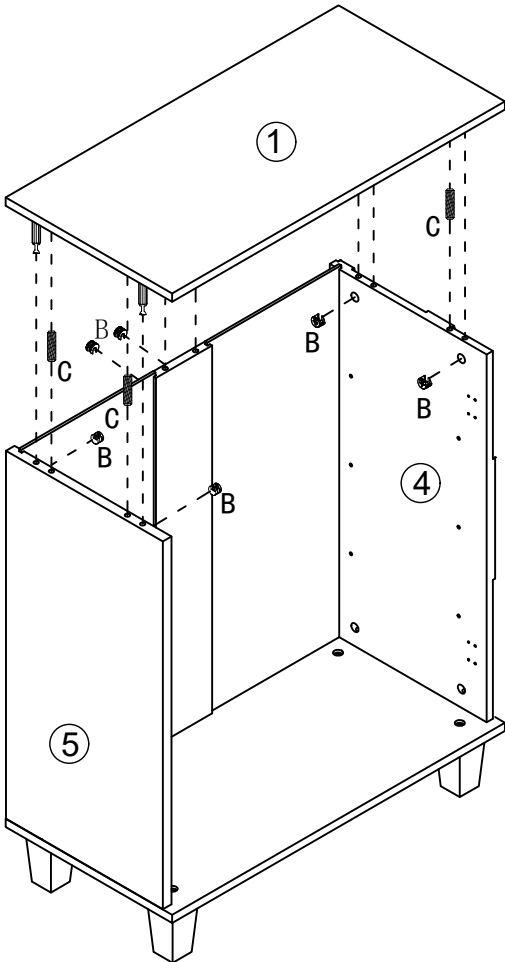8




B	X6	C	X4
			
$\phi$ 15X12		$\phi$ 7. 8X30	

9



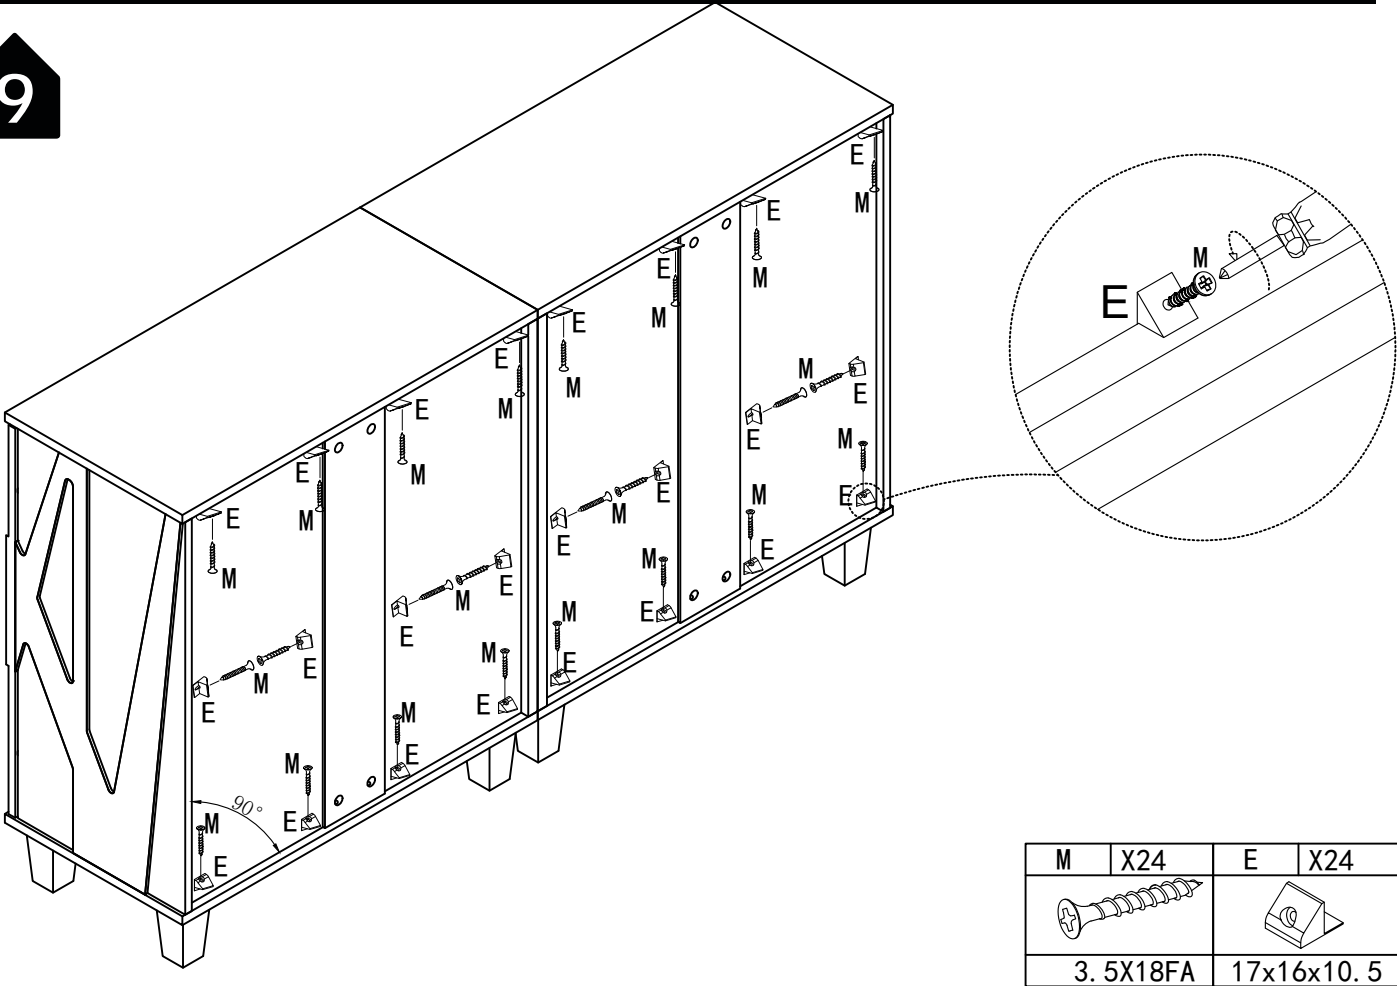


10

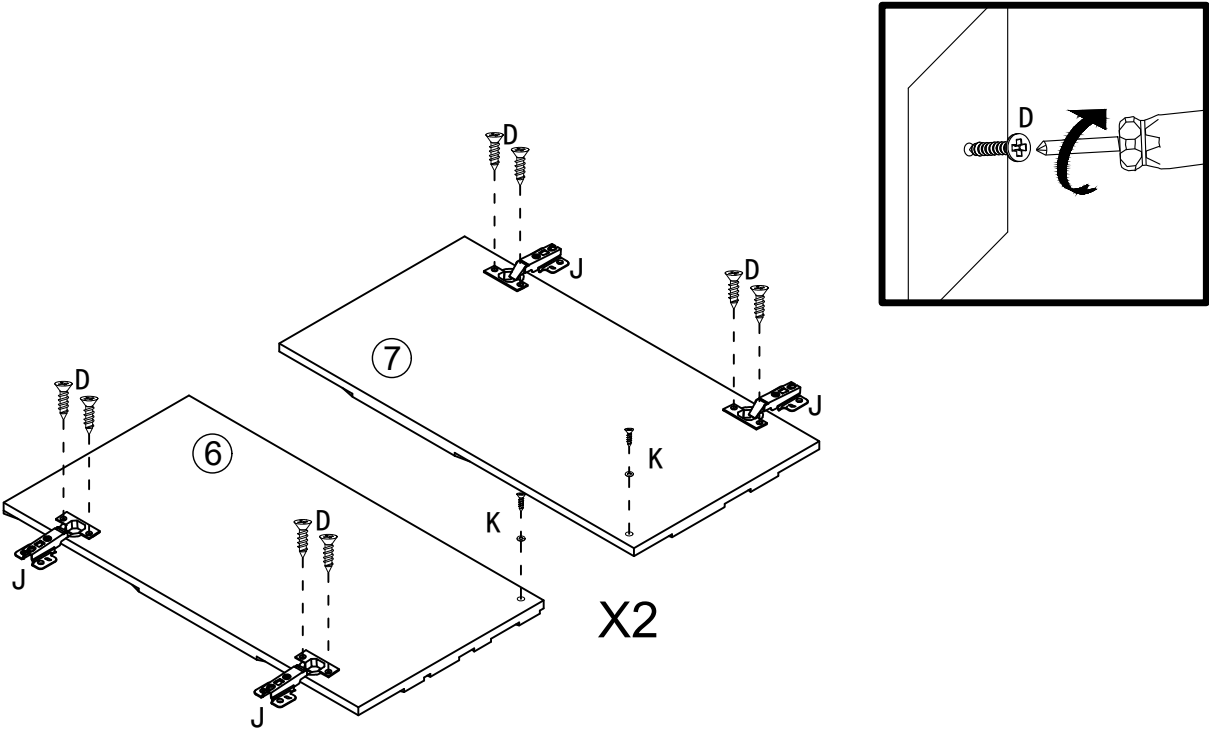


K	X2	J	X8	D	X16
				3.5X14	

11

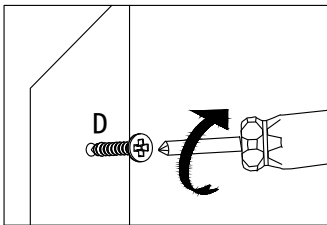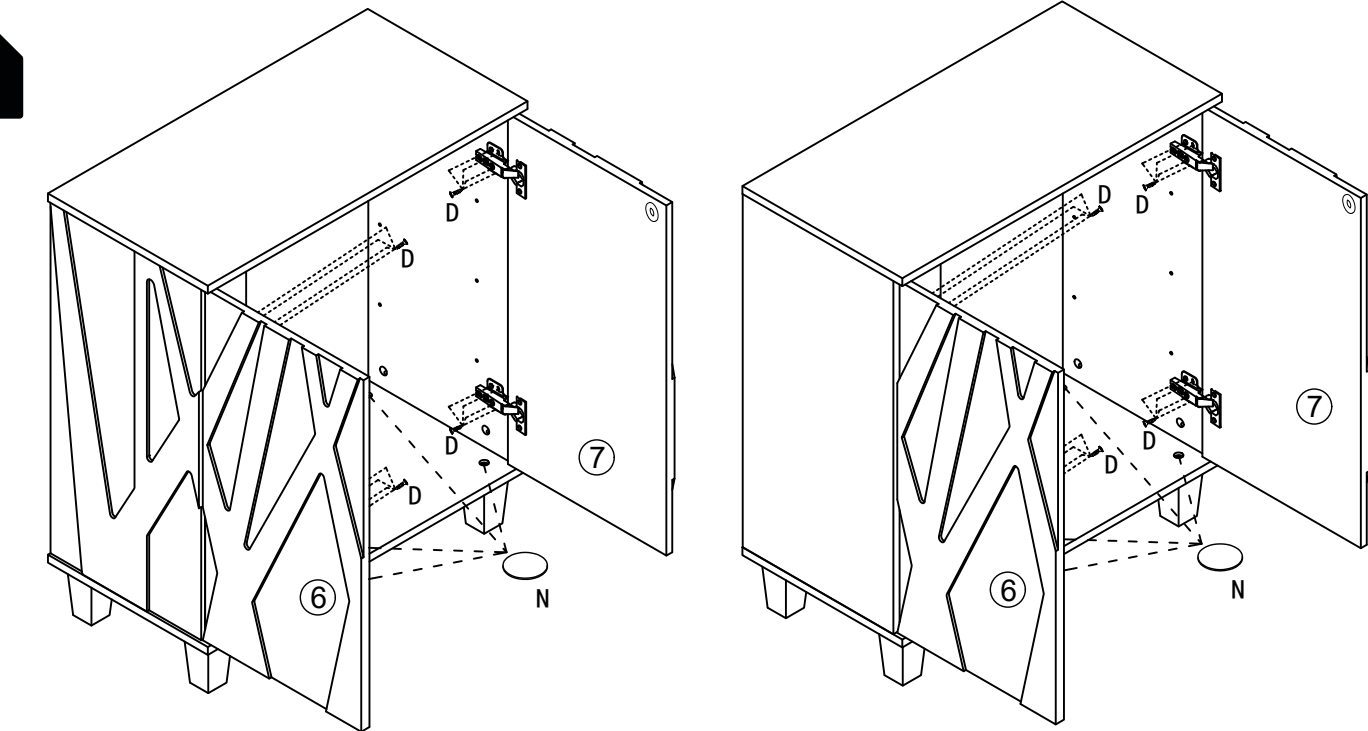


N	X8	D	X32
$\phi\ 20$		3.5X14	

12

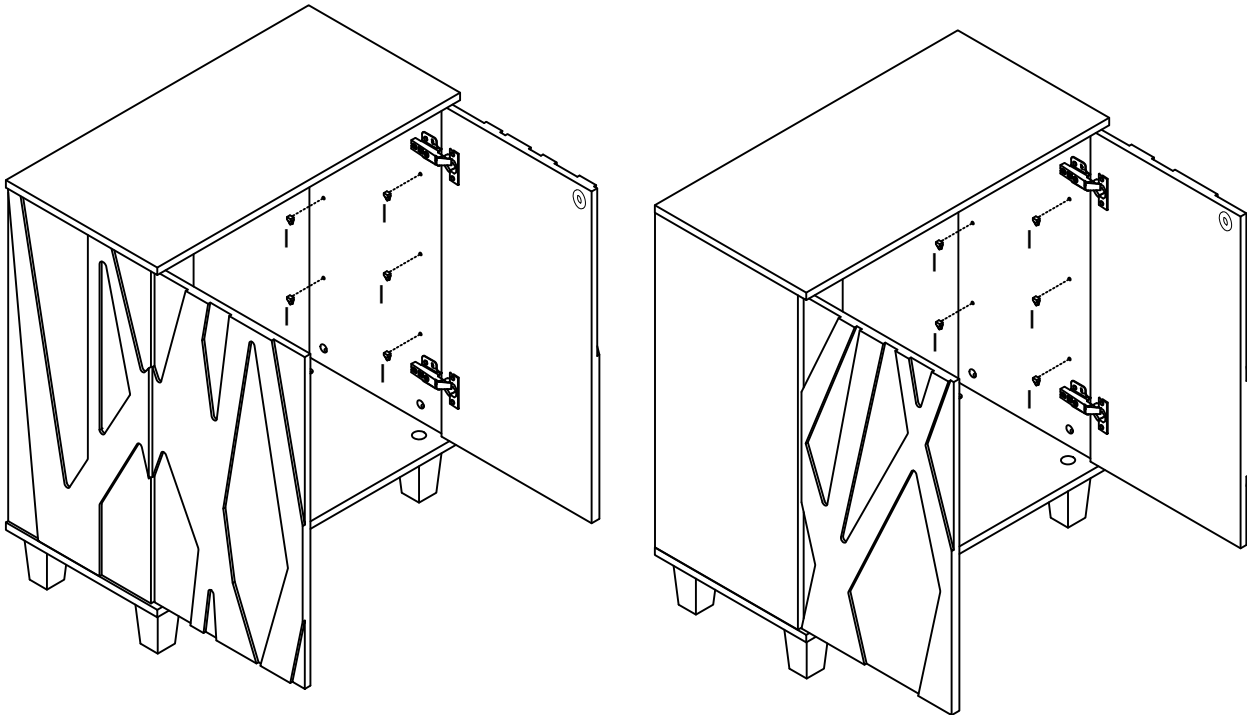


I	X24
11X16X $\phi\ 5$ X7	



**13**

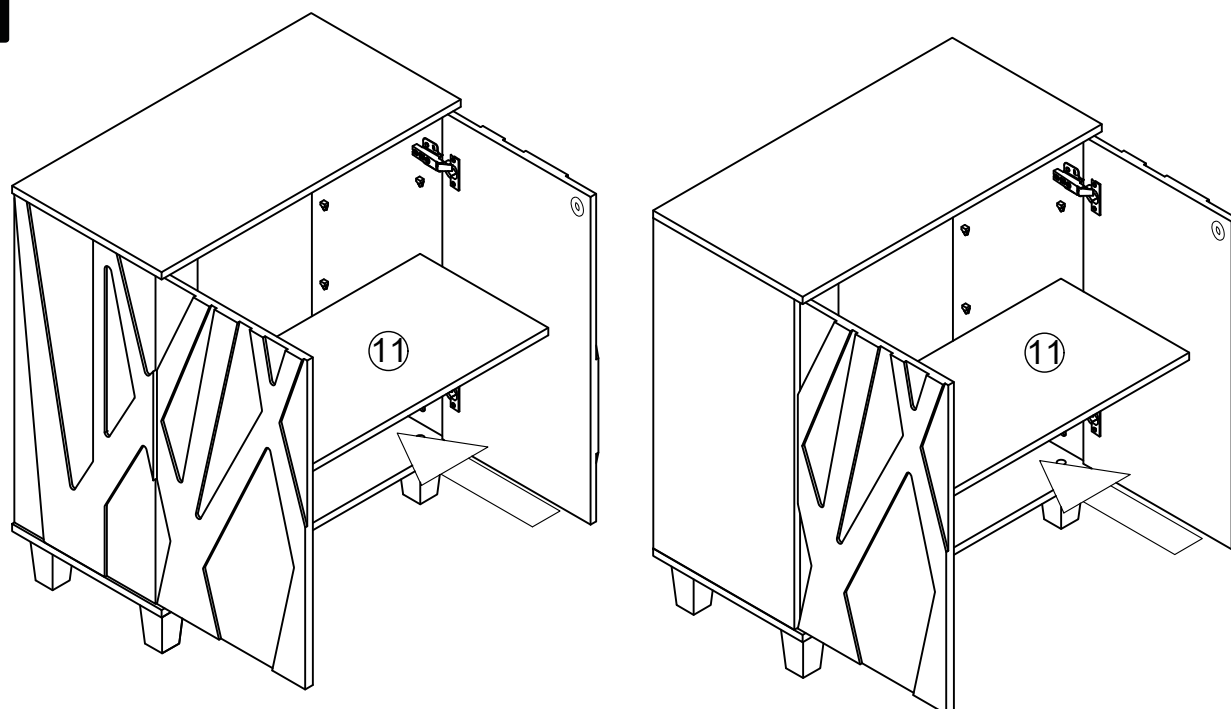


**14**

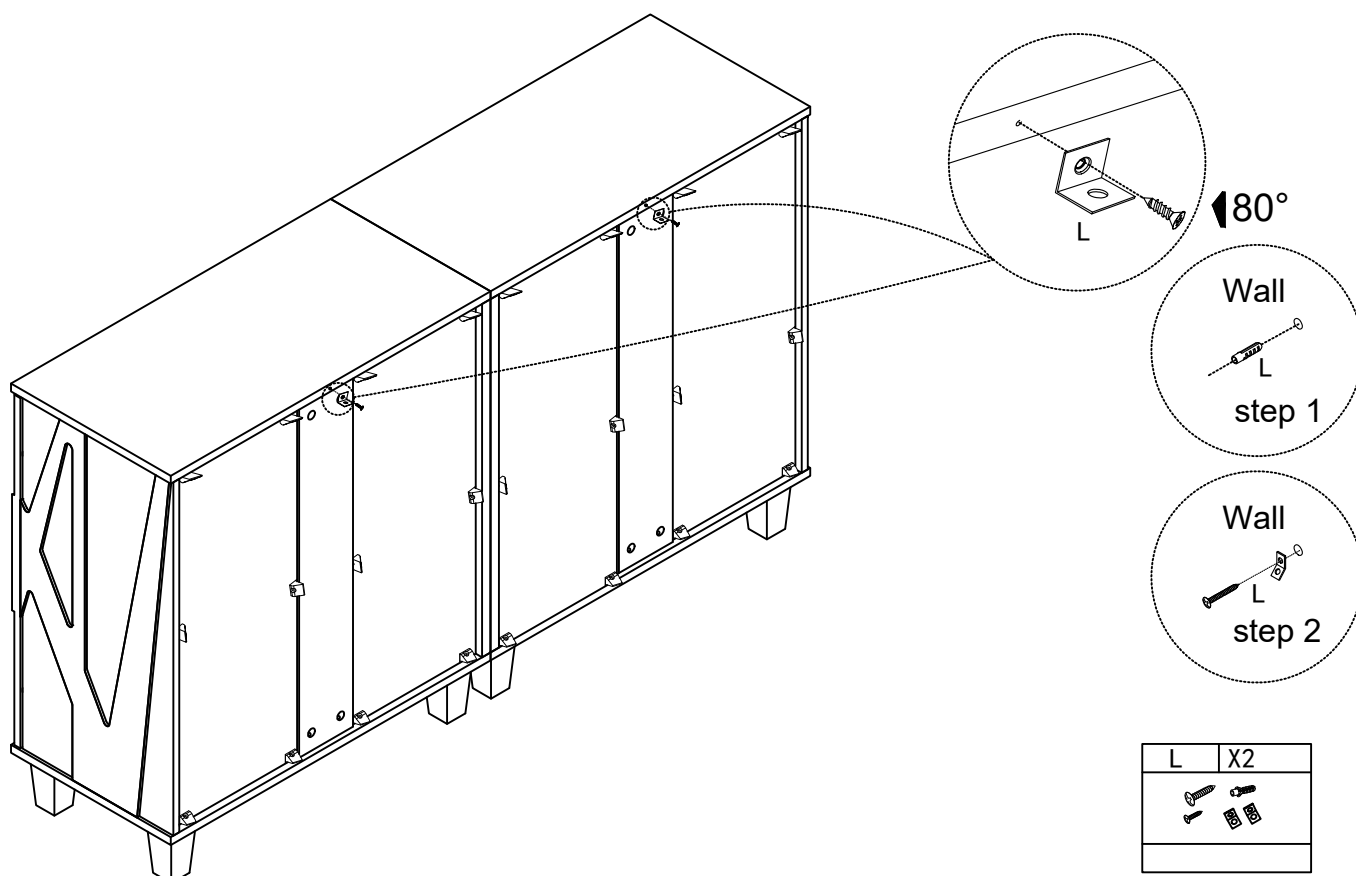


15

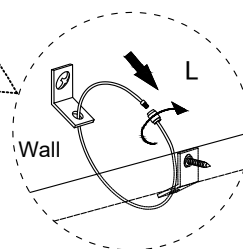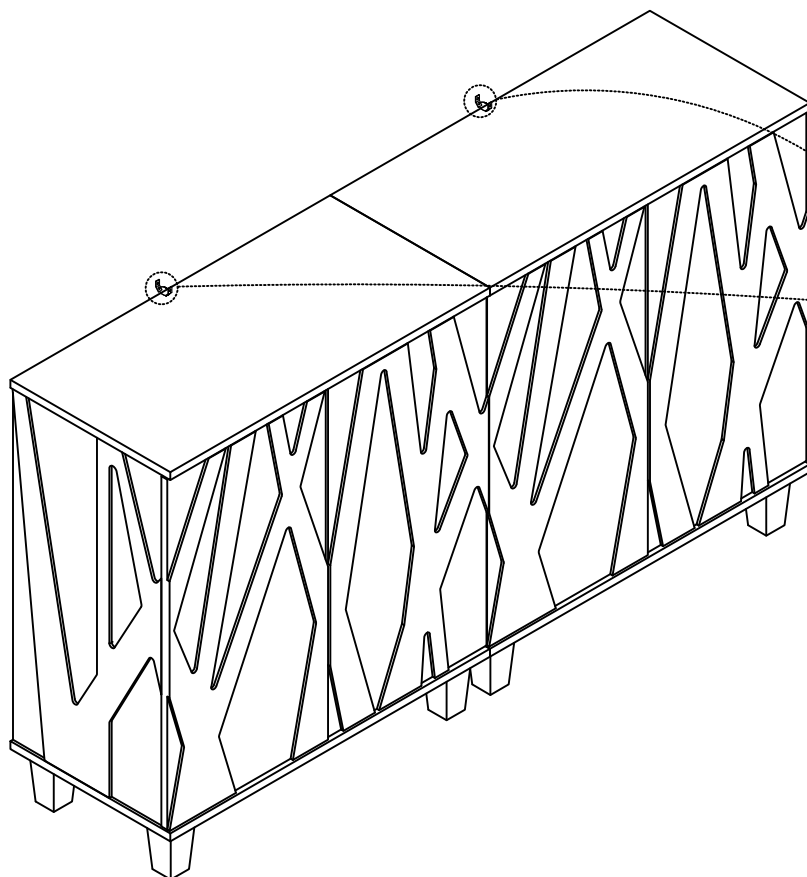

Step3

L	X2
	


16

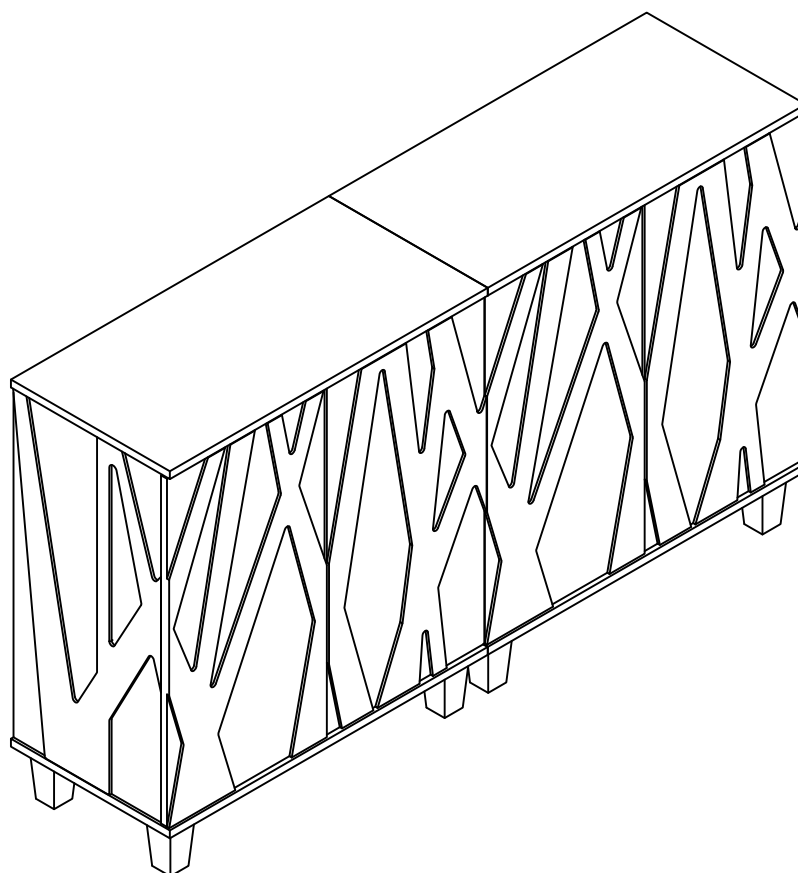



DESIGNED FOR LIFE

Thank you for your support!

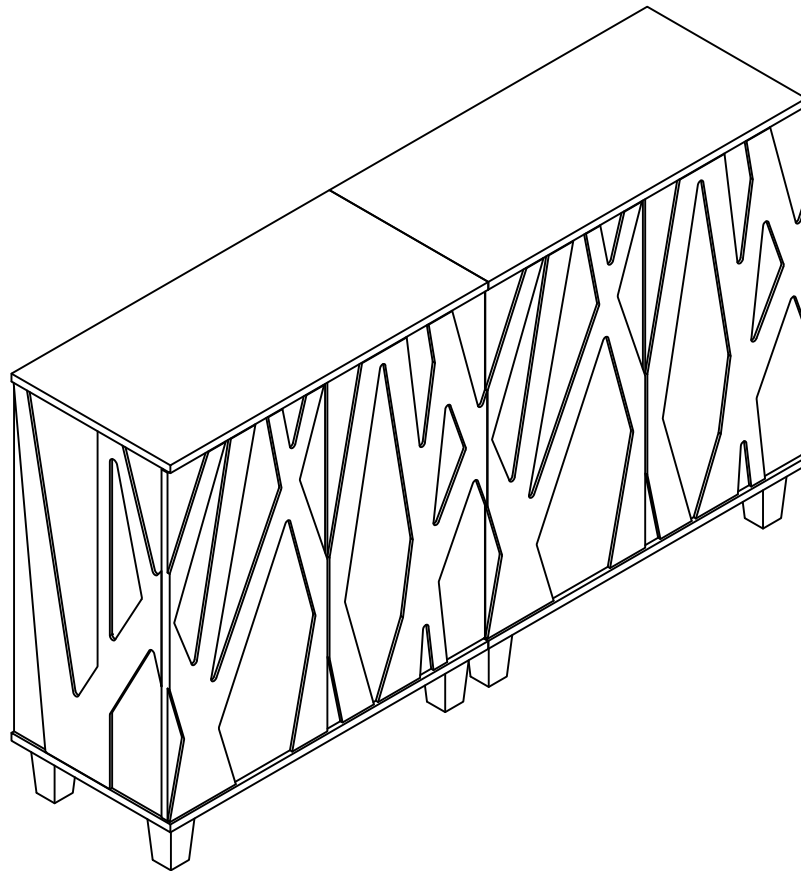

### Contact our customer service team



[support@tribesigns.com](mailto:support@tribesigns.com)  
[www.tribesigns.com](http://www.tribesigns.com)



1-424-220-6888  
Contact us anytime except  
12:00 AM to 8:00 AM EST.

### Follow Tribesigns



Facebook



Instagram



Pinterest



Twitter



YouTube



TikTok



WhatsApp