




MANHATTAN
COMFORT

ASSEMBLY HANDBOOK – FORTRESS GARAGE TABLE

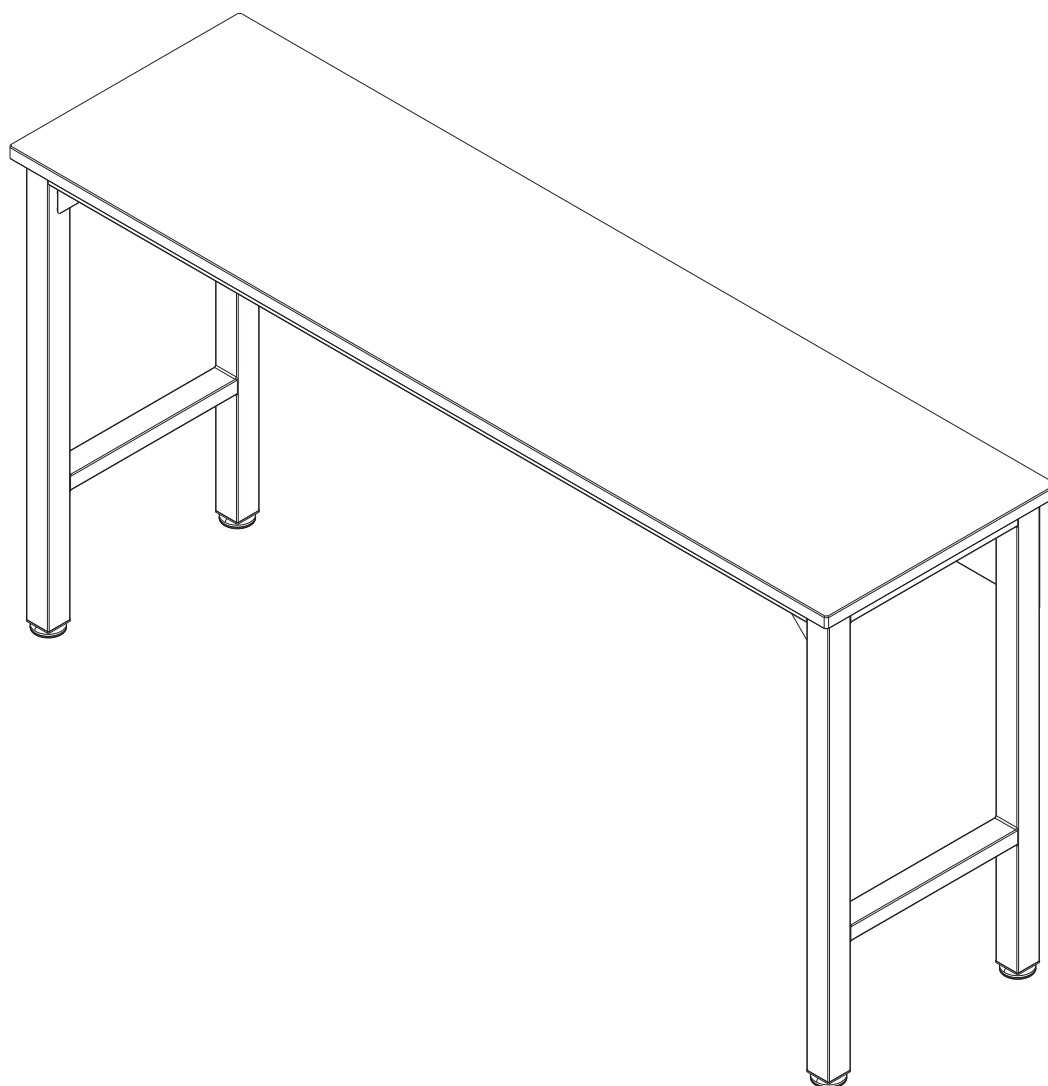



6GMC



Stuck? Questions? We are here to help.
1-888-230-2225
help@manhattancomfort.com





View our assembly video online
www.manhattancomfort.com

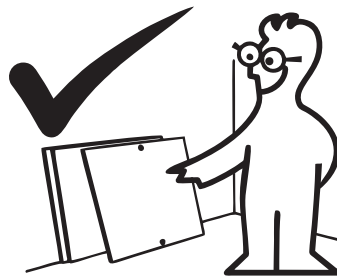
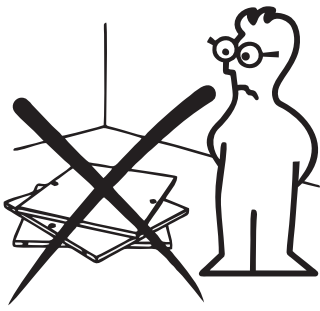


In order to ease the assembly,
you should separate and identify the parts first


Necessary hardware for the assembly

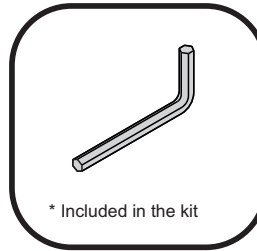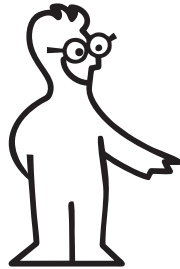

* Included in the kit

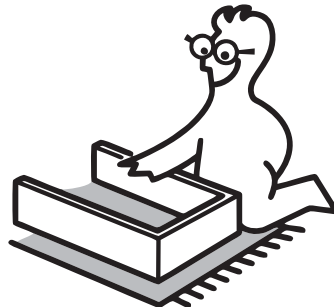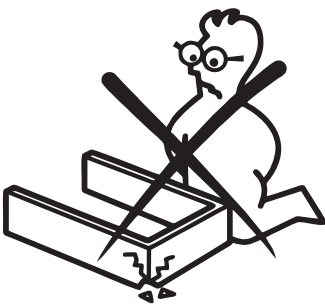

Do not place the parts directly onto the floor.
Use a cardboard sheet or a mat to place the
parts, during the separation and assembly.

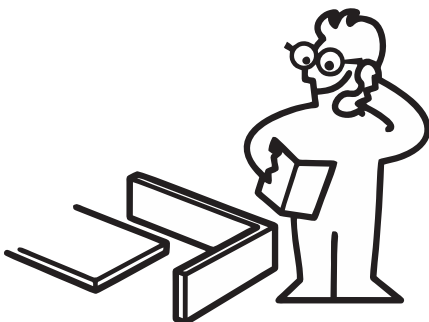

Stuck? Questions? We are here to help.
1-888-230-2225
help@manhattancomfort.com




View our assembly video online
www.manhattancomfort.com

IMPORTANT


In order to avoid severe or even fatal injuries, follow the instructions carefully.

ASSEMBLY HANDBOOK – FORTRESS GARAGE TABLE

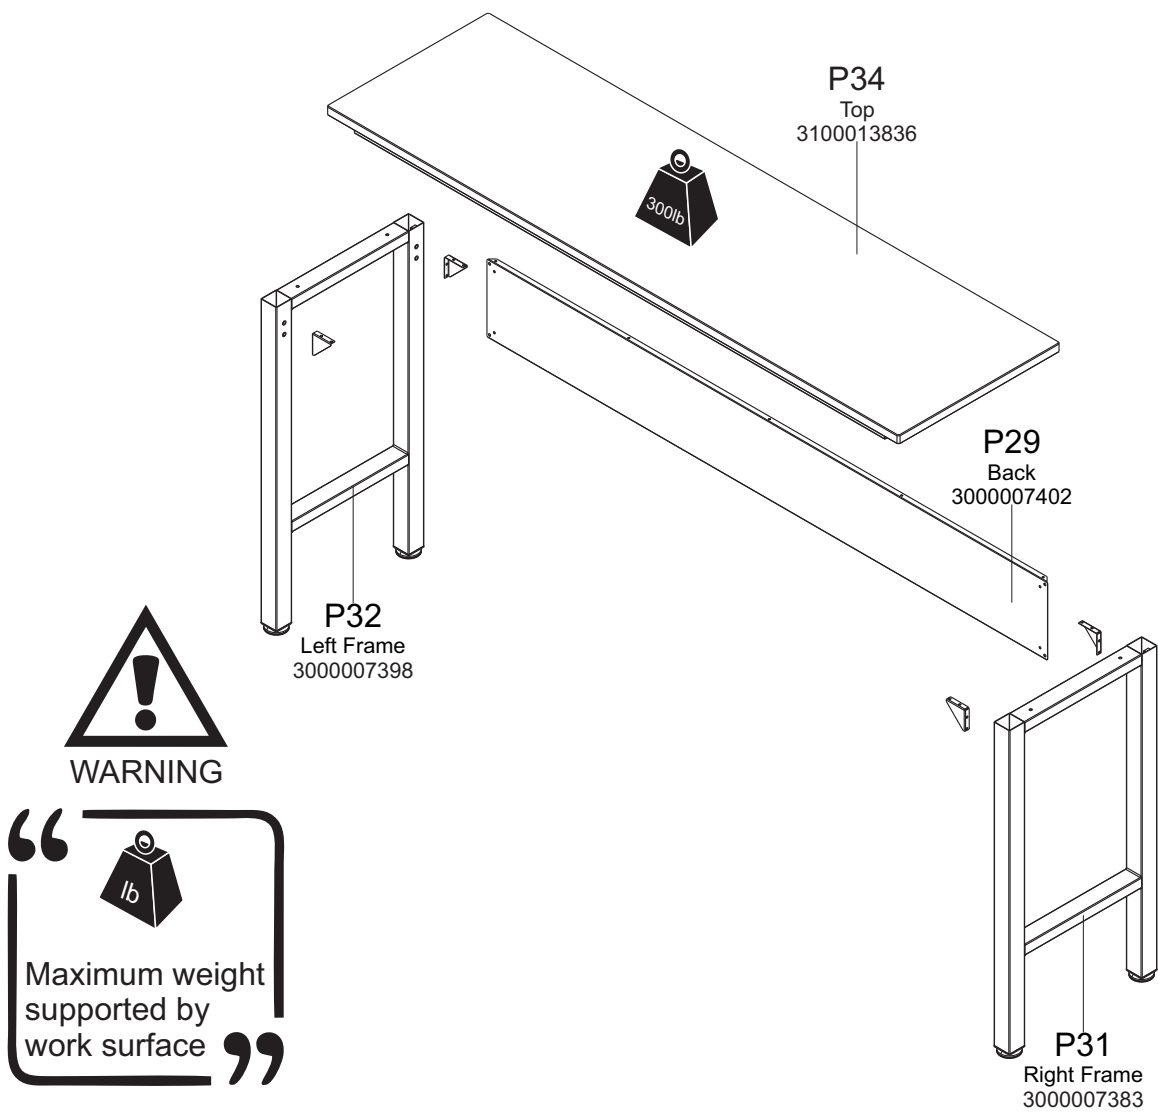


Hardware list

F2
1000009499



Qty. 3

F3
1000008391




Qty. 20

F8
1000008387




Qty. 20

F4
1000008299




Qty. 4

F9
1000008368

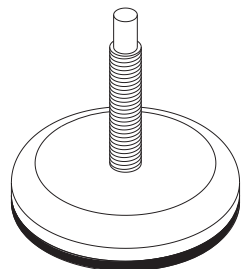


Qty. 4

F13
1000009033

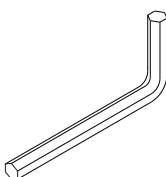

Qty. 1

F16
3000007407

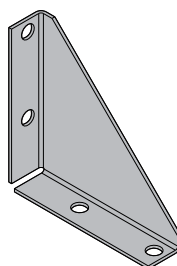

Qty. 4



F17
1000008285



Qty. 1





STEP 1

1. Fit the shoes to frame **P32** and **P31** base and turn to screw. To level the height or the table, turn the shoe clockwise or counterclockwise until is aligned

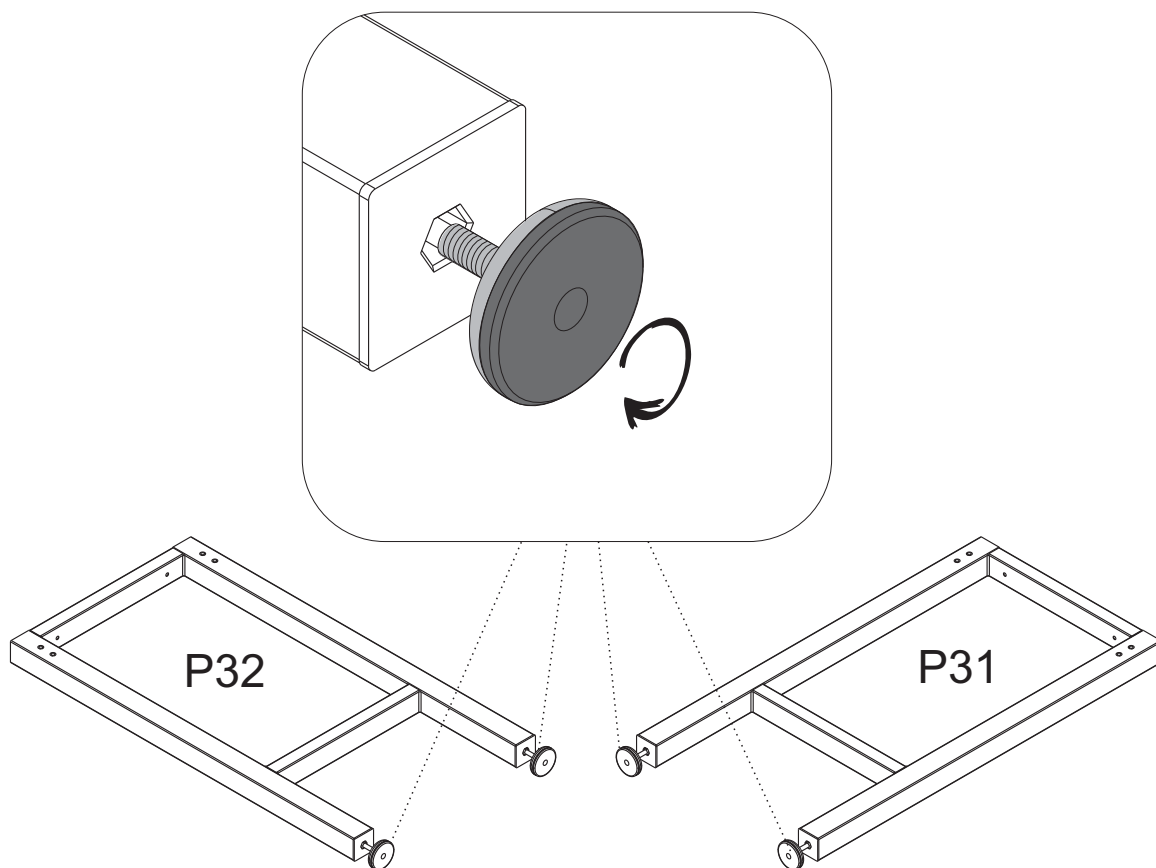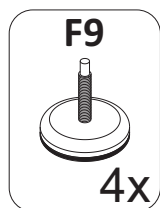

STEP 2





1. Align corner brackets **F16** to the upper sides of frames **P31** and **P32** and fix them with **F3** and **F8**

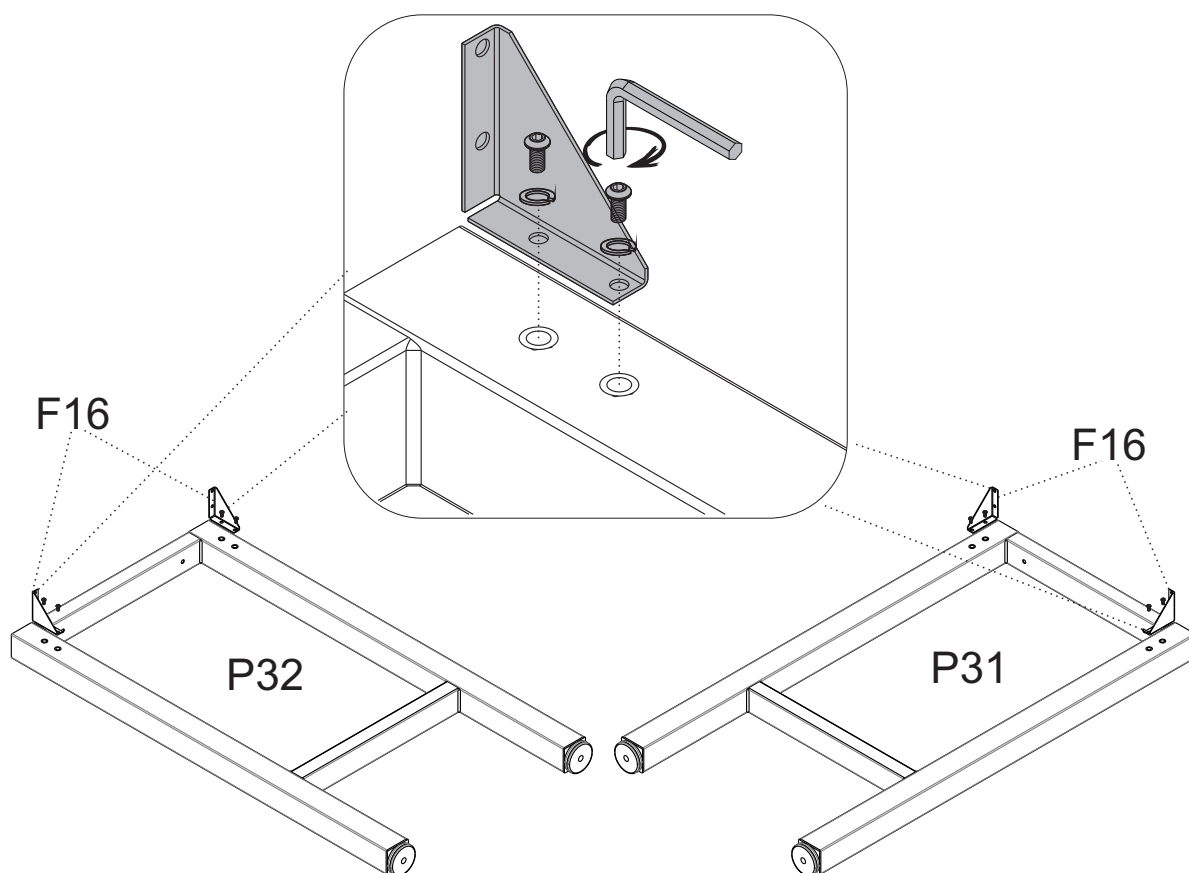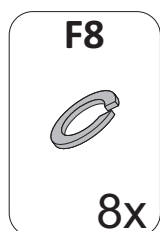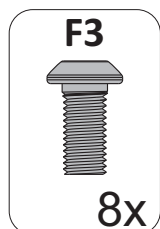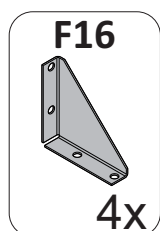

STEP 3



1.Align frames **P31** and **P32** to **P34**

2.Fix corner brackets **F16** to the metallic part of **P34**, with **F3** and **F8**

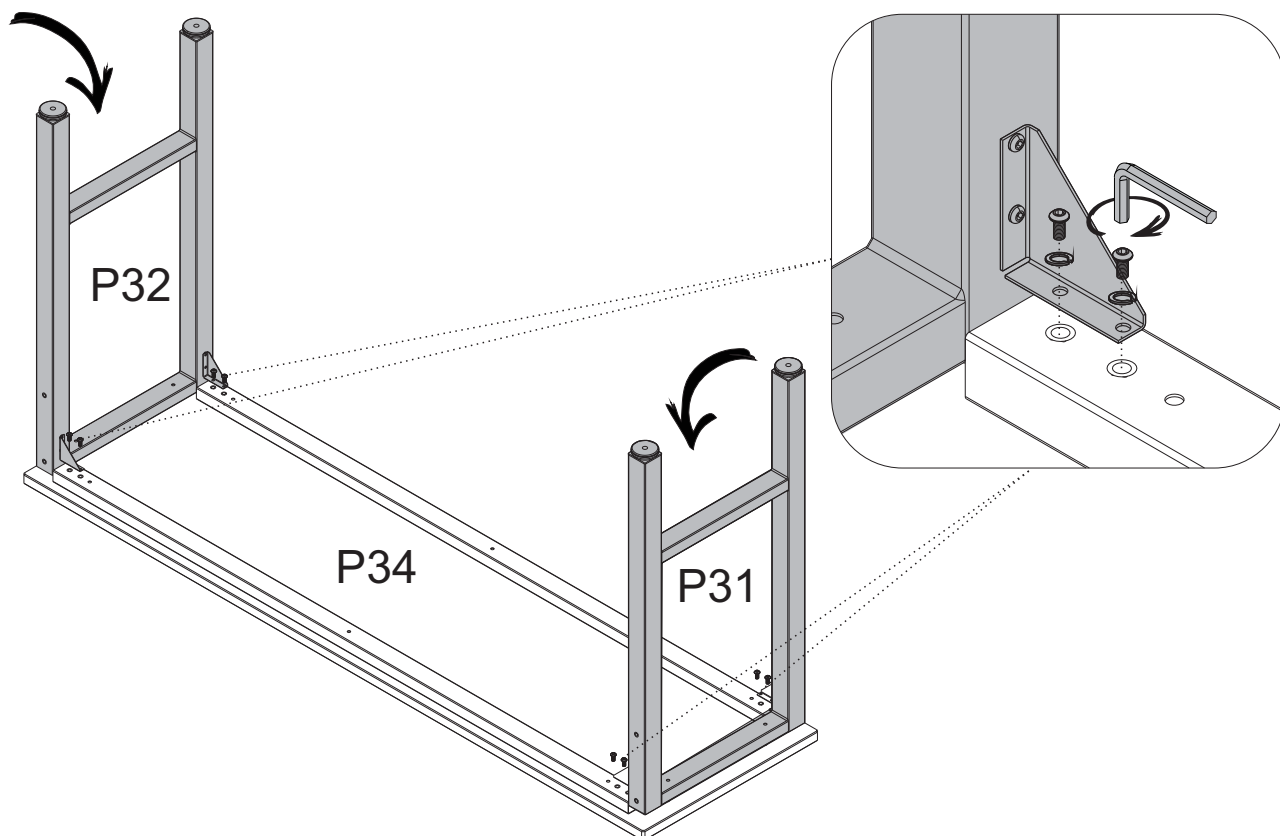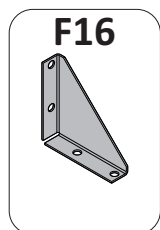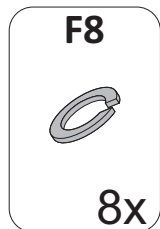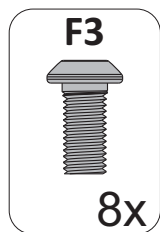




STEP 4

1.Then, fix frames **P31** and **P32** to the wooden part of part **P34**, with **F4**

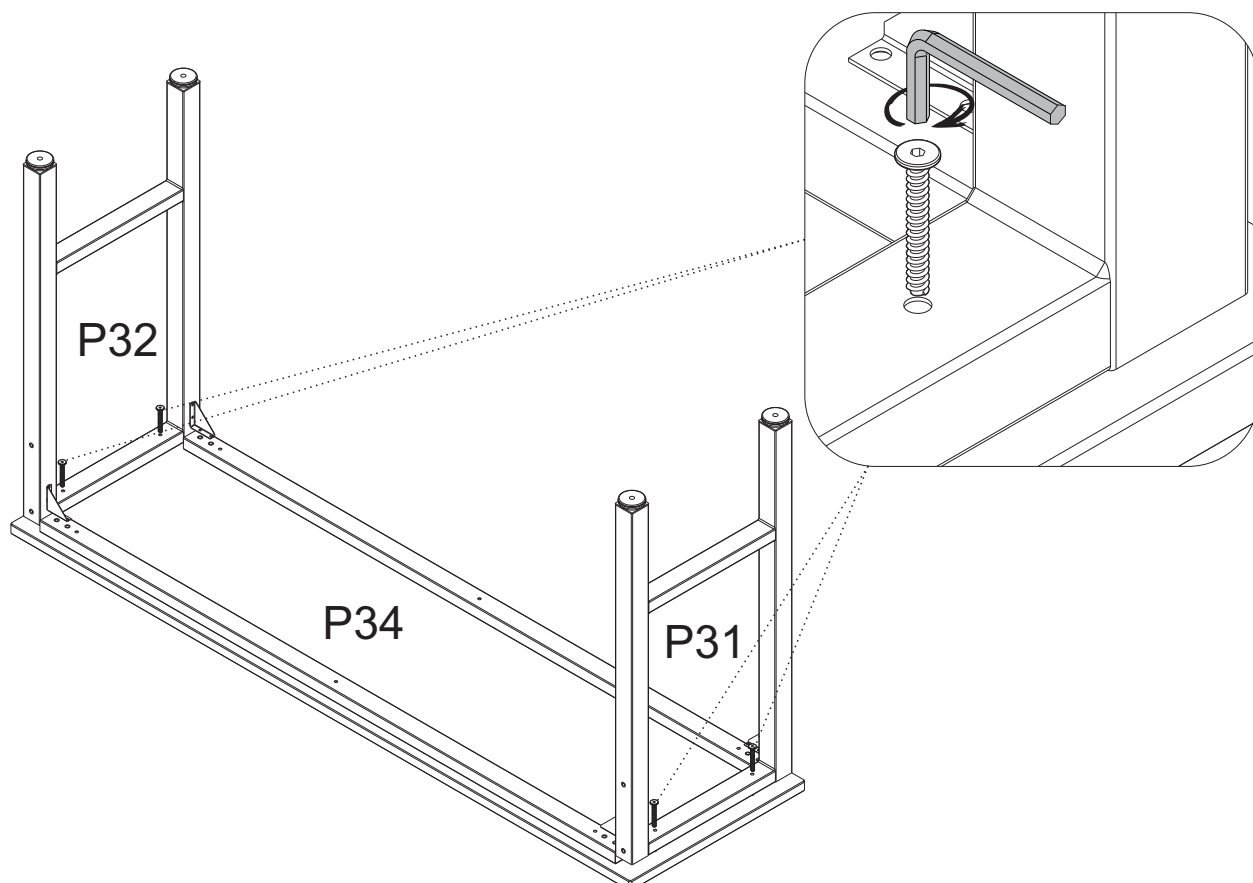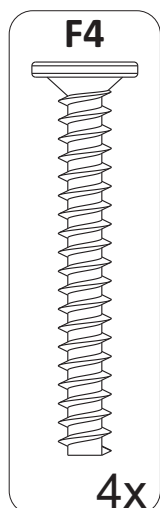



STEP 5

- 1.Align the part **P29** to frames **P31** and **P32**
- 2.Fix part **P29** to frames **P31** and **P32** with **F3** and **F8**

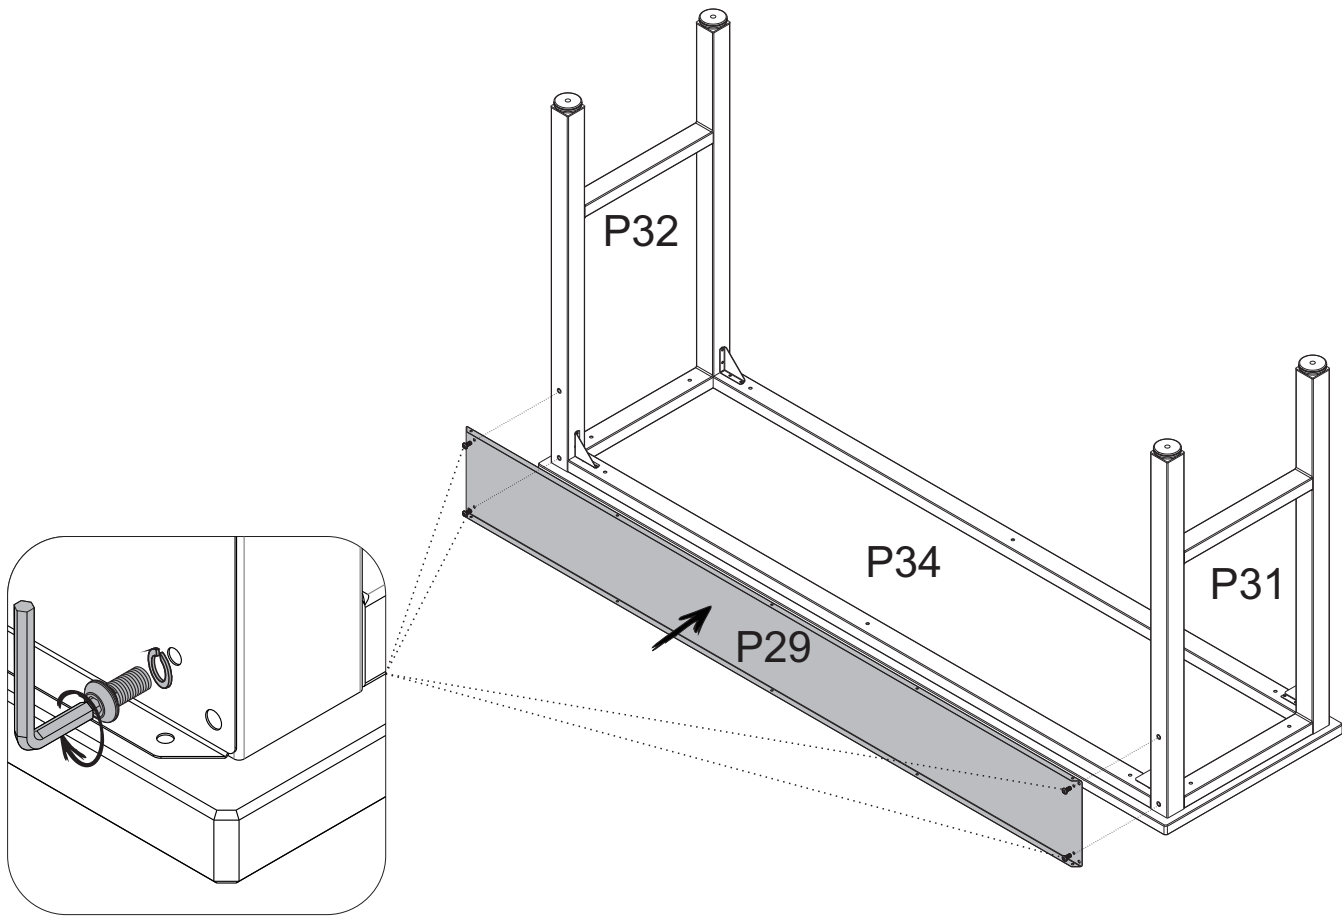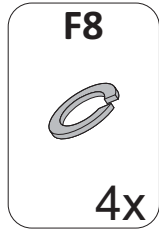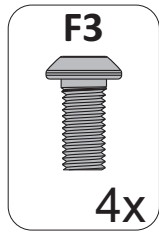



STEP 6

- 1.Fix part **P29** to part **P34** wooden side, with **F2**

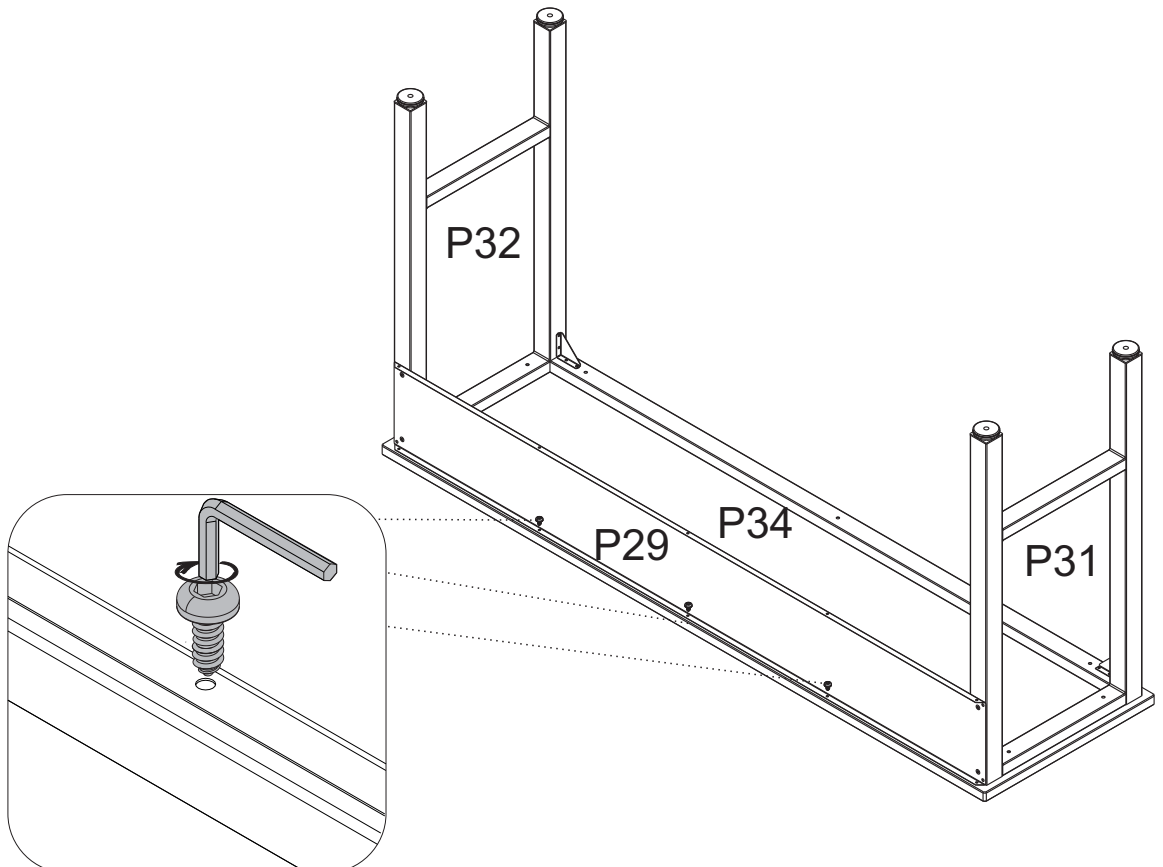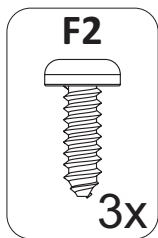

STEP 7


1 -Insert product log

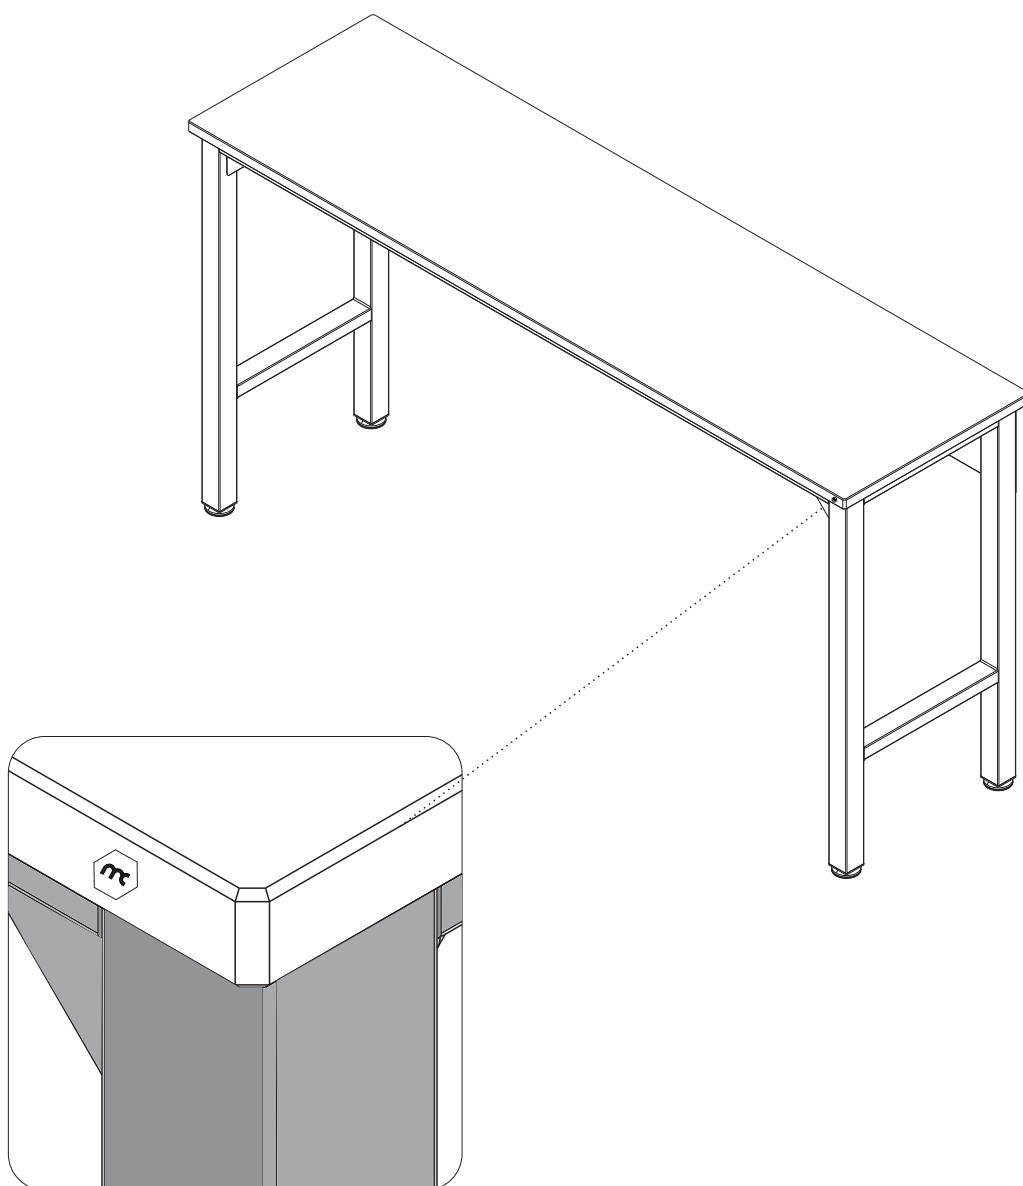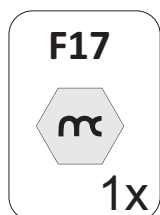



MANHATTAN
COMFORT

ASSEMBLY HANDBOOK - FORTRESS 31.5" MOBILE GARAGE CABINET WITH SHELVESS

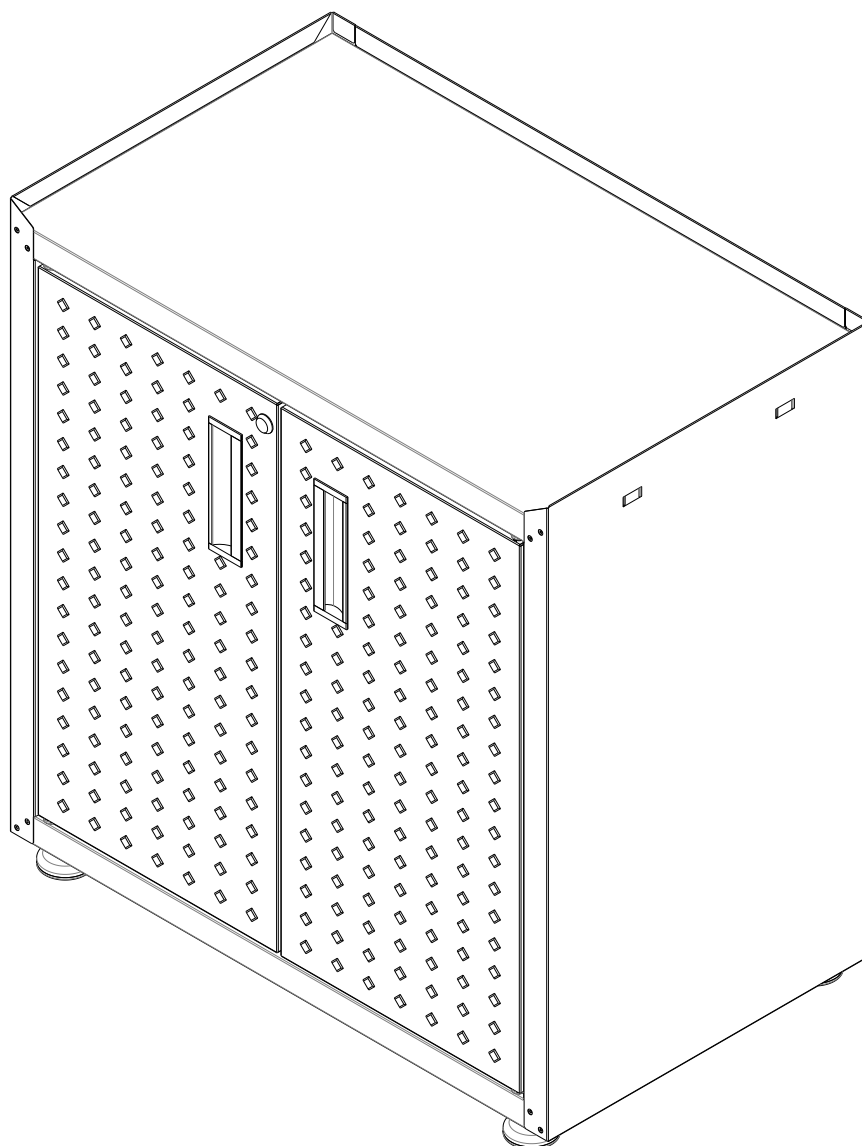



3GMCF



Stuck? Questions? We are here to help.
1-888-230-2225
help@manhattancomfort.com





View our assembly video online
www.manhattancomfort.com

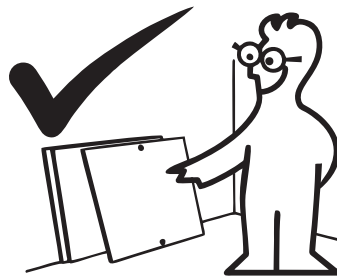
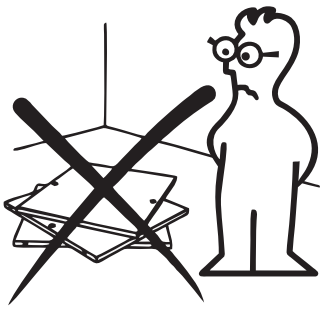


In order to ease the assembly,
you should separate and identify the parts first


Necessary hardware for the assembly

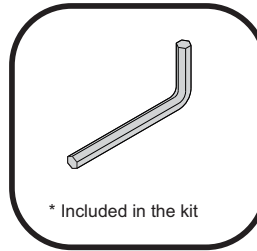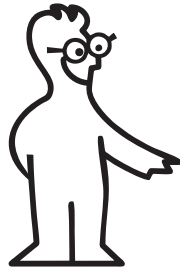

* Included in the kit

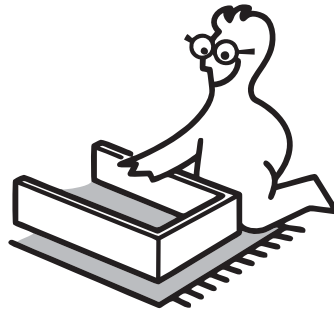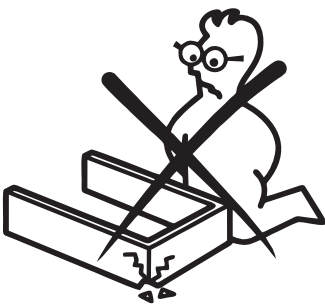

Do not place the parts directly onto the floor.
Use a cardboard sheet or a mat to place the
parts, during the separation and assembly.

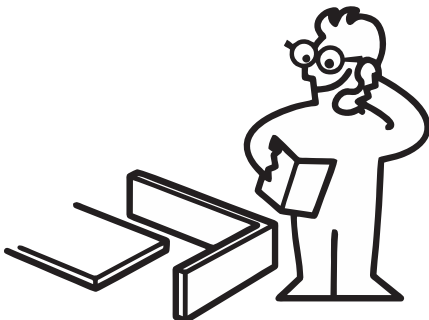

Stuck? Questions? We are here to help.
1-888-230-2225
help@manhattancomfort.com



View our assembly video online
www.manhattancomfort.com

IMPORTANT


In order to avoid severe or even fatal injuries, follow the instructions carefully.

ASSEMBLY HANDBOOK - FORTRESS 31.5" MOBILE GARAGE
CABINET WITH SHELVES

P10
Upper Back
3000007312



WARNING

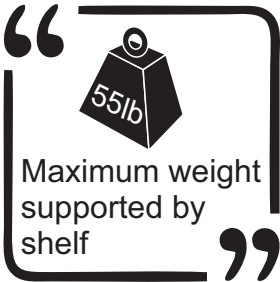


P3
Left Side
3000007316


P5
Top
3000007270

P19
Shelf
3000007311


P9
Lower Back
3000007366

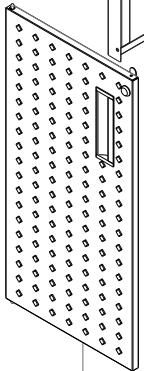


P22
Left Door
3000007302

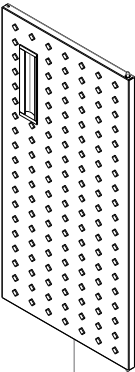

P23
Right Door
3000007304

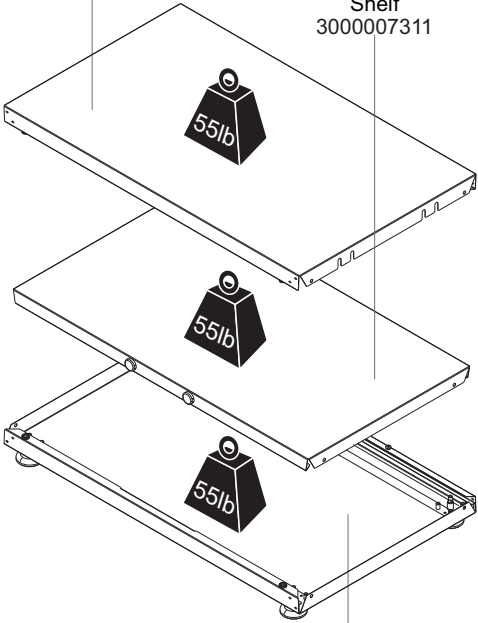

P7
Bottom
3000007271



P2
Right Side
3000007308

Hardware list

F1


1000009500



Qty. 16

F7


1000008301

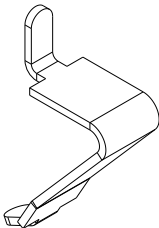

Qty. 4

F15


1000008280

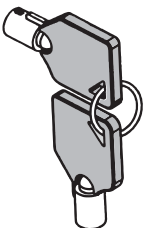

Qty. 1

F13

1000009033

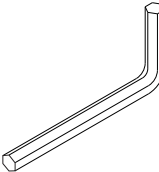

Qty. 1


F17

1000008285



F9


1000008368

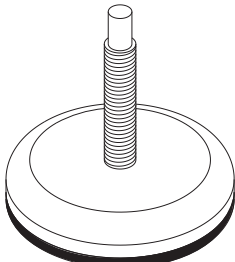

Qty. 4

F3


1000008391



Qty. 16

F10


1000008352

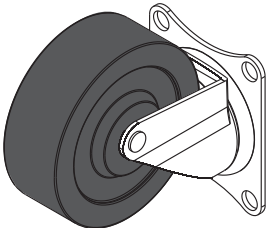

Qty. 2

F11

1000008354

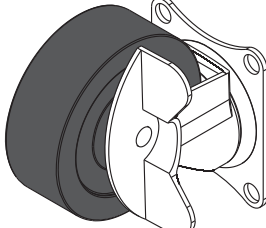




Qty. 2

* Only in cabinets without caster

* Only in cabinets with caster




STEP 1

- 1 - Fit part **P7** inside part **P3**
- 2 - Fit both parts in the frontal side, with **F1**

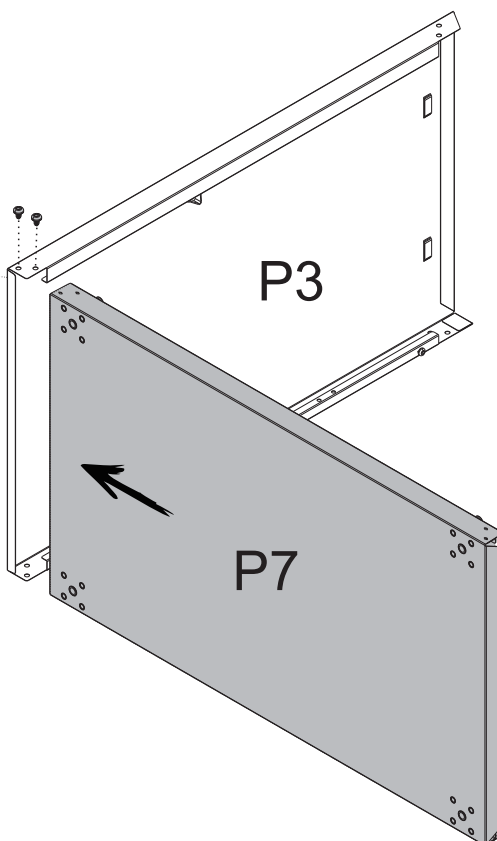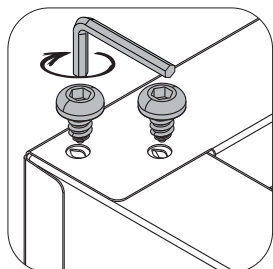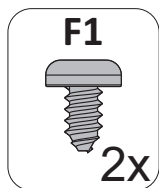






STEP 2

- 1 - Fit part **P2** inside part **P7**
- 2 - Fit both parts in the frontal side, with **F1**

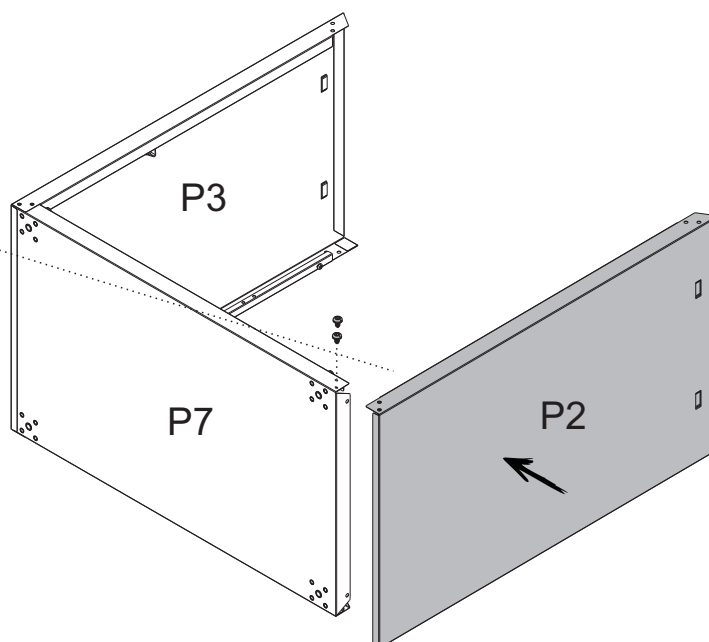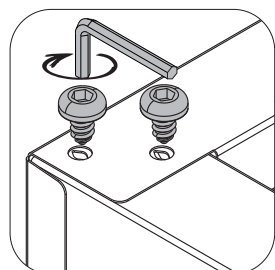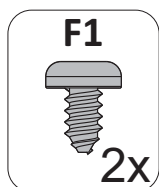



STEP 3

- 1 - Fit part **P5** between part **P2** and **P3**
- 2 - Check that all 4 tabs have been fitted
- 3 - Fit part **P5** to parts **P2** and **P3**, at the frontal side, with **F1**

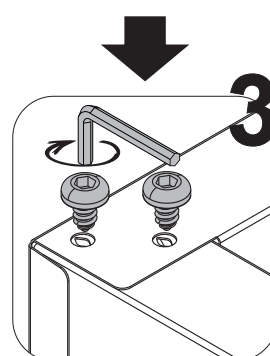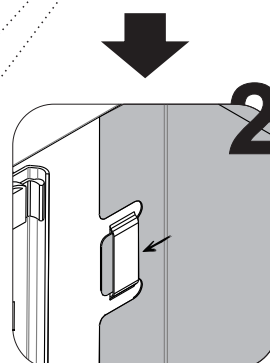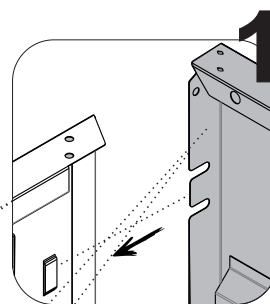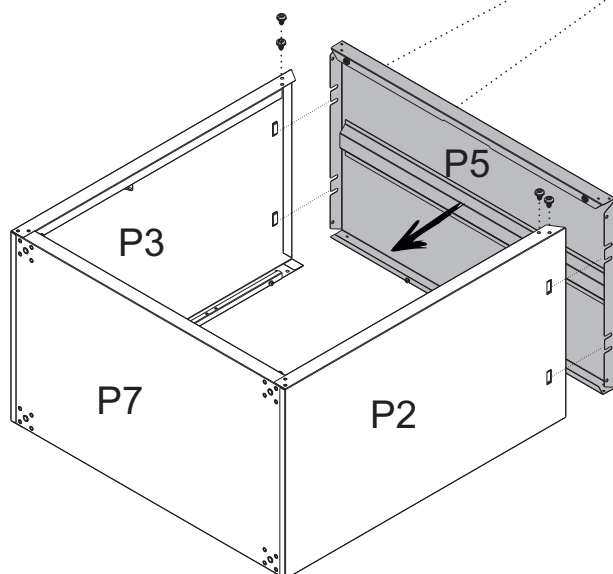
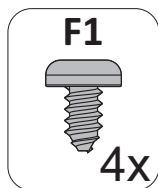


STEP 4

- 1 - Turn the cabinet with the back side upwards

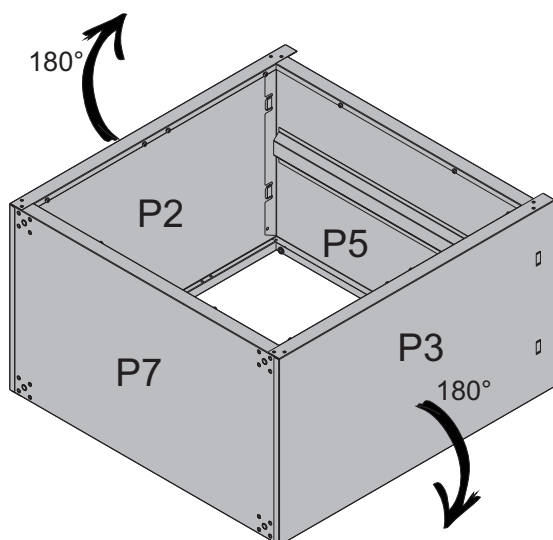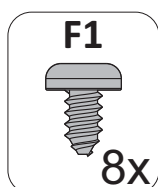

- 2 - Fit parts **P2** and **P3** to parts **P5** and **P7** with **F1**

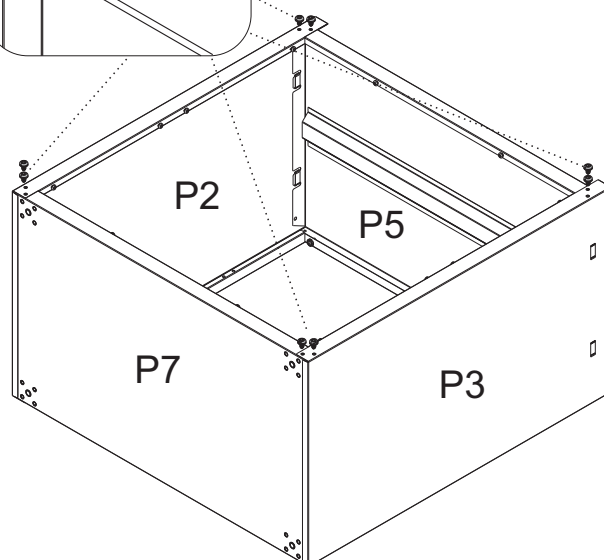
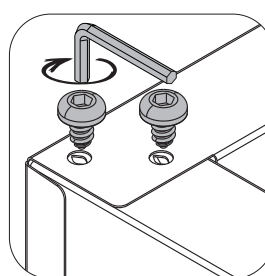


STEP 5

- 1 - Fit part **P10** into parts **P2**, **P3** and **P5**
Check that all fits are supported over the bolts
- 2 - After fitting the parts, screw the bolts until locked





“Position part P10 on the P5 side for mounting the”

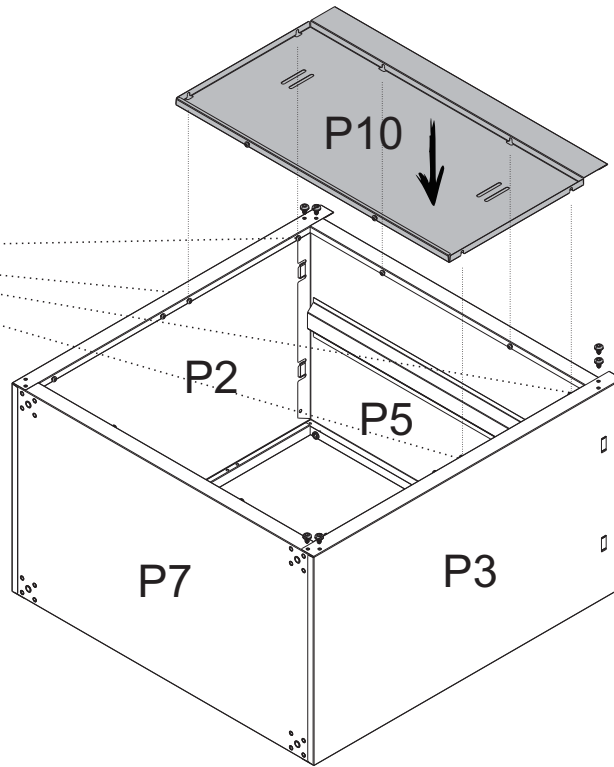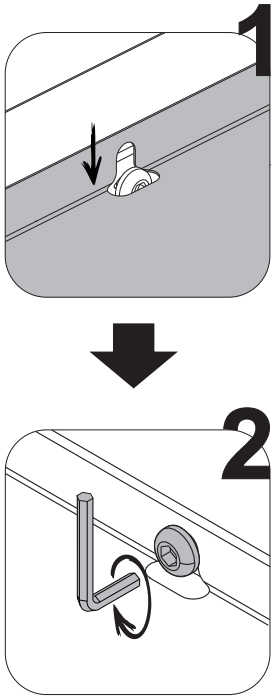



- ## STEP 6
- 1 - Fit part **P9** into parts **P2**, **P3** and **P7**
Check that all fits are supported over the bolts

- 2 - After fitting the parts, screw the bolts until locked

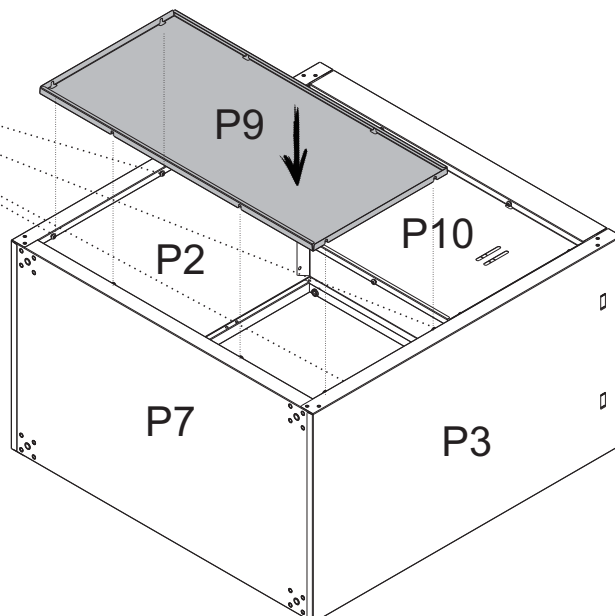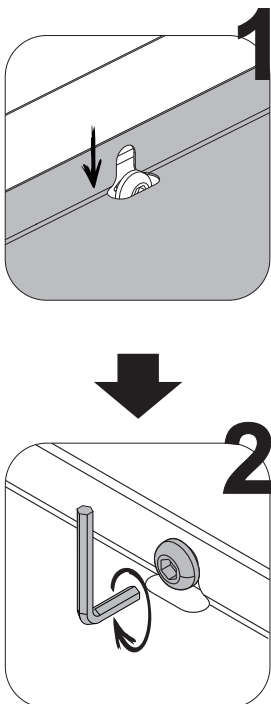

STEP 7





1 - To assembly the cabinet with shoe fit the accessory **F9** in part **P7** as illustrated here below and turn to screw. To level the height or the cabinet, turn the shoe either clockwise or counterclockwise to align it.

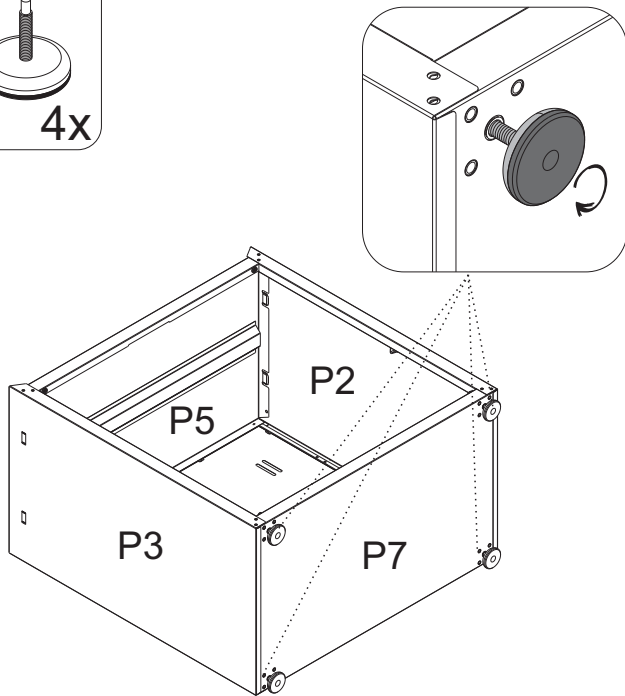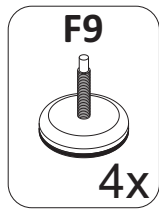

* Only in cabinets without caster

2 - To assembly the cabinet with caster, align the **F10** and **F11** to the holes in part **P7** and fix them with **F3**





3 - **WARNING:** Casters with lock (**F11**) must be fitted in the frontal side of the cabinet

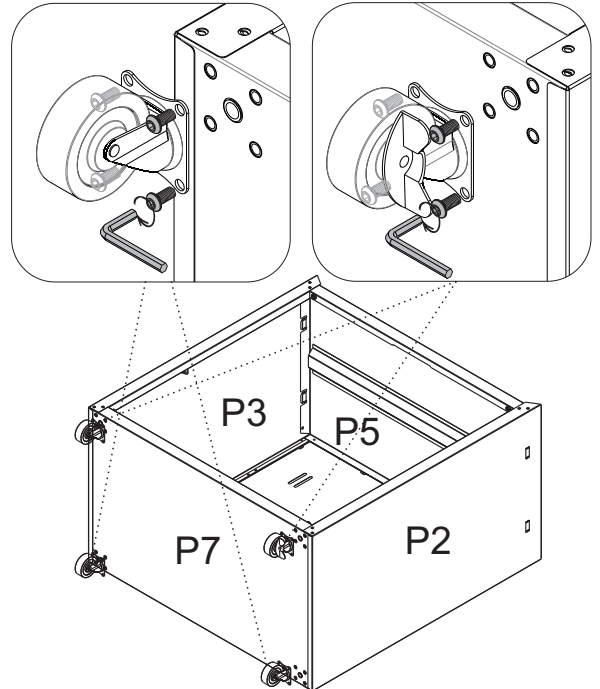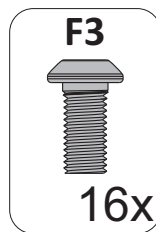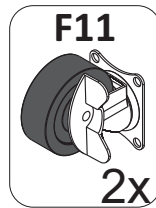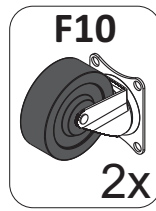

* Only in cabinets with caster




STEP 8

- 1- Turn the cupboard so that it will stand in the position of use
- 2- Fix **F7** to parts **P2** and **P3**, as shown here below

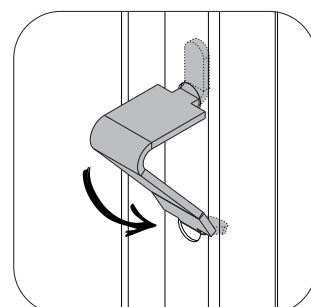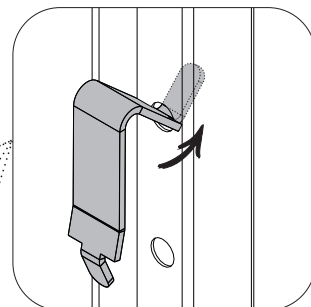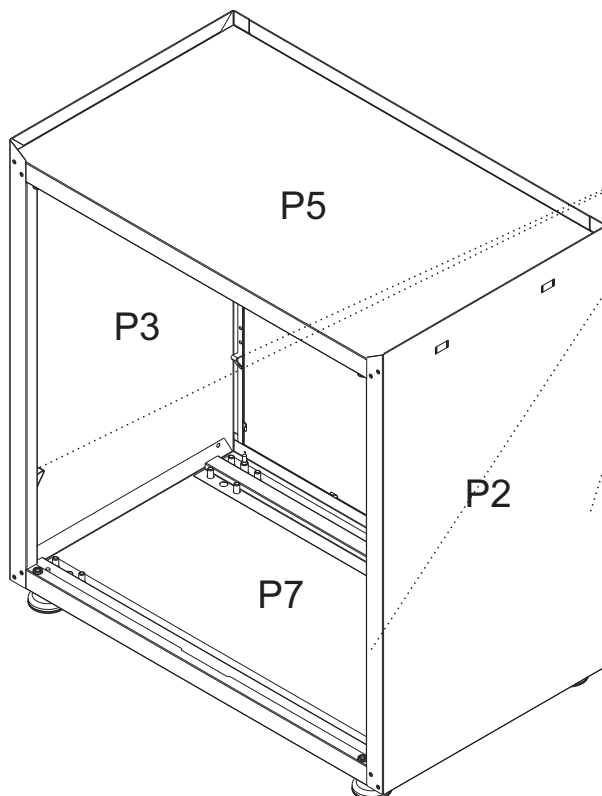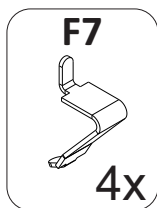






STEP 9

- 1 - Fit the lower part **P19** in diagonal position to insert it inside the cupboard
- 2 - Lean part **P19** in part **P2**, **P3** and place it over the **F7** detailed in the figure here below
- 3 - Lower the other side of part **P19**, leaning it over the left **F7**

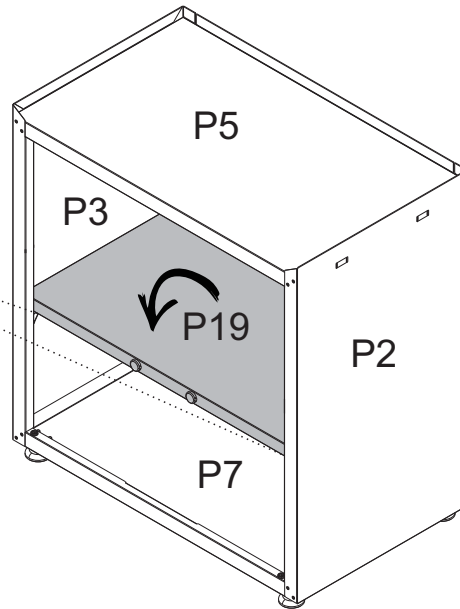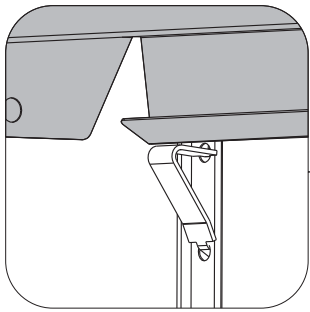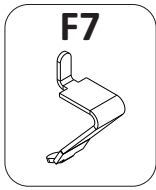

STEP 10


- 1 - To assembly the doors, fit door **P23** lower hinge bolt inside the bushing fixed in part **P7**. Then, pull down the pin of door **P23** upper hinge; align the door and release the pin to fit the bushing fixed in part **P5**
- 2 - Repeat the step for part **P22**
- 3 - Insert product log

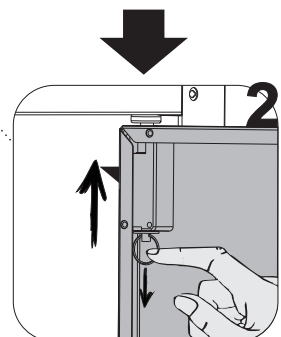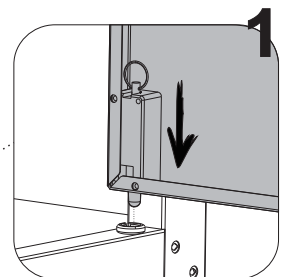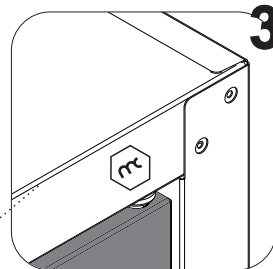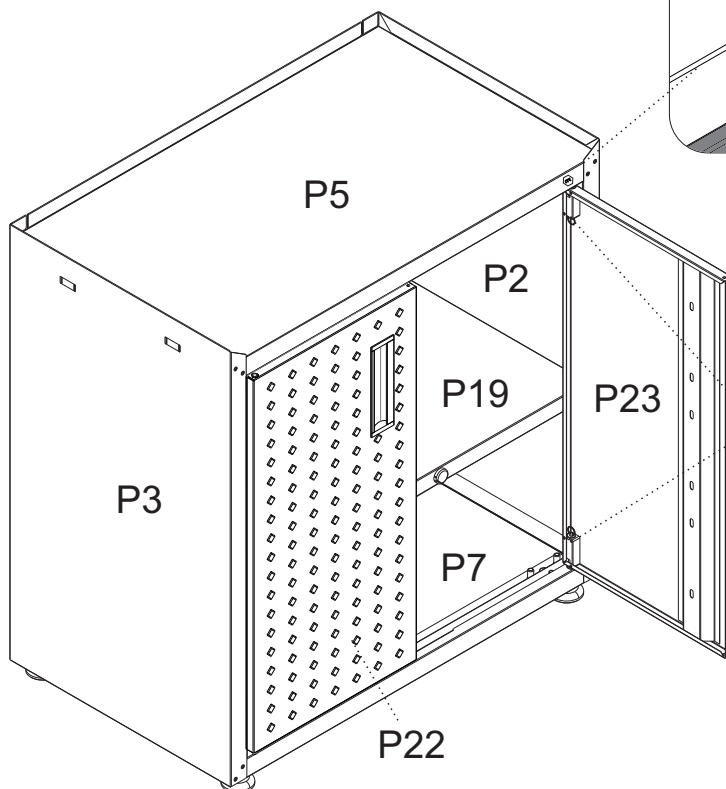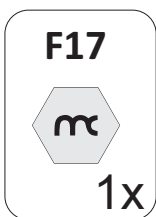



MANHATTAN
COMFORT

ASSEMBLY HANDBOOK – FORTRESS 31.5" MOBILE GARAGE CHEST WITH DRAWERS

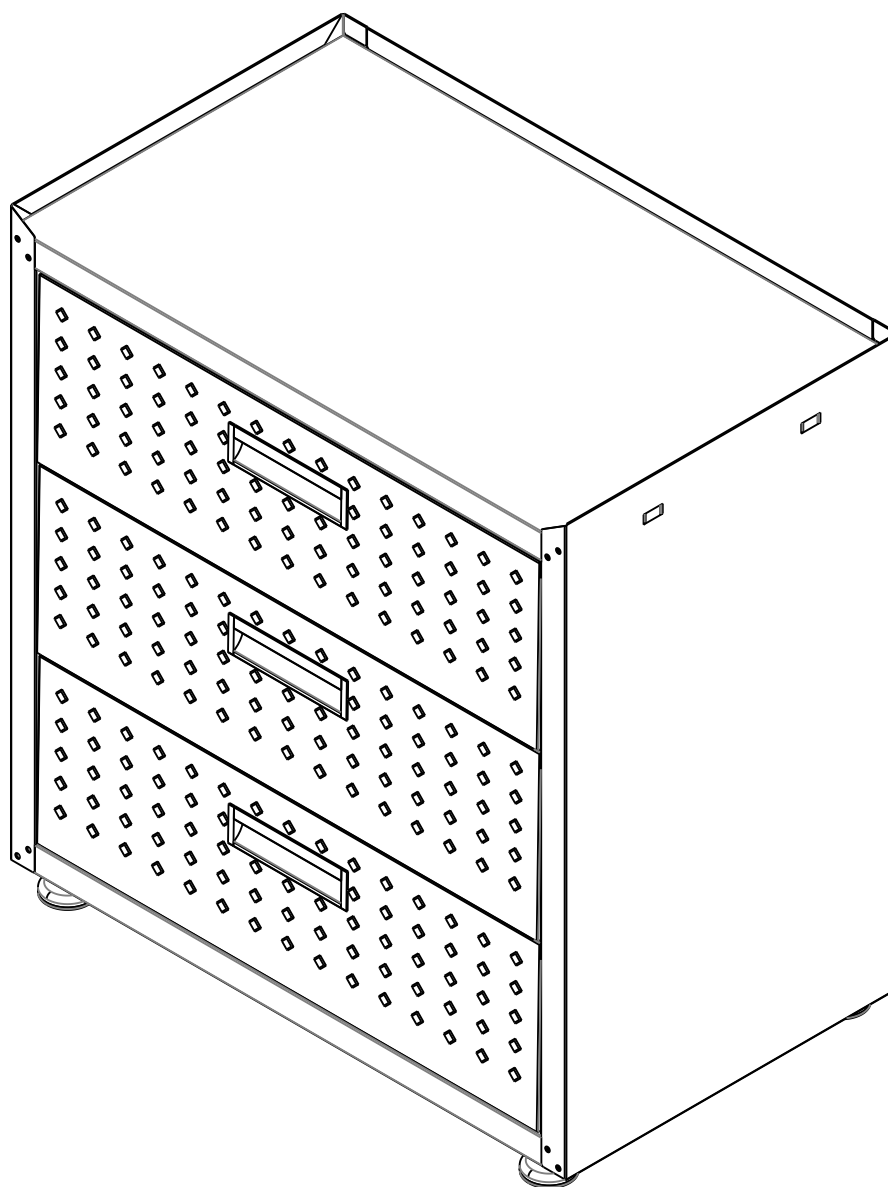



4GMCF



Stuck? Questions? We are here to help.
1-888-230-2225
help@manhattancomfort.com





View our assembly video online
www.manhattancomfort.com

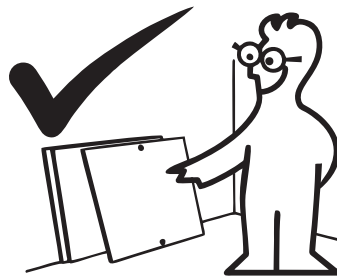
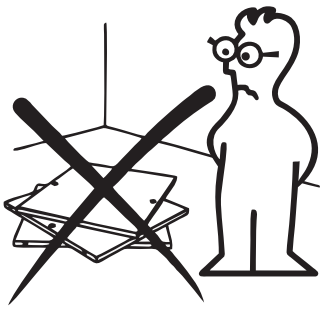


In order to ease the assembly,
you should separate and identify the parts first


Necessary hardware for the assembly

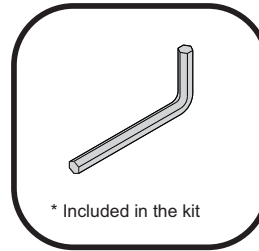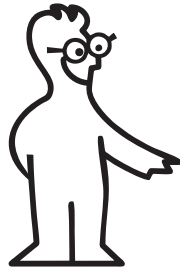

* Included in the kit

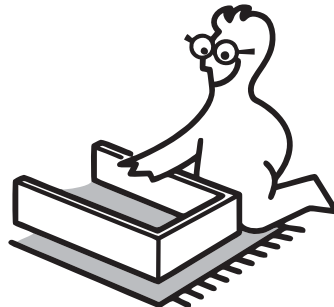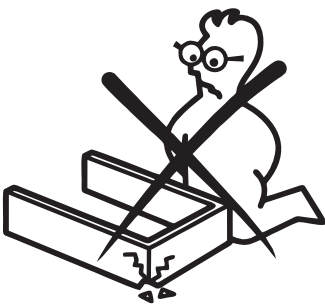

Do not place the parts directly onto the floor.
Use a cardboard sheet or a mat to place the
parts, during the separation and assembly.

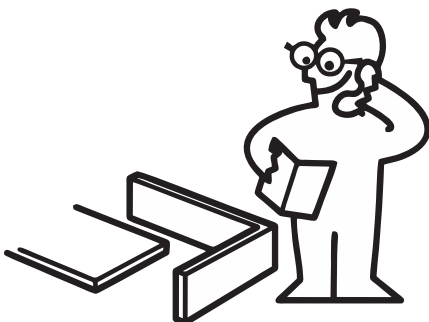

Stuck? Questions? We are here to help.
1-888-230-2225
help@manhattancomfort.com







View our assembly video online
www.manhattancomfort.com

IMPORTANT


In order to avoid severe or even fatal injuries, follow the instructions carefully.

ASSEMBLY HANDBOOK – FORTRESS 31.5" MOBILE GARAGE CHEST WITH DRAWERS

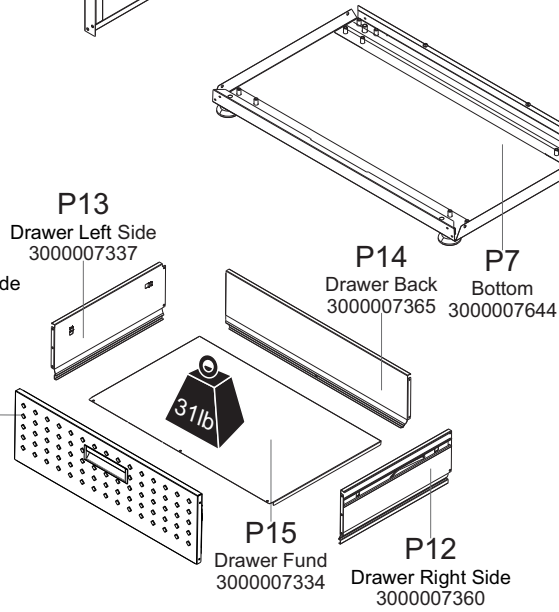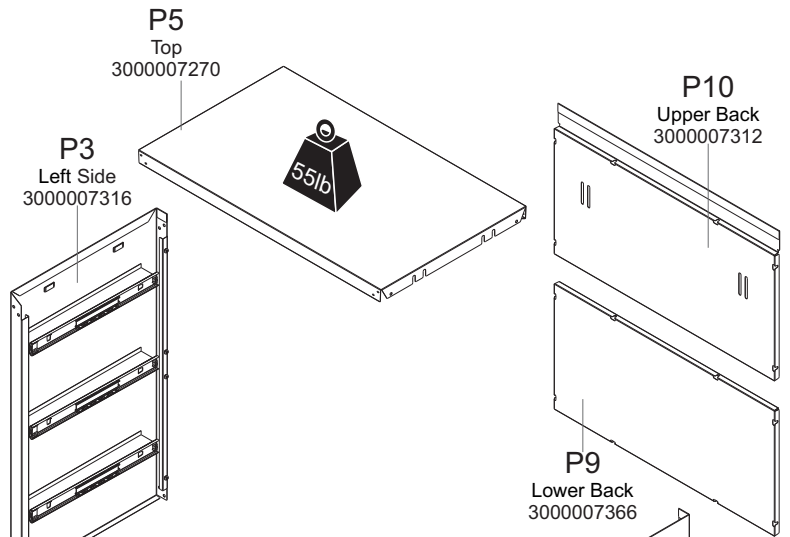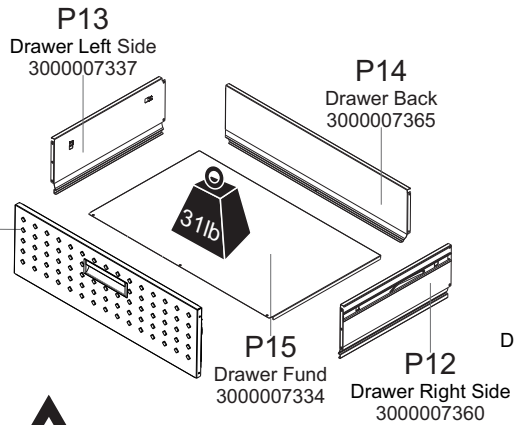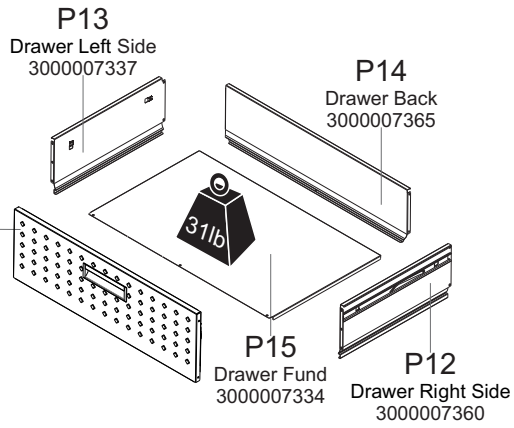


Hardware list

F1
1000009500



Qty. 52

F13
1000009033

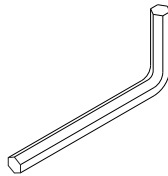


Qty. 1

F17
1000008285




F9
1000008368

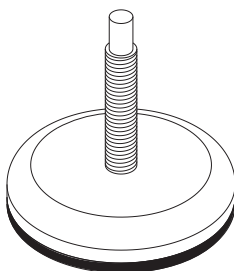

Qty. 4

* Only in cabinets without caster


F3
1000008391



Qty. 16


* Only in cabinets with caster

F10
1000008352

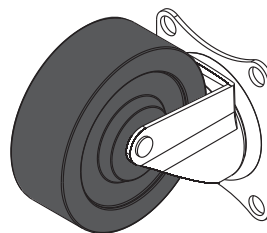




Qty. 2

F11
1000008354



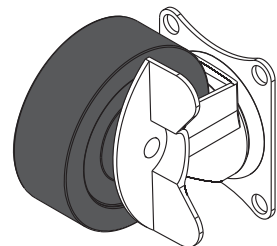


Qty. 2

- STEP 1**
- 1 - Fit part **P7** inside part **P3**
 - 2 - Fit both parts in the frontal side, with **F1**

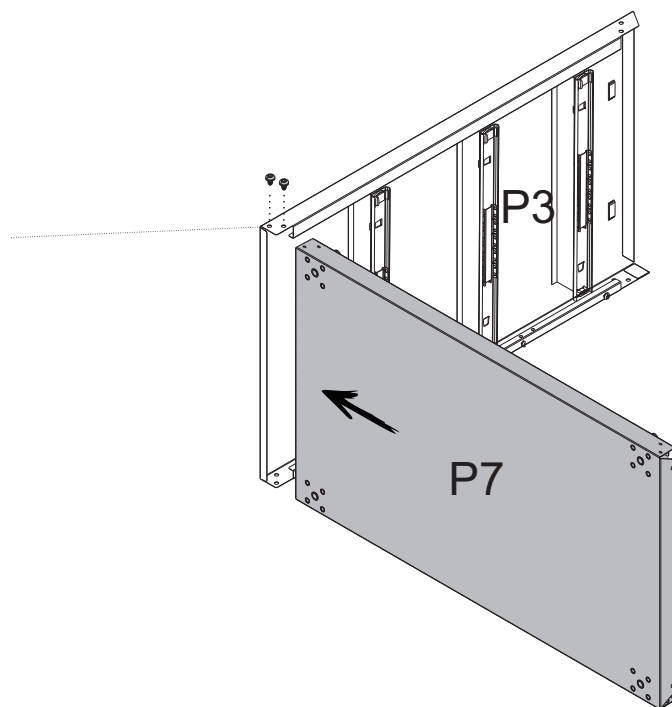
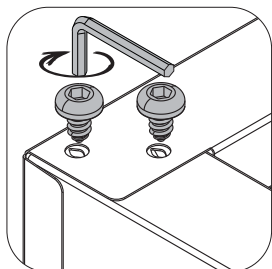
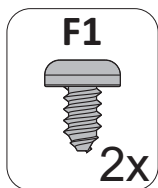


-
- STEP 2**
- 1 - Fit part **P2** inside part **P7**
 - 2 - Fit both parts in the frontal side, with **F1**

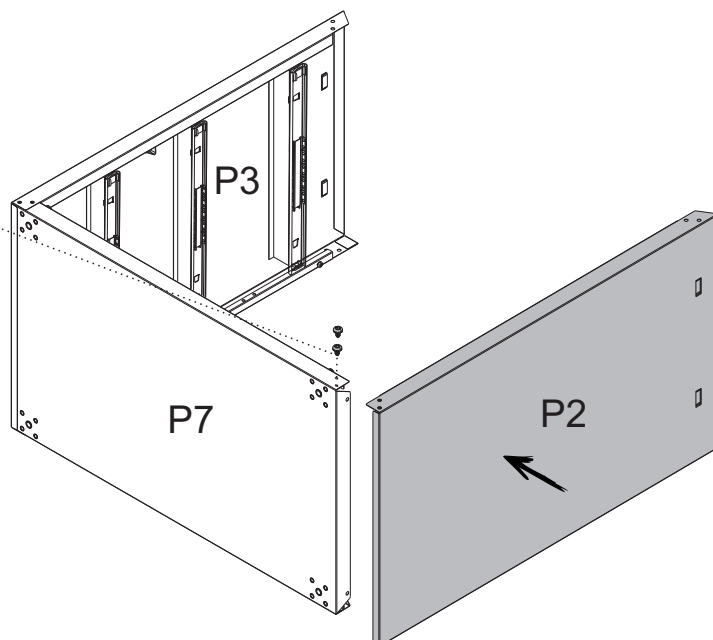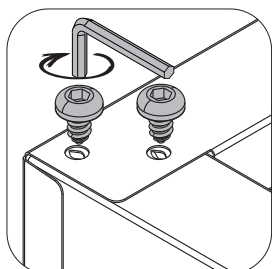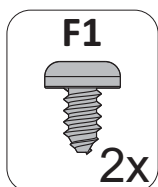



STEP 3

- 1 - Fit part **P5** between part **P2** and **P3**
- 2 - Check that all 4 tabs have been fitted
- 3 - Fit part **P5** to parts **P2** and **P3**, at the frontal side, with **F1**

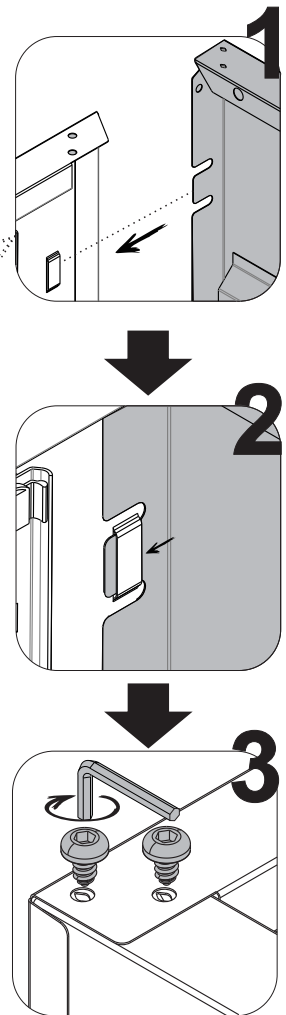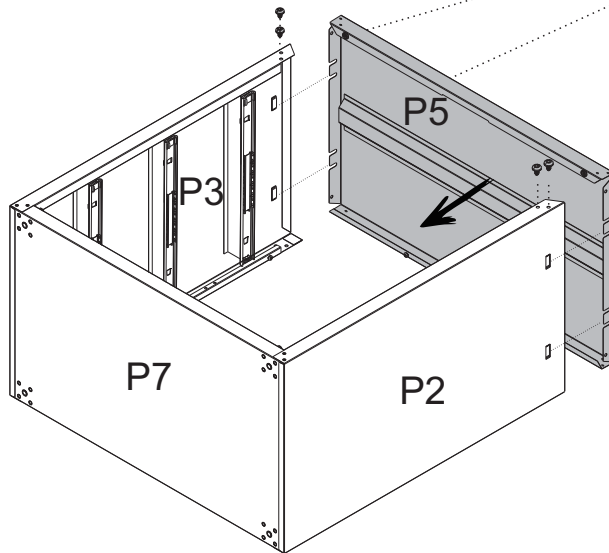
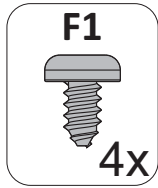


STEP 4

- 1 - Turn the cabinet with the back side upwards

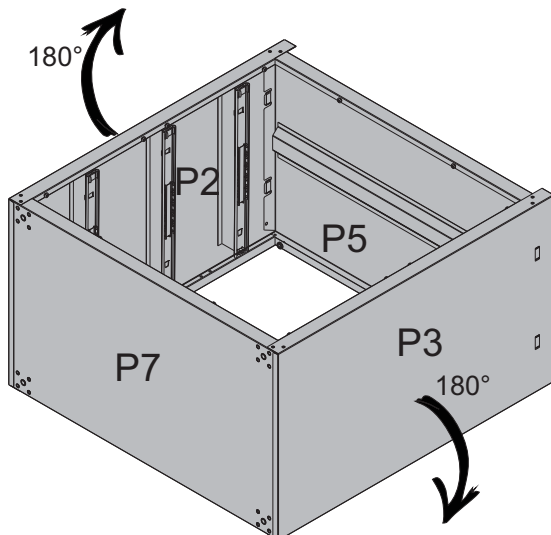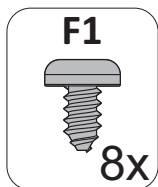


- 2 - Fit parts **P2** and **P3** to parts **P5** and **P7** with **F1**

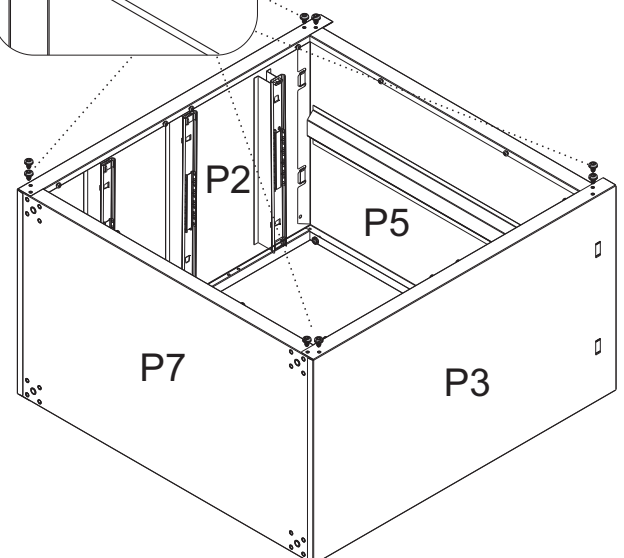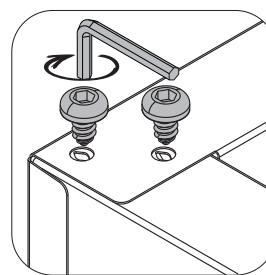


STEP 5

- 1 - Fit part **P10** into parts **P2**, **P3** and **P5**.
Check that all fits are supported over the bolts
- 3 - After fitting the parts, screw the bolts until locked

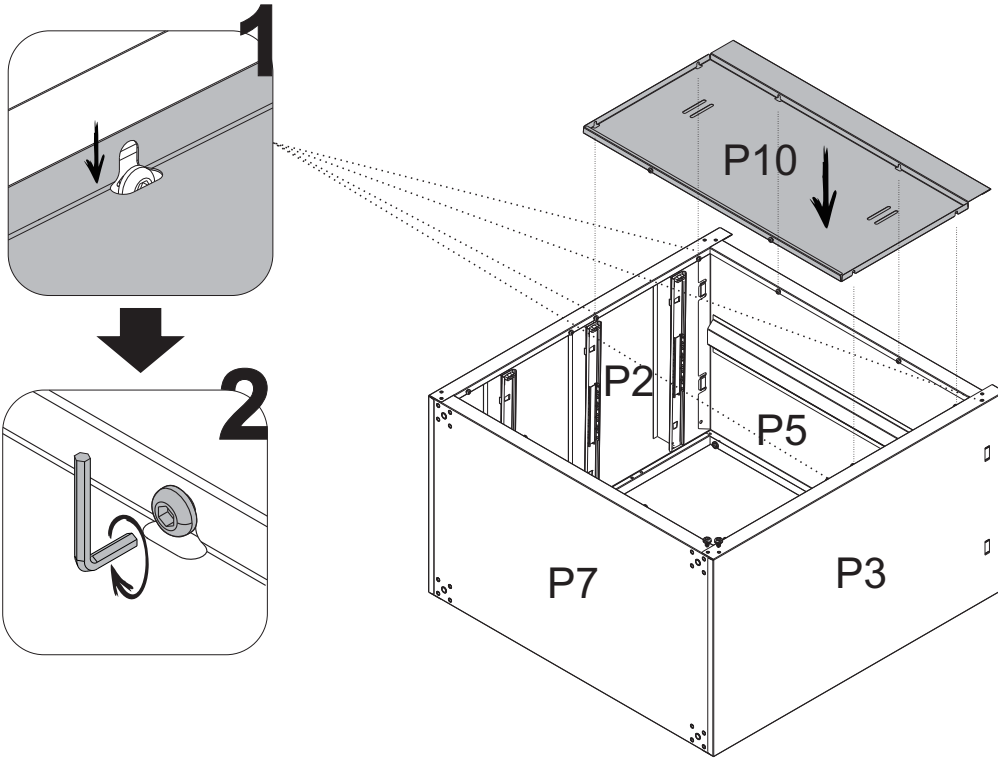




“Position part P10 on the P5 side for mounting the cabinet.”

- ## STEP 6
- 1 - Fit part **P9** into parts **P2**, **P3** and **P7**.
Check that all fits are supported over the bolts
 - 2 - After fitting the parts, screw the bolts until locked

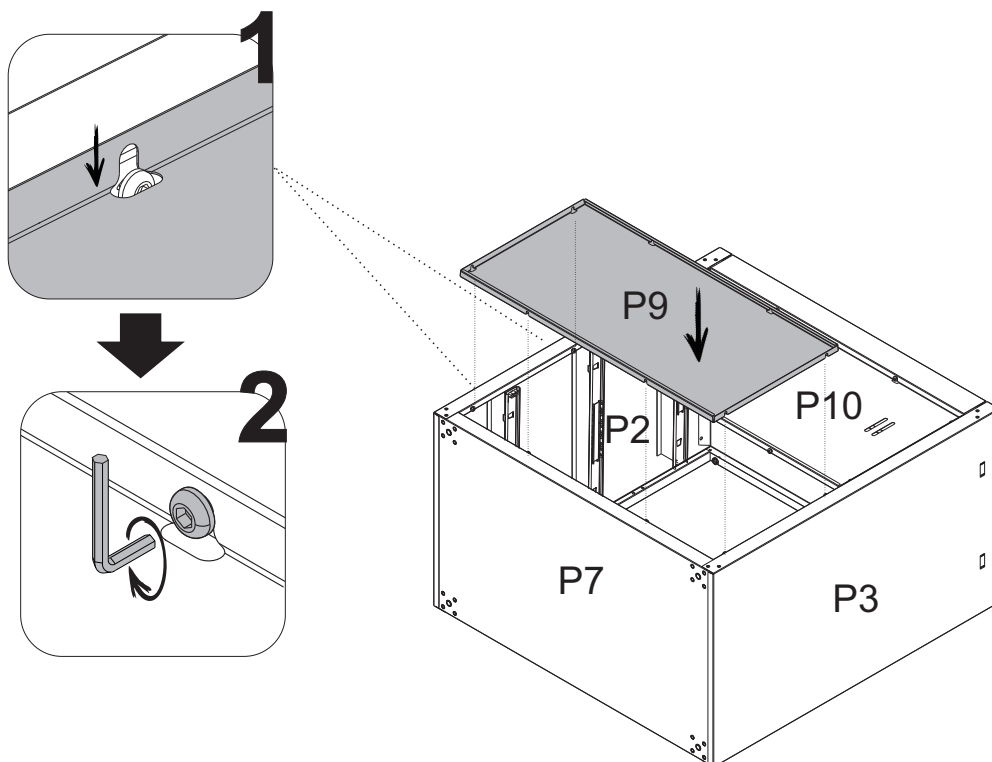






STEP 7

- 1 - To assembly the cabinet with shoe fit the accessory **F9** in part **P7** as illustrated here below and turn to screw. To level the height or the cabinet, turn the shoe either clockwise or counterclockwise to align it.

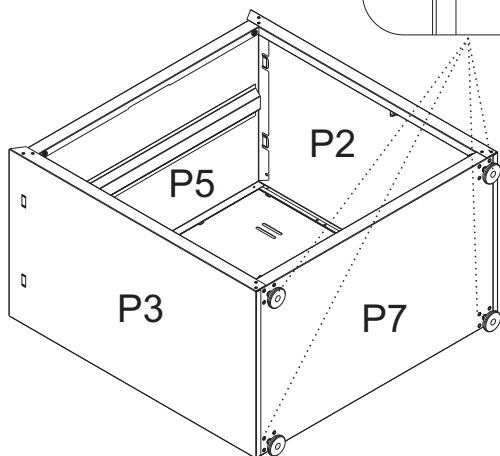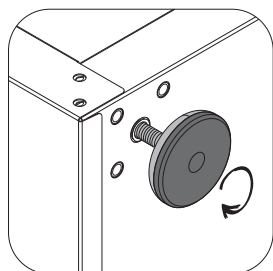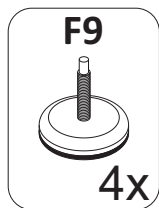

* Only in cabinets without caster




- 2 - To assembly the cabinet with caster, align the **F10** and **F11** to the holes in part **P7** and fix them with **F3**
- 3 - **WARNING:** Casters with lock (**F11**) must be fitted in the frontal side of the cabinet

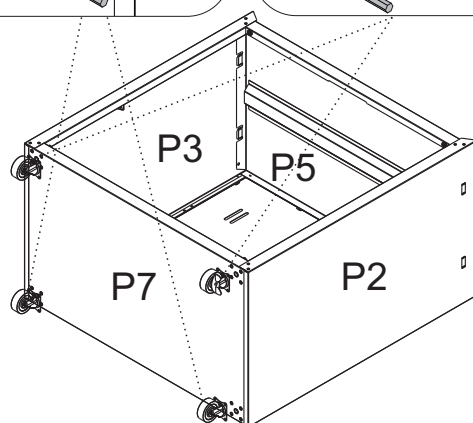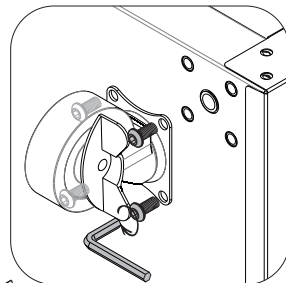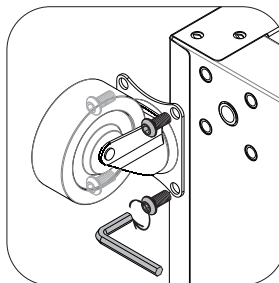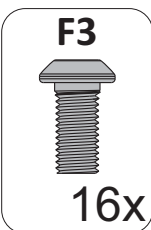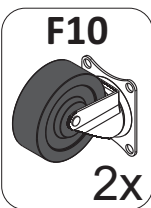




* Only in cabinets with caster

STEP 8

- 1 - Fit part **P15** to part **P28**
- 2 - Fit them with **F1**


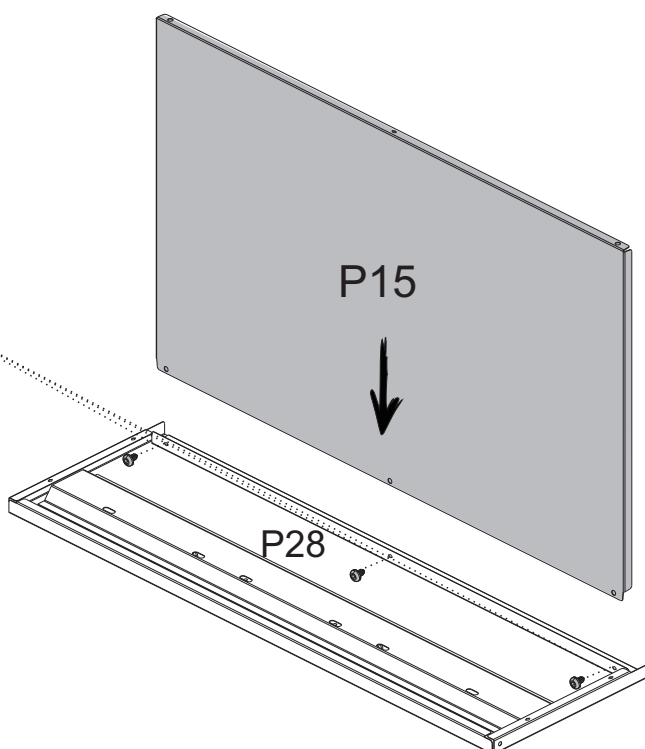
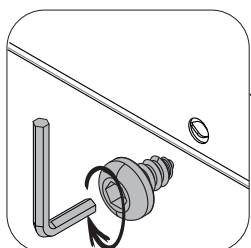
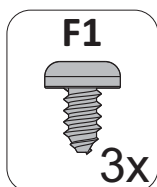


- STEP 13**
- 1 - Align parts **P12** and **P13** to part **P15**, until it leans against part **P28**
 - 2 - Fit them with **F1**

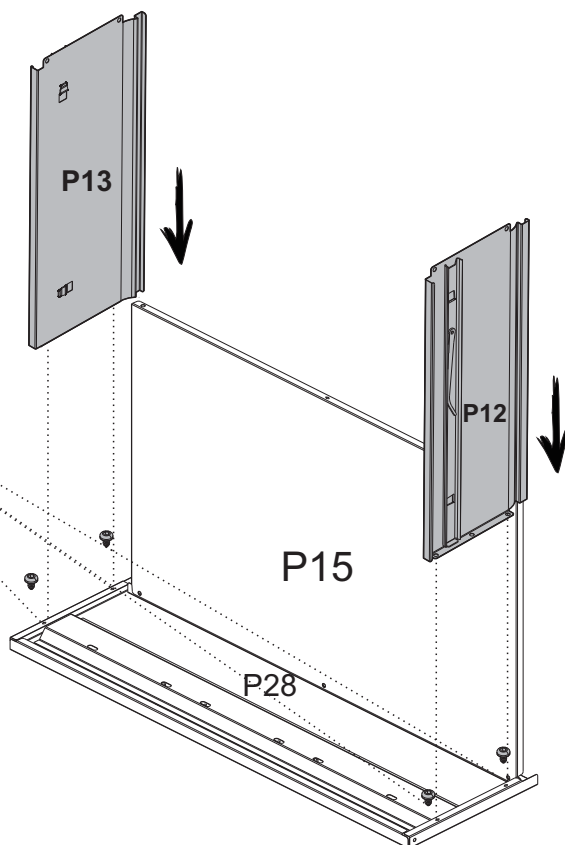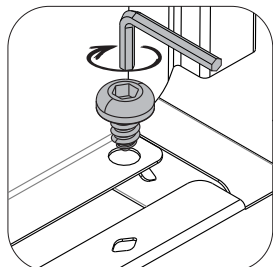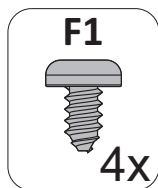


STEP 14

- 1 - Insert part **P14** over part **P15** and between parts **P12** and **P13**
- 2 - Then, fix part **P14** to parts **P12**, **P13** and **P15**, with **F1**

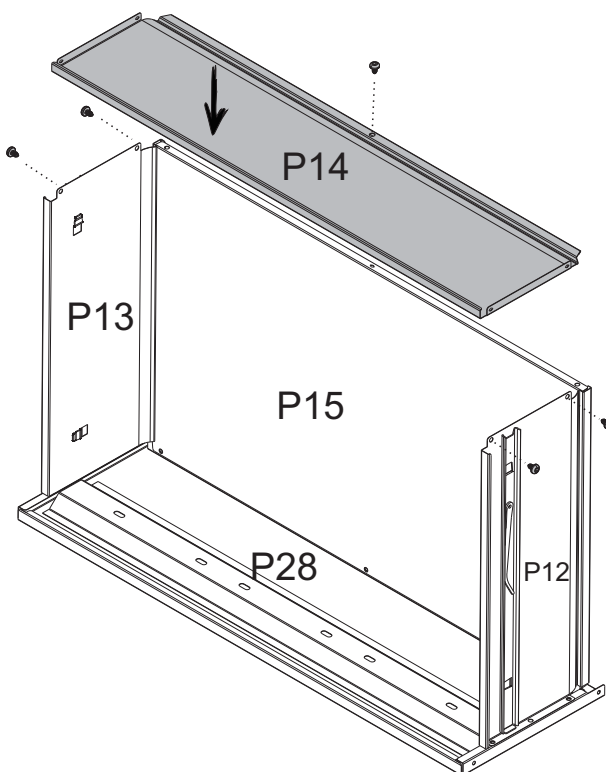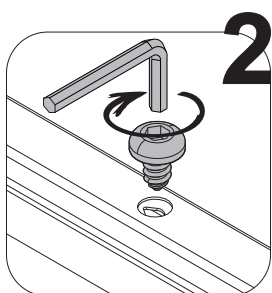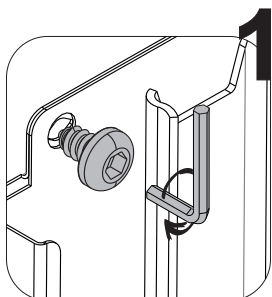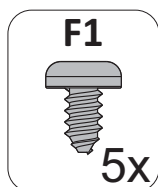

STEP 14

- 1 - Fit the drawers – already assembled – between parts **P2** and **P3**, through the slidings
- 2 - Check that slidings of both sides are properly fitted. Move the drawer, opening and closing it, testing

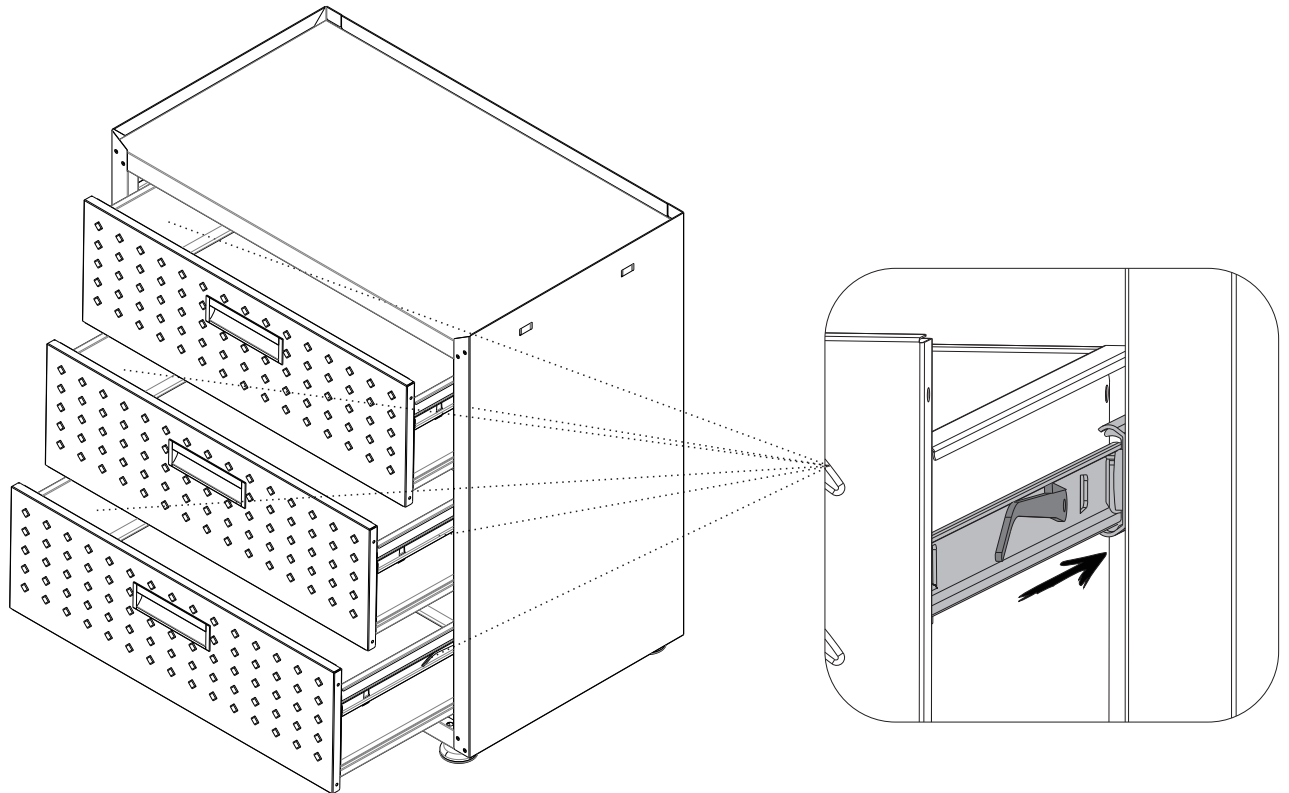

STEP 15

- 1 -Insert product log

