



# L-BAR™ Support Bracket

## INSTALLATION INSTRUCTIONS

PLEASE REVIEW THIS ENTIRE MANUAL PRIOR TO INSTALLATION

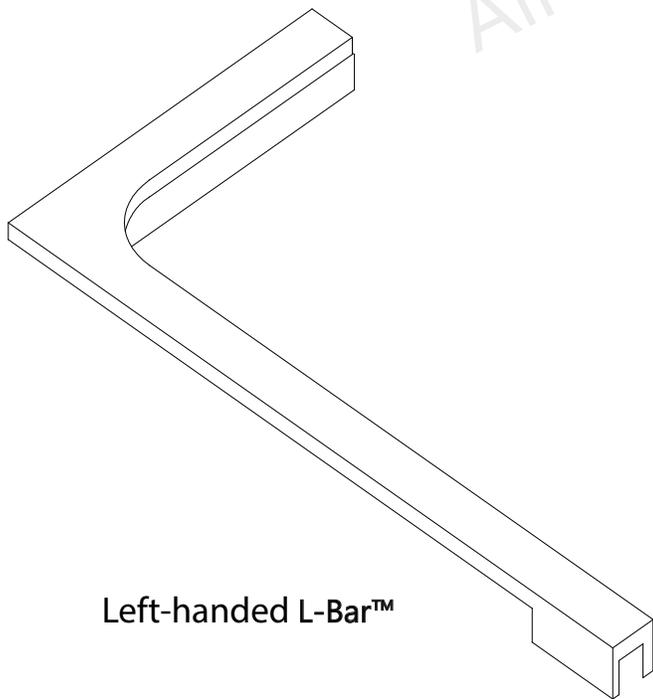

Left-handed L-Bar™

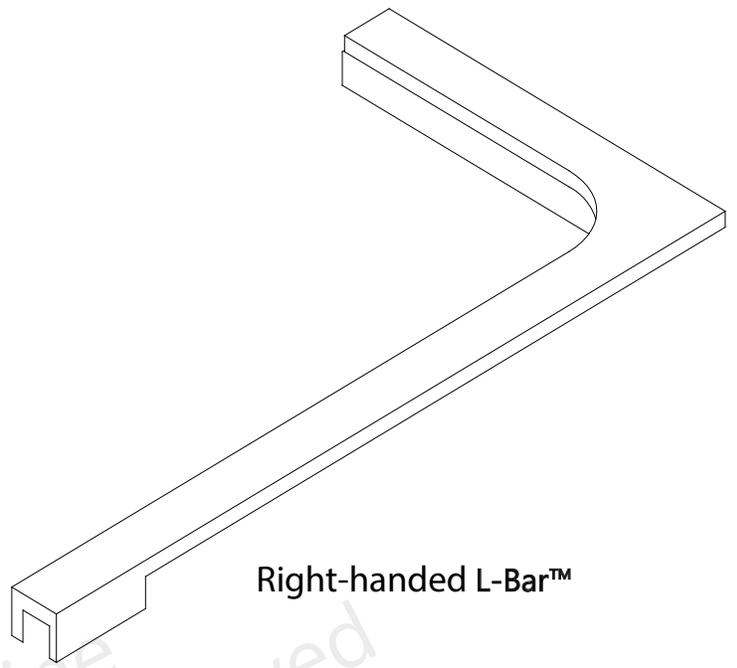

Right-handed L-Bar™

### IMPORTANT!

DreamLine® reserves the right to alter, modify or redesign products at any time without prior notice for the purpose of product improvement and customer experience. Please refer to the model's web page on [DreamLine.com](http://DreamLine.com) for the latest technical drawings, installation manuals, warranty information or additional product details.

**Do Not Return Product to the Store. Contact DreamLine® with any questions**



### Questions?

Please Call DreamLine Customer Support: **1-855-831-2126**  
Hours of Operation M-F 8AM - 7PM EST and Saturday 9AM - 5PM EST

[Support@DreamLine.com](mailto:Support@DreamLine.com)



## Preparation

1. Prior to installation, examine all boxes and packages for shipping damage and compare the piece count with the packing slip. After opening all boxes and packages read this introduction carefully. Check that all of the necessary parts are included in the package by checking off the components on the "Parts Diagram". If the unit has been damaged, has a finishing defect, or has missing parts, please contact our customer support department within **3 business days** of the delivery date.

**Please note that DreamLine® will not replace any damaged products or missing parts free of charge after 3 business days or if the product has been installed.** Contact DreamLine® if you have any questions, and please provide an order number, job name or other proof of purchase to help identify the original order.

2. **Please note that you should consult your local building codes with questions on installation compliance standards. Building and plumbing codes may vary by location, and DreamLine® is not responsible for code compliance standards for your project and will not accept any returns.**

3. If this unit is going to be installed in a new construction, please install all of the required plumbing and drainage before installing the shower. Use a competent and licensed (if required by local code) plumber for all plumbing installation

4. Make sure that prior to beginning the installation, the surfaces are leveled and solid and will be able to support the total weight of the unit. Also make sure the walls are at right angles. Irregular installation surface level, radius corners or improper angle of side walls will result in serious problems for your installation. Note that some adjustments and drilling will be necessary during the installation process.

5. Protect all primary surfaces of the product during installation. Never set glass down directly onto a hard surface. Leave corner protectors in place until necessary to remove them. Always use a piece of wood or cardboard to protect the bottom edge and corners of the glass prior to and during installation.

6. This unit must be installed against finished walls.


7. Visit [DreamLine.com](http://DreamLine.com) for more information regarding the use of this product.

8. **Professional installation recommended.**




This product should be installed by someone familiar with the construction requirements for this type of project and the care necessary for the safe installation and operation of the product.


## Tools




Level



Tape Measure



Pencil

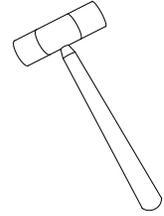


Hammer



Power Drill



Drill bit  
Ø=5/16"  
(8mm)

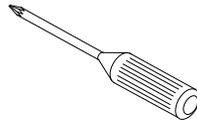


Phillips Screwdriver

**NOTE:** Unpack the product carefully and inspect it. Lay it out and identify all parts using the detailed diagram and packing list in this manual as a reference. Before discarding the carton, check for small hardware bags that may have fallen to the bottom of the box. If any parts are damaged or missing, please contact DreamLine® for replacement. The shipping boxes may contain extra parts not used in your model configuration.

**NOTE:** Retain these installation instructions for future reference.

## Parts diagram

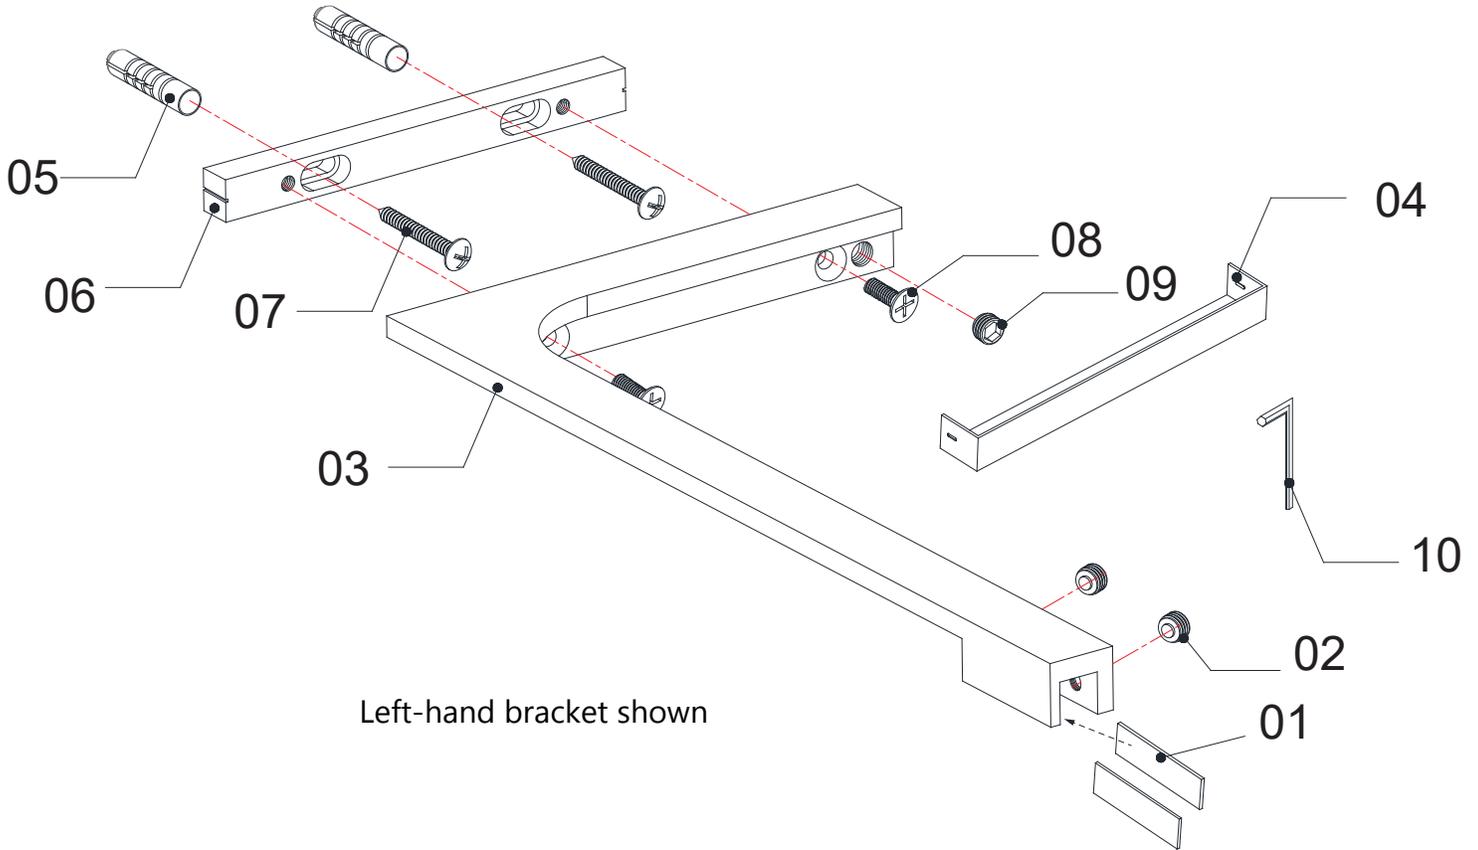

## L-Bar™ Assembly components

01	PVC Vinyl Gasket (1mm and 0.5mm)	2 pcs	06	Wall plate	1 pc
02	Rubber tip set screw	2 pcs	07	ST4.2 x 40 Truss Head Screw	2 pcs
03	L-Bar™ (left hand shown)	1 pc	08	Flat head Screw M5 x 14	2 pcs
04	Decorative cover	1 pc	09	Wall Plate adjustment set screw	2 pcs
05	Ø5/16" Wall anchor	2 pcs	10	3mm Allen Wrench	1 pc

# Installation steps

(Left-hand L-Bar™ installation shown as an example)

1. Position the L-Bar™ assembly (#03) onto the Panel Glass or Hinge Panel Glass as shown (Fig 1.1) Level and mark the L-Bar™ position on the wall. Remove the Wall Plate (#06) from the L-Bar™ (Fig 1.2). Position the Wall Plate (#06) onto the marks on the wall. Mark the holes for drilling through the wider, untapped holes (Fig 1.3). Drill two Ø5/16" (8mm) holes and insert the Ø5/16" Wall anchors (#05). (Fig 1.5)

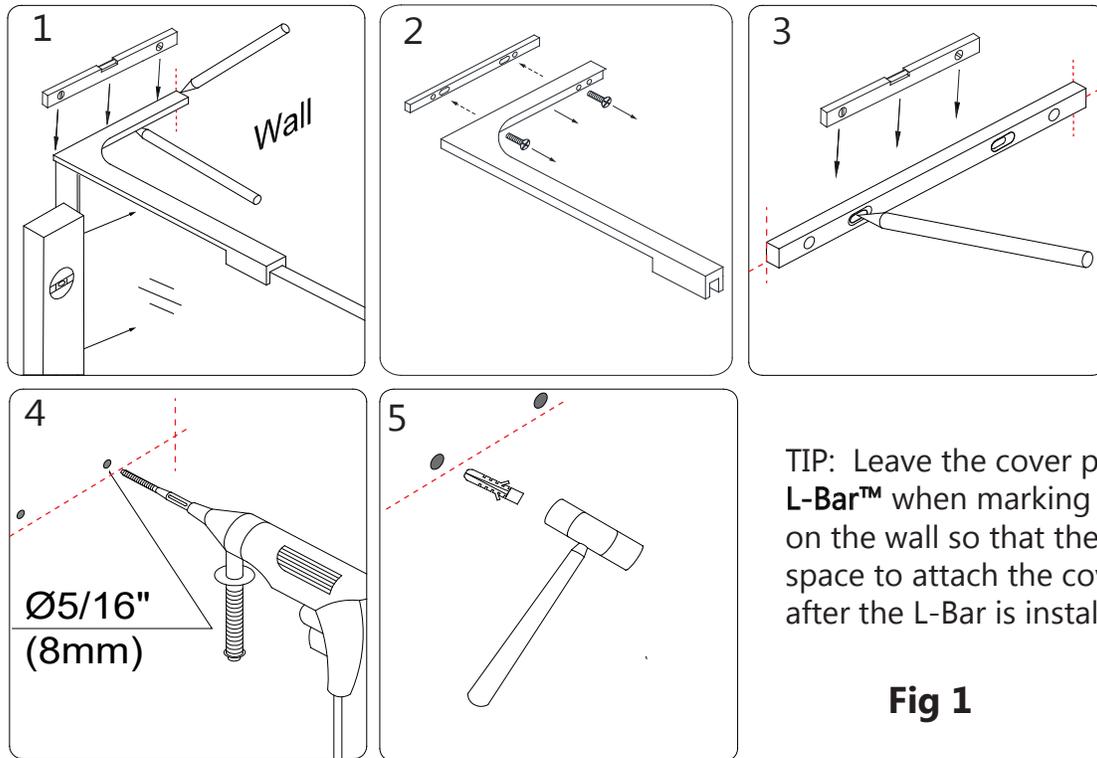


Fig 1

2. Attach the Wall Plate (#06) to the wall using the ST4.2 x 40 Truss Head Screws (#07). Re-attach the L-Bar™ (#03) to the Wall Plate (#06) using the Flat head Screw M5x14 (#08) and adjust the angle if necessary by using the Wall Plate Adjustment set screws (#09) (Fig 2.7 & 2.8). (Fig 2)

\*Loosen the Flat head screws prior to adjustment and then retighten after adjustment

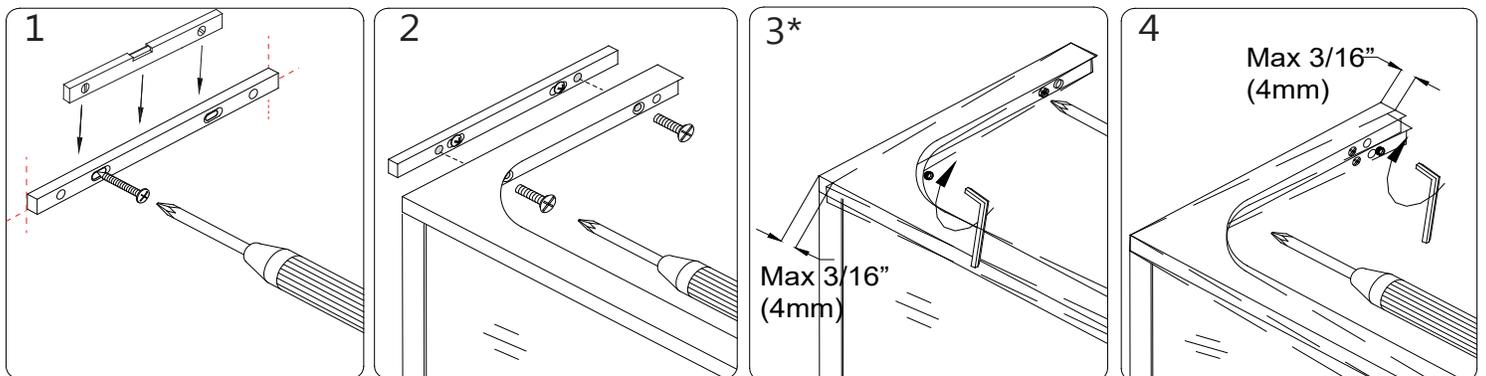
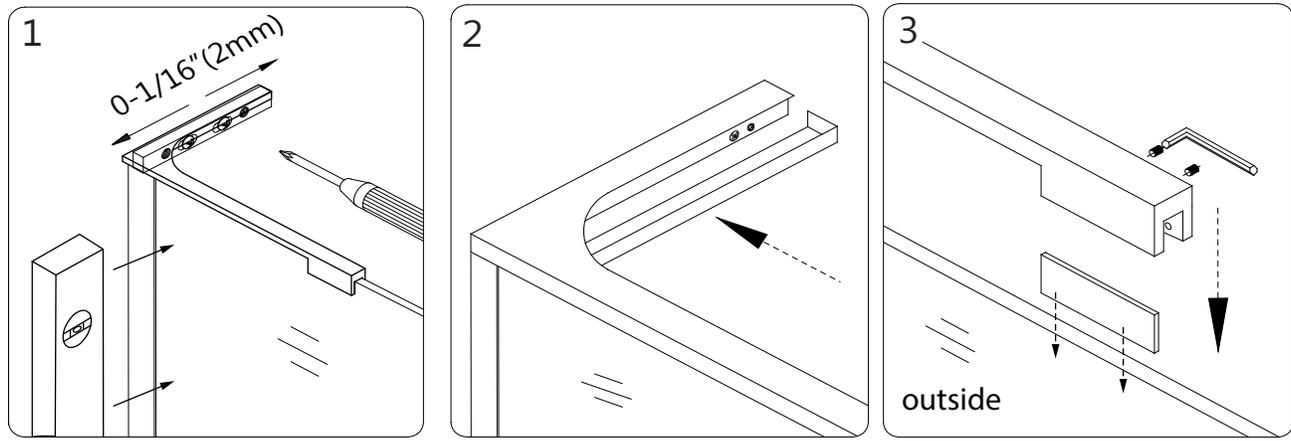



Fig 2

**3.** Adjust the **Panel Glass** to plumb and tighten the screws. Attach the **Decorative Cover (#04)**. Secure the **L-Bar™ (#03)** to the top of the **Panel Glass** using the PVC vinyl (either the 1mm or 0.5mm ) on the outside surface of the glass and the rubber-tipped set screws on the inside surface. **Do not overtighten! (Fig 3)**




**Fig 3**

**NOTE:** The left-hand L-Bar™ installation is shown. Follow the same steps for installing the right-hand L-bracket.

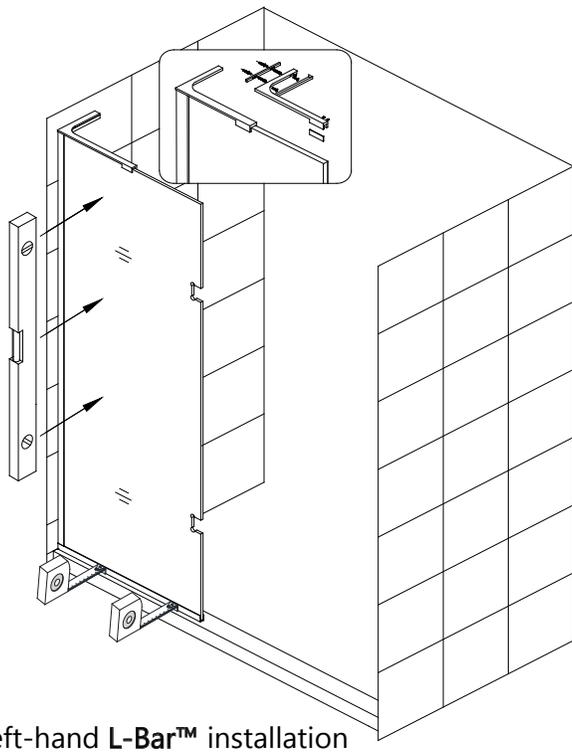

Left-hand L-Bar™ installation

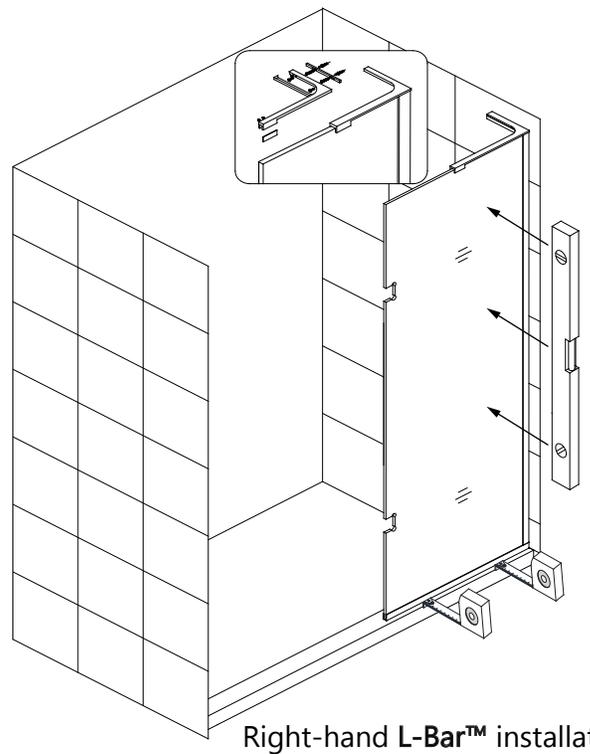


Right-hand L-Bar™ installation

**Fig 4**


UNIDOOR-X hinge panel installation shown as an example

**4.** Continue the installation of the shower door and other components using the installation manual that shipped with your product.


## Additional examples of models using the Left-hand or Right-hand L-Bar™

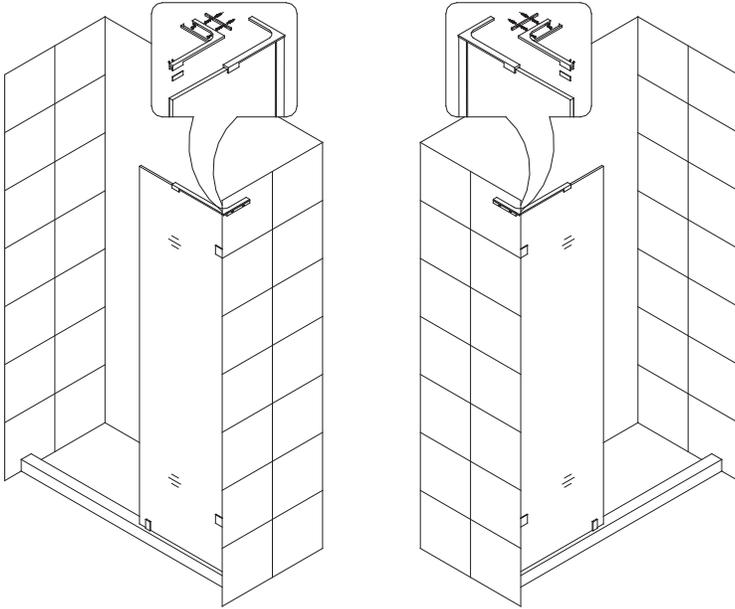

**UNIDOOR LUX STYLE D** inline panel glass

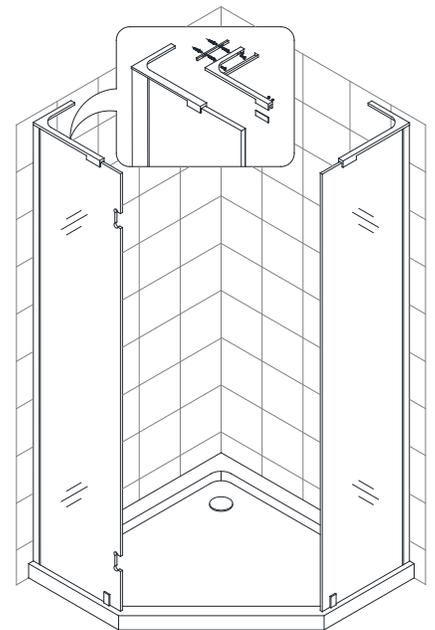

**PRISM PLUS** neo-angle  
Return panel glass  
and hinge panel glass

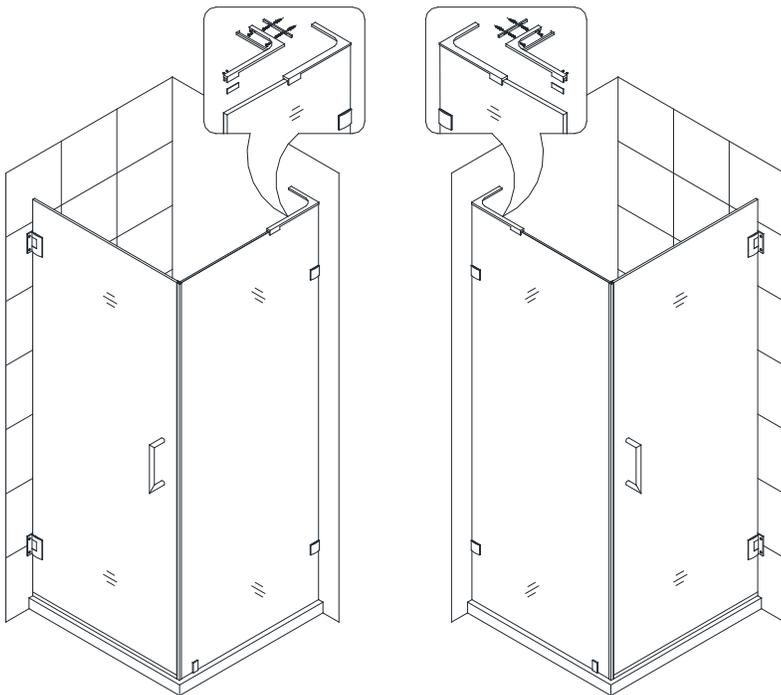

**UNIDOOR LUX STYLE E** Return panel glass

## Product Maintenance

**BASES and BACKWALLS:** To ensure long lasting life for your acrylic back walls: wipe them off after each use with a soft cloth. To clean the acrylic back walls use non-abrasive sprays or cream based cleaners. Avoid the use of aerosol spray cleaners. Never use abrasive cleansers, metal brushes or scrapers that could scratch or dull the surface.

**GLASS:** To ensure long lasting life for your glass shower products: wipe them off after each use with a soft cloth. Rinse and wipe off the glass using either a soft cloth or a squeegee to prevent soap buildup and water spots (Hard water can etch the surface of the glass over time if left to dry). To prevent scratching the surface: never use abrasive cleaners or cleaning products that contain scouring agents. Never use bristle brushes or abrasive sponges that may scratch the surface.

**HARDWARE:** To ensure a long lasting finish: wipe off the metal parts after each use with a soft cloth. Do not use abrasive cleaners or cleaning products containing ammonia, bleach or acid. If accidentally used, rinse the surface as soon as possible to prevent damage to the finish (peeling or corrosion). After cleaning the polished finishes, rinse thoroughly and wipe dry with a soft cloth. Clean stainless steel surfaces at least once a week. When applying stainless steel cleaner or polish to stainless steel hardware, work with (not across) the grain. Never use an abrasive sponge or cloth, steel wool or wired brush as these may permanently scratch the surfaces.

**NOTE: To maximize the life of your door, it is important to regularly inspect the glass and other hardware for misalignment, proper attachment, and/or damage. Contact DreamLine with any questions or concerns.**



---

TEL: 866-731-2244  
FAX: 866-857-3638  
DREAMLINE.COM



For more information on DreamLine® Shower Doors and Enclosures please visit **DreamLine.com**