



ASSEMBLY INSTRUCTION

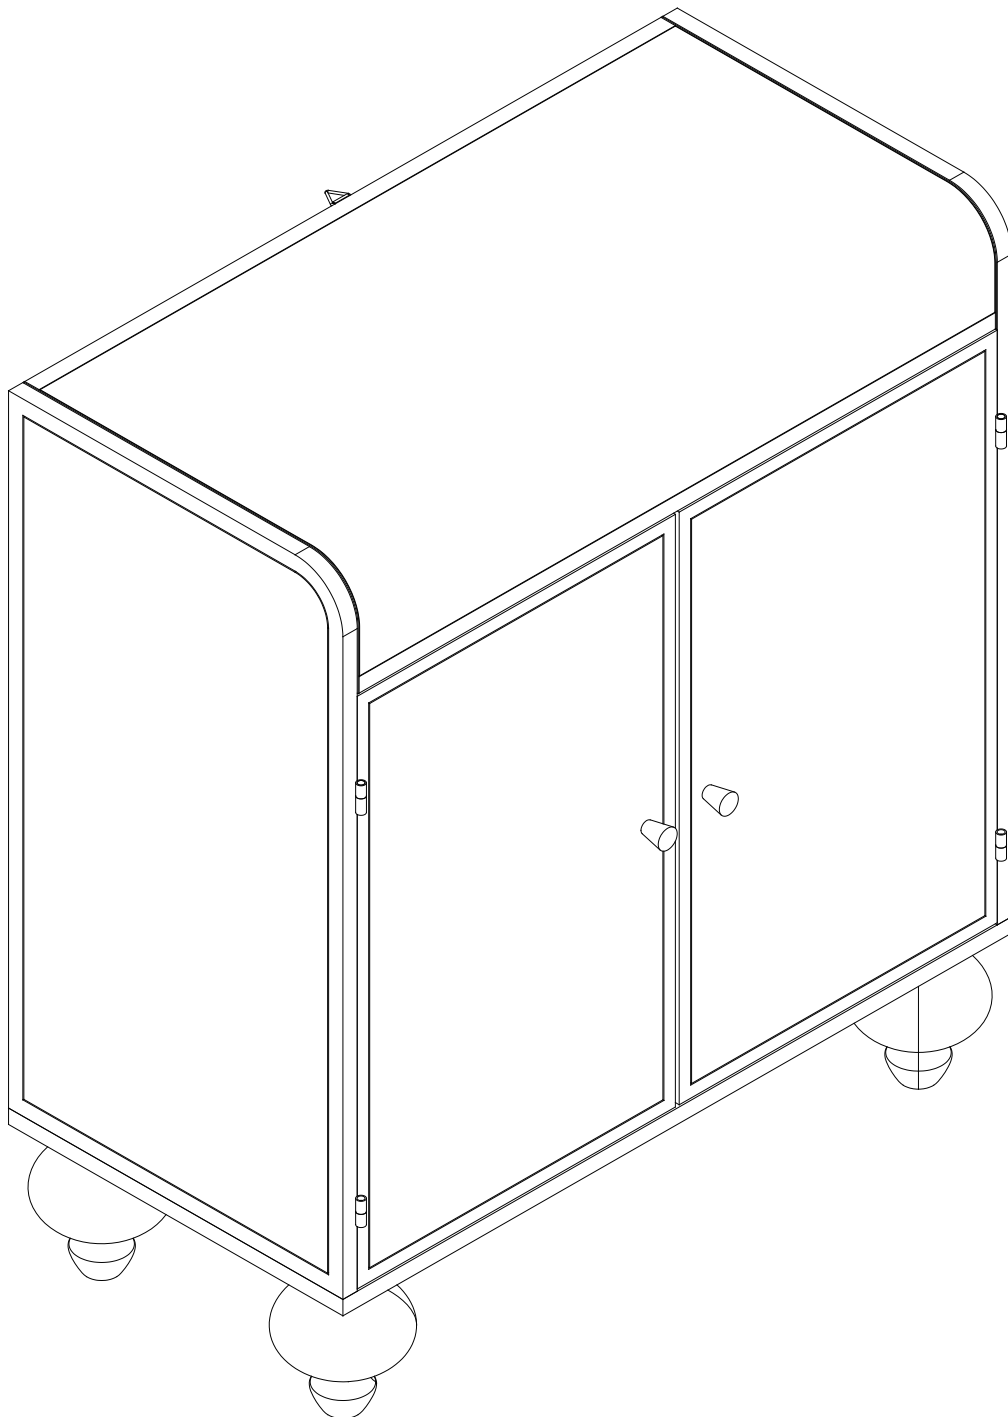


2 PERS



50 MIN









Pozi Screwdriver(Not Provided)










Hexagonal wrench(Provided)

Assembly Instruction


HARDWARE LIST

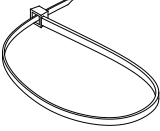A1  A2 	B  M6x25mm	C  M6x16mm	D  M4x10mm	E 
2 PCS	12 PCS	14 PCS	2 PCS	2 PCS
F  M4x30mm	G 	H 	I 	
2 PCS	2 PCS	1 PC	1 PC	


PART LIST

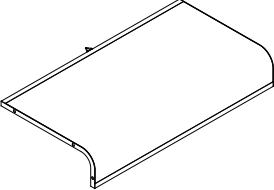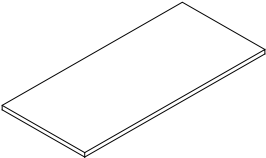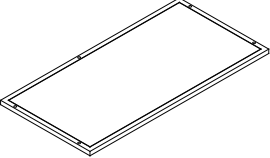J 	K 	L 	M 	N 
1 PC	1 PC	1 PC	1 PC	1 PC
O 	P 	Q 	R 	S 
1 PC	1 PC	4 PCS	1 PC	1 PC

- Do not use power tools to assemble your furniture.
Power tools may strip or damage the parts.


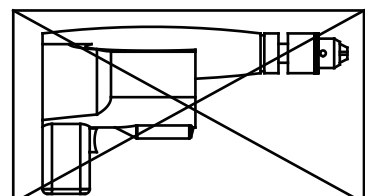


Explosive View

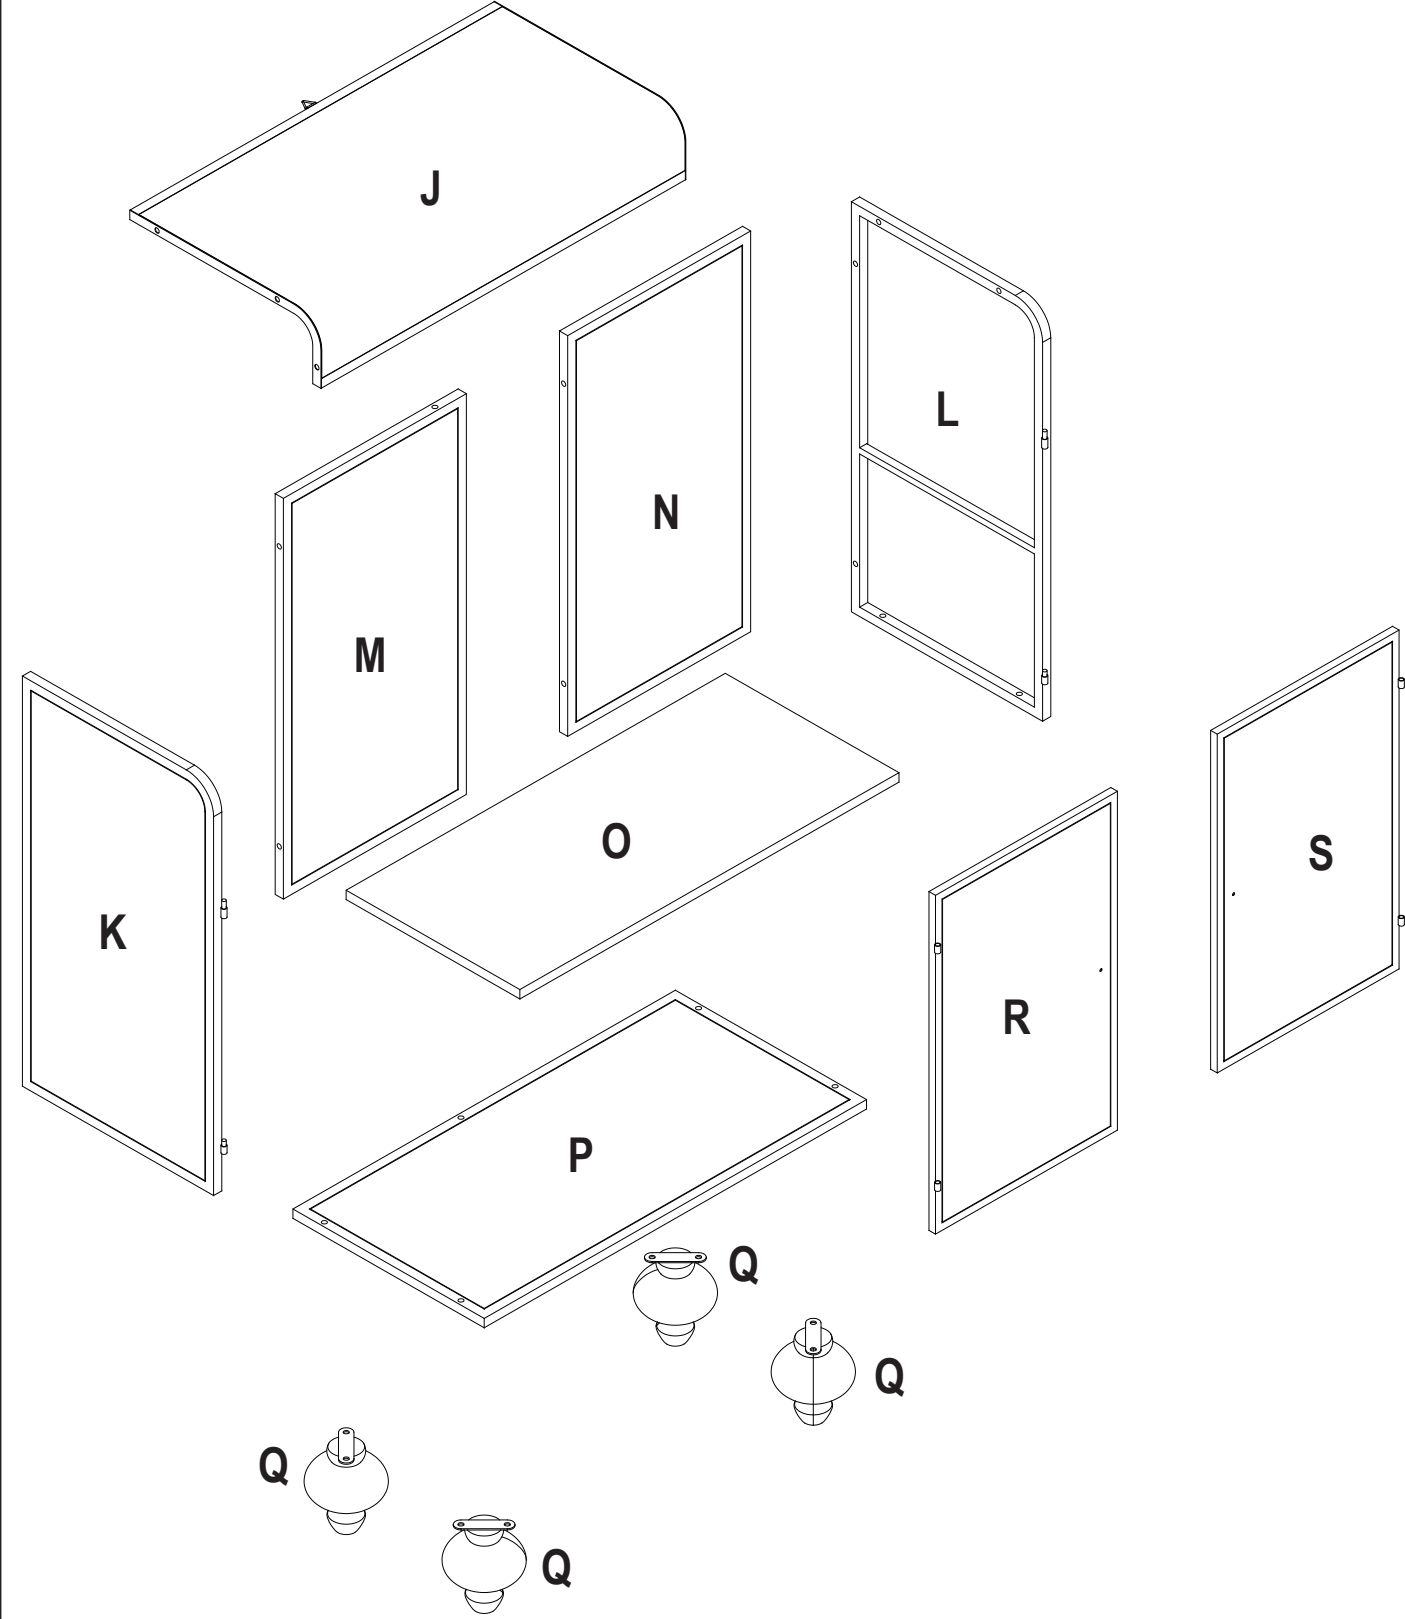

IMPORTANT NOTE: DO NOT tighten all screws and bolts until completely assembled



Step 1

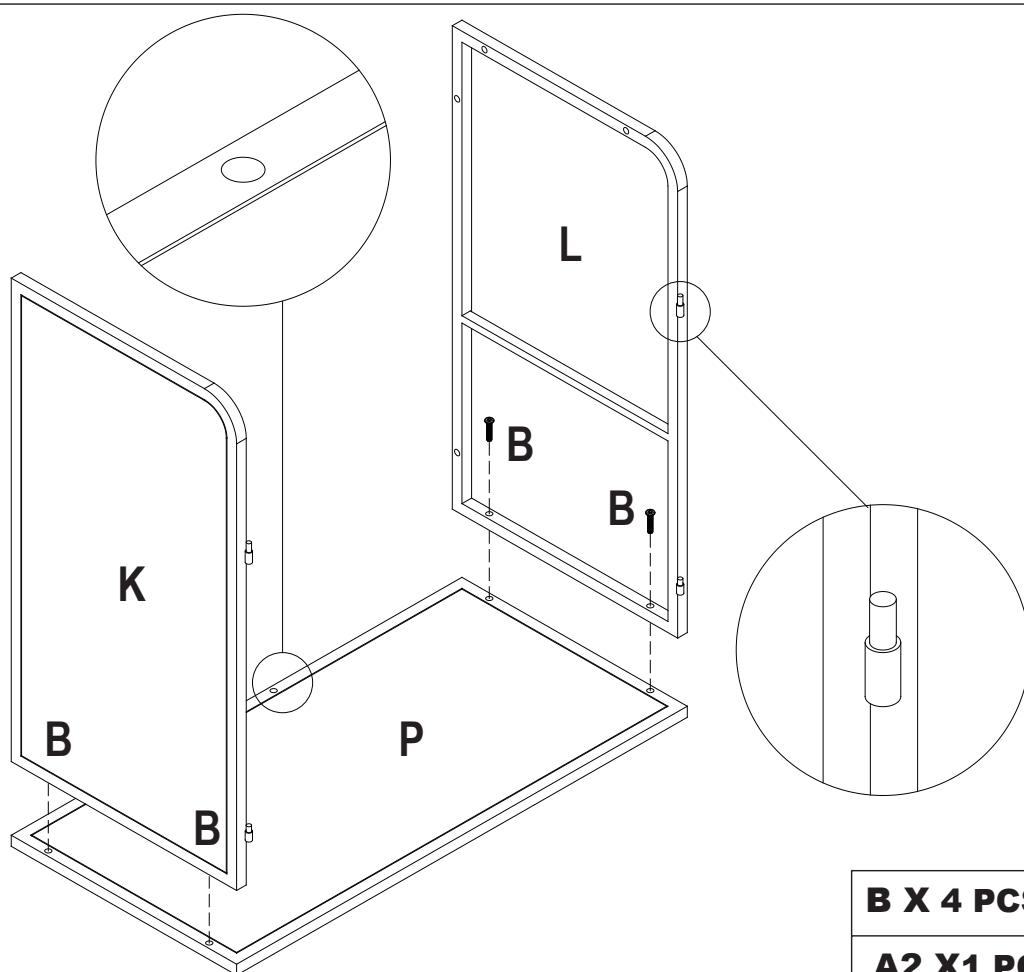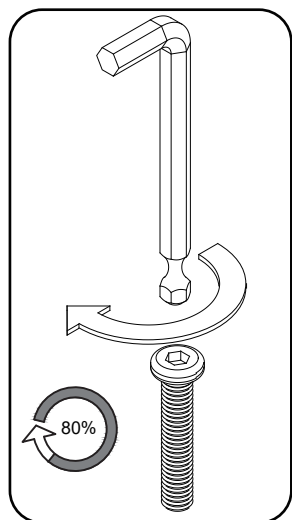

B X 4 PCS


A2 X1 PC

Step 2

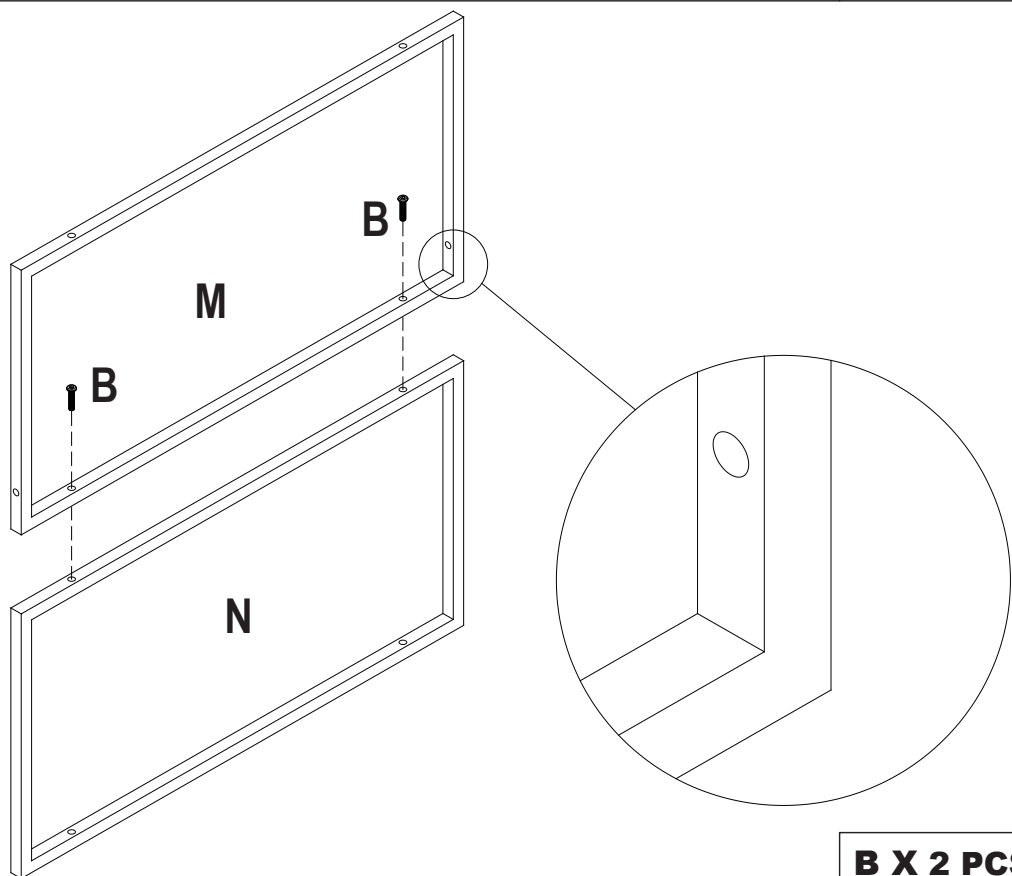
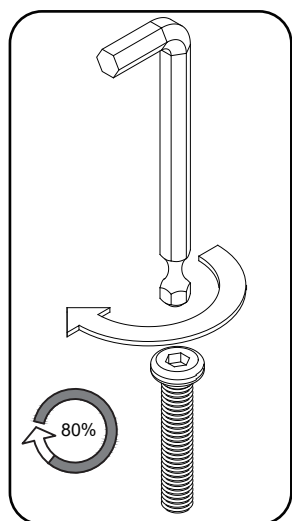


B X 2 PCS

Step 3

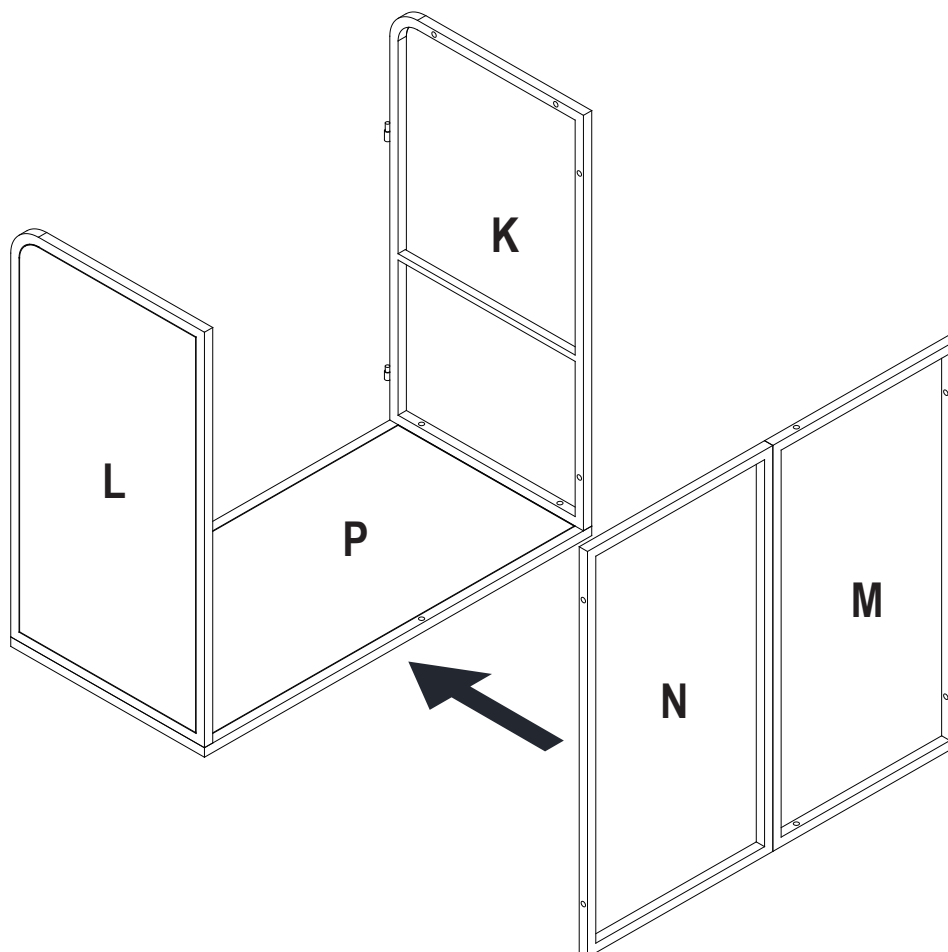


Step 4


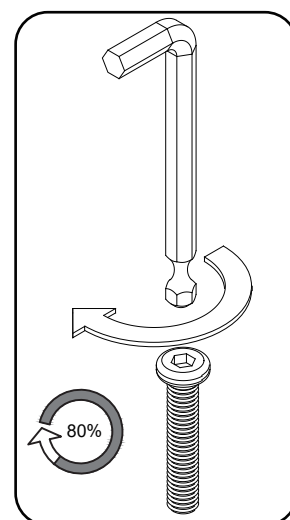
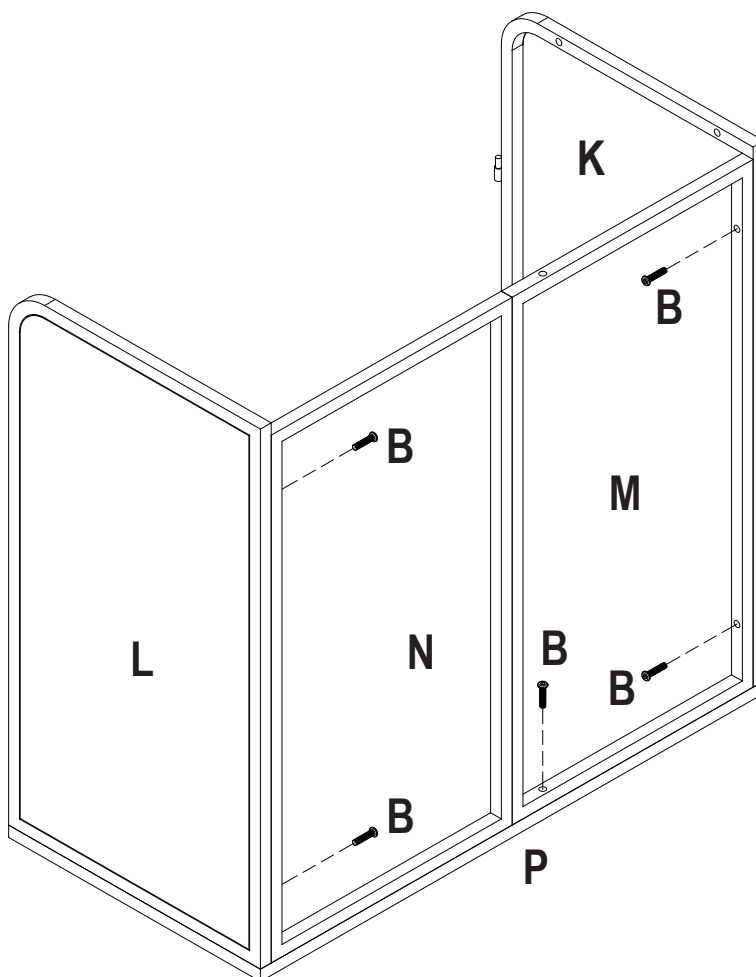


B X5 PCS

Step5


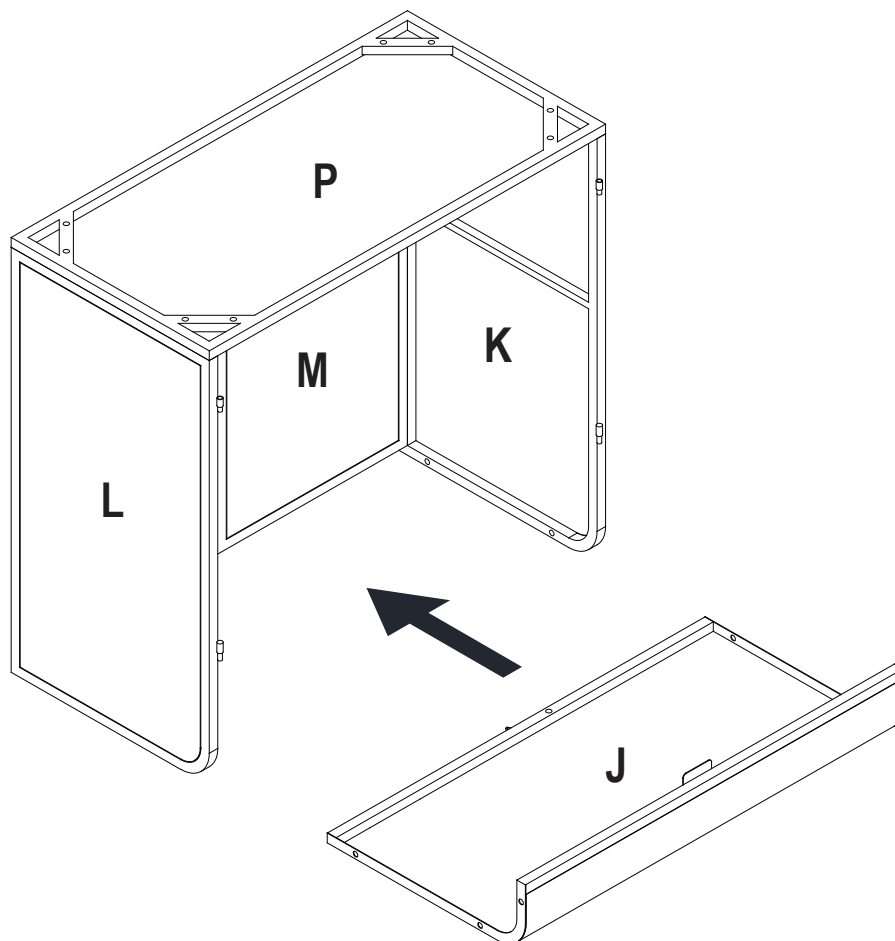


Step6

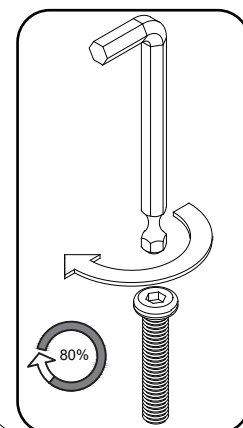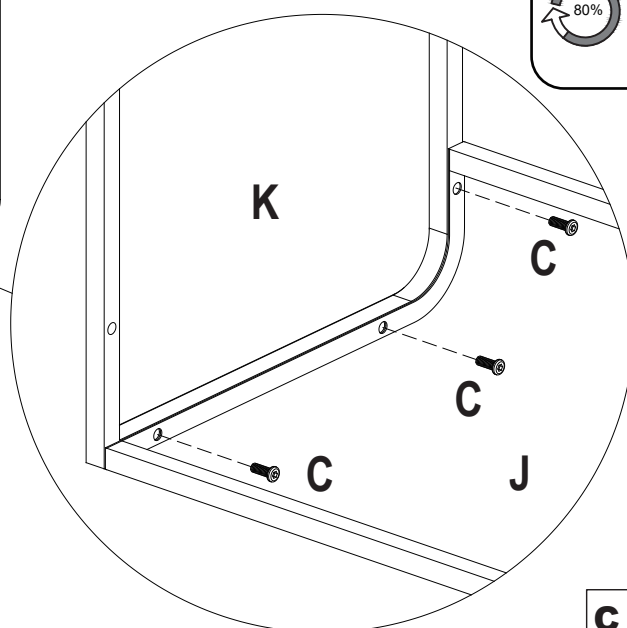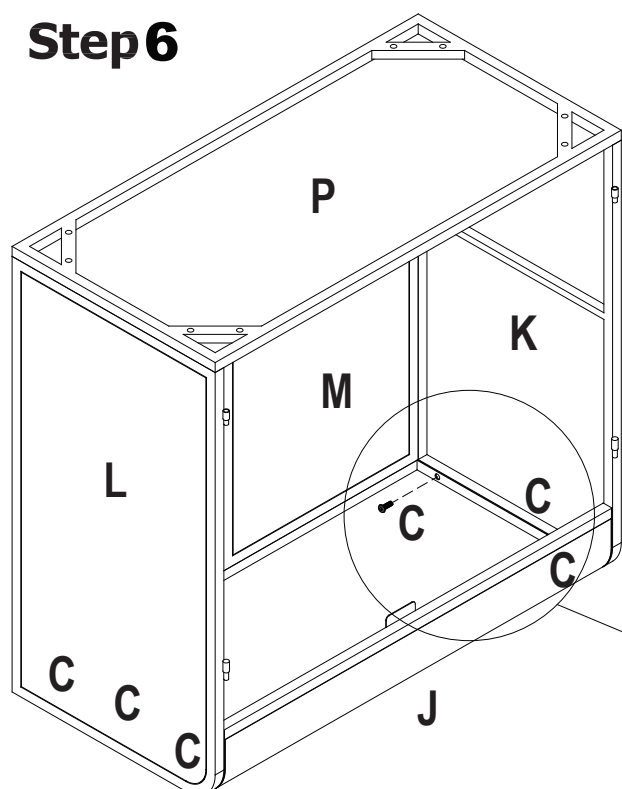



C X6 PCS

Step 7

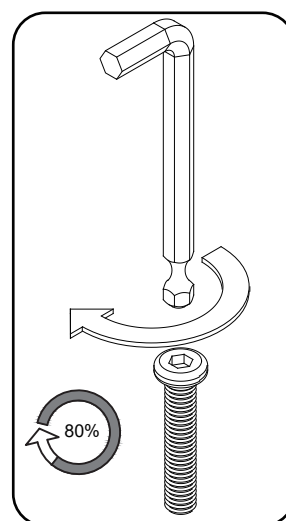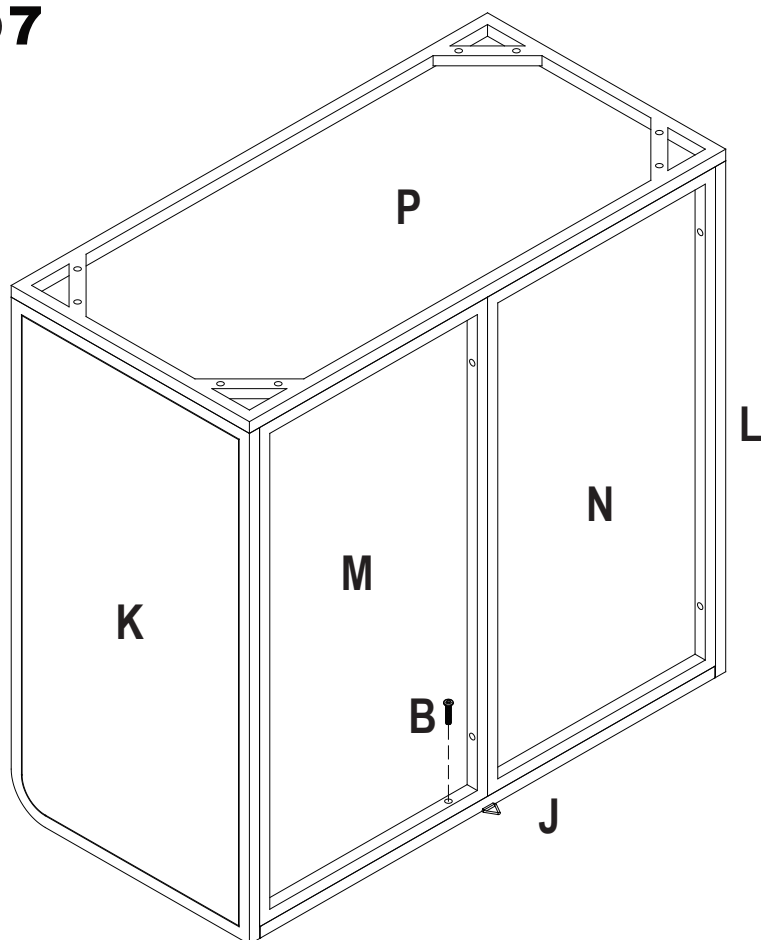


B X 1 PC

Step 8

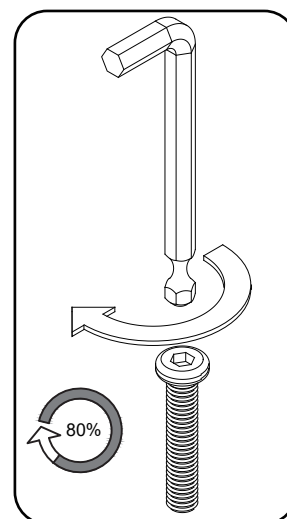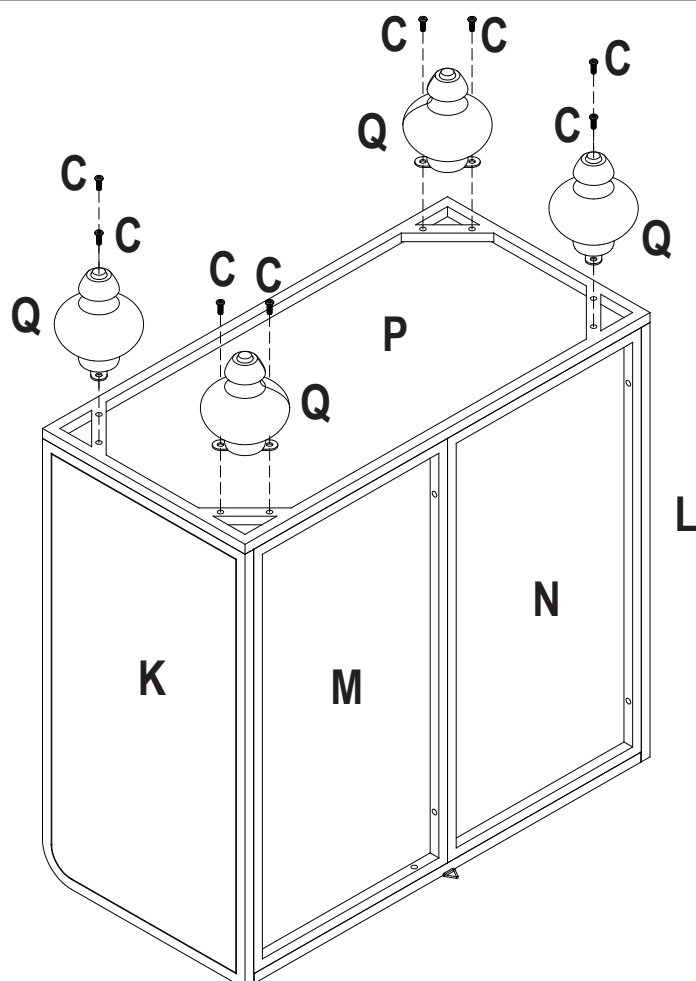


C X 8 PCS


Step 9

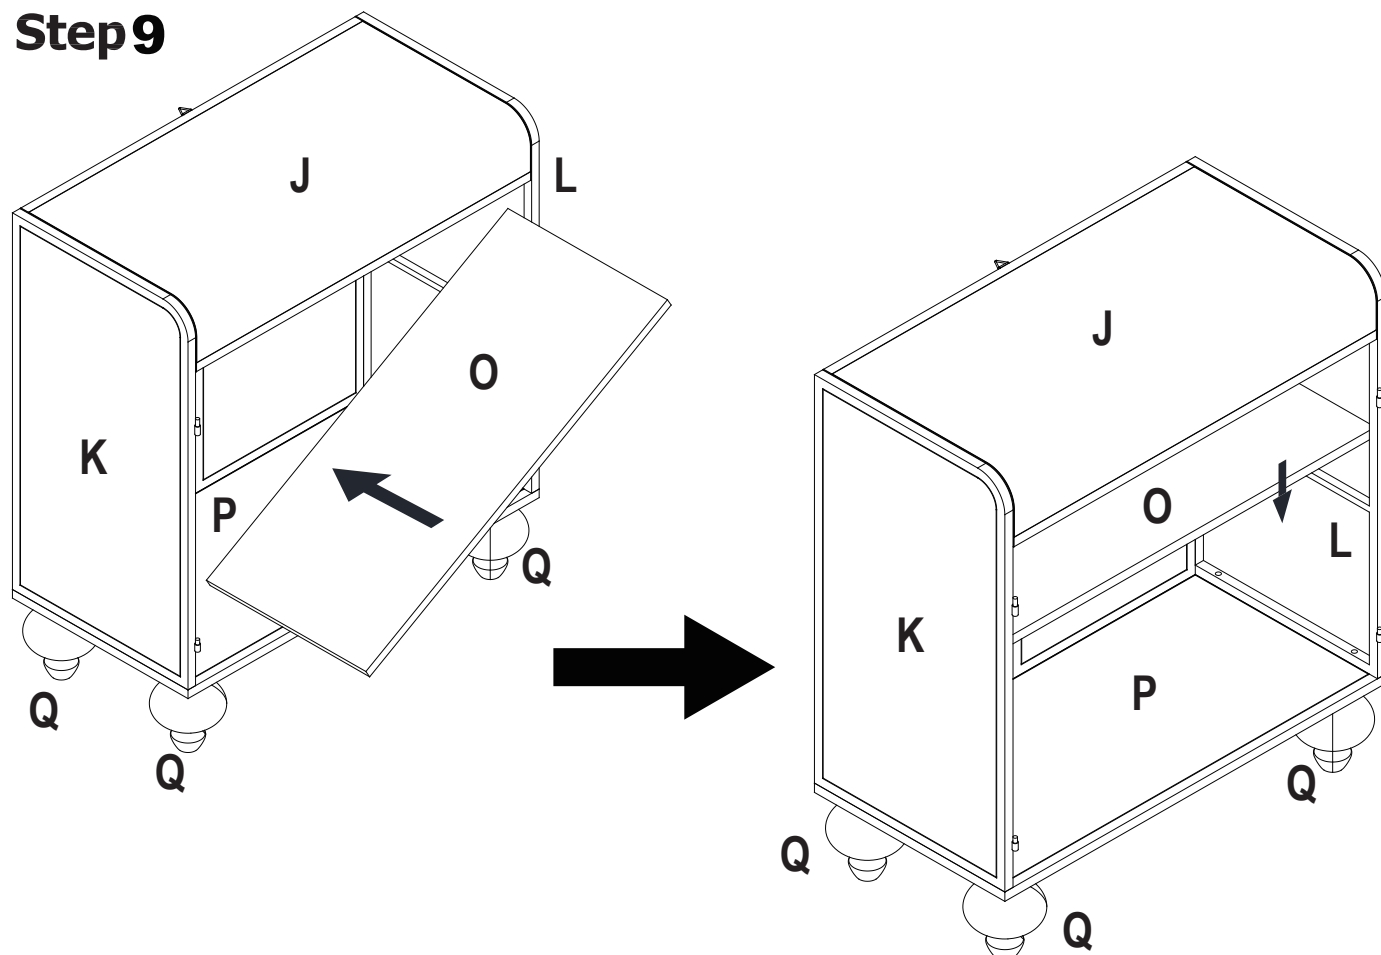



Step 10

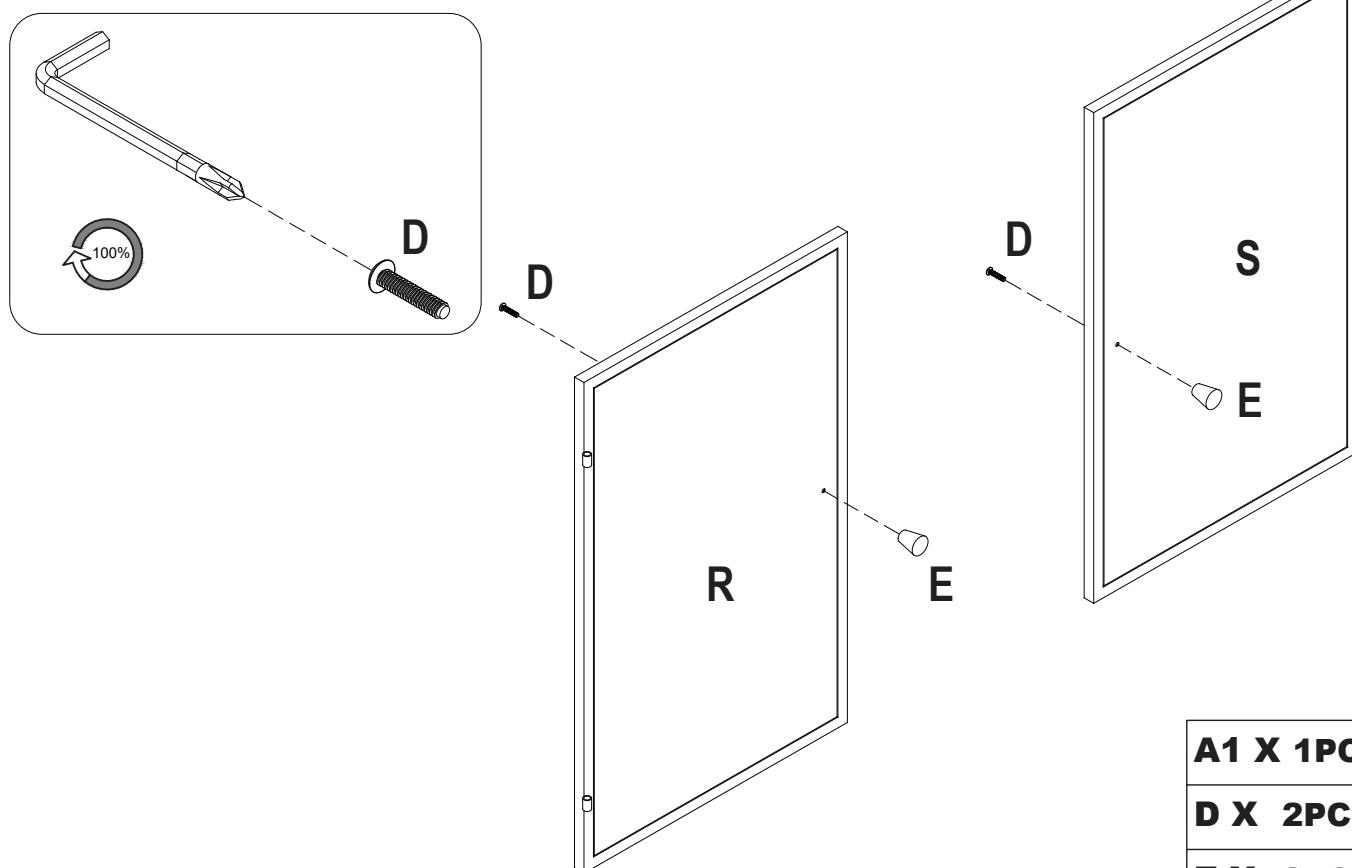

Step 11

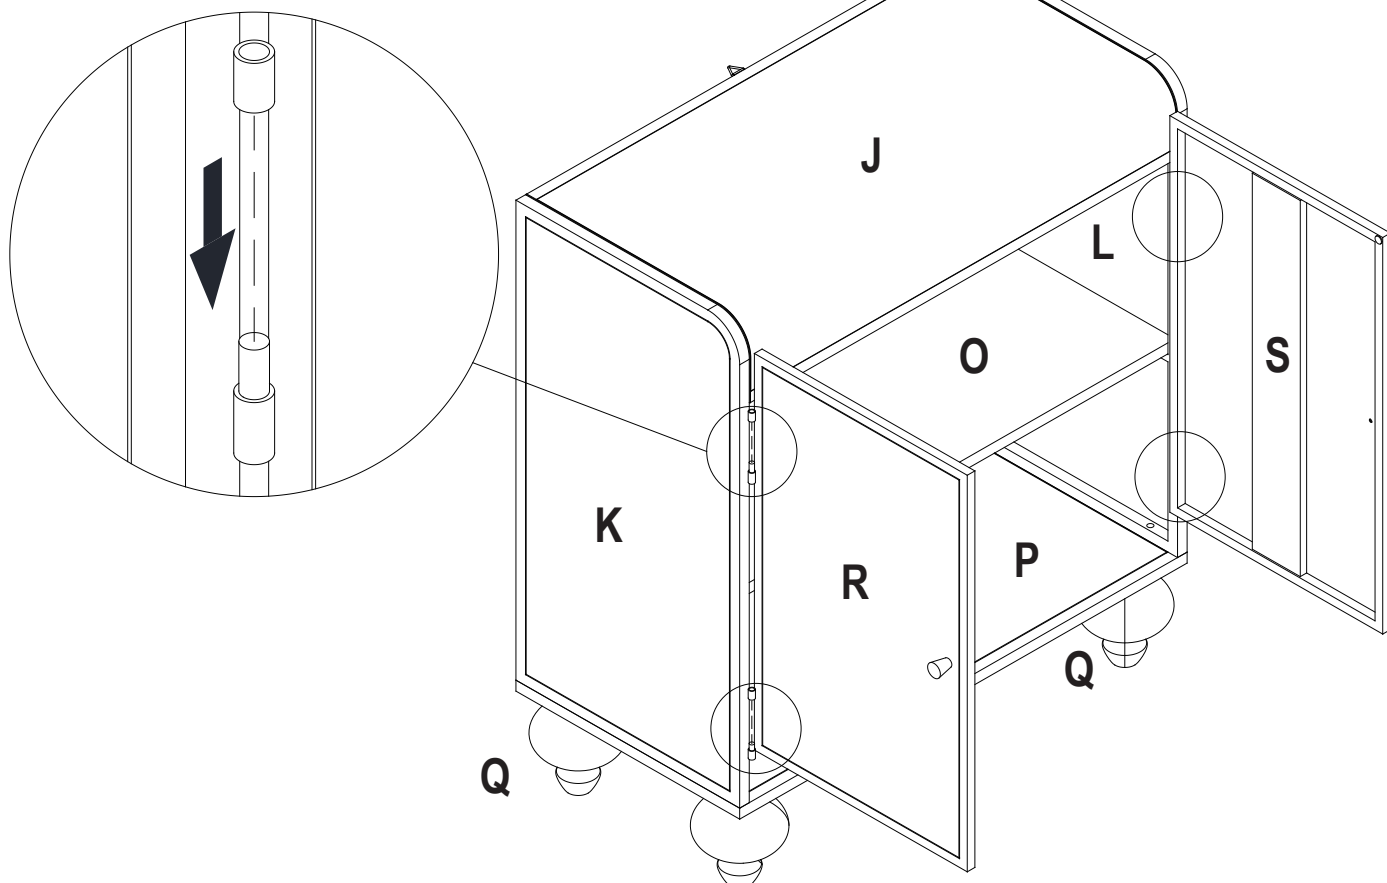


Step 12

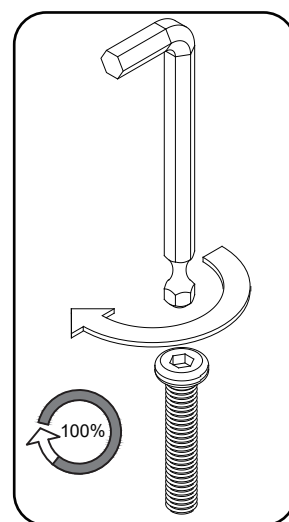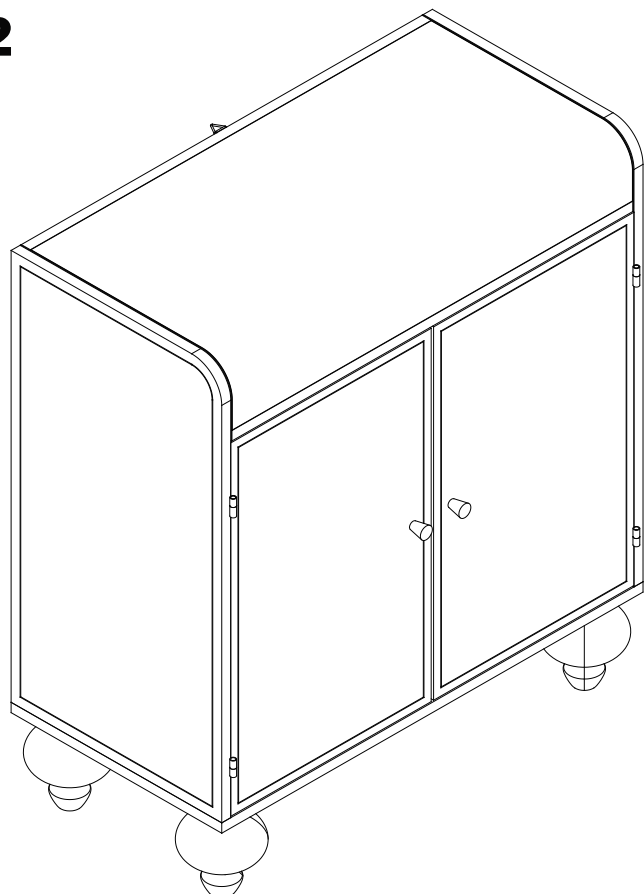

NOTE:AFTER ASSEMBLY,PLEASE MAKE SURE THAT ALL SCREWS ARE 100% LOCKED

Step 13

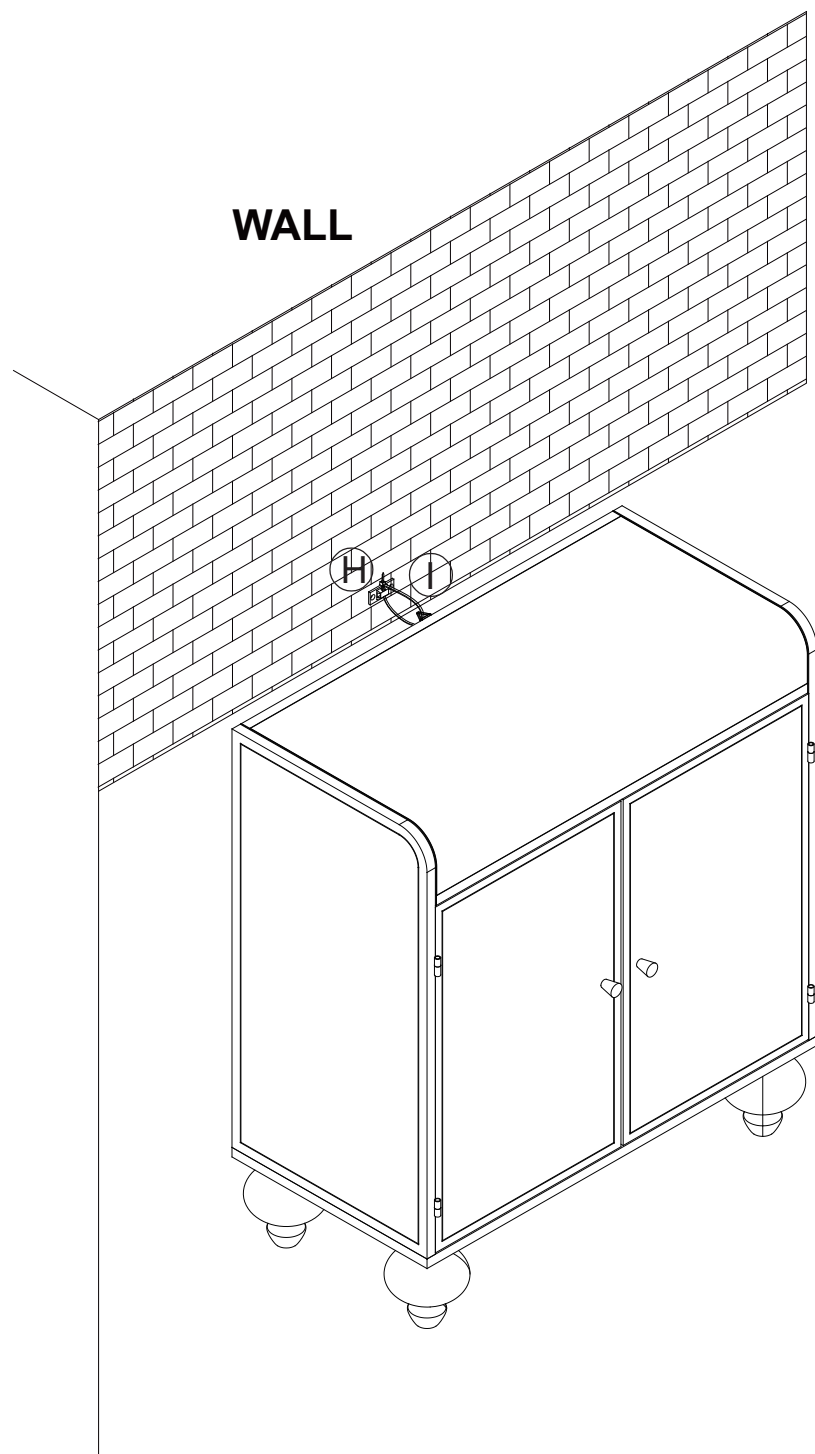

WALL

(1)

WALL

drilling hole
Ø6x30mm

(2)

WALL

(3)

WALL

(4)

(5)

F X 2 PCS

G X 2 PCS

H X 1 PC

I X 1 PC