

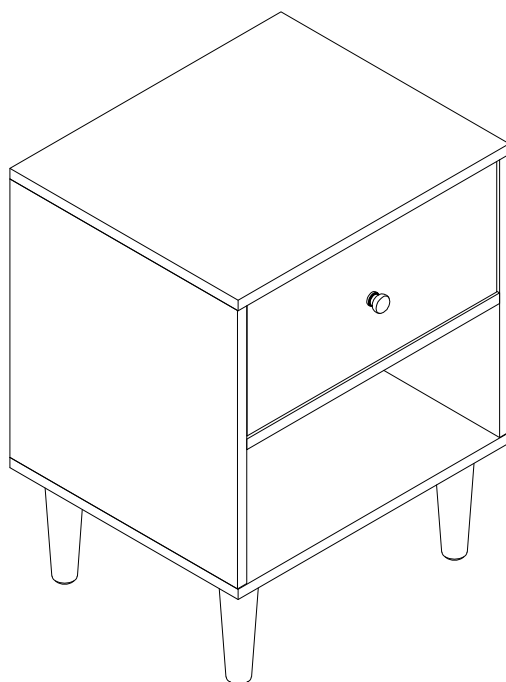
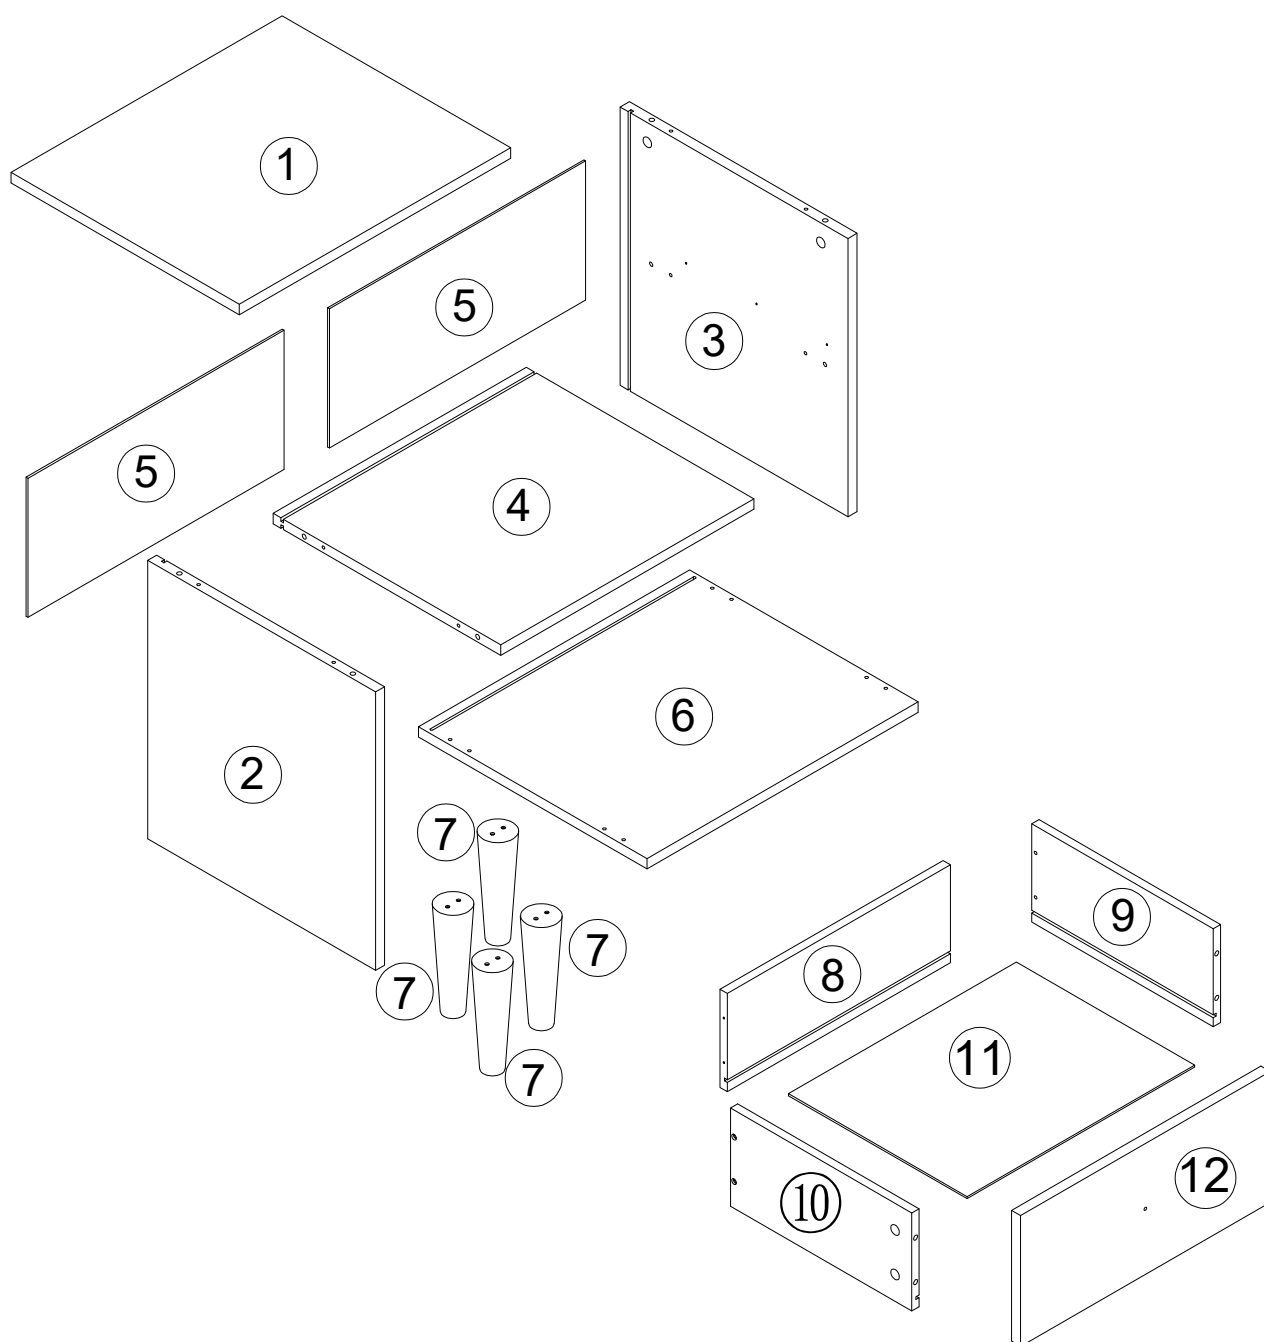


ASSEMBLY INSTRUCTION













 A×12	 B×12	 C×12	 D×12 3×12mm	 E×4	 F×16 4×12mm	 G×8 4×35mm
 H×9 4×30mm	 I×1	 J×4	 K×8 3×14mm	 L×8	 CL×1	 DL×1
 CR×1	 DR×1	2				

STEP 1


 B×8	 D×6 3×12mm	 E×4	 H×8 4×30mm	 CL×1	 CR×1
---	---	---	---	--	--

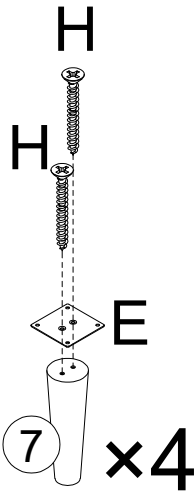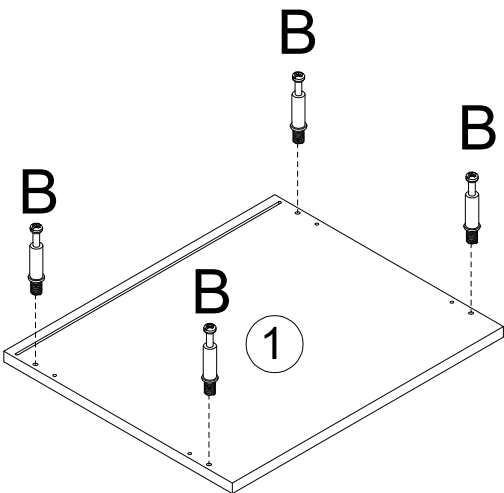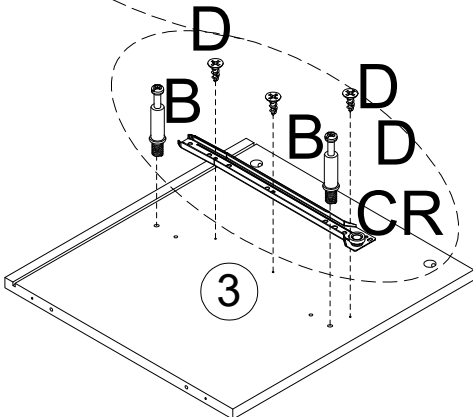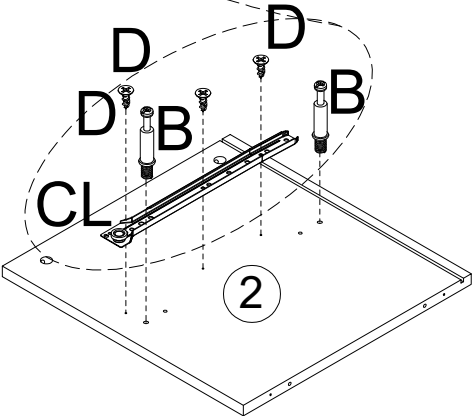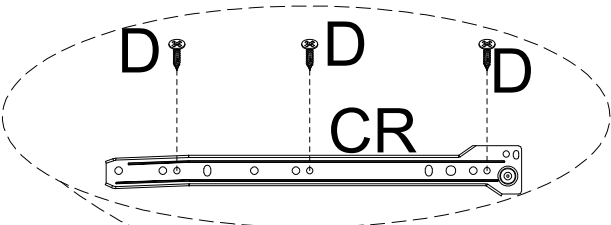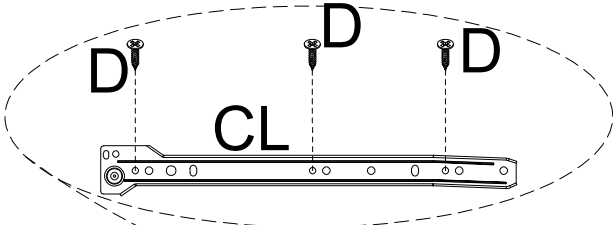



STEP 2

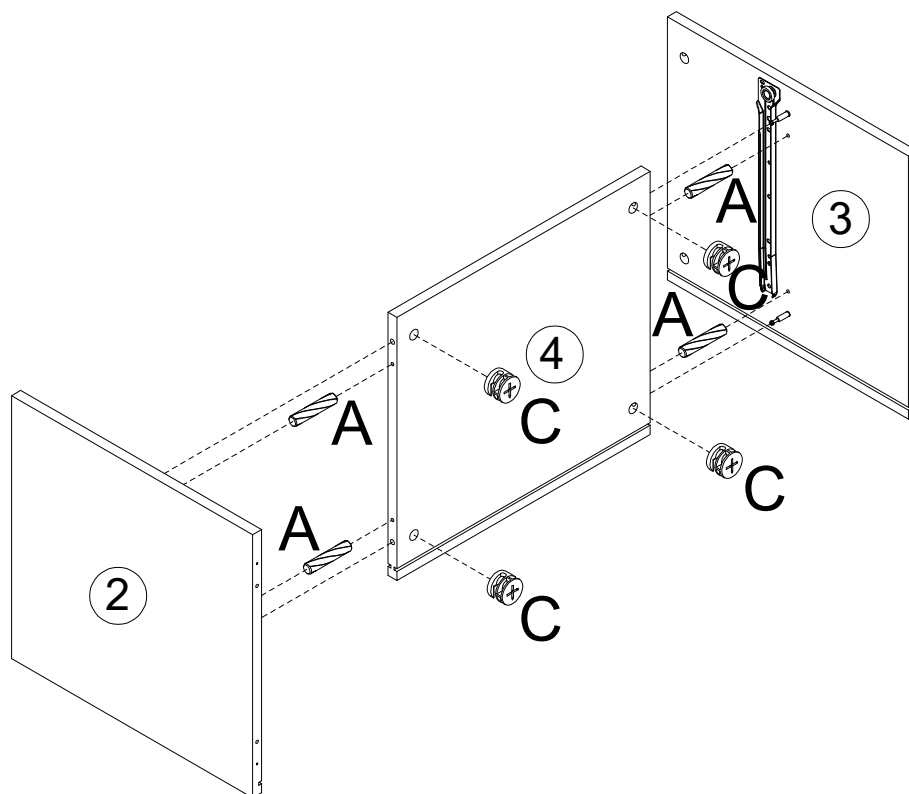


STEP 3

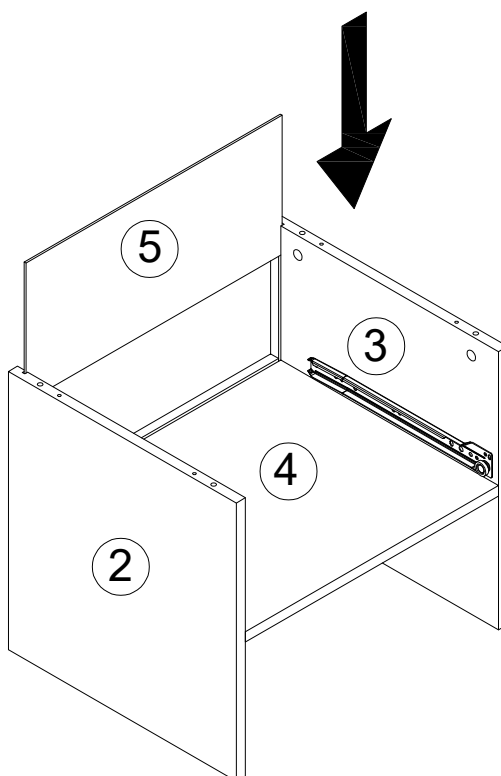



STEP 4

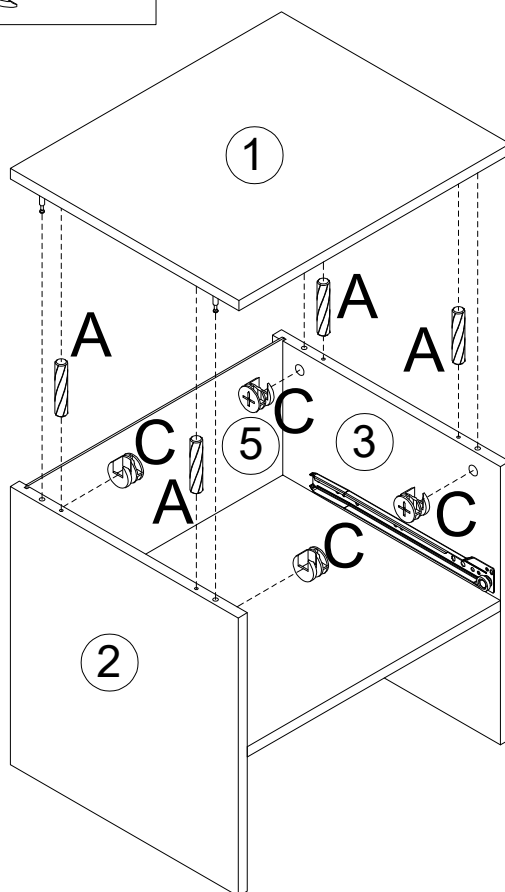




STEP 5

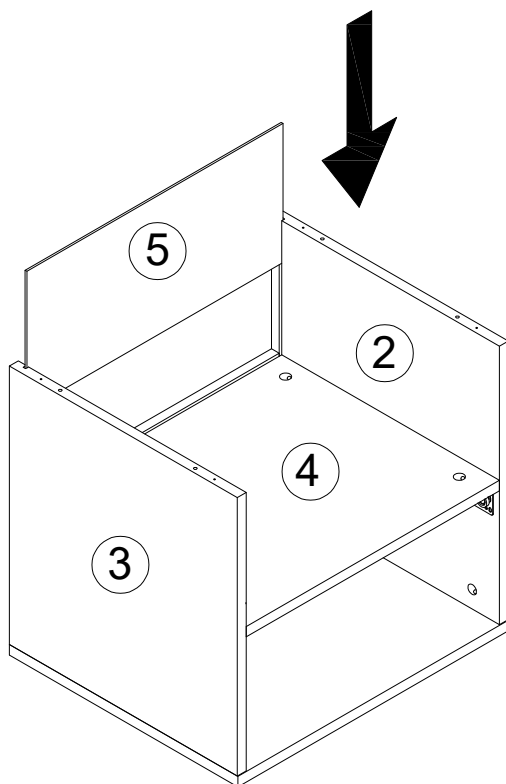

STEP 6


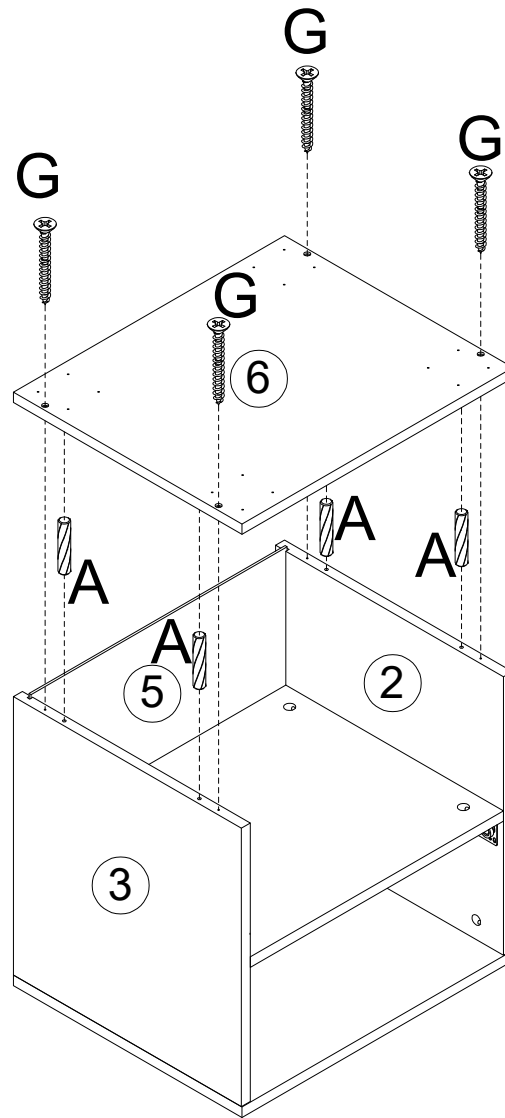



STEP 7

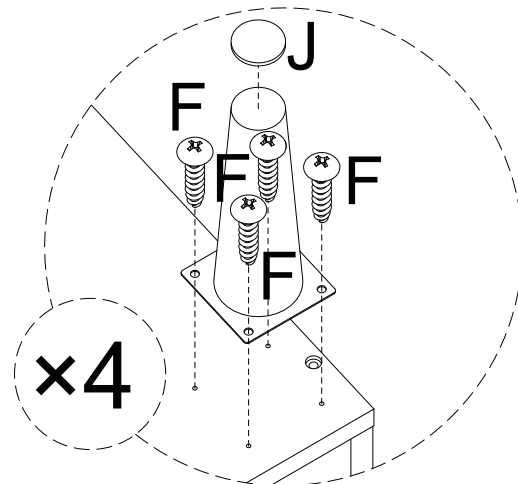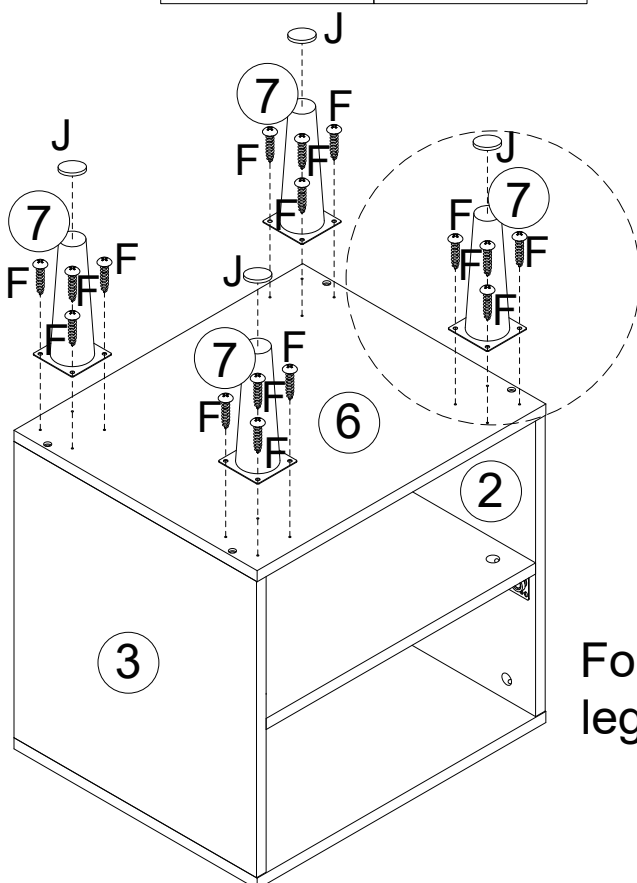



For better stability, tighten the wooden legs with a manual screwdriver. 






STEP 8

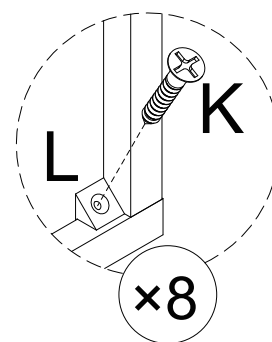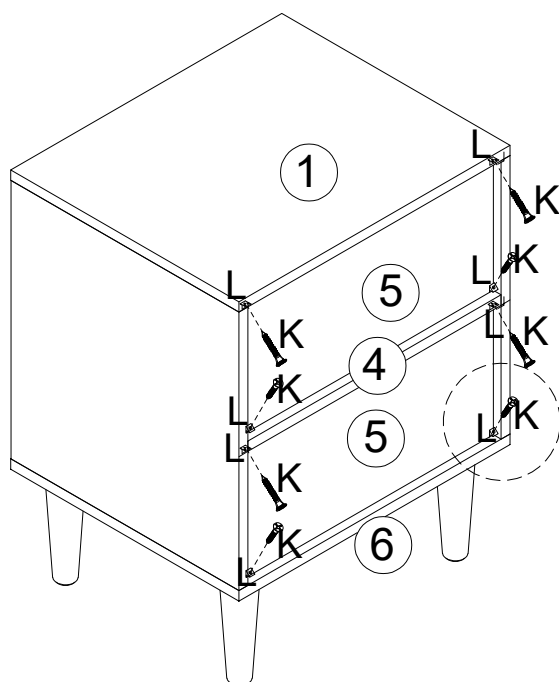



STEP 9

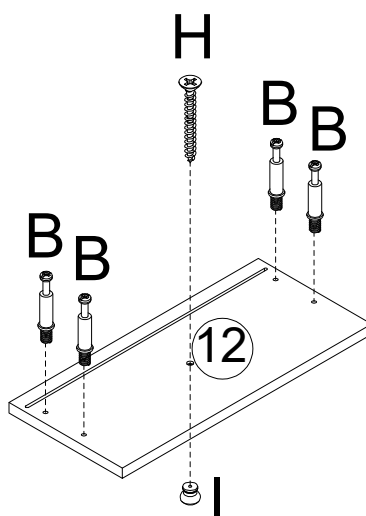


STEP 10

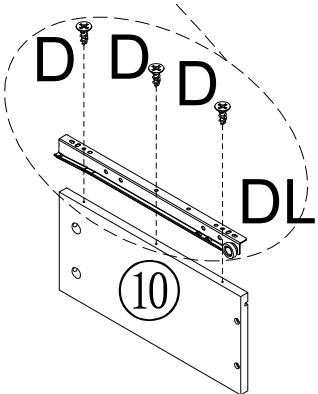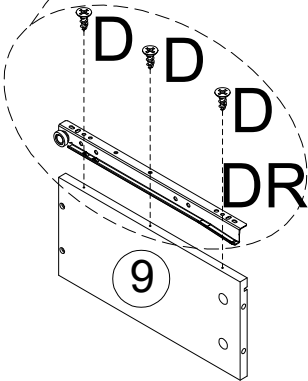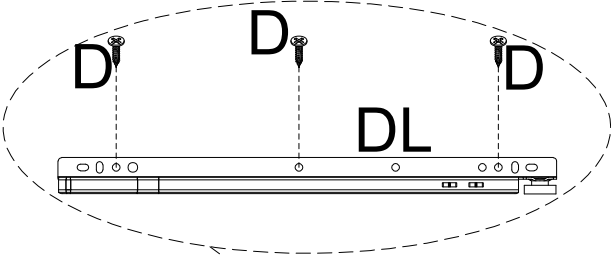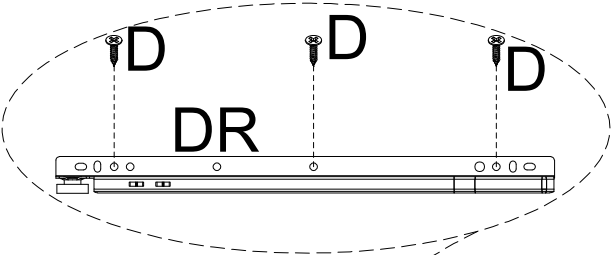

STEP 12

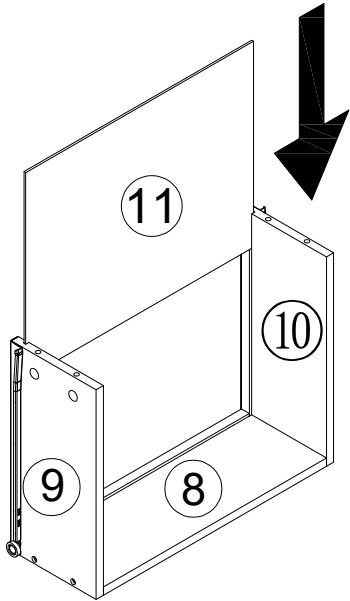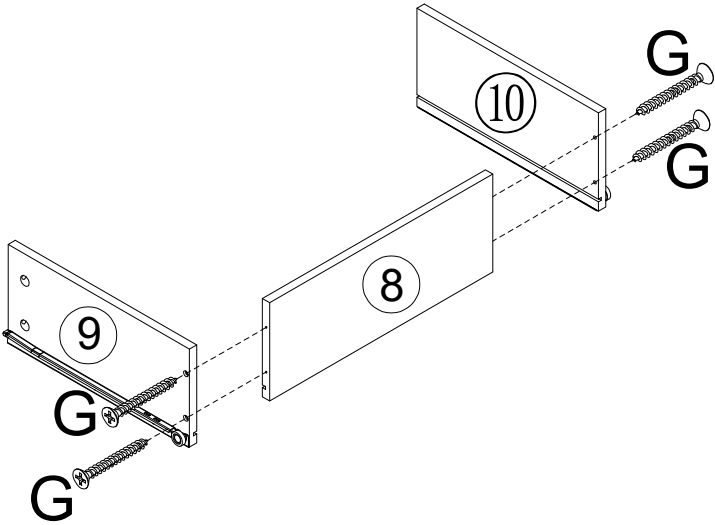

STEP 13

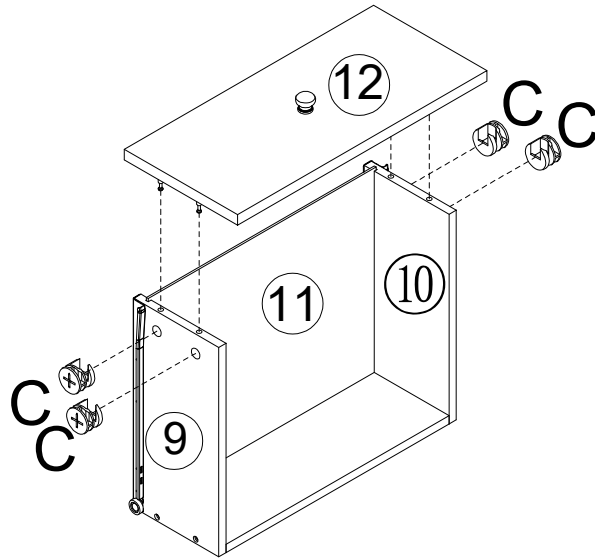

STEP 14

Drawer Installation Tip

Tilt the drawer downward toward the cabinet to align the rollers, then push it in smoothly. Adjust if the panel looks uneven.

