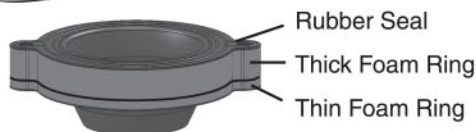


korky® WaxFREE Seal**Included**

- Bolts
- Hex Nuts
- Metal Washers
- Plastic Washers

Need: Wrench,
Putty knife, Ruler


Note: If closet flange is cracked or damaged, flange must be repaired before installing product. Do not use sealants.

1.

Scan here!



Before you begin, watch our installation video:
www.korky.com/6000BP.html

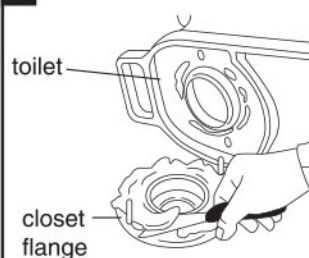
2.

Remove toilet. Clean closet flange and bottom of toilet by scraping wax.

Helpful hint:

Prior to installing the WaxFREE Seal, place toilet on flange to determine if floor is uneven.

If toilet rocks, shims may be needed beneath toilet to stabilize prior to installing the WaxFREE Seal.

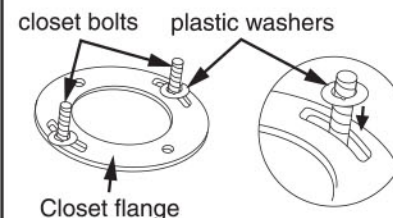3.

Remove old closet bolts. Install new bolts. Slide plastic washers down to base of bolts to hold upright.

For more troubleshooting help, please visit our website www.korky.com or call us at 1-800-528-3553

If toilet is not seated on floor or is unstable after seal installation:

1. Review installation video: www.korky.com/6000BP.html
2. Review "Helpful Hint" in step 2 to determine if floor is uneven.
3. Verify that correct foam ring or rings have been installed.
4. Verify that closet bolts are properly mounted to closet flange.

Troubleshooting

www.korky.com

©2016 Lavelle Industries, Inc.

665 McHenry Street
Burlington, WI 53105


**4. a)**

Determine closet flange (CF) height relative to finished floor (FF).


If above, proceed to 4b.



If even, proceed to 4c.

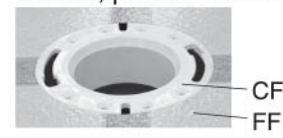


If below, proceed to 4d.

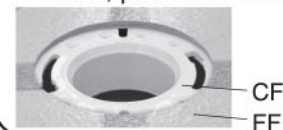
**b)**

Above finished floor


Measure height of flange above floor using ruler

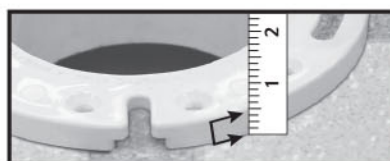

If 1/2" or more above
remove thick foam ring
(Place rubber seal with thin foam ring on flange)

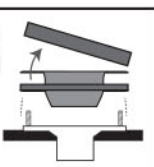


If less than 1/2" above
remove thin foam ring
(Place rubber seal with thick foam ring on flange)

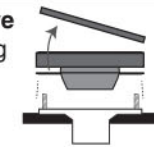


Watch for: If flange is 3/8" to 1/2" above floor, read cautionary note in step 6.

c)


Even with finished floor

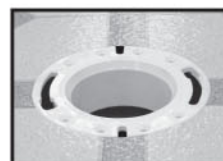


Full Seal
(place rubber seal with thick & thin foam rings on flange)

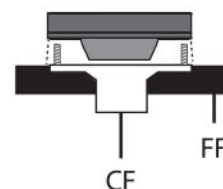**d)**


Less than 3/8" below finished floor

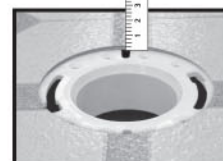


Full Seal
(place rubber seal with thick & thin foam rings on flange)

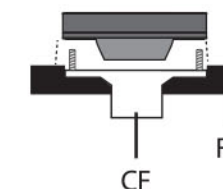


3/8" or more below finished floor

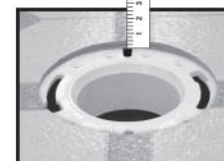

Stack two full seals
(longer bolts may be required)

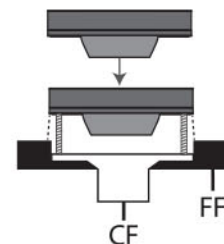**5.**

Set bowl in place
(Caution: Toilet may be unstable initially)

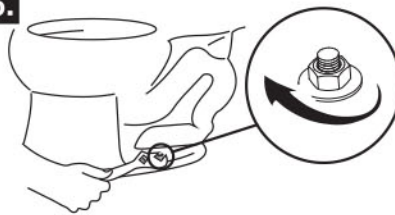6.

Install washers & hex nuts. Apply downward pressure to bowl while tightening hex nuts (alternate sides while tightening). Do not overtighten; bowl or closet flange may crack. May need to cut bolts with hacksaw to replace toilet bolt caps.

Note: If flange is 3/8" to 1/2" above floor & toilet does not rest on floor after tightening hex nuts, remove thick foam ring from rubber seal and install thin foam ring in rubber seal. Repeat steps 5 & 6.

Summary of Limited Warranty and Disclaimer of Warranties

This is only summary of our Warranty. Go to www.korky.com for the complete Warranty and Disclaimer of Warranties.

Lavelle Industries, Inc. ("Seller") warrants solely to the original purchaser ("Buyer") of this **Korky® WaxLESS toilet seal** ("Product") that the Product will be free from material defects in workmanship and materials under proper installation and normal use for a period of 5 years from the date of purchase. There is **NO WARRANTY** in cases of: negligence; abuse; abnormal usage; misuse; reuse; accidents; blocked toilet or sewer; normal wear and tear; failure to follow Seller's instructions; improper installation (including, without limitation, use with cracked flange, overtightening of hex nuts, or failure to use rubber seal), storage; failure to follow plumbing codes or exposure of the Product to cleaning products containing harsh chemicals. Improper use can cause water leaks and property damage.

