



G9/16-G1/2-600mm  
Supply Hoses




Rags  
Chiffons  
Trapos

## Important Information

If possible, assemble the faucet and drain to the bathroom sink before installing the sink.


### STEP1

Clean the sink surface.

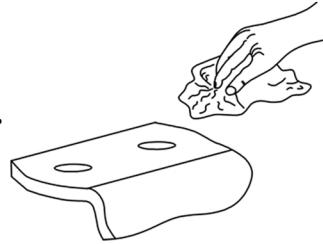


### STEP2

Insert the faucet and base plate.

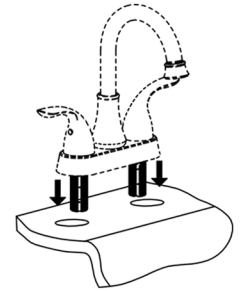


### STEP3

Tighten the mounting nuts.

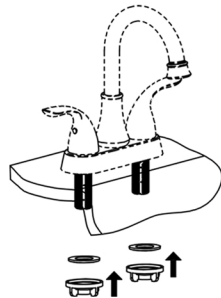


### STEP4

Disassemble the drain.




### STEP5

Insert the drain body and flat gasket into the drain hole.

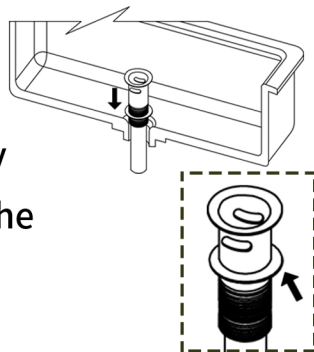


### STEP6

Install the tapered gasket from below. Hantighten the nut.

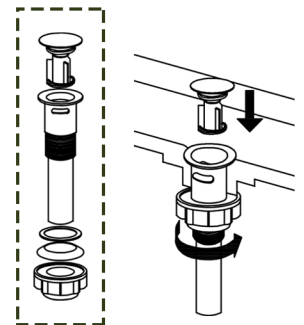


### STEP7

Insert the stopper into the drain body, Press down firmly to test operation.

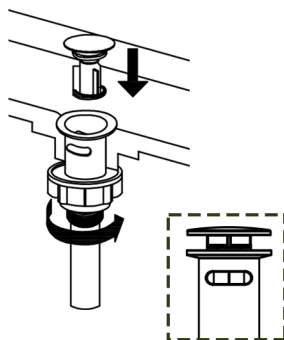


### STEP8

Connect the drain body to the trap.

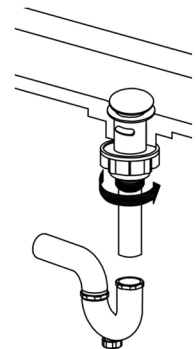

### STEP9

Using hoses with rubber gaskets or compression fittings, connect the supply hoses.

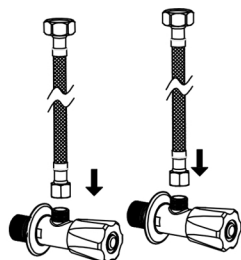

### STEP10

Using hoses with rubber gaskets or compression fittings, connect the supply hoses.

