

**CAMO**<sup>®</sup>  
The Better Way to Build a Deck

**NEW  
PRODUCTS**

# TRAINING GUIDE 2024



# TRAINING GUIDE

## CONTENTS

### FASTENING SYSTEMS



#### CLIPDRIVE™

STAND-UP DECK CLIP FASTENING SYSTEM

THE BETTER WAY TO FASTEN CAMO UNIVERSAL DECK CLIPS.

PAGES 4-7

FOR USE WITH CAMO UNIVERSAL DECK CLIPS



#### NEVER-MISS® GUIDE

DECK CLIP FASTENING SYSTEM

INCLUDED IN 450 CT AND 900 CT PAILS OF CAMO UNIVERSAL DECK CLIPS.

PAGES 8-17

FOR USE WITH CAMO UNIVERSAL DECK CLIPS



#### DRIVE

STAND-UP 3-IN-1 FASTENING SYSTEM

SAVE TIME WITH THE AWARD-WINNING CAMO DRIVE® TOOL.

PAGES 18-25

FOR USE WITH CAMO COLLATED EDGE + FACE SCREWS OR CAMO UNIVERSAL DECK CLIPS



#### MARKSMAN®

HIDDEN EDGE SCREW FASTENING SYSTEM

ACHIEVE A FASTENER-FREE SURFACE ON SQUARE EDGE DECKING.

PAGES 32-37

FOR USE WITH CAMO EDGE SCREWS



### ACCESSORIES

#### DECK TAPE

SELF-ADHESIVE LINED BUTYL TAPE



PAGES 38-39



#### BLOCK

THE BETTER FLOATING FOUNDATION

PAGES 40-43



PAGES 26-31 BOARD BENDING & LOCKING TOOL

#### ACCESSORIES



# CLIPDRIVE™

Stand tall, target screws easily, and drive clips up to 5X faster with the CAMO® ClipDRIVE™, the contractor-grade tool designed to give you the best experience fastening grooved decking.

INTRODUCTION	5
SETUP	6
CLIPDRIVE USE	7



# Get to know your *CLIPDRIVE* tool



YOUR DRILL GOES HERE

COLLAR

DRIVE SHAFT

HEIGHT-ADJUSTABLE HANDLE

UPPER TOOL BODY

CHUCK (INSIDE COVER)

BIT HOLDER

LOWER TOOL BODY

T-15 DRIVER BIT

WEIGHTED NOSE

## FOR USE WITH CAMO UNIVERSAL DECK CLIPS



### FOR USE WITH CAMO CLIPS

(SOLD SEPARATELY)



90° DECK PATTERN  
WOOD JOISTS



ANY DECK PATTERN  
WOOD JOISTS



WEDGE™



ANY DECK PATTERN  
METAL JOISTS



WEDGEMETAL®

# Setup for Clip fastening



## A INSTALL T-15 DRIVER BIT



Separate the tool by turning the lower tool body counter-clockwise and sliding the locking pins out of the notches.



Pull back the collar, then insert the T-15 bit and release the collar to lock the bit in place.

## B CONNECT TOOL BODY



Align the notches in the lower tool body with the locking pins and push down while turning to lock into place.



Turn the lower tool body clockwise to lock it into place.

## C INSTALL THE HANDLE



Loosen the handle by turning it counter-clockwise and slide the clamp onto the tool.

Position the handle on the upper tool body and tighten by turning the handle clockwise.

## D ATTACH YOUR DRILL



Make sure the drill is set in the forward position. Insert the large collar of the drive shaft into the drill chuck and tighten.



If your drill has a drill and clutch mode, set it to clutch mode. Turn down torque to the lowest setting. Increase as necessary.

# How to Fasten with CLIPDRIVE



## BEFORE YOU BEGIN

Lay down rows of boards and clips and hold or lock them in place.



SCAN TO  
WATCH THE  
HOW-TO  
VIDEO

1



## POSITION NOSE OVER CLIP\*

Starting at the outermost board, place the nose over the exposed screw.

2



## ENGAGE DRILL

With the nose flat on the surface of the board, and pressure on the handle, run the drill at full speed, and push the driver drill down to engage the bit and screw.

3



## FASTEN THE BOARD

Apply steady pressure and continue to drive until the drill clutch releases or until clip is snug. **Do not overdrive.**

4



## LIFT UP TOOL

After fastening, lift up on the tool to return your drill to starting position.


5



## FASTEN EVERY JOIST

Fasten all of the remaining clips at each joist.

\*FIND MORE SPECIFIC INFORMATION ABOUT EACH CLIP TYPE ON PAGES 8-17.

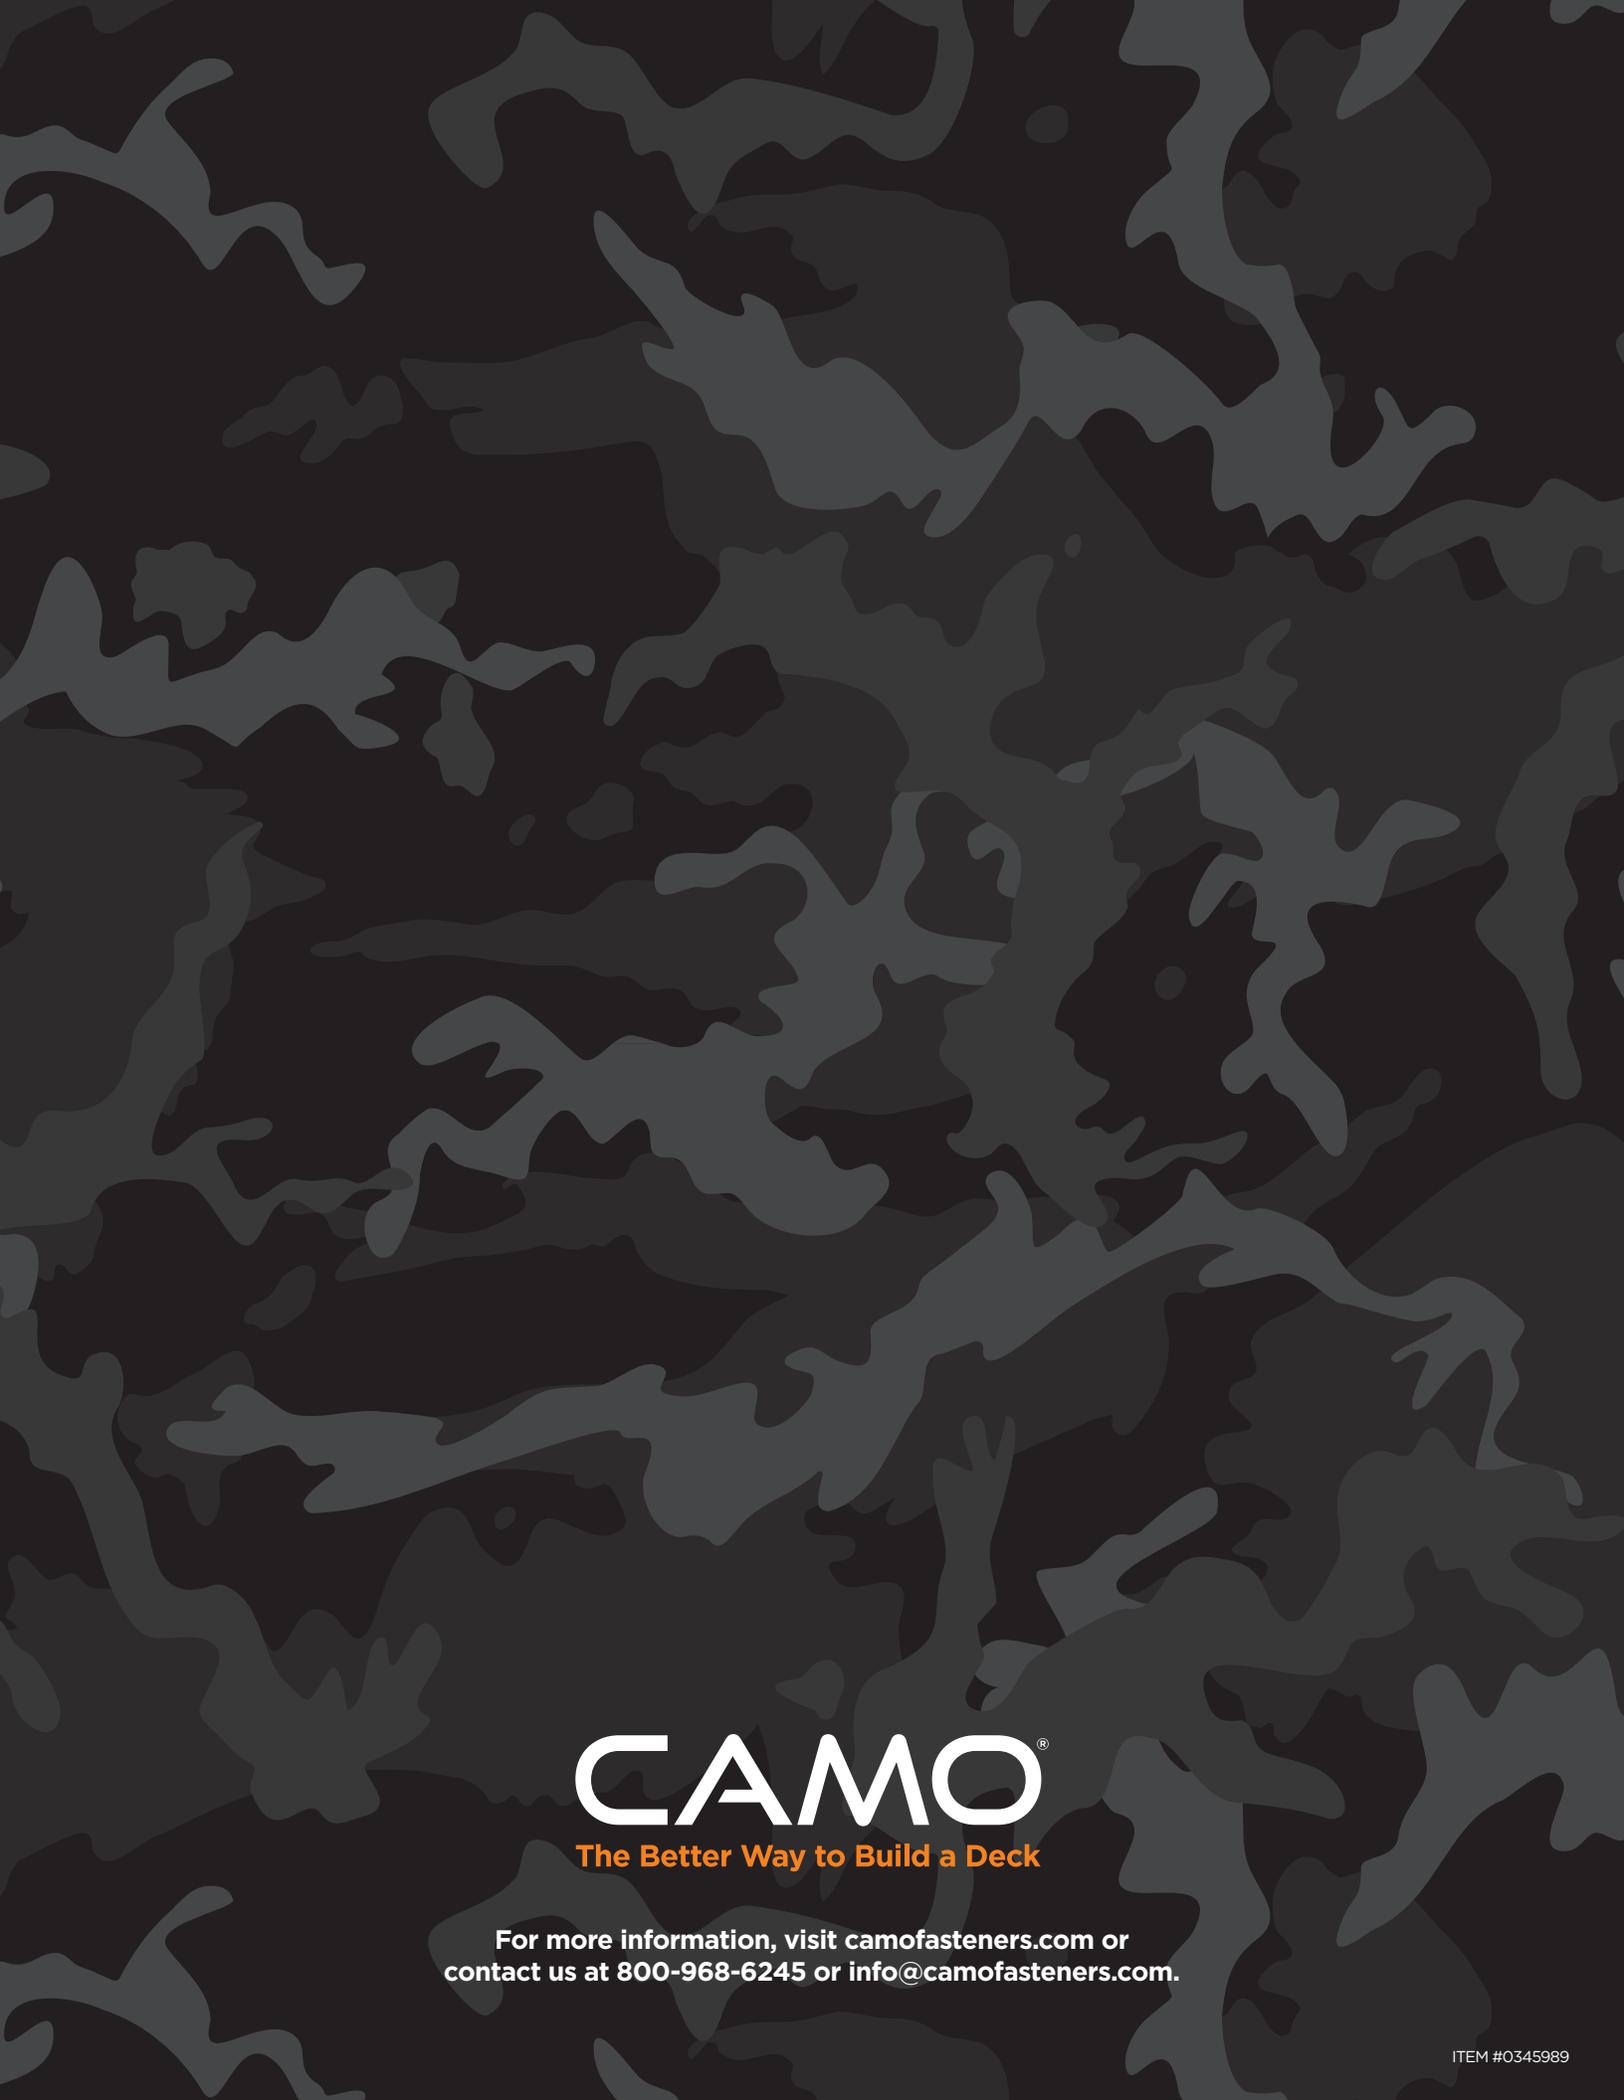

**CAMO**<sup>®</sup>

**The Better Way to Build a Deck**

For more information, visit [camofasteners.com](http://camofasteners.com) or  
contact us at 800-968-6245 or [info@camofasteners.com](mailto:info@camofasteners.com).

ITEM #0345989