

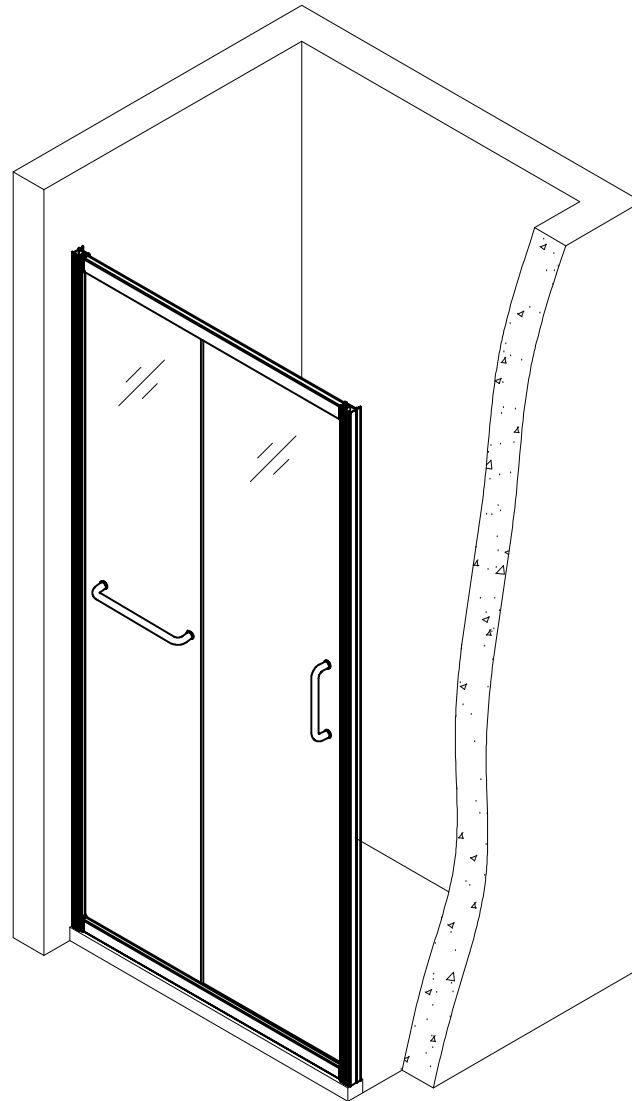
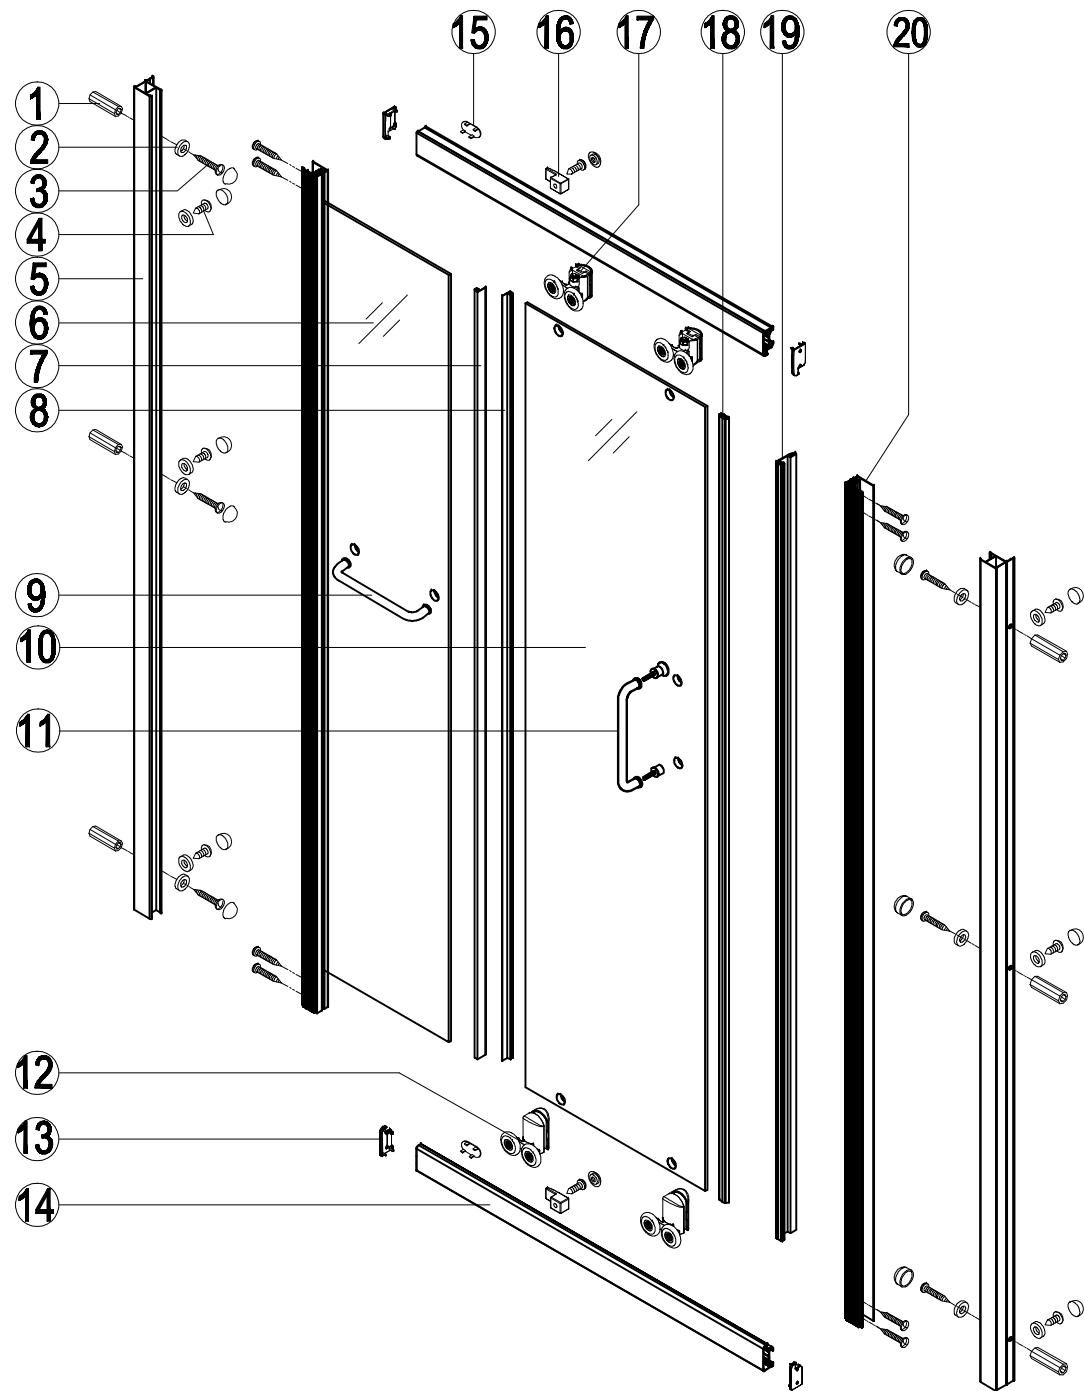



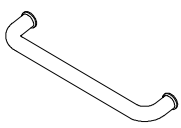


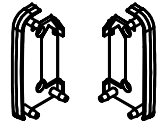
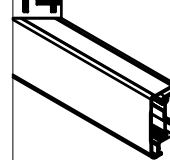




MS6A21-4

INSTALLATION MANUAL





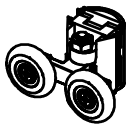


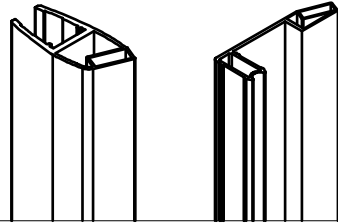

1  6Pcs	2  12Pairs	3  14Pcs	4  8Pcs	5  2Pcs	6  1Pc	7 1730mm  1Pc	8 1795mm  1Pc
9  1Pc	10  1Pc	11  1Pc	12  2Pcs	13 L R  2Pairs	14  2Pcs	15  2Pcs	16  2Pcs
17  2Pcs	18 + 19  1Pair	20  1Pc	Tools:				

Ø6mm 


Ø3.2mm 

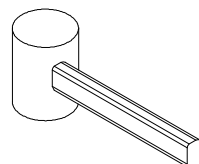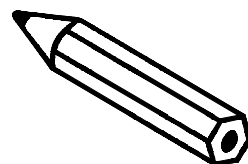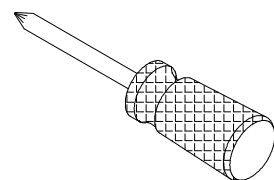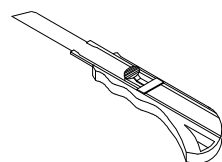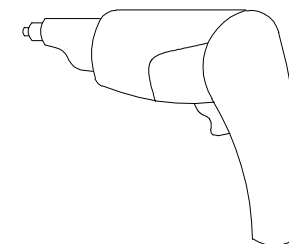




2 mm




2.5mm

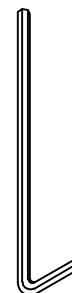

4 mm

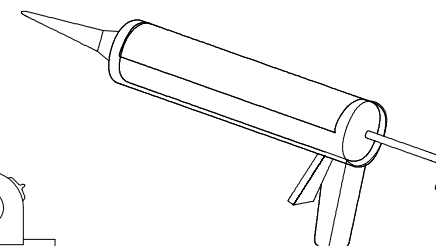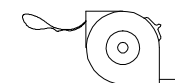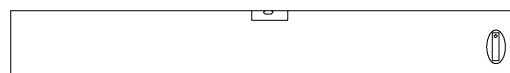


1

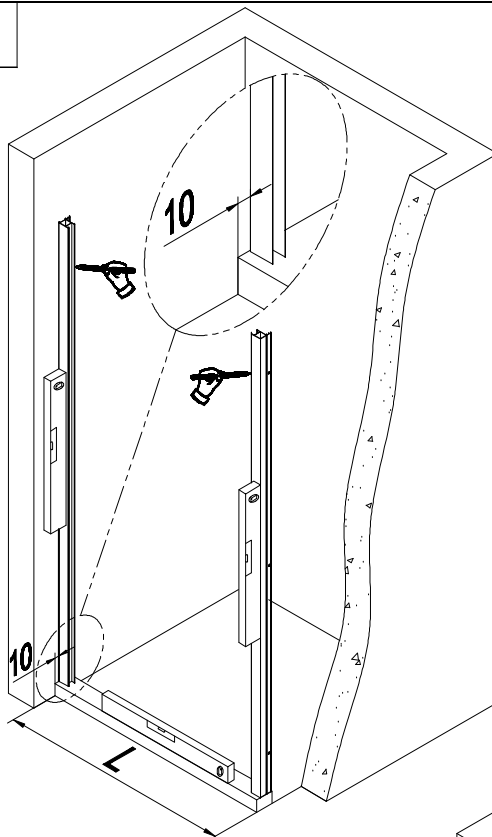


	L
1219	1179-1219
1524	1484-1524


The top and bottom rail
can be cut short
according to the actual
situation when the
installation space is
less than 1179 or 1484mm

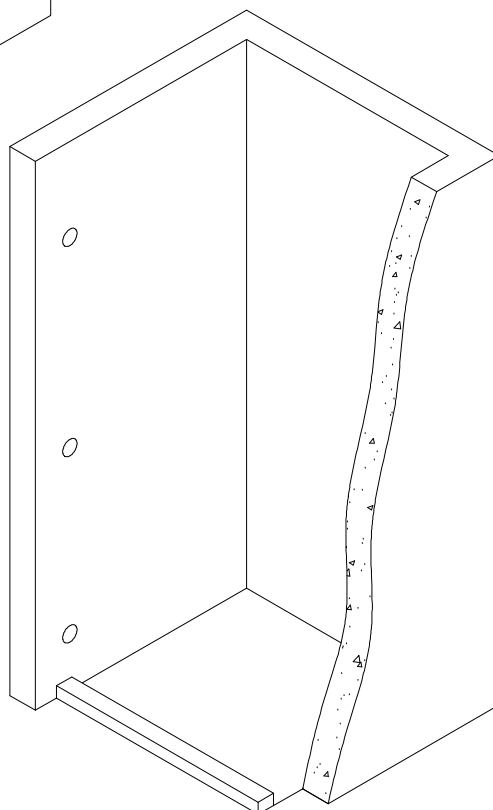


1-1




1-2

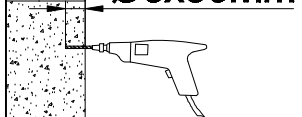

1-3

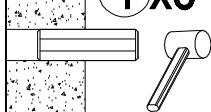


2

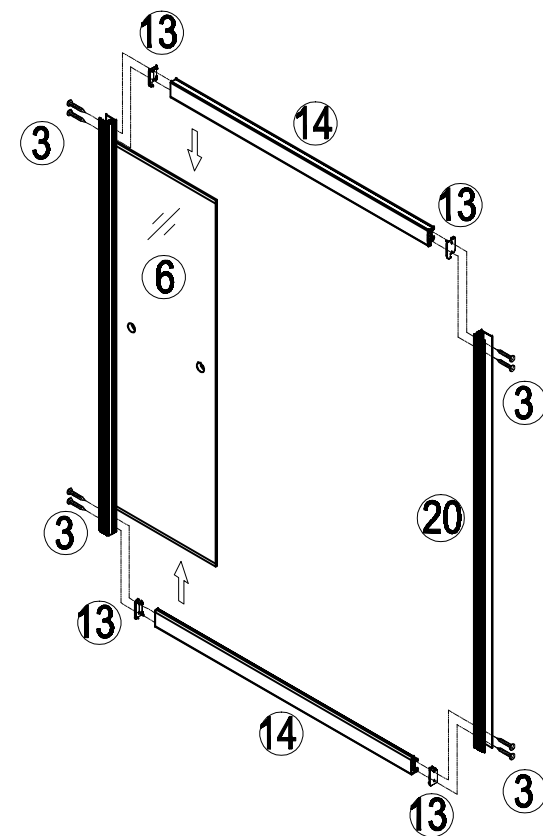



2-1



2-2

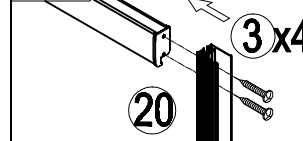

2-3

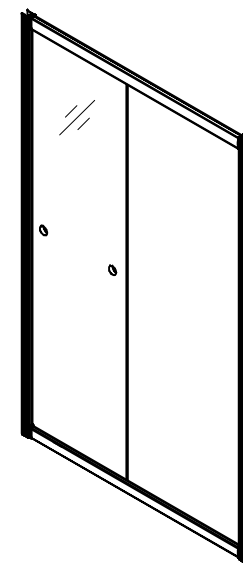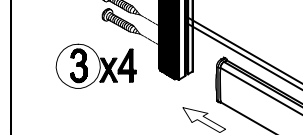

3

Diagram 3 illustrates the mounting of the door frame. The main diagram shows the door frame being attached to the wall. Callout 5 shows the top and bottom rails being secured with screws. Callout 16x2 shows a corner bracket being secured with a screw. Callout 4x2 shows a side bracket being secured with a screw. Callout 9x1 shows a hinge being secured with a screw. Callout 3-1 shows the door being inserted into the frame and secured with a lock.

4


17x2

10x1


12x2

Adjustable

5

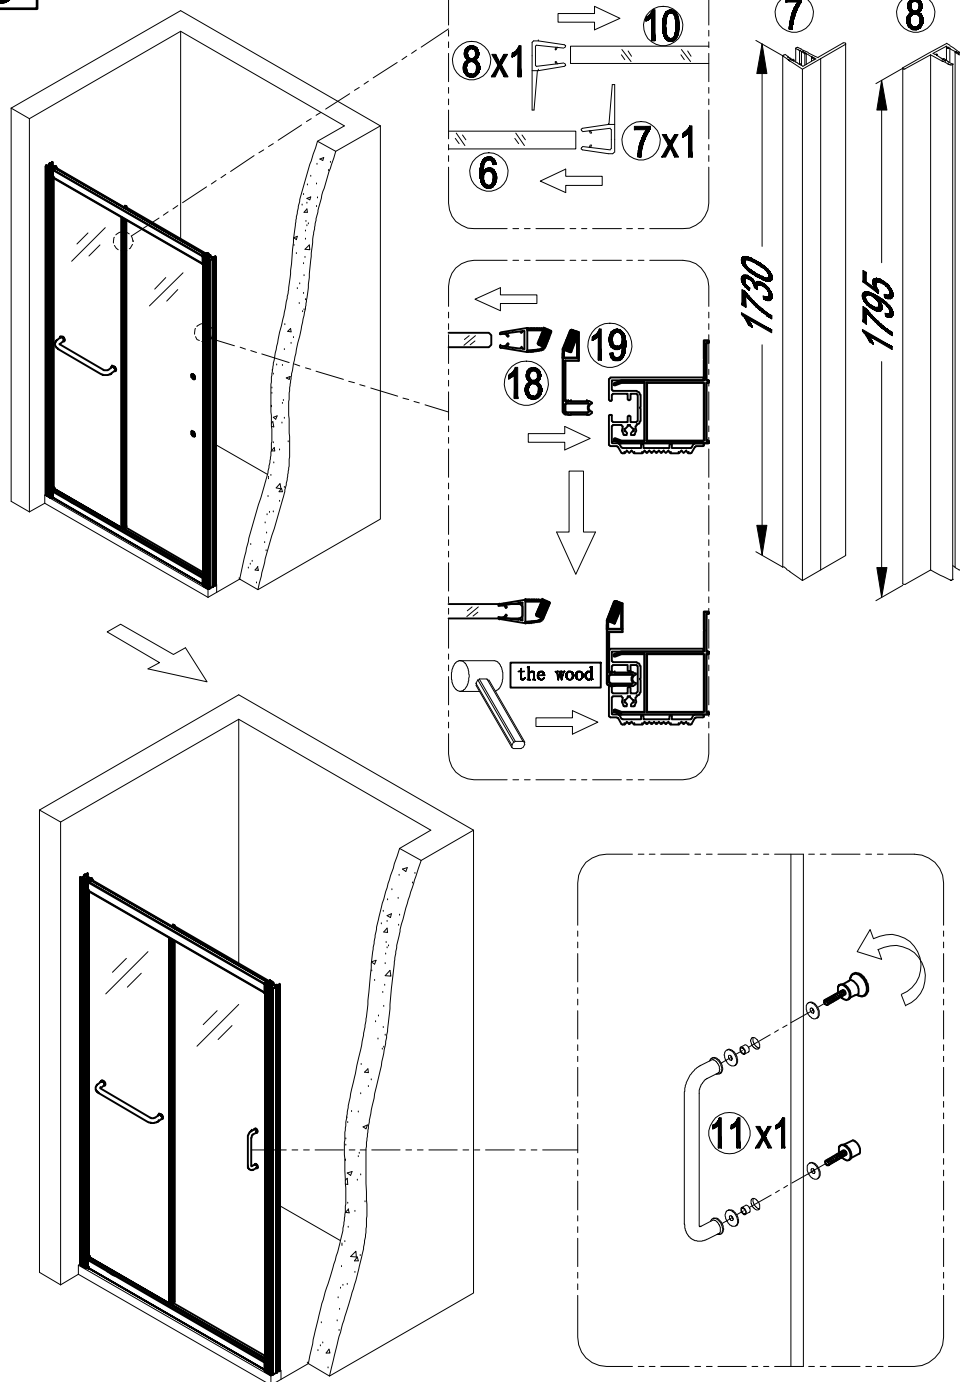

6

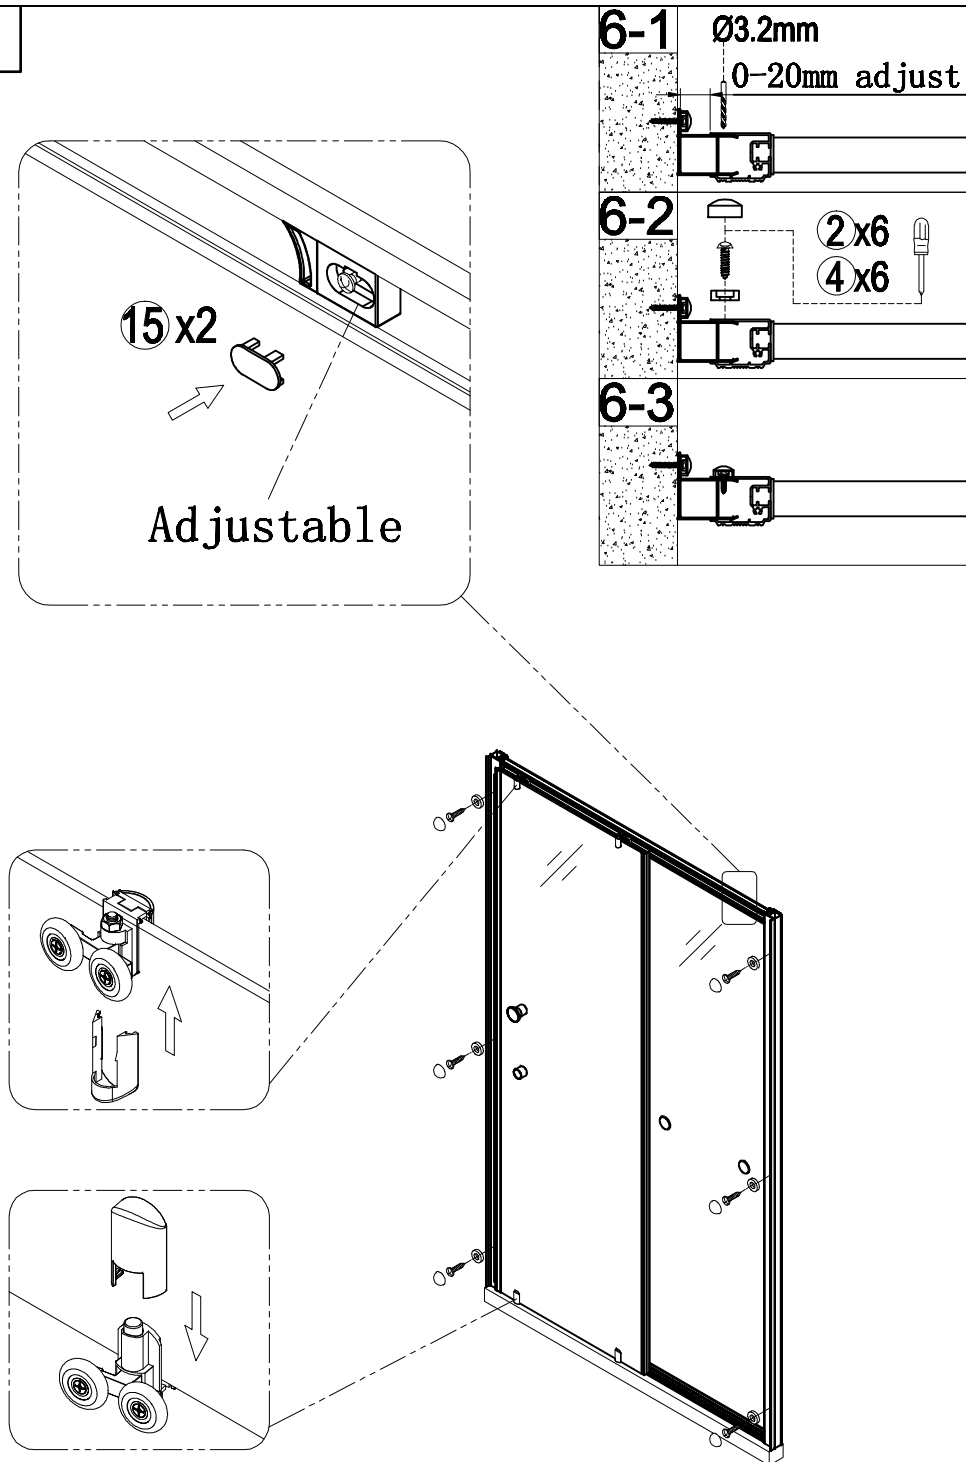

Care Instructions:

Do not use your shower enclosure within 24 hours of assembly .
Do not use caustic cleaning products or abrasive material when cleaning your shower enclosure.

