


# ROUND HANDRAIL POST CAP BRACKET

Model #275 V2.0 6-21

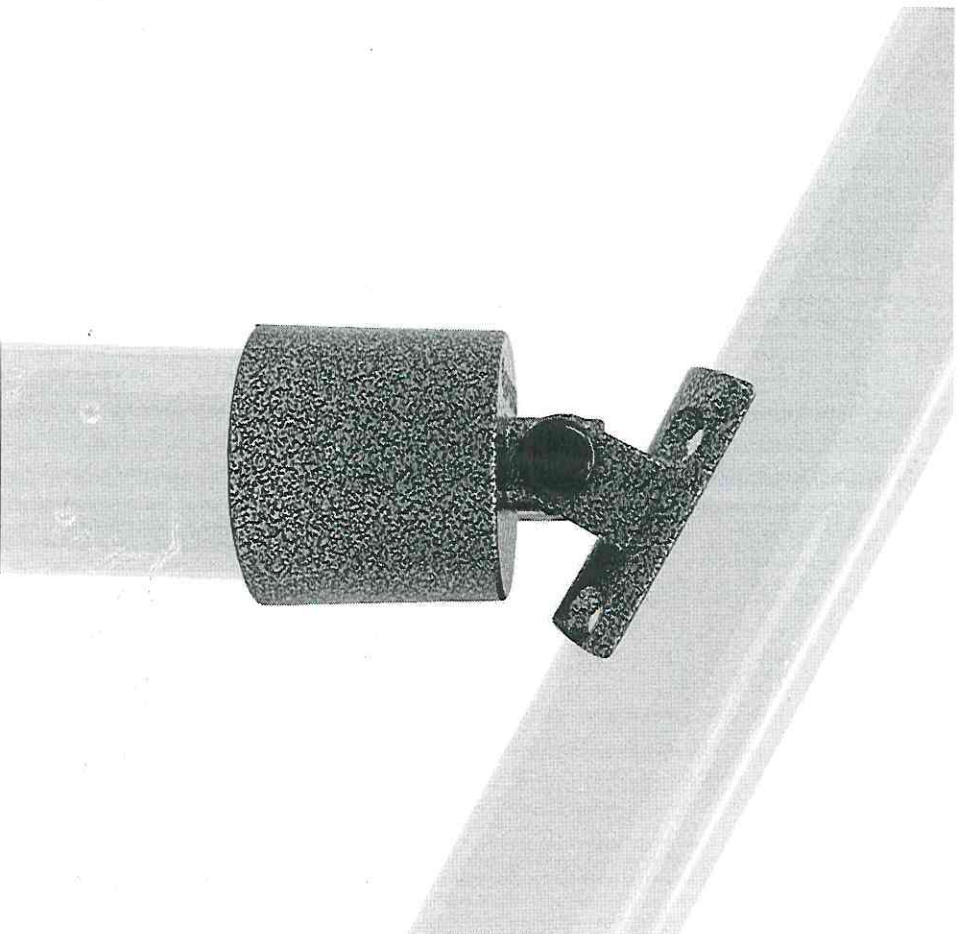

## Quick Install Instructions

QTY	ITEM
1	Post Cap Bracket – slides on top of Round Handrail Post
5	#12 x 3/4" Torx T25 Thin Head Self Drilling Screws – Predrill 3/16" hole through the cradle bracket into handrail. Install fastener using included Torx Bit and repeat for three other holes. Cradle piece can be removed if handrail impedes drill/screw gun
6	1/8" x 3/4" roll pins – black – OPTIONAL: attach bracket to post. Using included bit, Drill 1/8" pilot hole in one or more bracket dimples. Carefully tap pin in hole with small hammer. Do not hit powder coat
2	7/16" Bolt caps – fits the bracket bolt and nut
1	3/16" Drill bit – Use to pilot 3/4" Countersink Fasteners.
1	1/8" Drill bit – Use to pilot Spring Pins to fasten cap to post

5	<b>**Alternative Connection Pins for Post Cap to Post</b> #10 x 1" Self-drilling hex fasteners – attach bracket to post. Drill 3/16" pilot hole in more or more bracket dimples. Screw fastener in hole w/ hex head driver. <b>*** SEE ALTERNATIVE INSTALL METHODS BELOW</b>
	<b>**Note:</b> This is an alternative method for attaching the post cap to the post, pins or self-drillers, whichever you prefer. Pins will provide the cleanest most professional look and are a simple solution
	<b>***Note:</b> Construction adhesive or metal epoxy (not included) can be generously applied on the interior of the cap in the "adhesive trough" ring at the bottom in addition to or in place of mechanical fasteners.