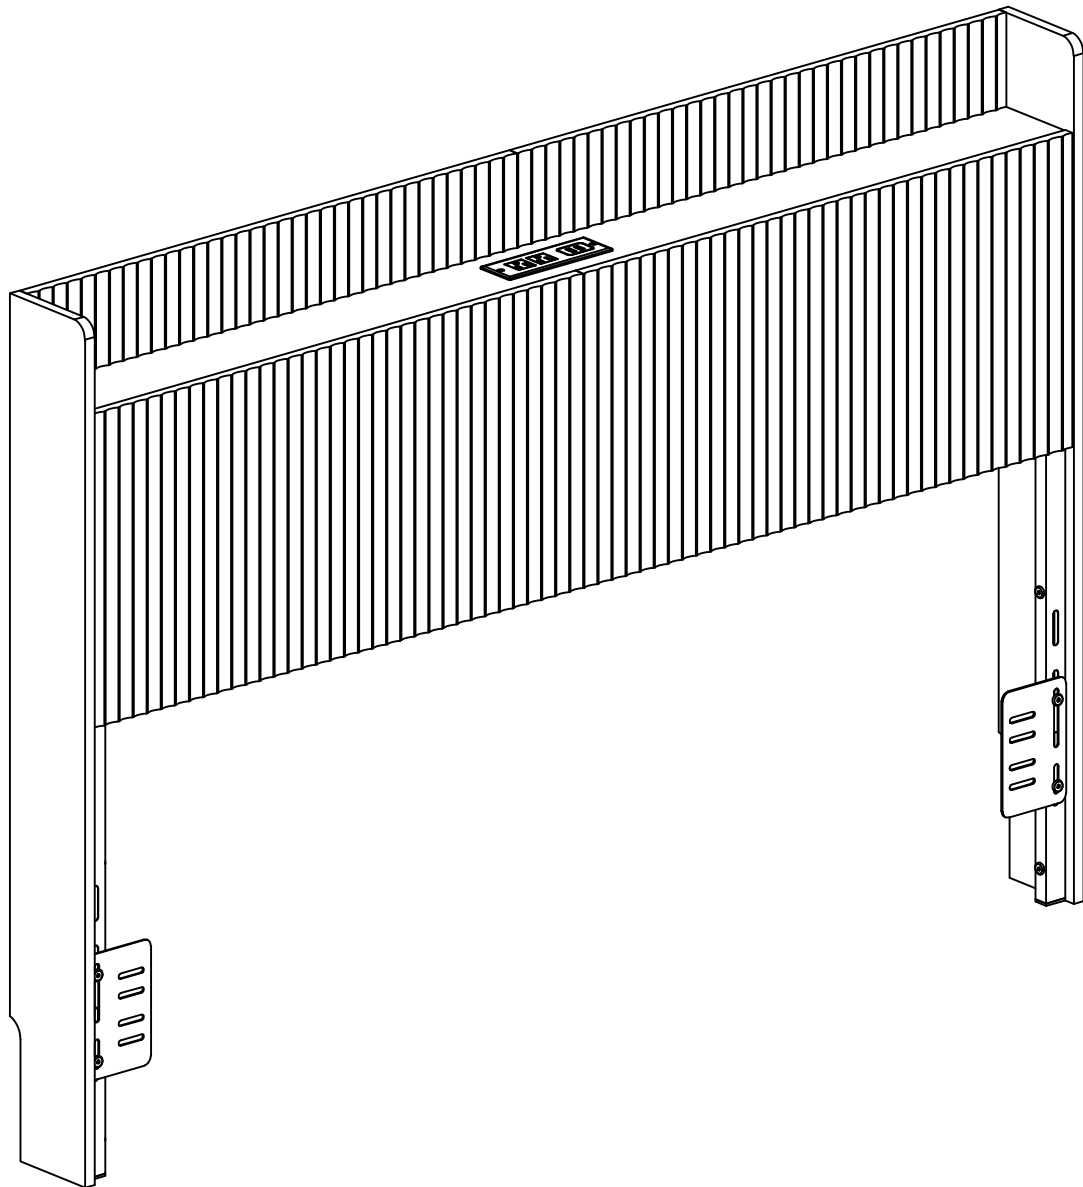
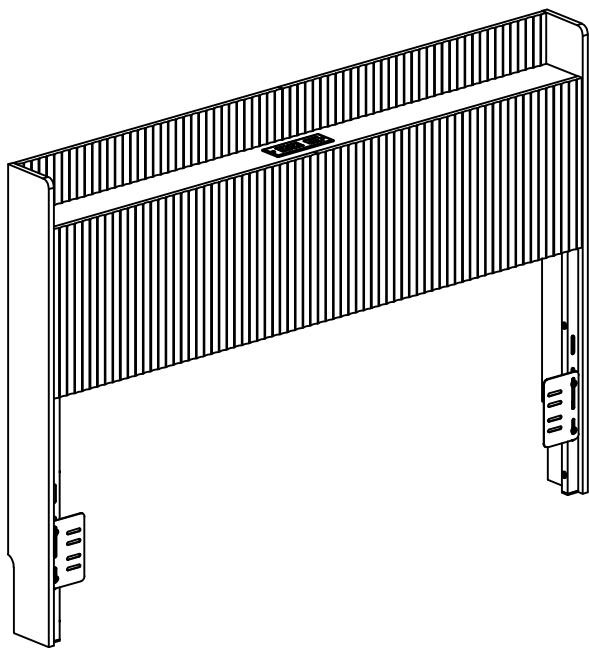


installation manual



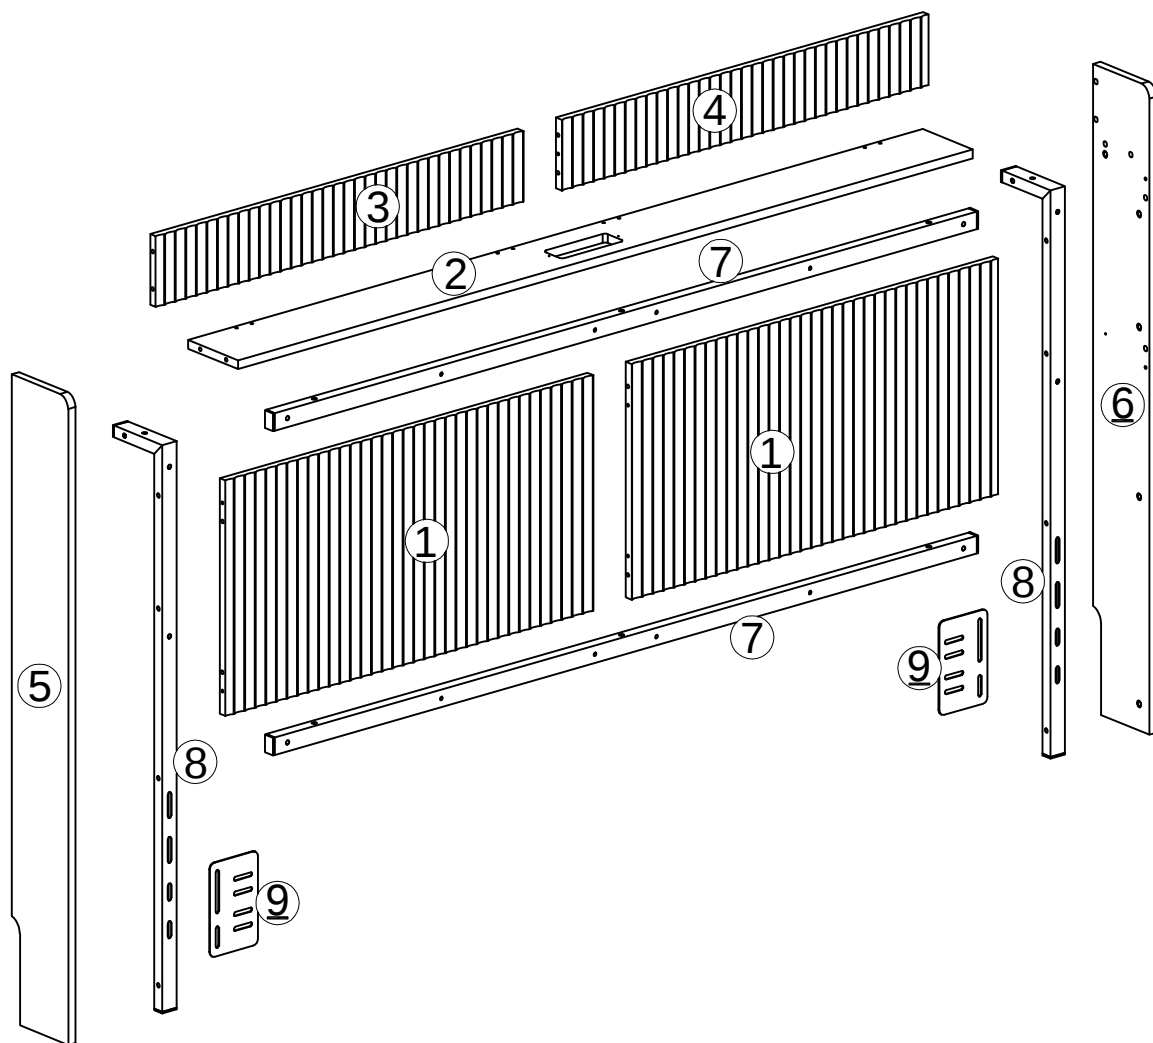


⚠ WARNING
CHOKING HAZARD- Small parts.
Not for children under 3 yrs.
Assembled by an adult.







TIPS

1. Please read the instructions fully before assembly. These instructions include important information which could ensure correct assembly. We have been working on providing high quality products for you. However, in the rare instance that your product is defective, missing parts or there are some issues, please don't hesitate to contact our customer service to submit parts requirements, assembly suggestion or warranty claims, and we will give the best solution as soon as possible. If necessary, we need you to provide some more clear pictures of the issue.
2. insert the screws in holes and tighten the screws, but not too tight, 70%~80% is ok, finally tighten all the screws. If some issues happened that some screws cannot target to the hole or some parts are difficult to install, please adjust the tightness of the screws.
3. 2 people are recommended to finish










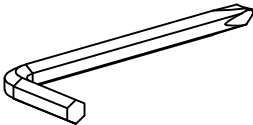
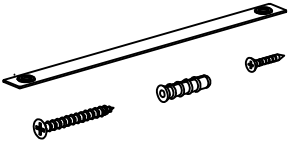
Components




Hardware

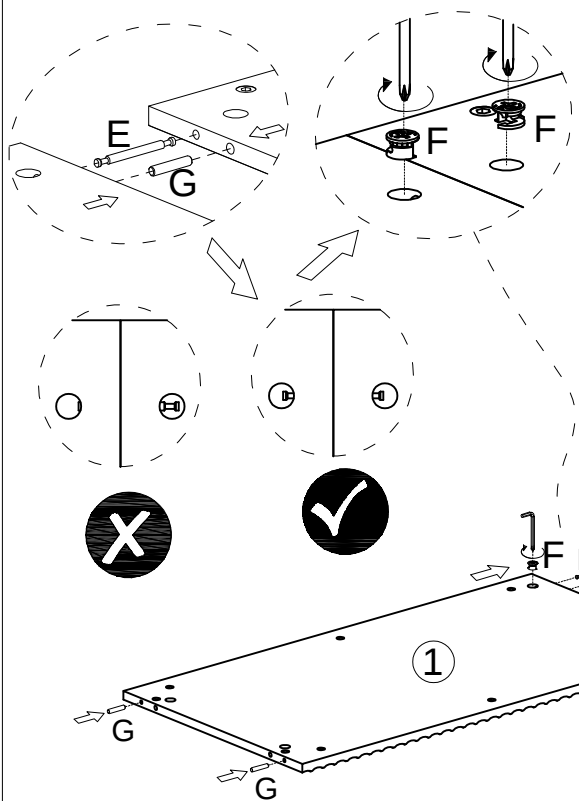
①  X 2	②  X 1	③  X 1	④  X 1
⑤  X 1	⑥  X 1	⑦  X 2	⑧  X 2
⑨  X 2			

Hardware

A M6 x 40  X 13+1	B M6 x 30  X 22+2	C M6 x 6  X 4+1	D M6 x 35  X 12+1
E Ø5 x 60  X 4	F Ø15 x 9.5  X 20+2	G Ø6 x 30  X 11+2	H 12 x 100  X 2+1
J 162x55x40  X 1	K 3.0 x 12  X 2+1	L M5 x 30  X 4+1	M M10  X 1
N M4  X 1	O M3  X 1	P  X 2	

01

E	F	G	N
Ø5 x 60	Ø15 x 9.5	Ø6 x 30	M4
			
X2	X4	X6	X1

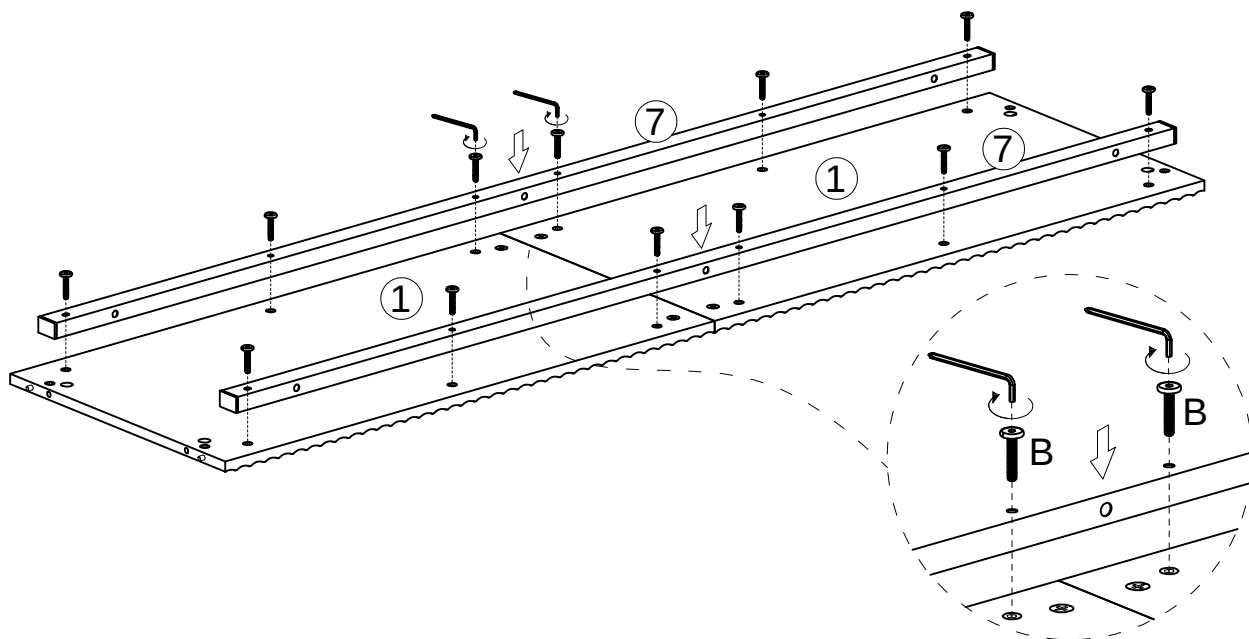


When the headboard vertical panels are closed , the distances on both sides of the double-headed part should be symmetrical . Place the three-in-one plate and lock the seams of the wooden panels clockwise at both ends .



02

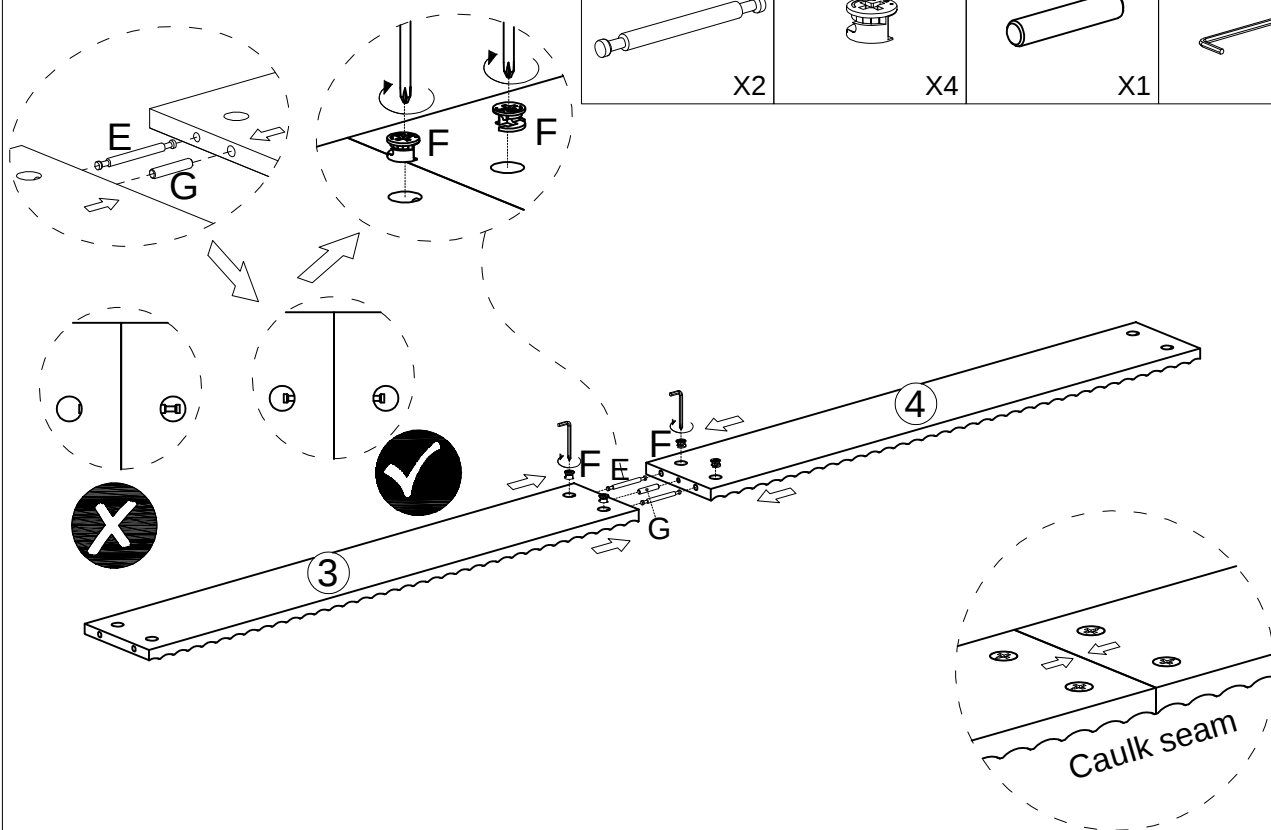
B	N
M6 x 30	M4
	
X12	X1

Note: First , lock the middle with screws ,then the two sides.
The pipe should be flush with the edge of the wooden board.



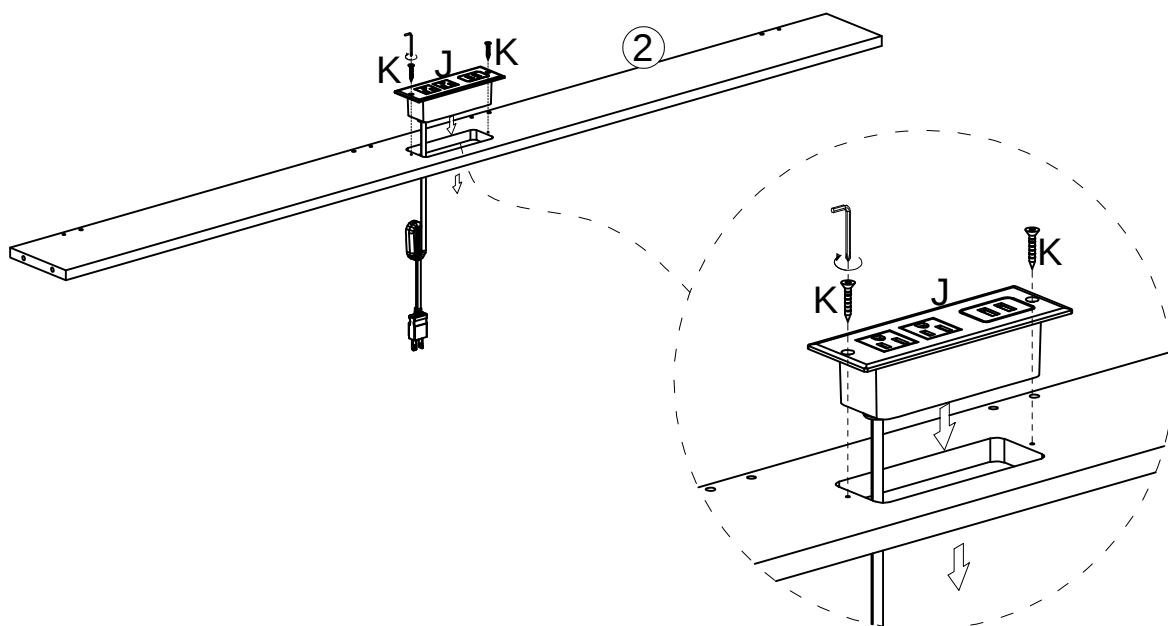
03

E	F	G	N
Ø5 x 60	Ø15 x 9.5	Ø6 x 30	M4
			
X2	X4	X1	X1




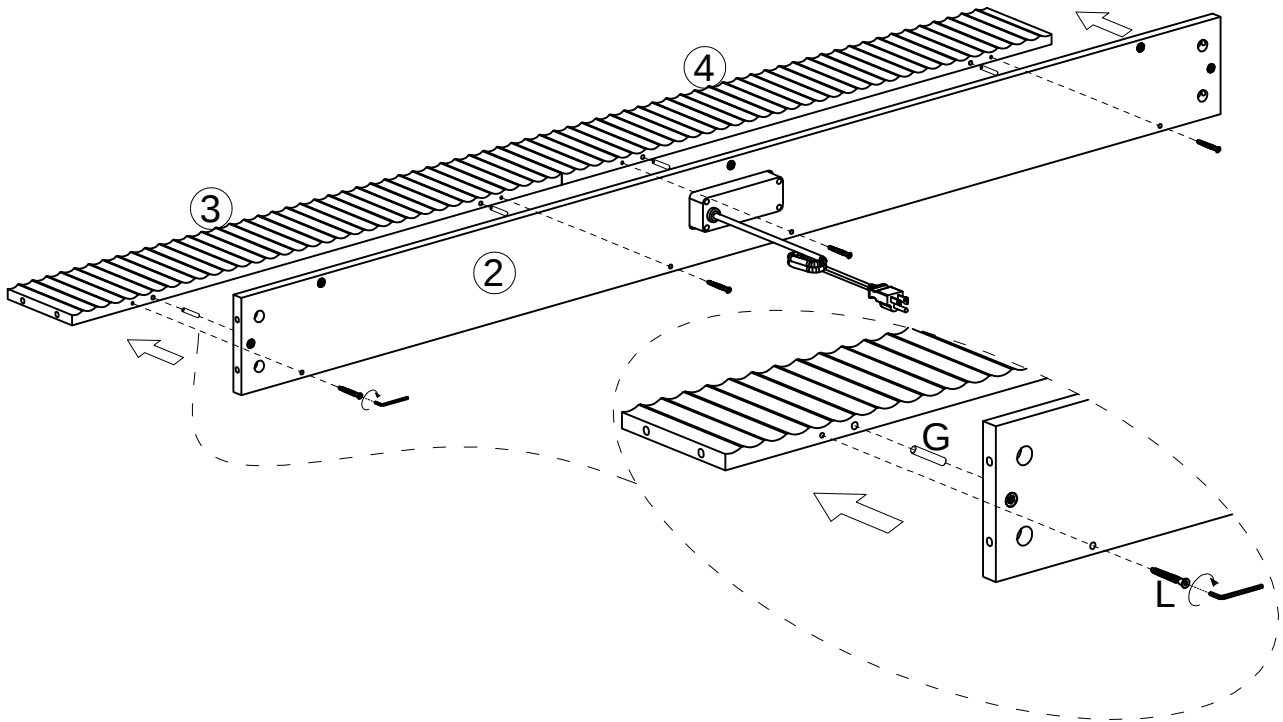
04

J	K	N
162x55x40	3.0 x 12	M4
		
X1	X2	X1




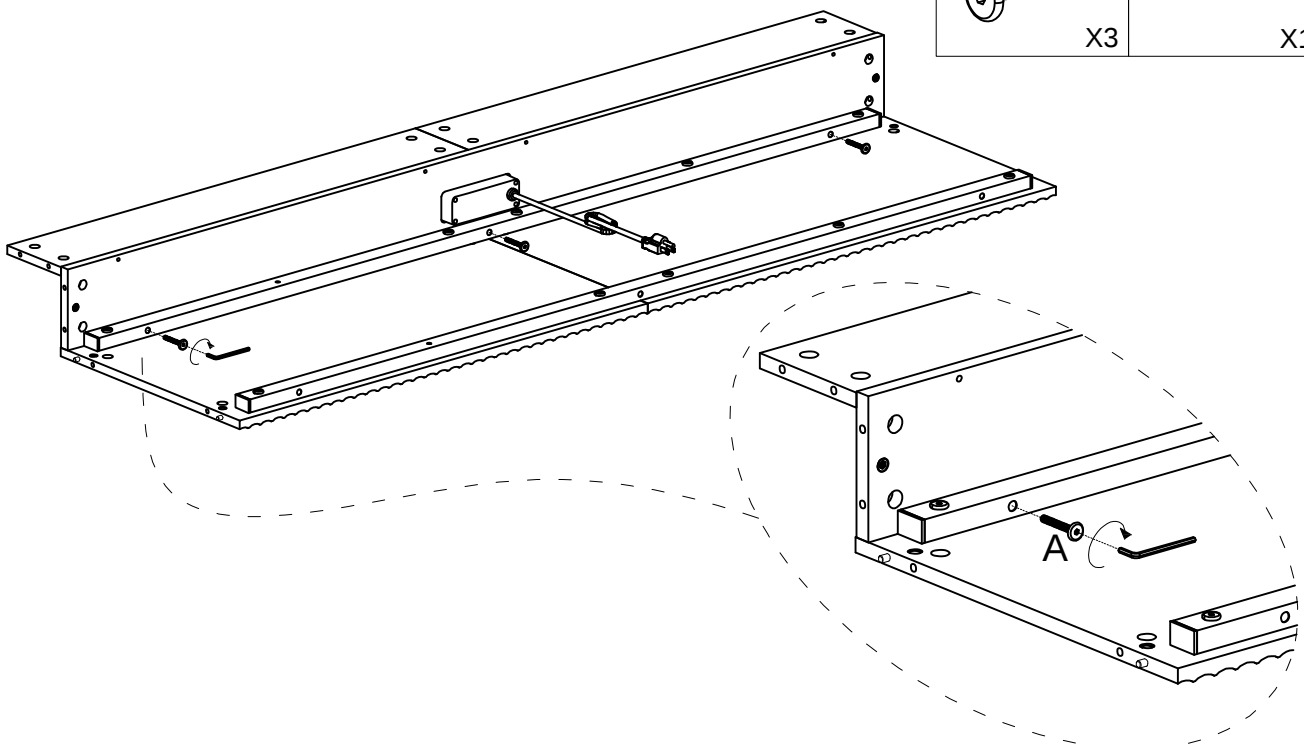
05

G	L	O
Ø6 x 30	M5 x 30	M3
		
X4	X4	X1




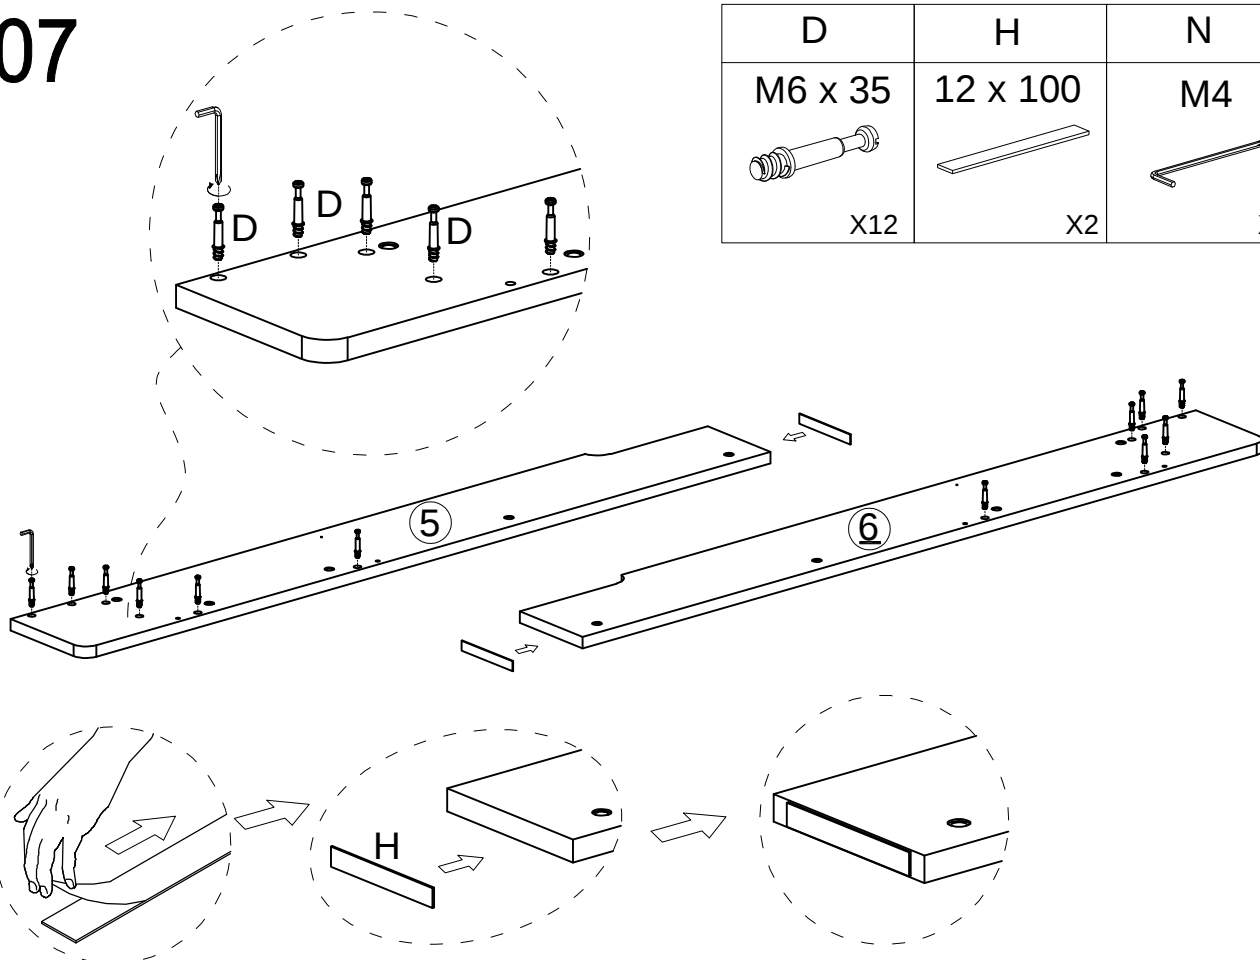
06

A	N
M6 x 40	M4
	
X3	X1



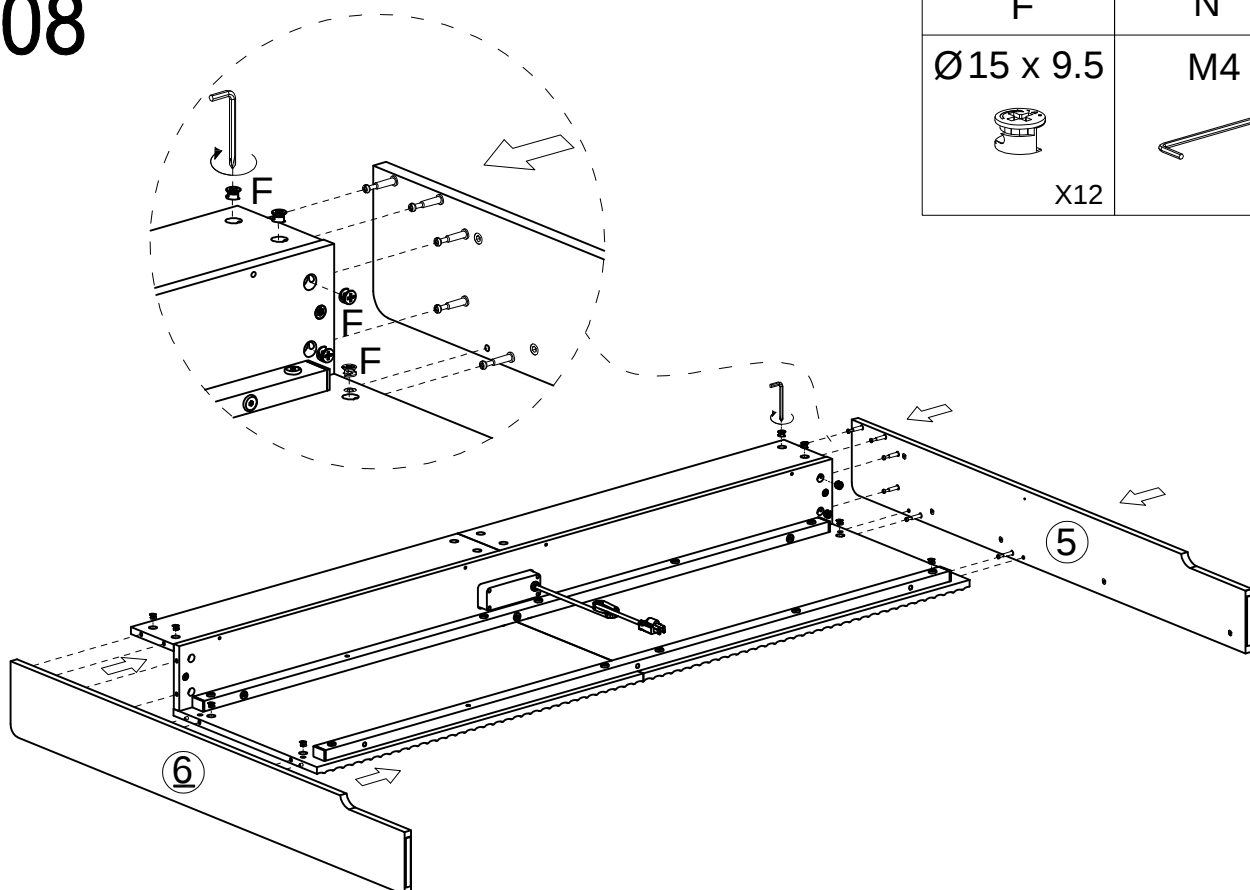
07

D	H	N
M6 x 35 	12 x 100 	M4 
X12	X2	X1

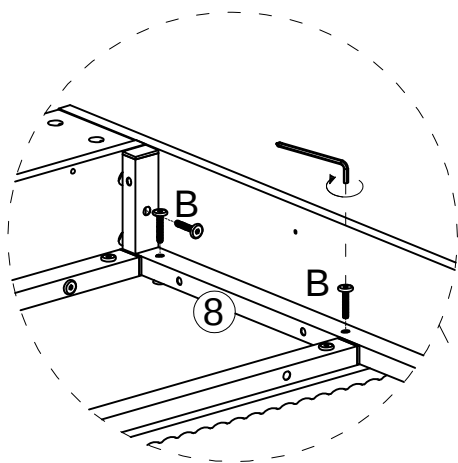


08

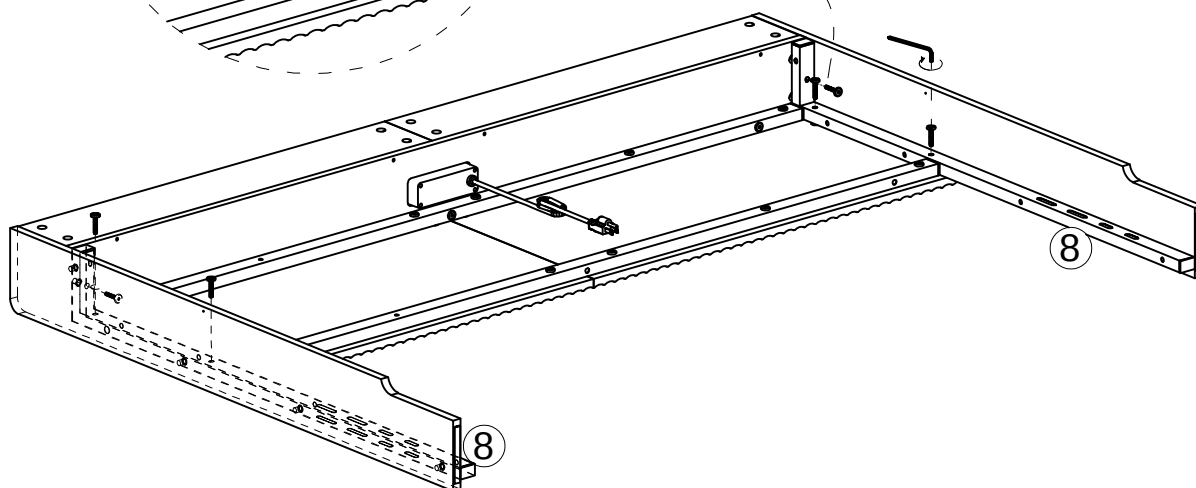
F	N
Ø15 x 9.5 	M4 
X12	X1




09

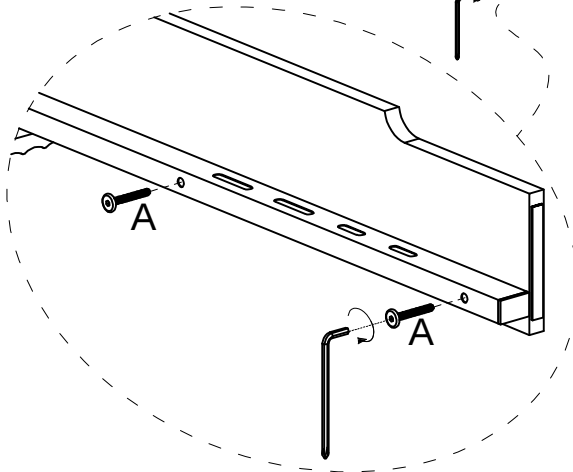
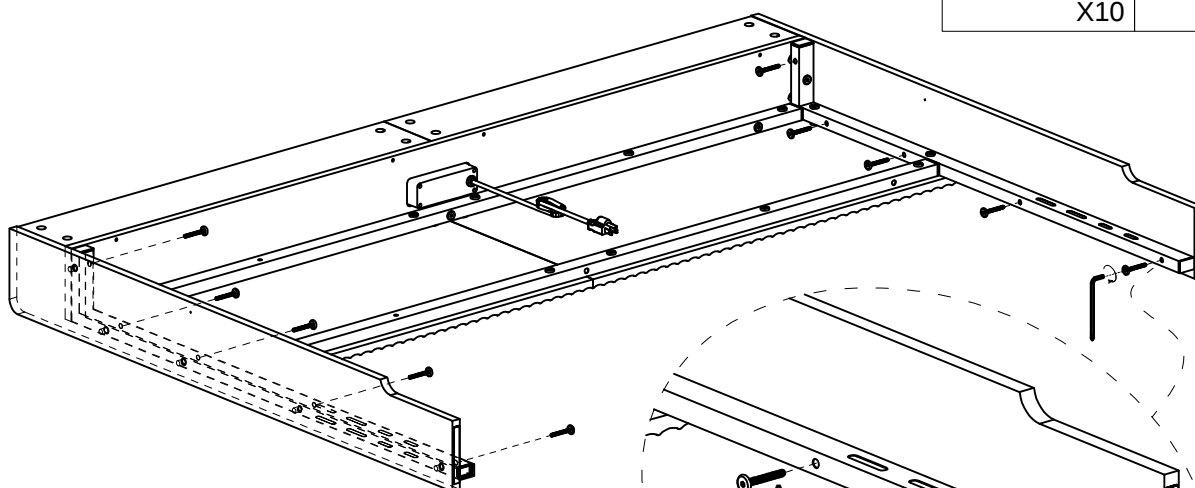




B	N
M6 x 30	M4
	
X6	X1

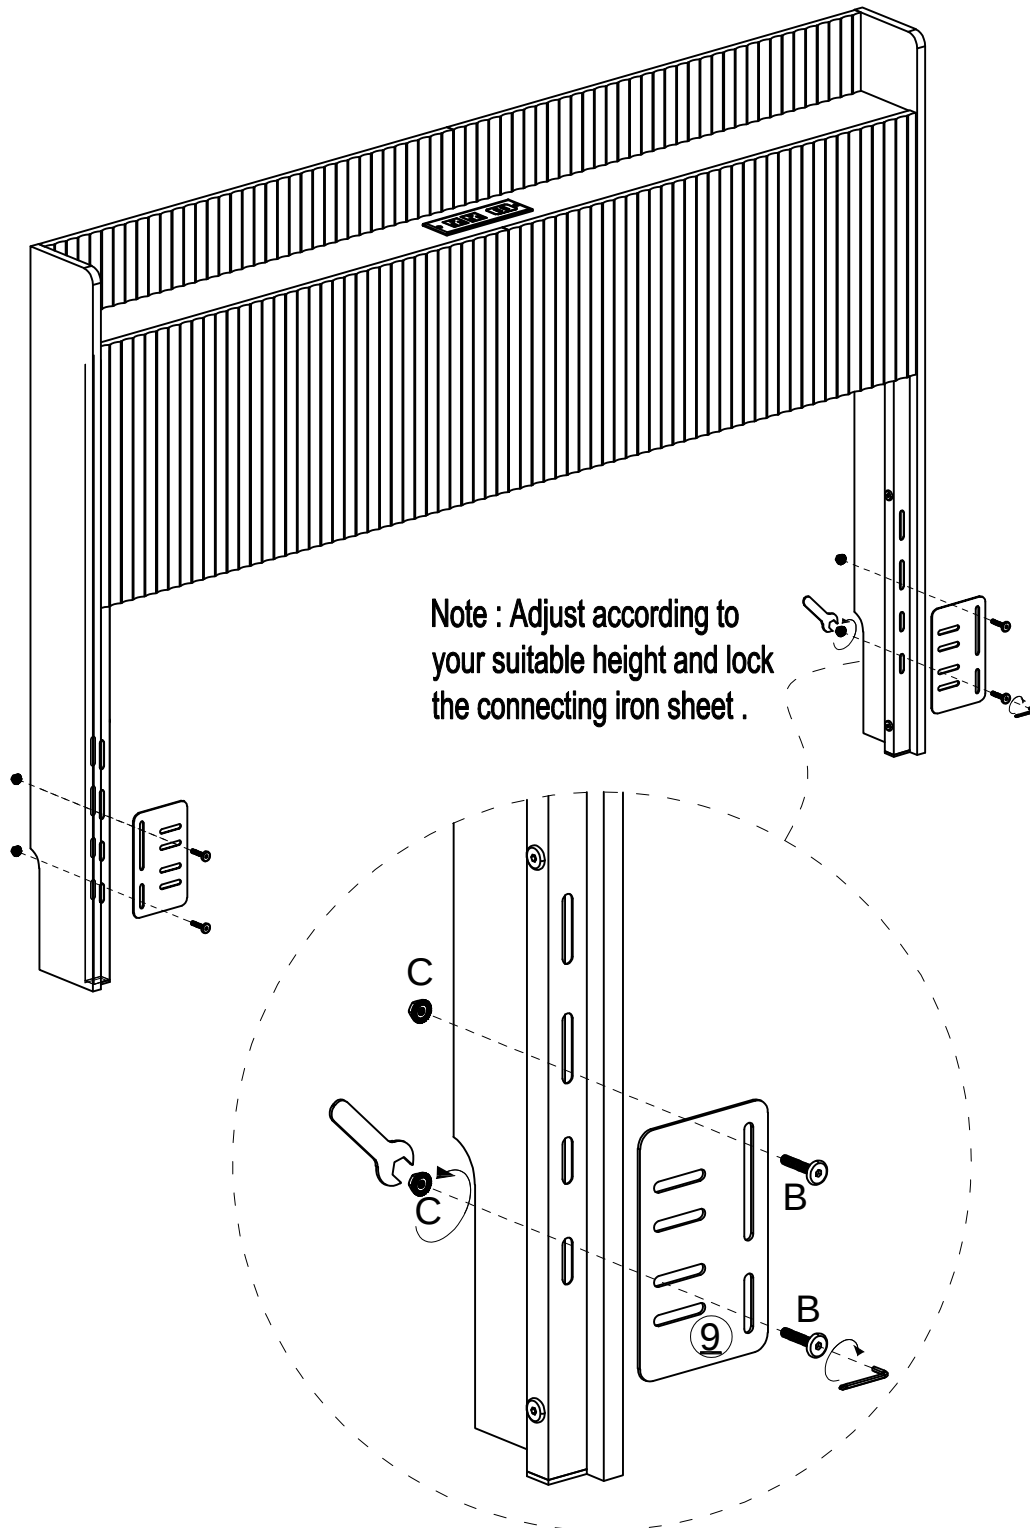


10

A	N
M6 x 40	M4
	
X10	X1

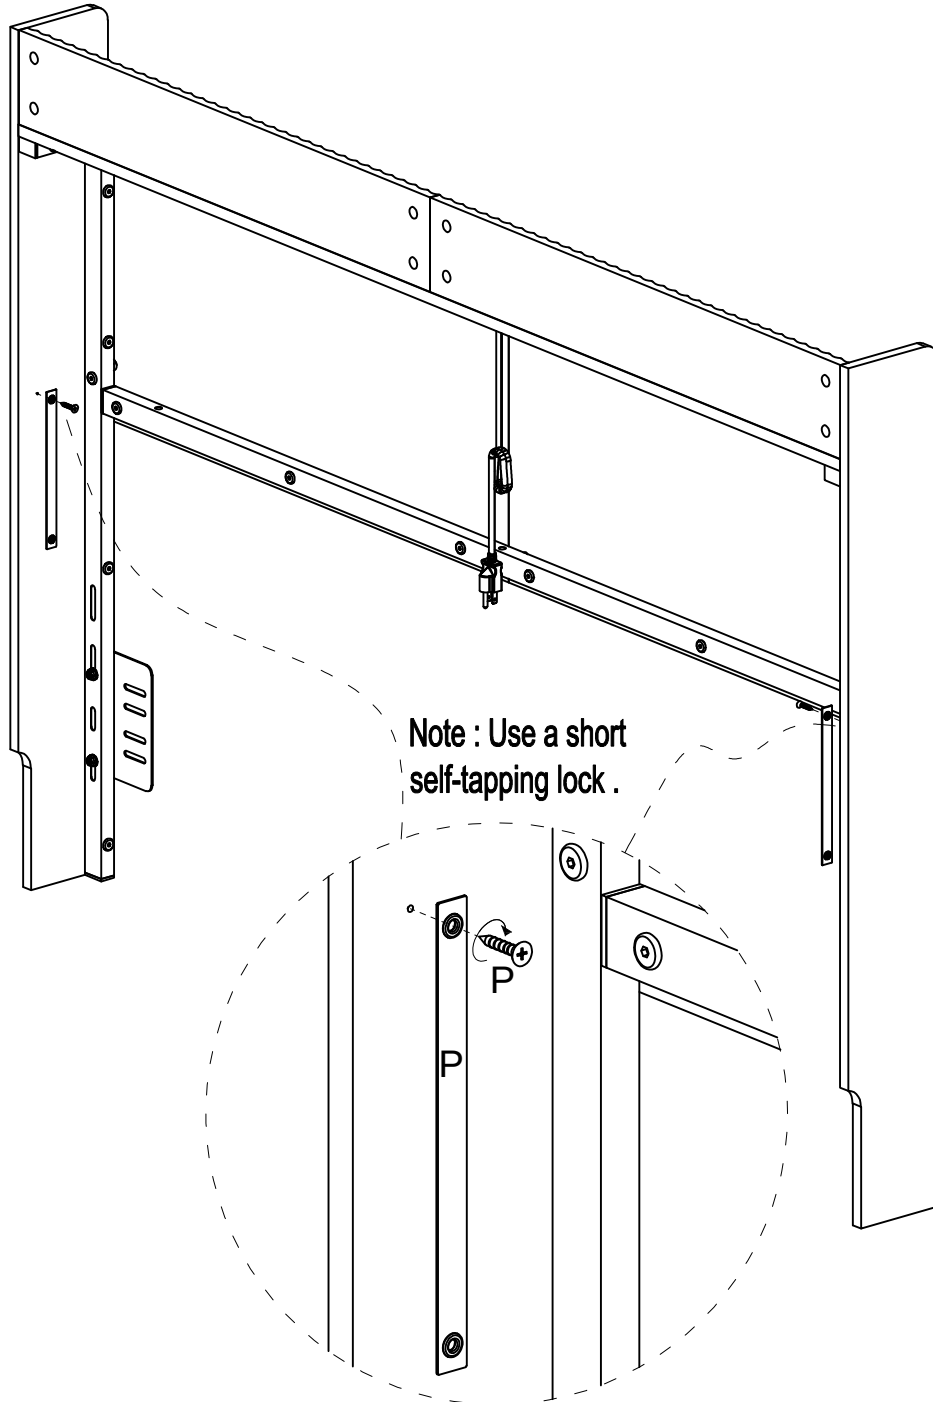


B	C	M	N
M6 x 30	M6 x 6		M4
			
X4	X4	X1	X1



12

P	N
	
X2	X1



13

P	N
	
X2	X1

