

## NOTICE

\*Please make sure that you have all parts indicated and they are in good condition before you begin assembly of this item. Refer to part list and hardware list below for guidance.

\*This item should be assembled on a soft surface to prevent scratching the finish during assembly.

\*This item may require periodic tightening.

\*If you are having difficulty, our friendly Customer Care team is always here to help. Please email [customersupport@safavieh.com](mailto:customersupport@safavieh.com)

## PREPARATION

\*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.

\*If any part is missing or damaged, do not attempt to assemble the product.


\*Estimated Assembly Time: 60 minutes.

\*Tools Required for Assembly (included): Allen Key

## CARE AND MAINTENANCE

Always use felt pads under all articles to prevent discoloration or softening of the lacquer. Plastic and rubber bases on items can discolor wood. Wipe up spills immediately and avoid common hazards such as hot dishes, harsh solvents and abrasives. Cleaning should be done with a soft lint free cotton cloth dampened with water or furniture polish. On highly used surfaces we recommend applying a quality paste wax which should be used on a regular basis to provide additional protection from scratches and spills. How often you apply the wax depends on how much wear the furniture receives.


### Part List

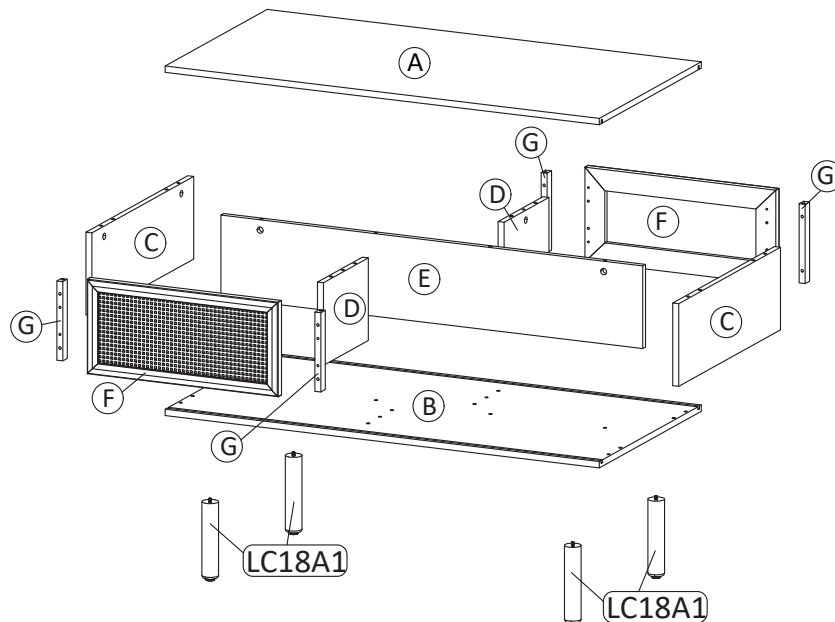

 **SAFAVIEH**  
FURNITURE





**Model# COF9601**

**Product Dimensions: 43"Wx23"Dx16"H**

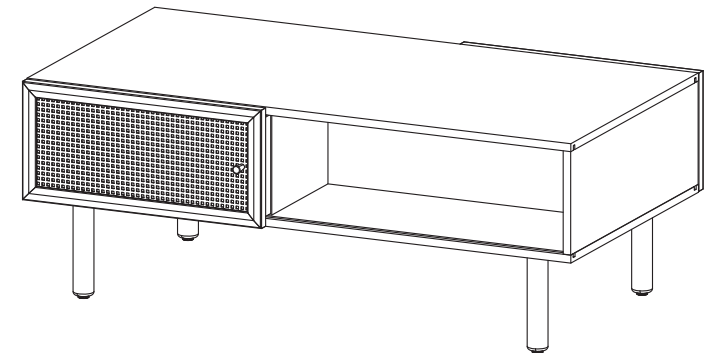

**WARNING :**  
WEIGHT CAPACITY: 86 LBS.  
SHELF LOAD CAPACITY : 22 LBS.

Hardware List

|                                                                                                                                      |                                                                                                                                  |                                                                                                                                      |                                                                                                                                         |                                                                                                                                              |                                                                                                                                         |
|--------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------|
| <div>HW1x8</div> <div></div> <div>Ø 6 x 35 mm</div> | <div>HW2x8</div> <div></div> <div>Ø 15 mm</div> | <div>HW3x8</div> <div></div> <div>Ø 15 mm</div>     | <div>HW4x20</div> <div></div> <div>Ø 8 x 30 mm</div> | <div>HW5x8</div> <div></div> <div>Ø 5 x 20 mm</div>       | <div>HW6x8</div> <div></div> <div>M 7 x 50 mm</div>  |
| <div>HW7x2</div> <div></div> <div>L 4</div>         | <div>HW8x2</div> <div></div> <div></div>        | <div>HW9x2</div> <div></div> <div>M 4 x 22 mm</div> | <div>HW10x4</div> <div></div> <div></div>            | <div>HW11x16</div> <div></div> <div>M 4.5 x 12.5 mm</div> | <div>HW12x8</div> <div></div> <div>M 8 x 39 mm</div> |
| <div>HW13x4</div> <div></div> <div></div>           | <div>HW14x4</div> <div></div> <div></div>       | <div>HW PM2x4</div> <div></div> <div></div>         |                                                                                                                                         |                                                                                                                                              |                                                                                                                                         |


## Part List & HW For Multi-Box Items

| Piece  | Description        | Qty | Carton Call |
|--------|--------------------|-----|-------------|
| A      | Top Board          | 1   | 1 of 1      |
| B      | Bottom Board       | 1   | 1 of 1      |
| C      | Side Board         | 2   | 1 of 1      |
| D      | Center Board 1     | 2   | 1 of 1      |
| E      | Center Board 2     | 1   | 1 of 1      |
| F      | Frame Door         | 2   | 1 of 1      |
| G      | Support Frame Door | 4   | 1 of 1      |
| LC18A1 | Leg                | 4   | 1 of 1      |


| Piece  | Description           | Qty | Carton Call |
|--------|-----------------------|-----|-------------|
| HW1    | Cambolt               | 8   | 1 of 1      |
| HW2    | CamLock               | 8   | 1 of 1      |
| HW3    | Screw Cap             | 8   | 1 of 1      |
| HW4    | Dowel Big             | 20  | 1 of 1      |
| HW5    | Dowel Small           | 8   | 1 of 1      |
| HW6    | Screw M 7 x 50 mm     | 8   | 1 of 1      |
| HW7    | Allen Key             | 2   | 1 of 1      |
| HW8    | Handle                | 2   | 1 of 1      |
| HW9    | Screw M 4 x 22 mm     | 2   | 1 of 1      |
| HW10   | Silicon Bumper        | 4   | 1 of 1      |
| HW11   | Screw M 4.5 x 12.5 mm | 16  | 1 of 1      |
| HW12   | Screw M 8 x 39 mm     | 8   | 1 of 1      |
| HW13   | Pin Per Top           | 4   | 1 of 1      |
| HW14   | Pin Sliding Bottom    | 4   | 1 of 1      |
| HW PM2 | Mounting Plate        | 4   | 1 of 1      |

# PREPARATION


Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.  
If any part is missing or damaged, do not attempt to assemble the product.  
Estimated Assembly Time: 60 minutes.

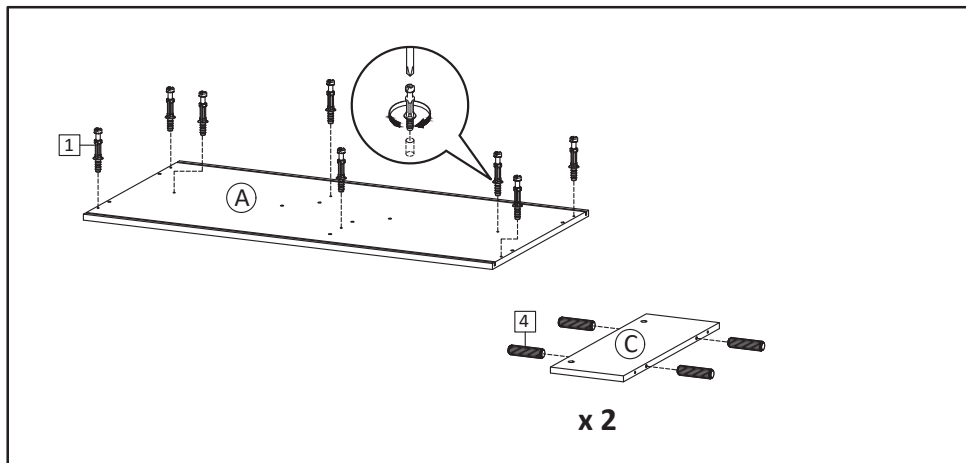


**STEP1:** Insert Cambolt (HW1) into Top Board (A).  
Insert Dowel Big (HW4) into Side Board (C).

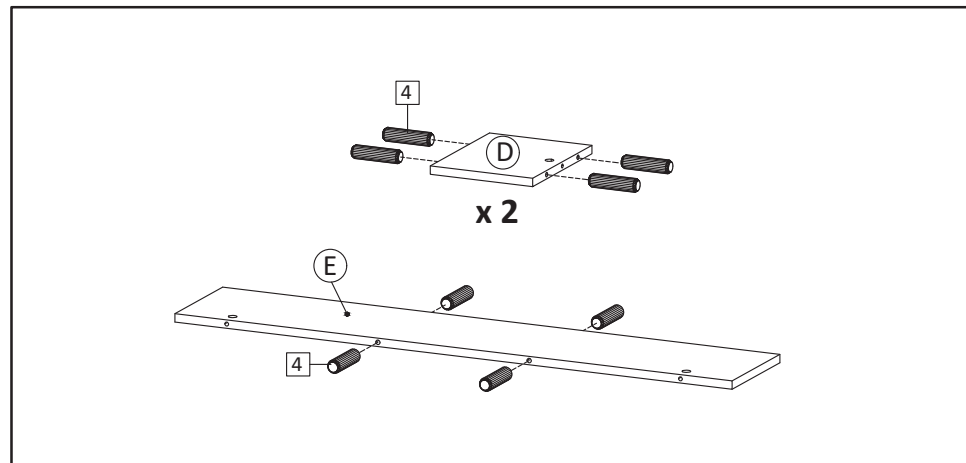


**STEP2:** Insert Dowel Big (HW4) into Center Board 1 (D) and  
Center Board 2 (E).

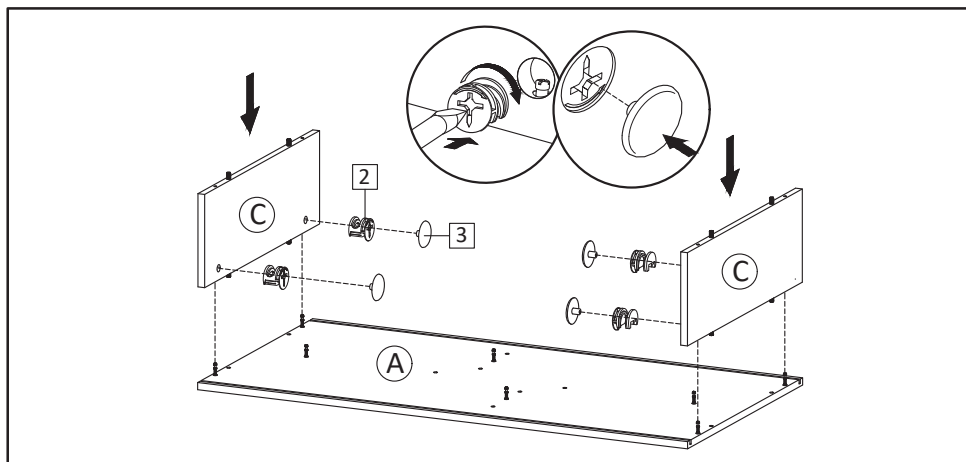


**STEP3:** Attach Side Board (C), into Top Board (A) .  
Insert Camlock (HW2) then tighten using screwdriver.  
Put Screw Cap (HW3) over the camlock.

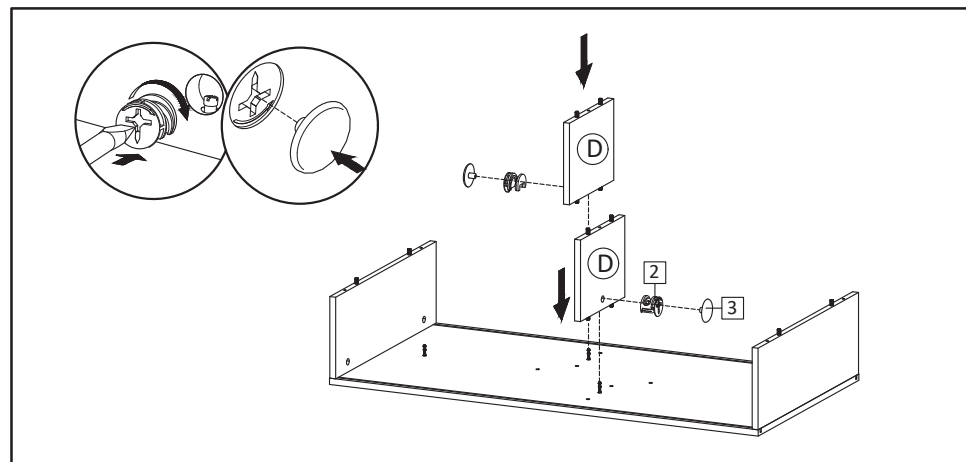


**STEP4:** Attach Center Board 1 (D), into Top Board (A) .  
Insert Camlock (HW2) then tighten using screwdriver.  
Put Screw Cap (HW3) over the camlock.

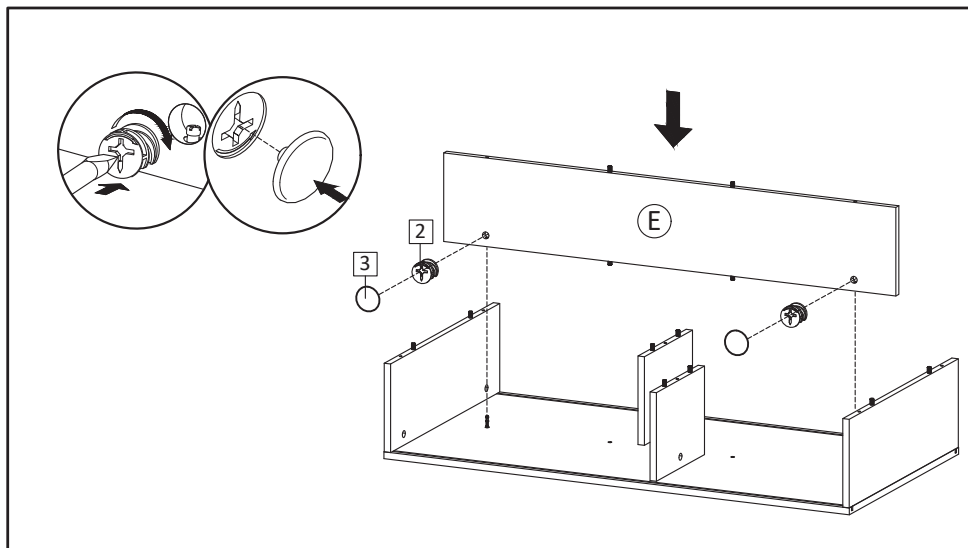


**STEP5:** Attach Center Board 2 (E), into Top Board (A) .  
Insert Camlock (HW2) then tighten using screwdriver.  
Put Screw Cap (HW3) over the camlock.

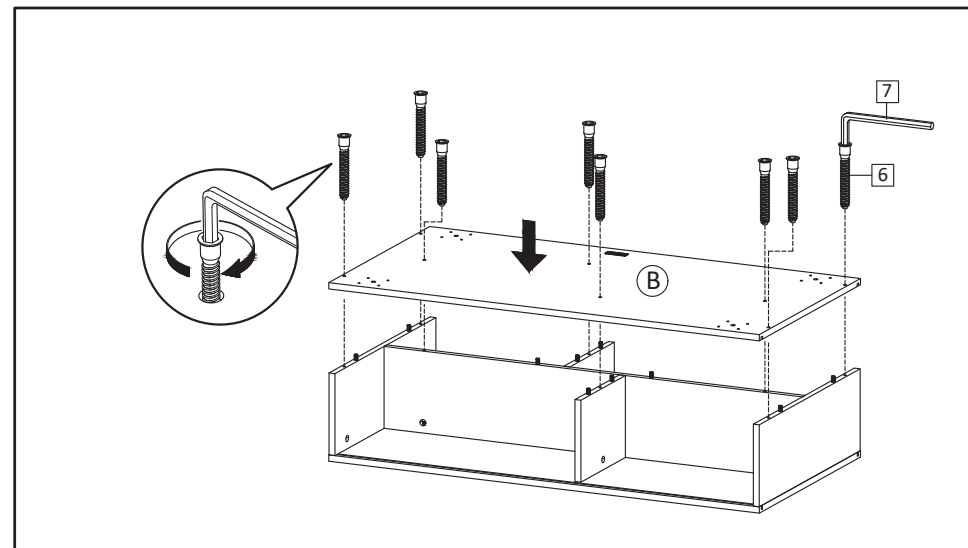



**Step6:** Insert Bottom Board (B) and secure with Screw M7x50 (HW6),  
tighten screws using Allen Key (HW7).

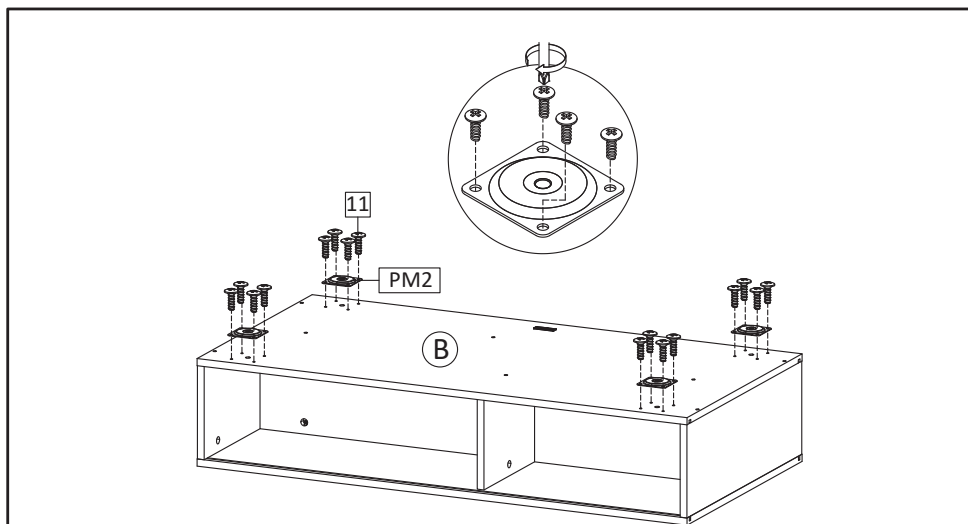




**STEP7:** Install Mounting Plate (PM2) and secure with  
screw M4.5x12.5mm (HW11) on Bottom Board.

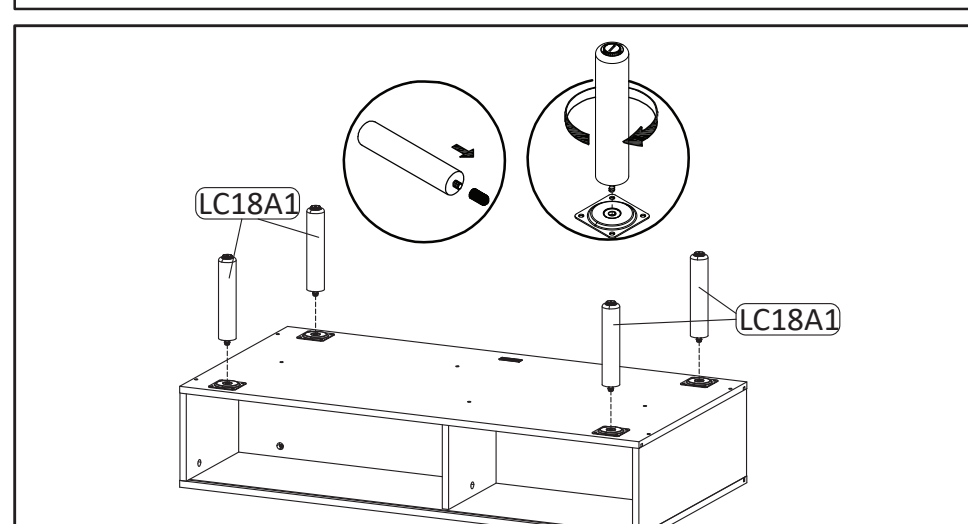


**STEP8:** Insert Leg (LC18A1) into Mounting Plate, tighten by rotating .  
the leg clockwise.

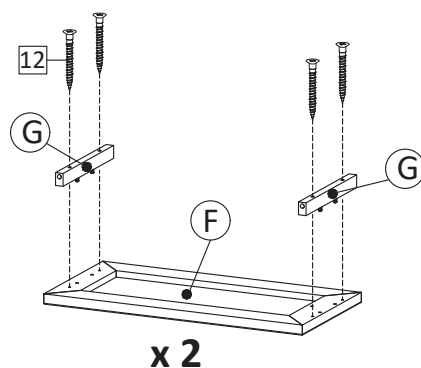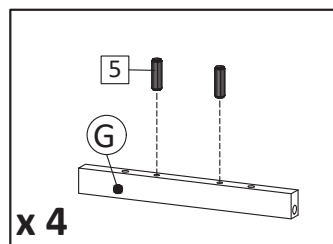




**STEP9:** Insert Dowel Small (HW5) into Support Frame (G). Insert Support Frame (G) and secure with Screw M8x39 (HW12) tighten screws into Frame Door (F).

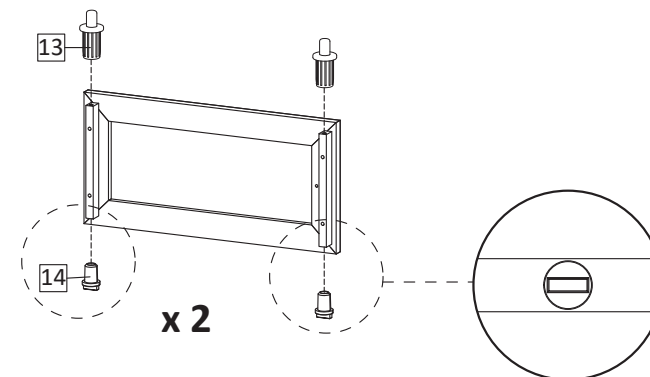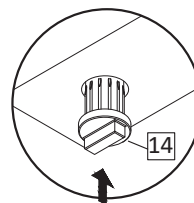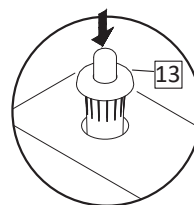



**STEP10:** Insert Pin Per Top (HW13) and Pin Sliding Bottom (HW14) into Frame Door.

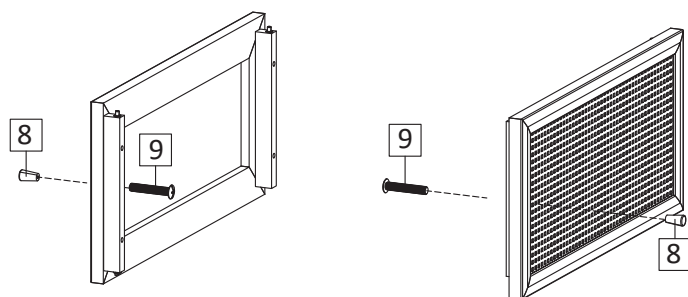

**STEP11:** Insert Handle (HW8) and Screw M4x22 mm (HW9) into Frame Door.

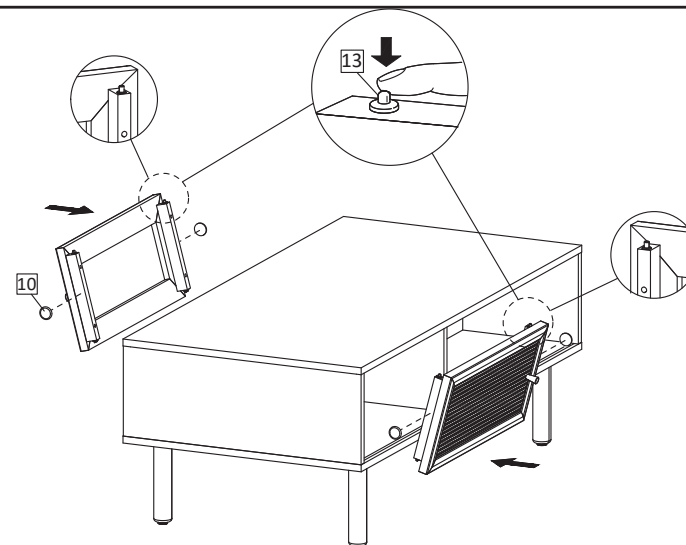

**STEP12:** Peel the back paper of Bumper (HW10) then place on both frame door, position as shown in the figure. Hold the frame door with position of the upper pin shown in facing upward. Put the frame door by inserting it to the upper groove on Bottom Board (1), then place the lower part aligned into the groove on Top Board (2). Repeat this step for the other door. Slide the doors to right and left ensuring the doors has been placed properly in the provided track.

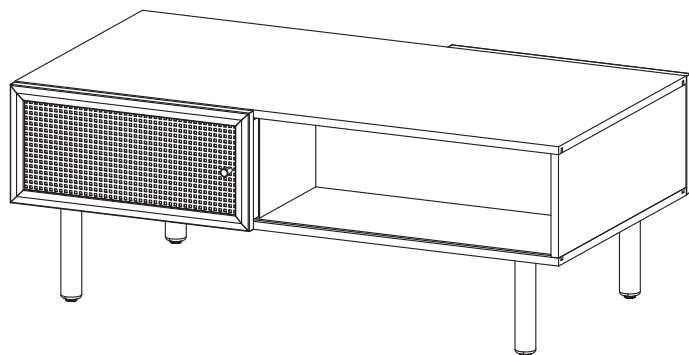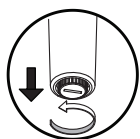

**STEP13:**Place your furniture on level floor. The legs come with adjustable leveller,adjust it as needed until your furniture sit steady on the floor.