


Hall Tree

Assembly Instructions - Please keep for future reference

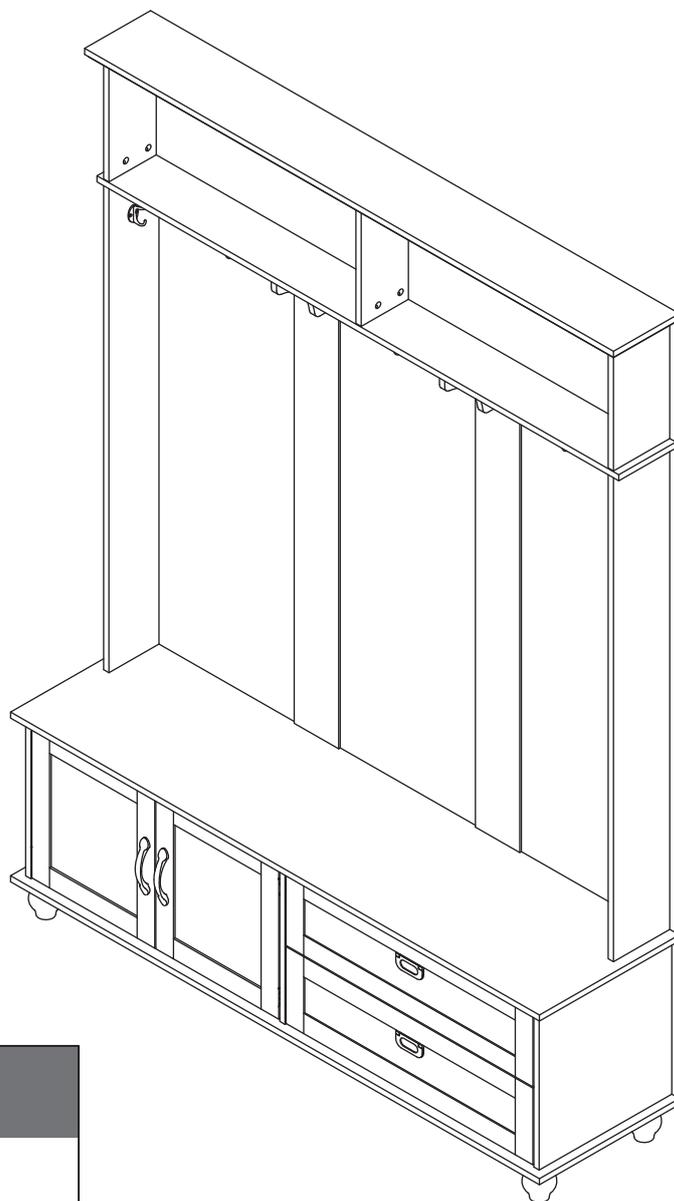

Dimensions

Width-59 inch

Depth-15.63 inch

Height-80.1 inch

Important – Please read these instructions fully before starting assembly



Safety and Care Advice

Important – Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- During assembly do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



power drill is set on a low torque setting.

- To reduce the likelihood of damaging your product please ensure that your

Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts
- Regularly check and ensure That all bolts and fittings are tightend properly.

WARNING
In order to help prevent overturning –
please follow these instructions


To help prevent product toppling over please follow the below steps:-

- Use the anti tip stap or wall fixing method provided (if applicable)
- Do not allow children to climb or hang on the furniture
- Do not open more than one drawer at a time
- Do not place heavy items in the top drawers
- Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose

Using Camlocks


Step 1

Connect the male camlock as directed in the assembly instructions using a screwdriver.

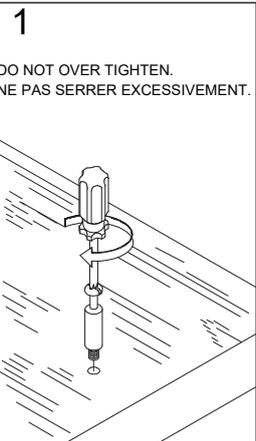

Step 2


Push the male camlock into the entry hole.

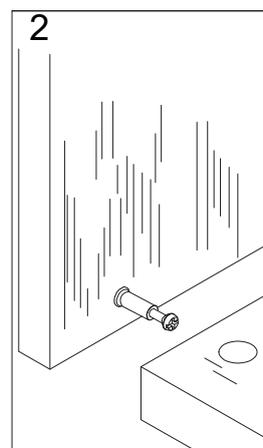

Step 3

Insert the female camlock as shown in the instruction.

Note: ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

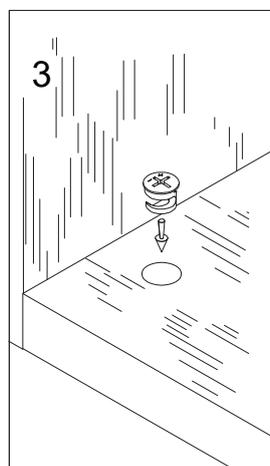


Step 4


Turn the female camlock clockwise with a screwdriver.

You should feel a click when the camlock is locked in place.

The joint is now secure.

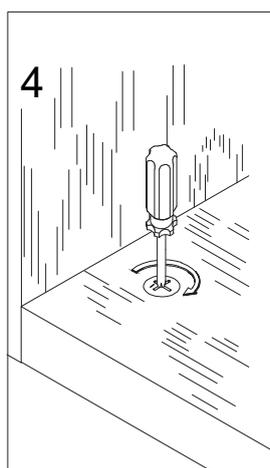


Assembly Instructions

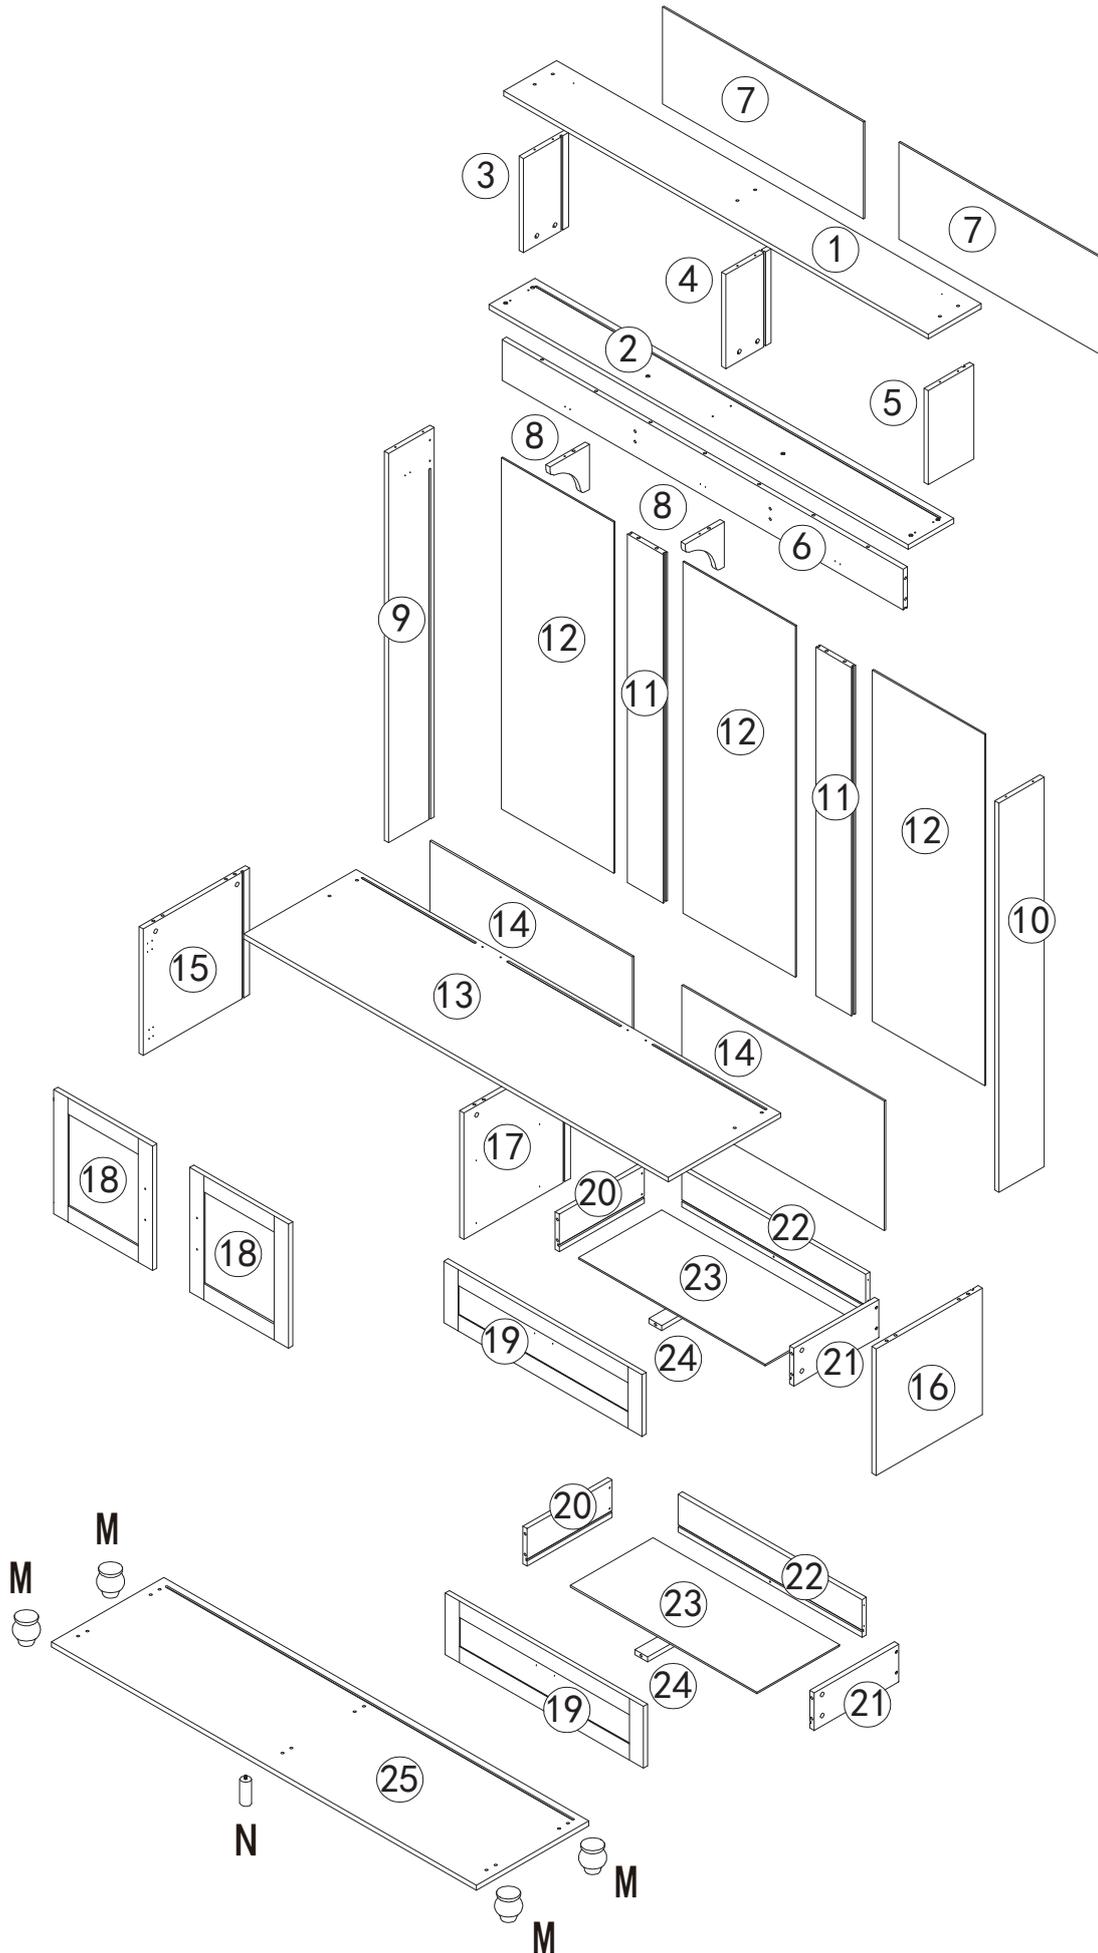

Assembly Instructions

① x1

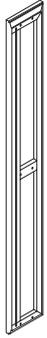

1500x187x33mm

② x1



1480x162x15mm

③ x1



277x160x15mm

④ x1



277x160x15mm

⑤ x1



277x160x15mm

⑥ x1



1416x126x15mm

⑦ x2



709x286x3mm

⑧ x2



139x139x15mm

⑨ x1



1200x160x15mm

⑩ x1




1200x160x15mm

⑪ x2



1074x126x15mm

⑫ x3

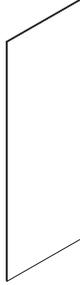

1083x397x5mm

⑬ x1




1500x397x15mm

⑭ x2




715x397x3mm

⑮ x1

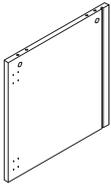


388x376x15mm

⑯ x1

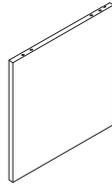


388x376x15mm

⑰ x1

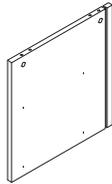

388x376x15mm

⑱ x2

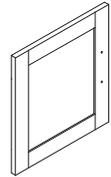

383x349x15mm

⑲ x2



700x189x15mm

⑳ x2



300x109x15mm

㉑ x2



300x109x15mm

㉒ x2



651x109x15mm

㉓ x2



660x293x3mm

㉔ x2



284x45x15mm

㉕ x1












1500x397x15mm


Components-Fittings

Please check you have all the panels listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.
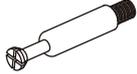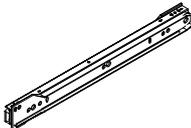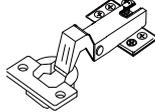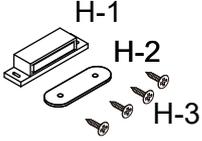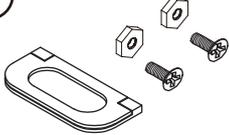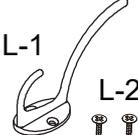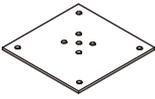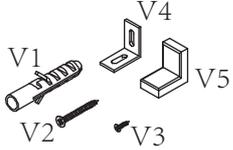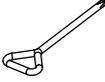
<p>(A)</p>  <p>Cam Bolt x 38+2</p>	<p>(B)</p>  <p>Cam Lock x 38+2</p>	<p>(C)</p>  <p>5*40mm Screw x 28+2</p>	<p>(D)</p>  <p>5*50mm Screw x 6+2</p>
<p>(E)</p>  <p>8*30mm Dowel x 16+2</p>	<p>(F)</p>  <p>300mm Drawer slide x 2</p>	<p>(G)</p>  <p>Hinge x 4</p>	<p>(H)</p>  <p>Magnetic attraction x 2</p>
<p>(J)</p>  <p>Handle x 2</p>	<p>(K)</p>  <p>Handle x 2</p>	<p>(L)</p>  <p>Clothes-hook x 5</p>	<p>(M)</p>  <p>80mm Foot x 4</p>
<p>(N)</p>  <p>70mm Midfoot x 1</p>	<p>(O)</p>  <p>Iron Sheet x 4</p>	<p>(P)</p>  <p>Iron Sheet x 1</p>	<p>(R)</p>  <p>Adjusting the feet x 1</p>
<p>(S)</p>  <p>Back panel buckle x 42+3</p>	<p>(T)</p>  <p>3.5*14mm Screw x 80+5</p>	<p>(U)</p>  <p>Perfect sticker x 25</p>	<p>(V)</p>  <p>Anti dumping x 2 set</p>
<p>(X)</p>  <p>Screwdriver x 1</p>			

1.

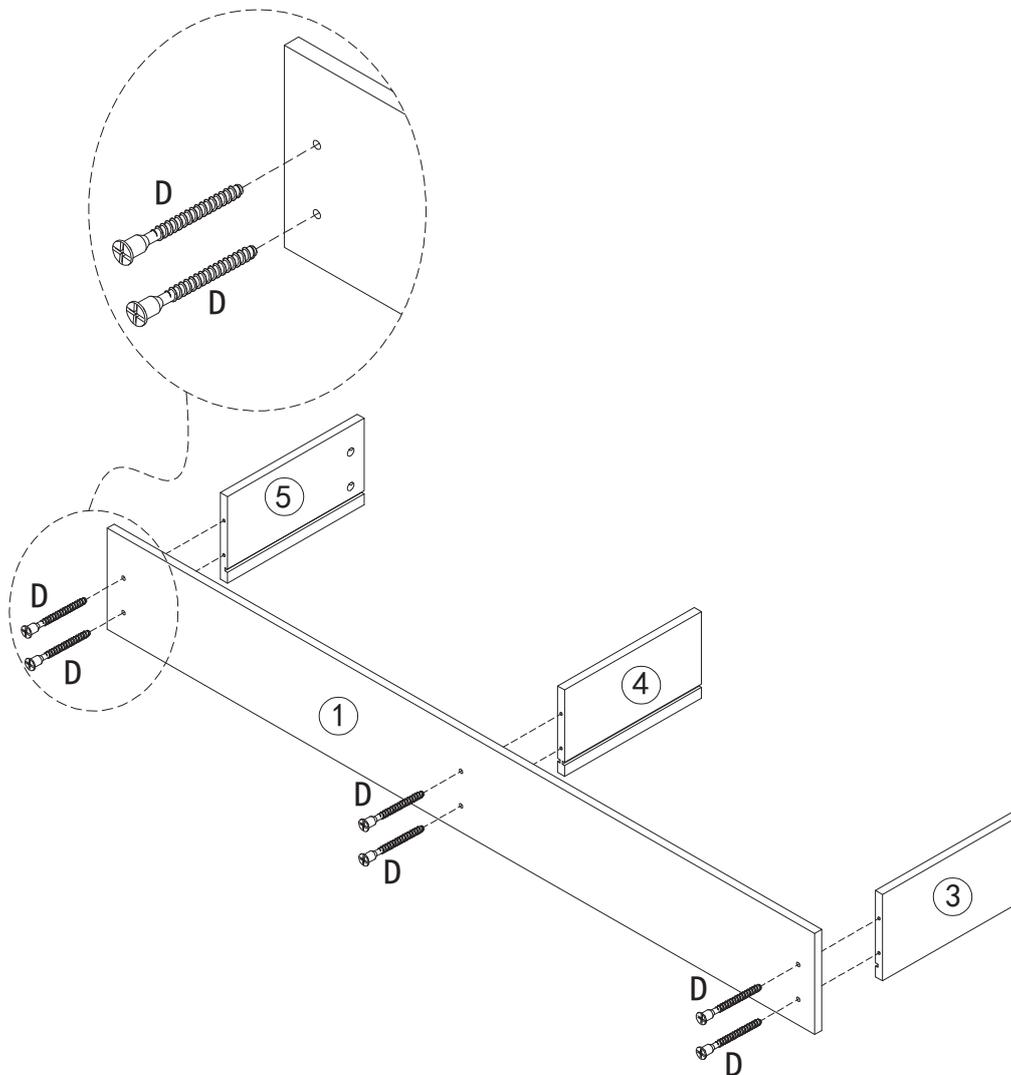


D*6





5*50mm

2.

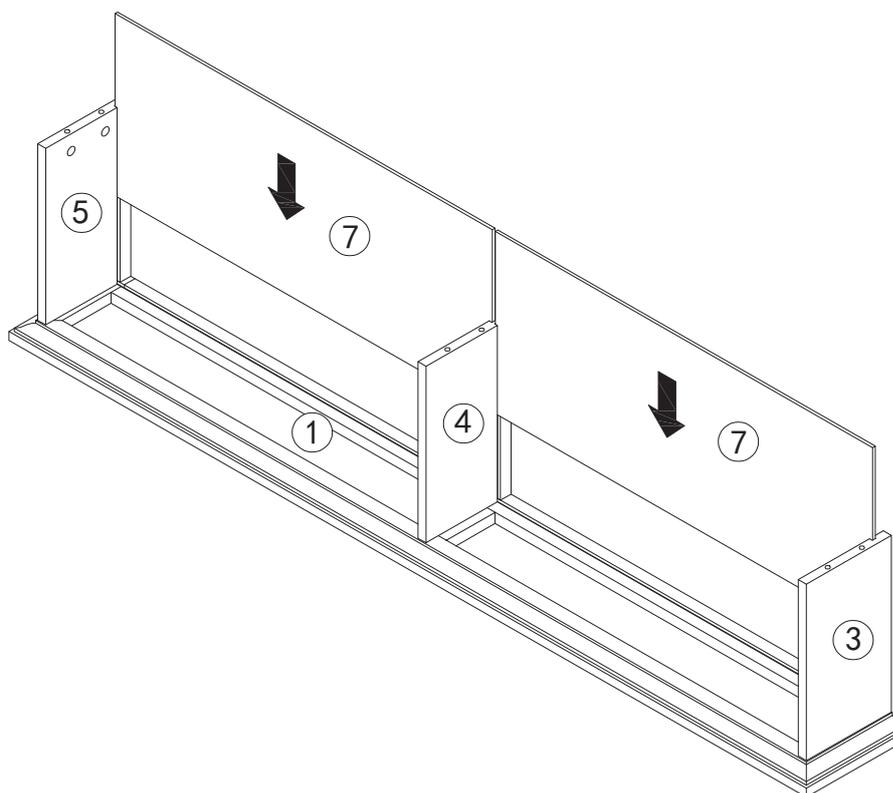


3.

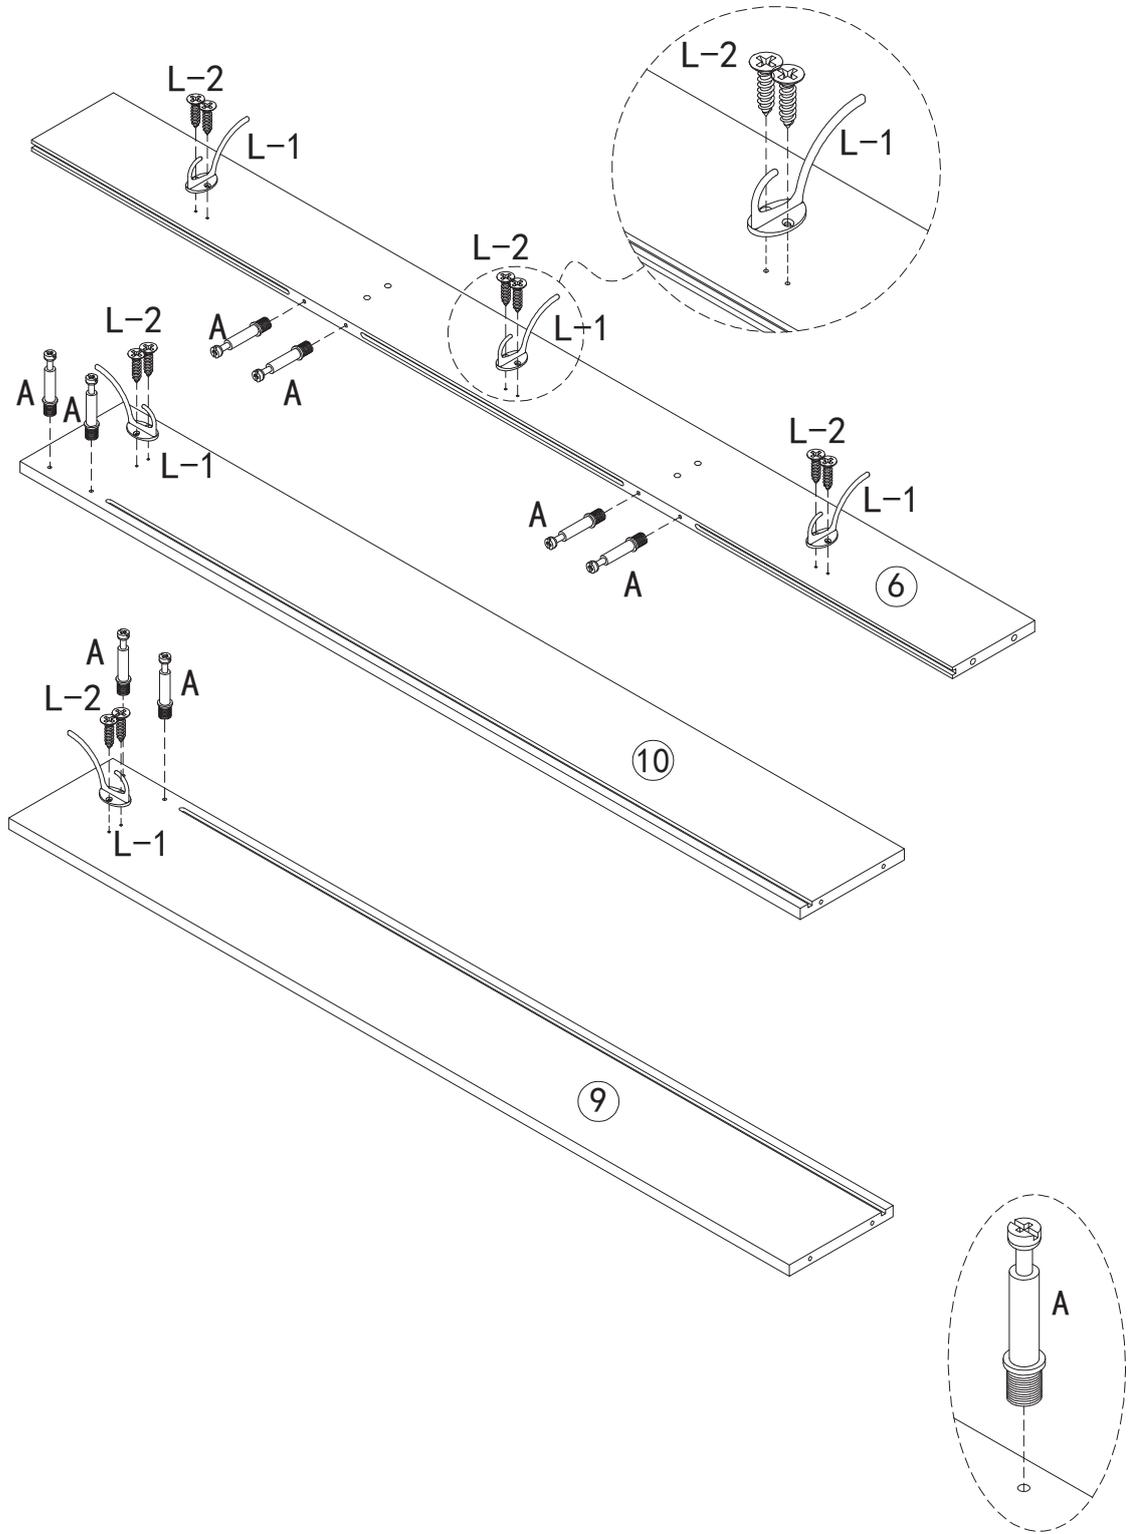

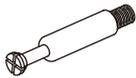
<p>A*8</p> 	<p>L*5</p>    
---	---


4.

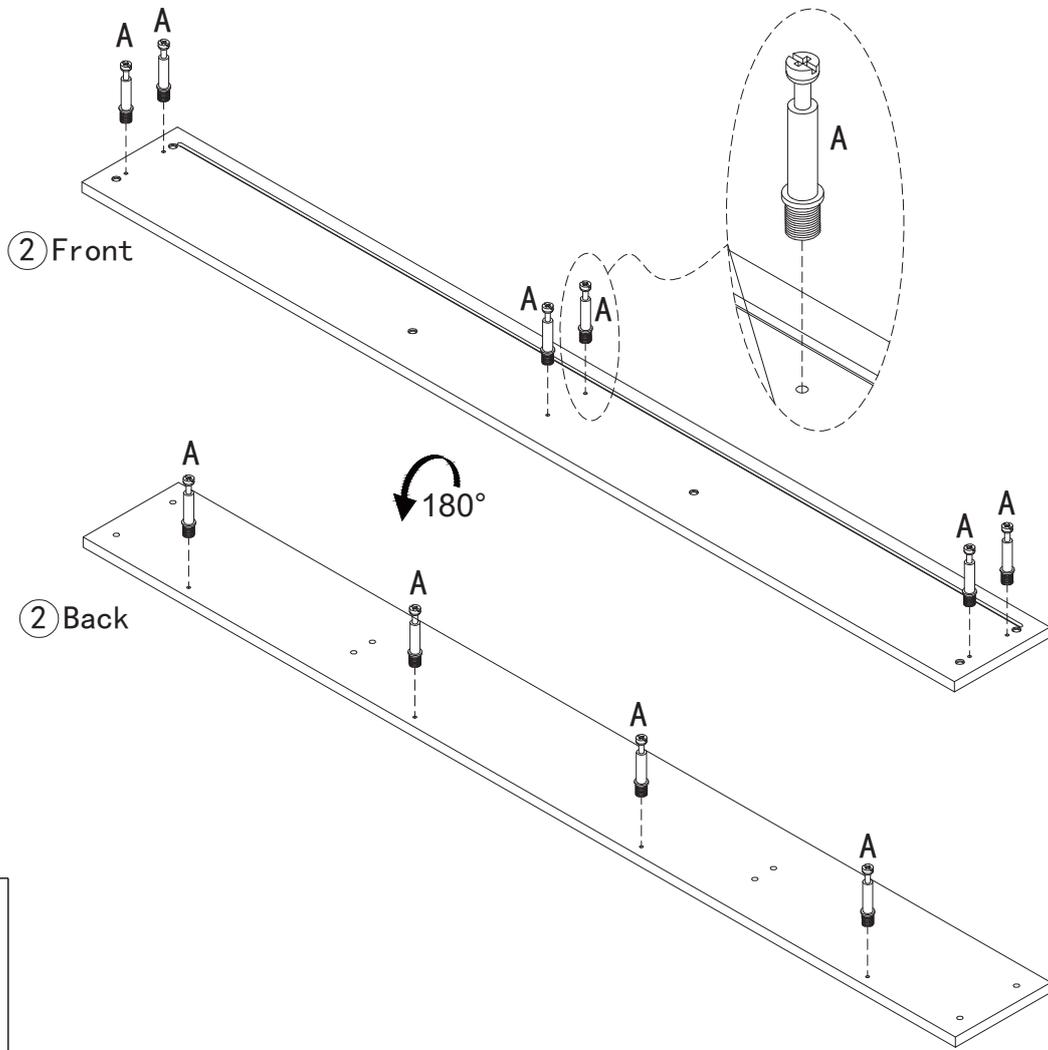

A*10

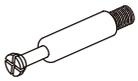

5.

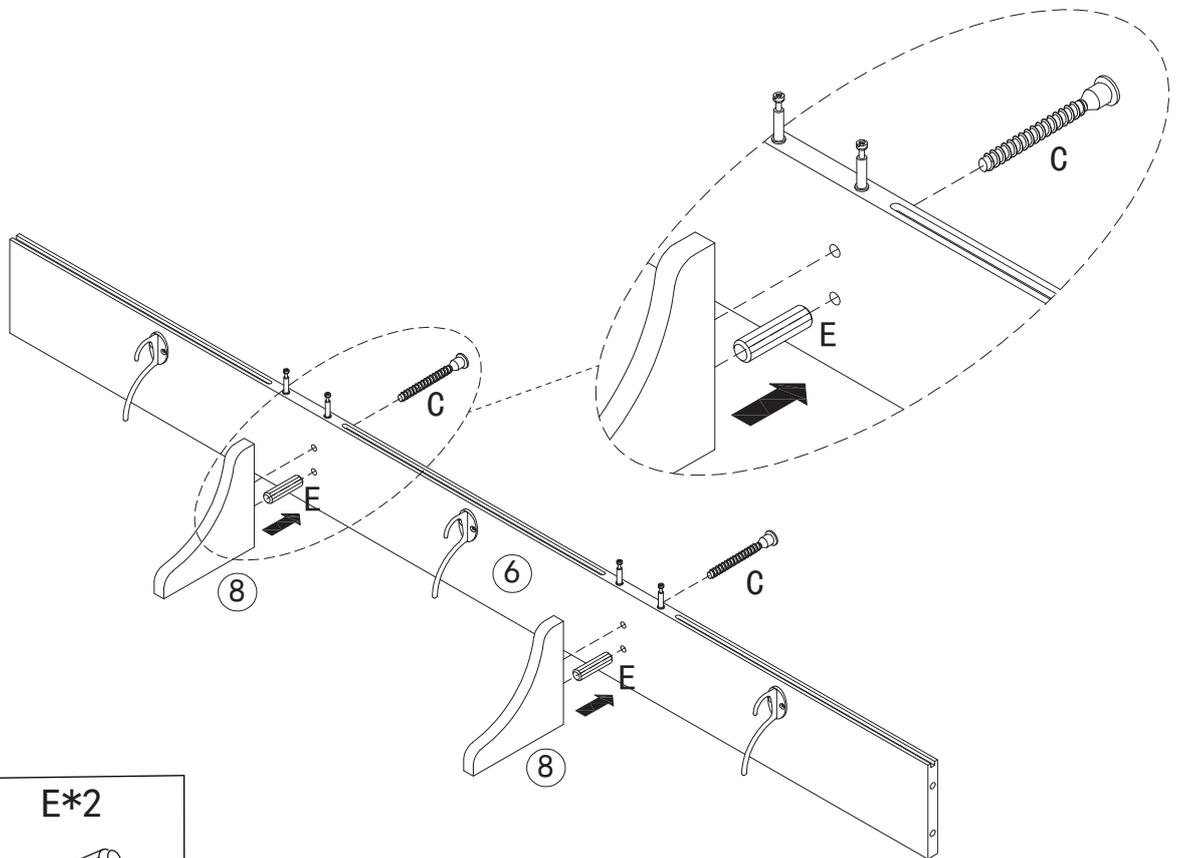


C*2




5*40mm


E*2

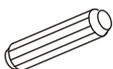


6.

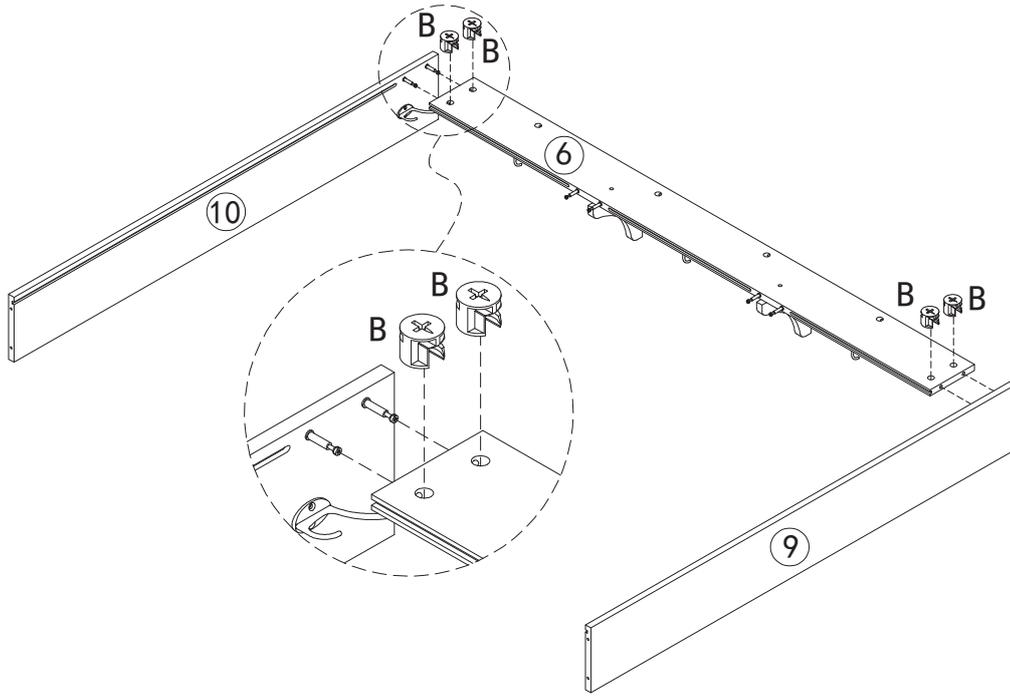

B*4

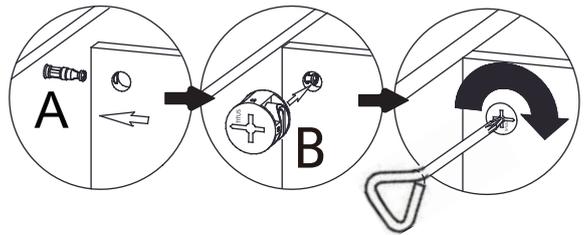

7.

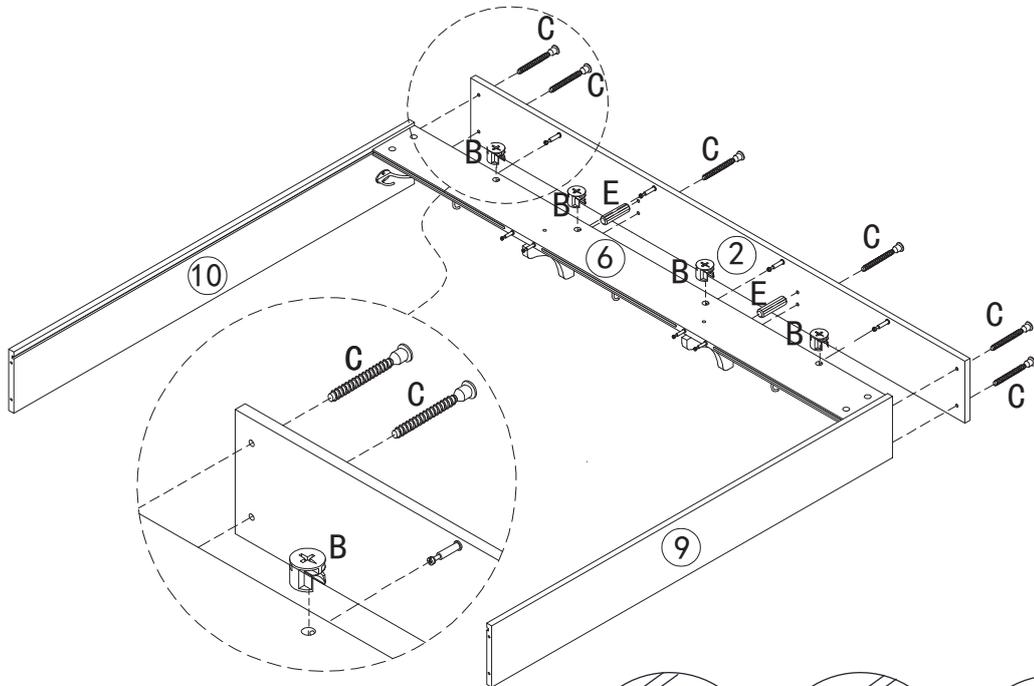

B*4




C*6




5*40mm


E*2

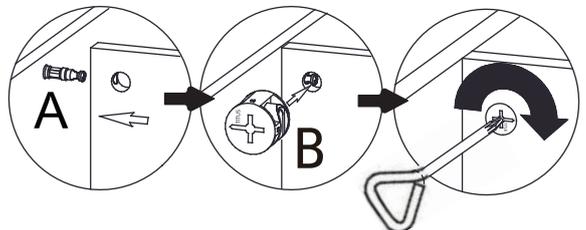


8.

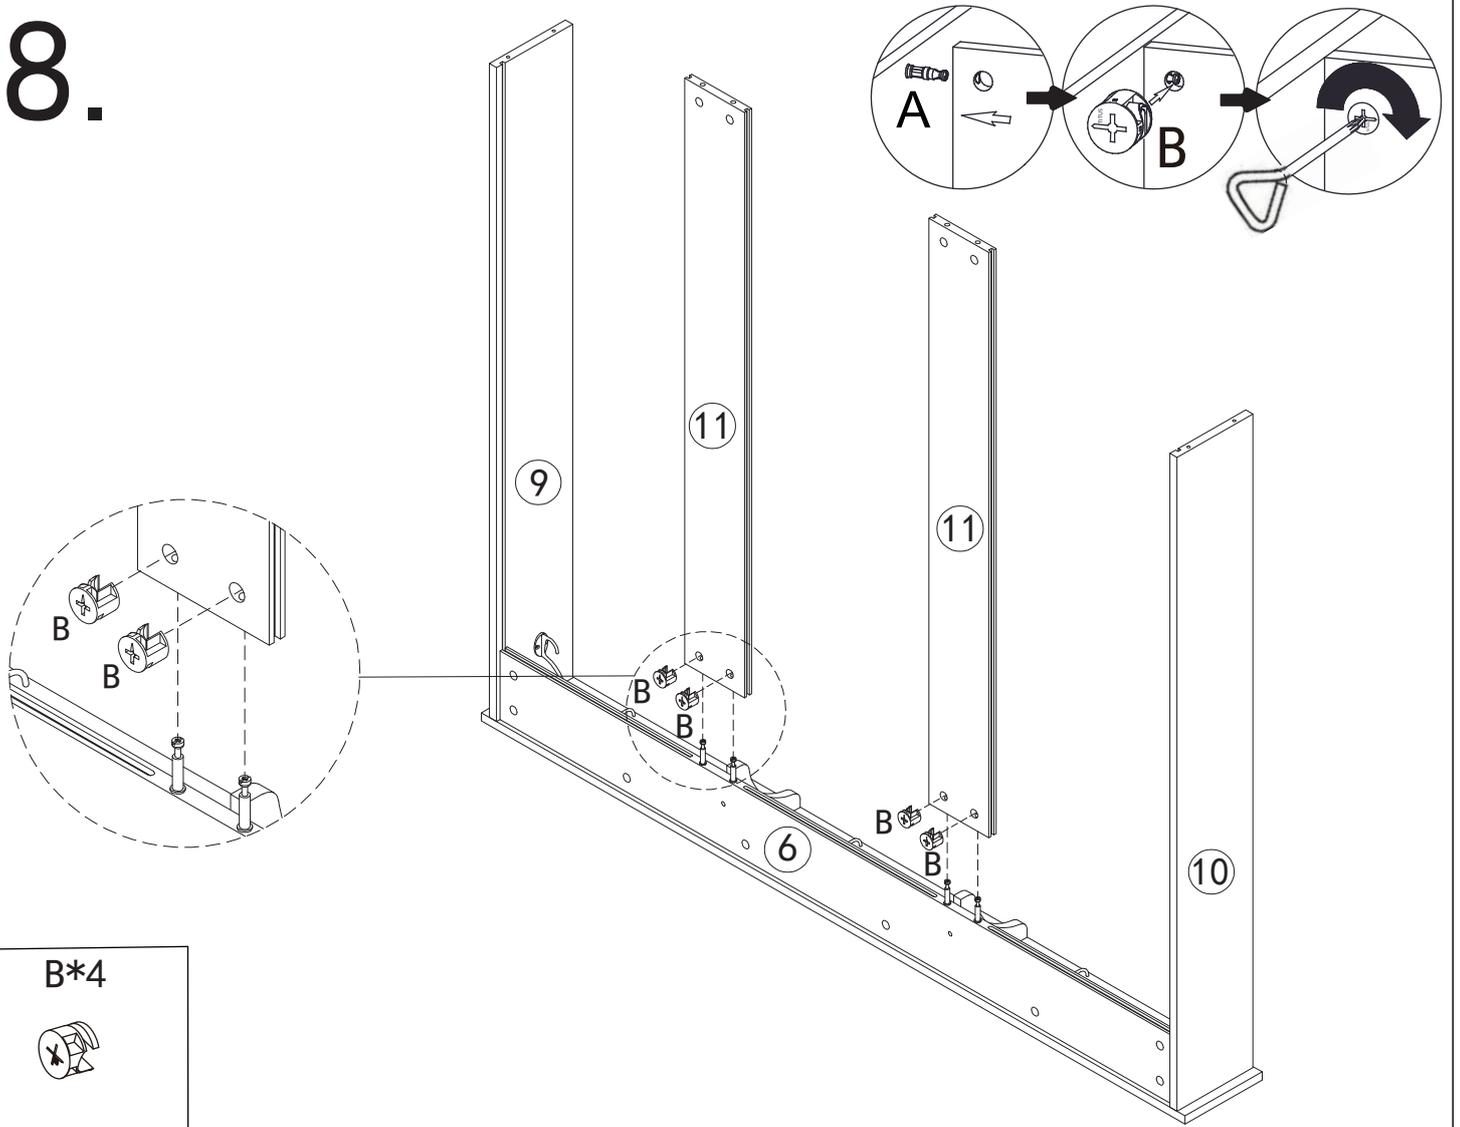


9.

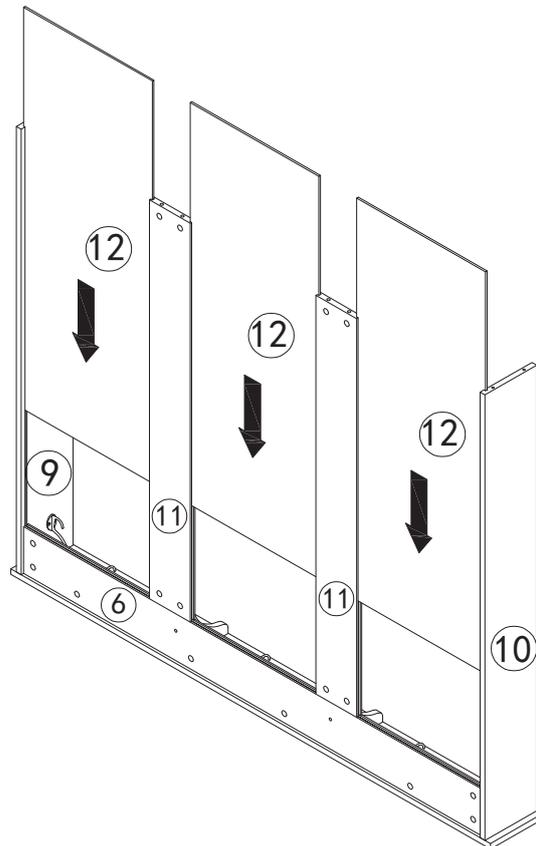

10.

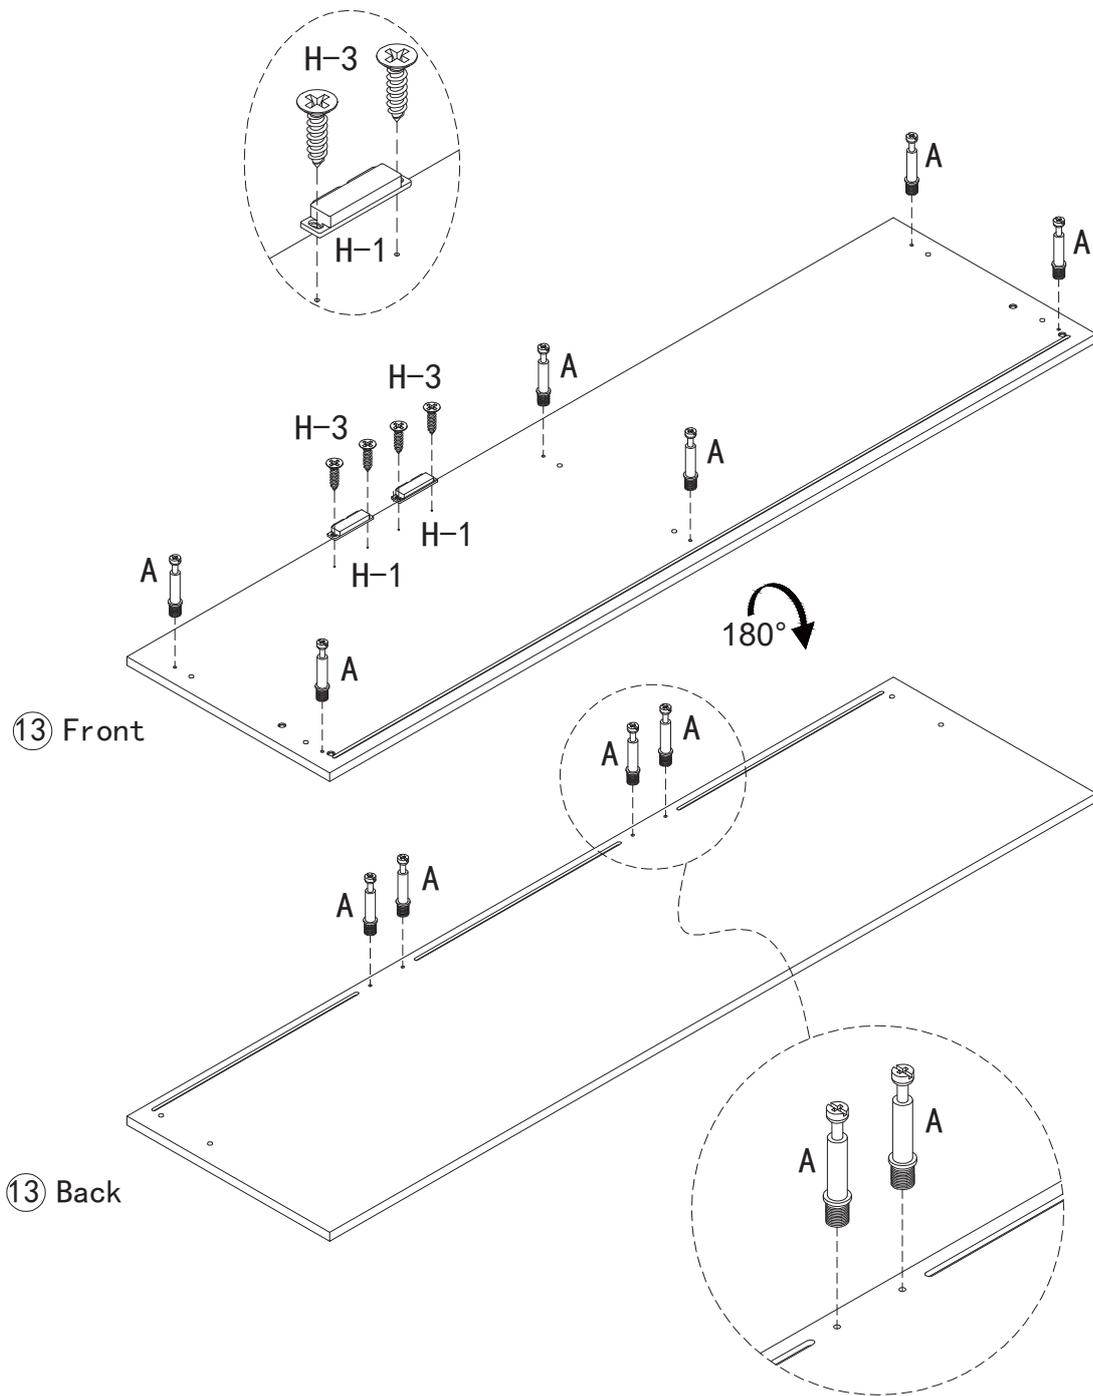

A*10

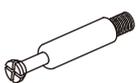


H-1*2



H-3*4



11.

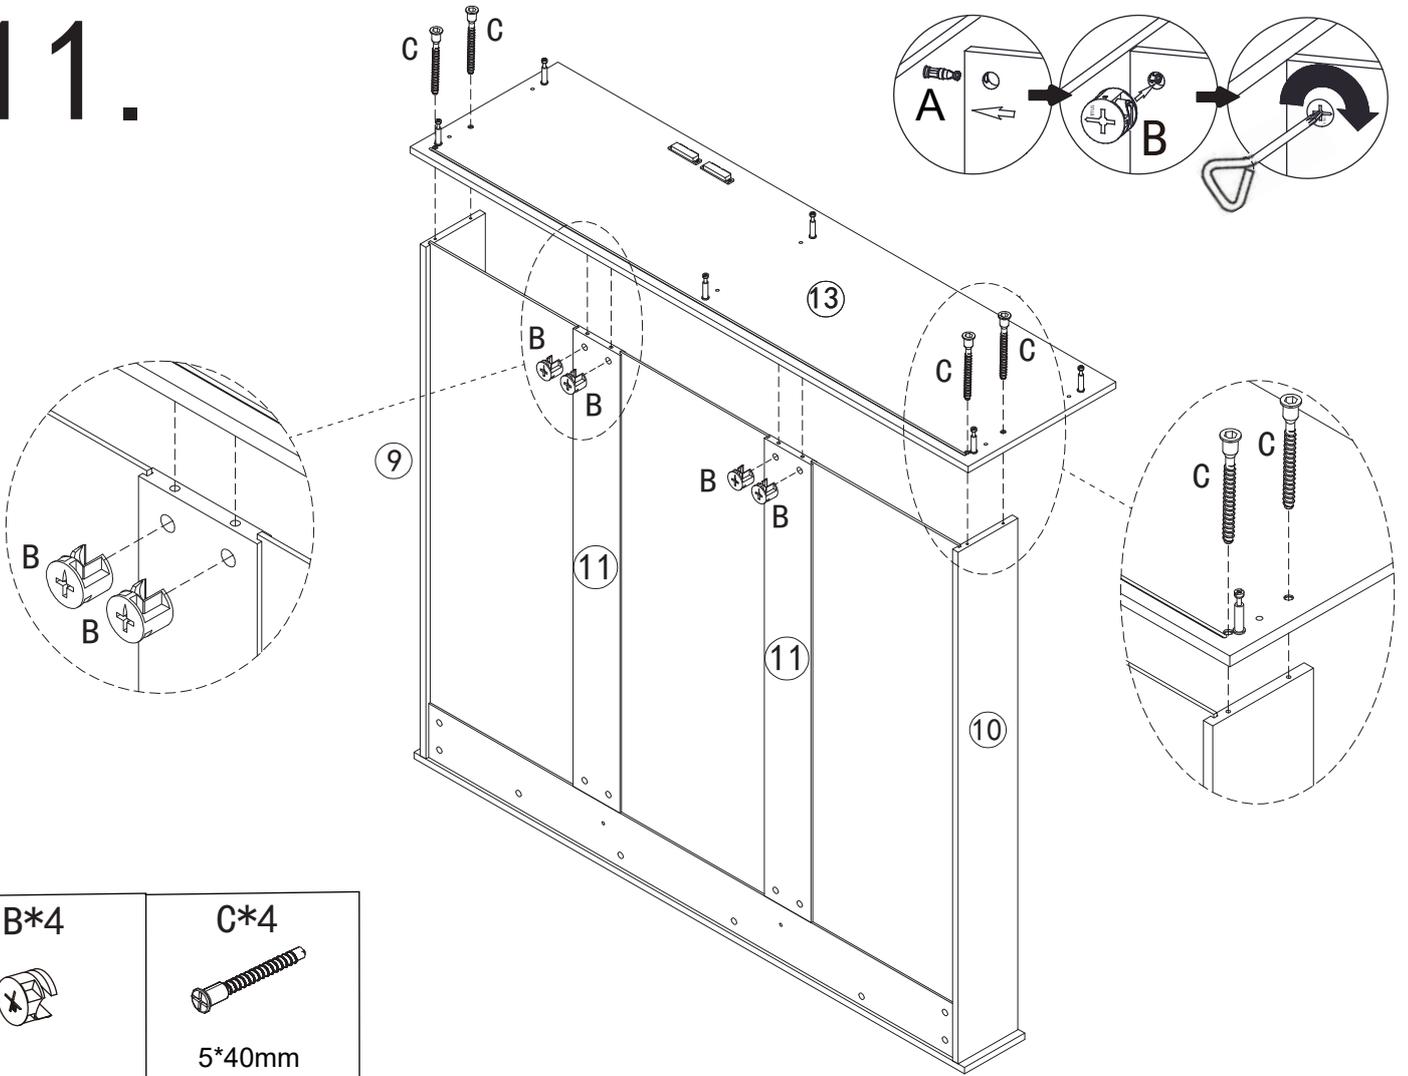

B*4




C*4




5*40mm



12.

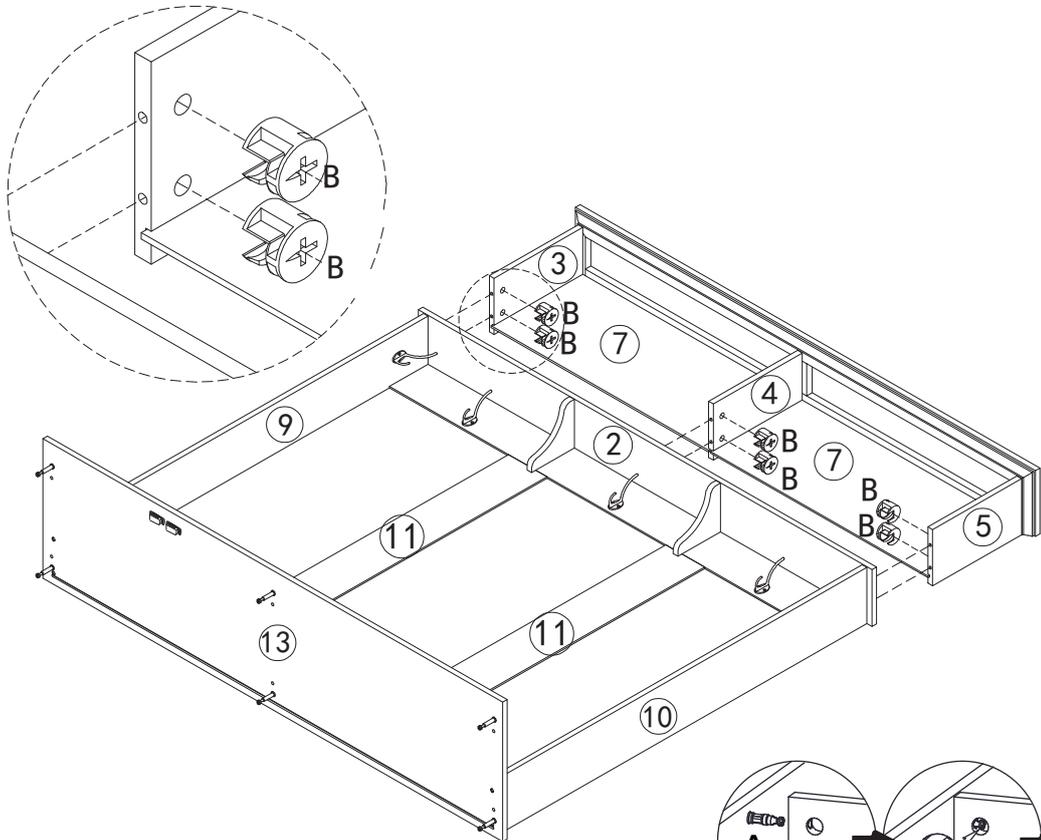


B*6

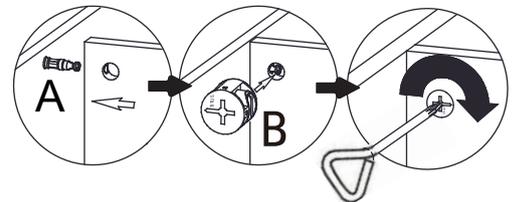



13. Step X2

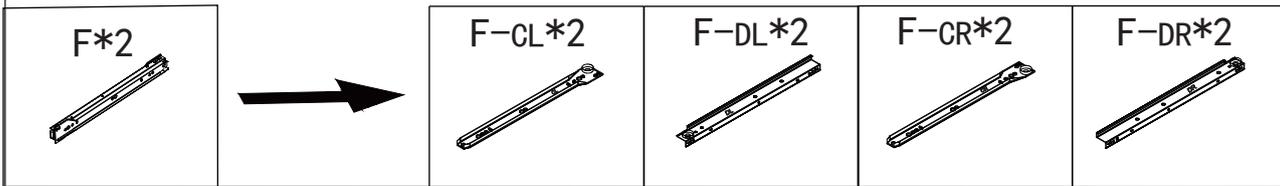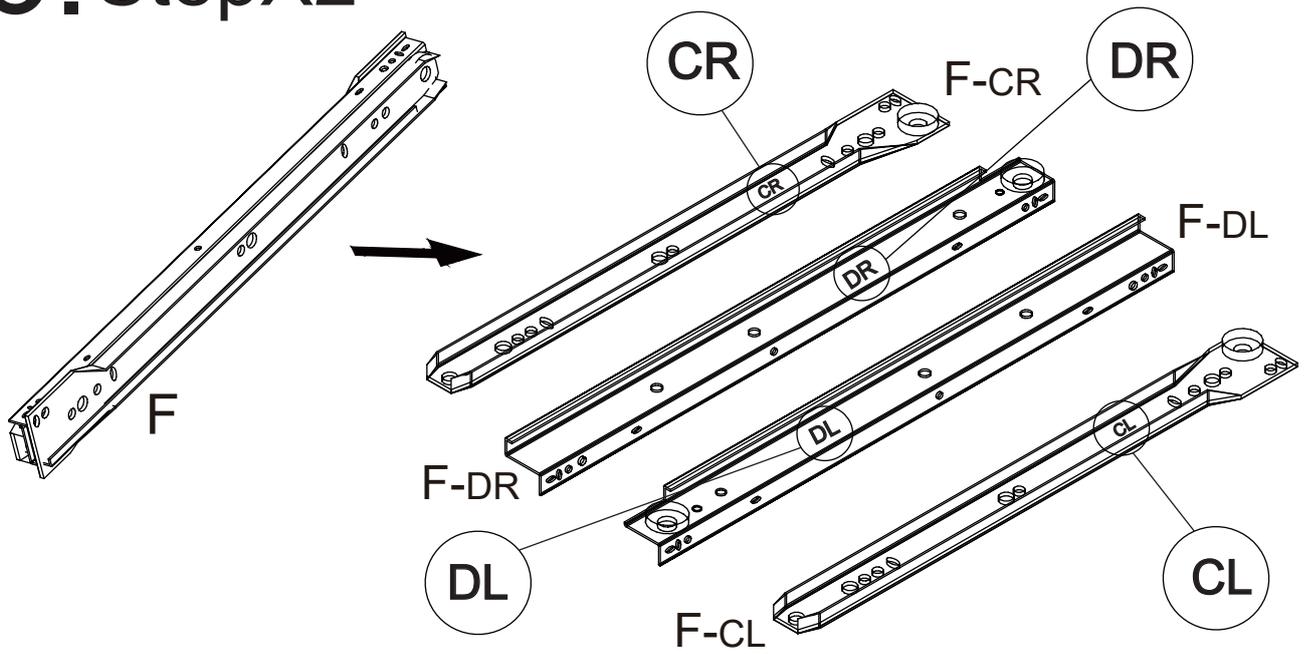



14.

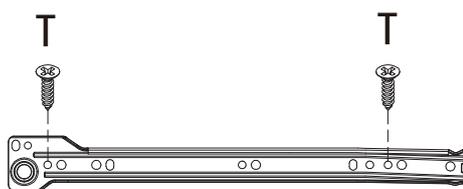


F-CL

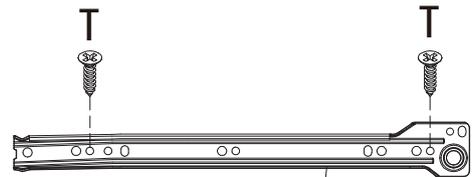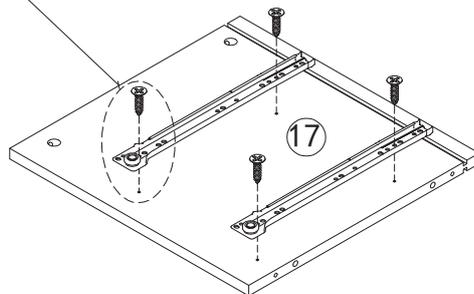

F-CR

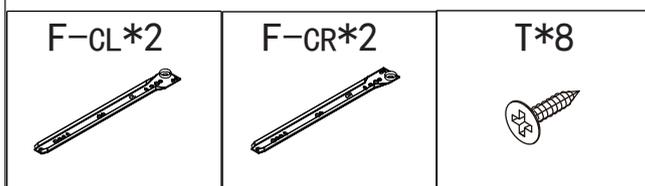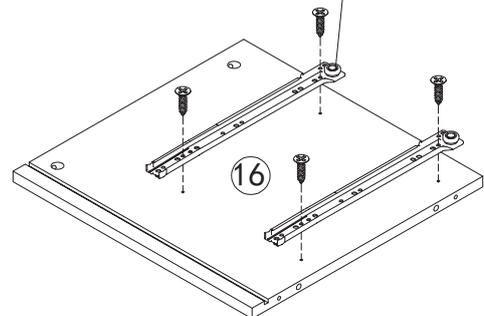


15.

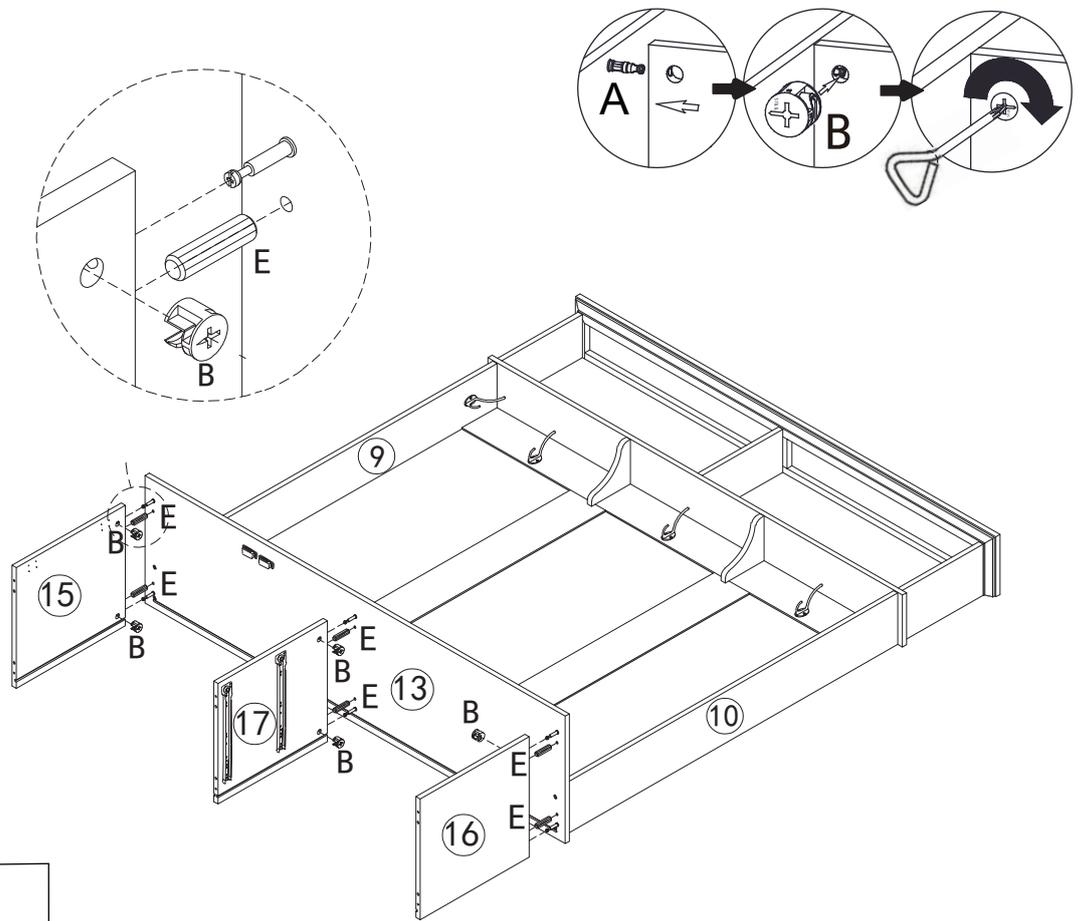


B*6




E*6

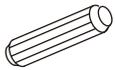

16.

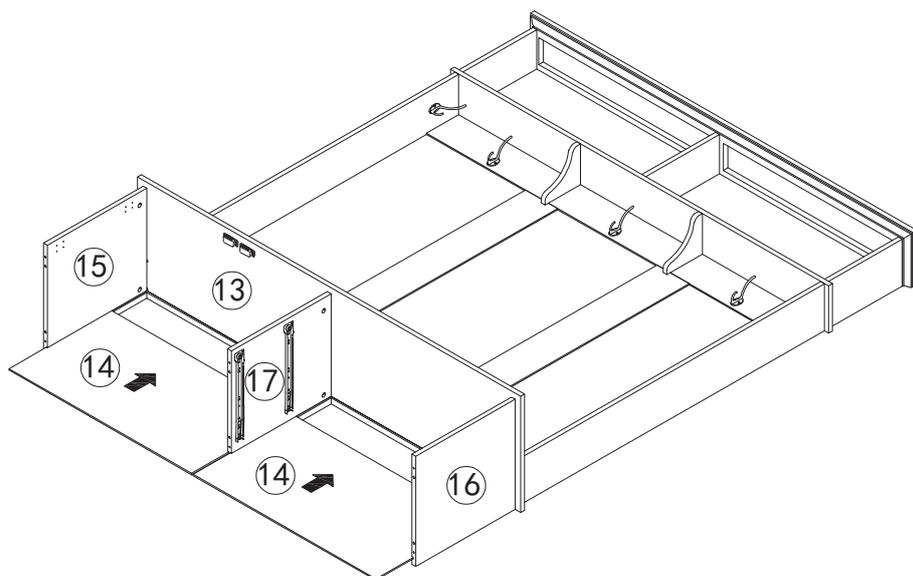


17.

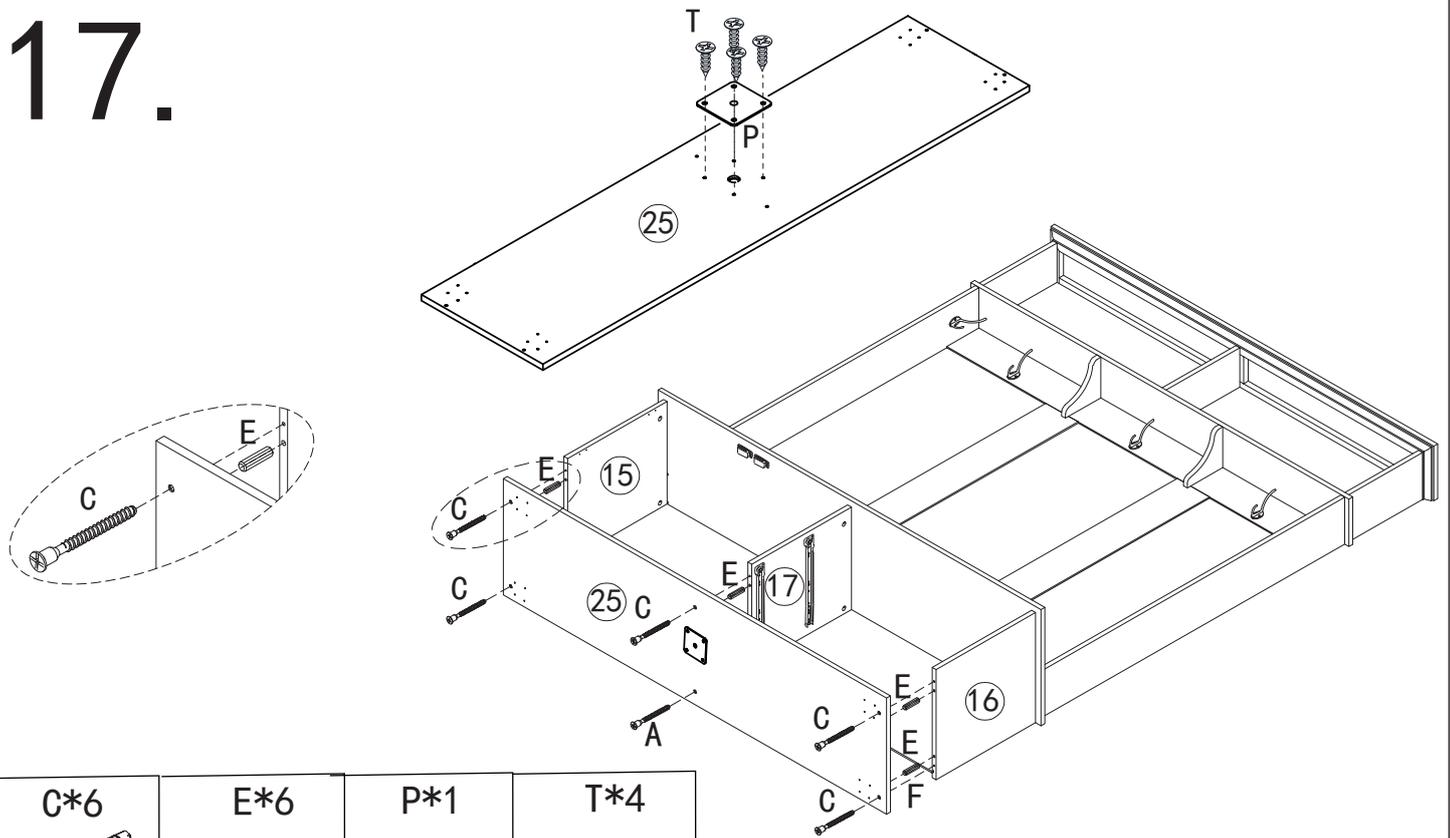


C*6  5*40mm	E*6 	P*1 	T*4 
---	---	--	---


18.

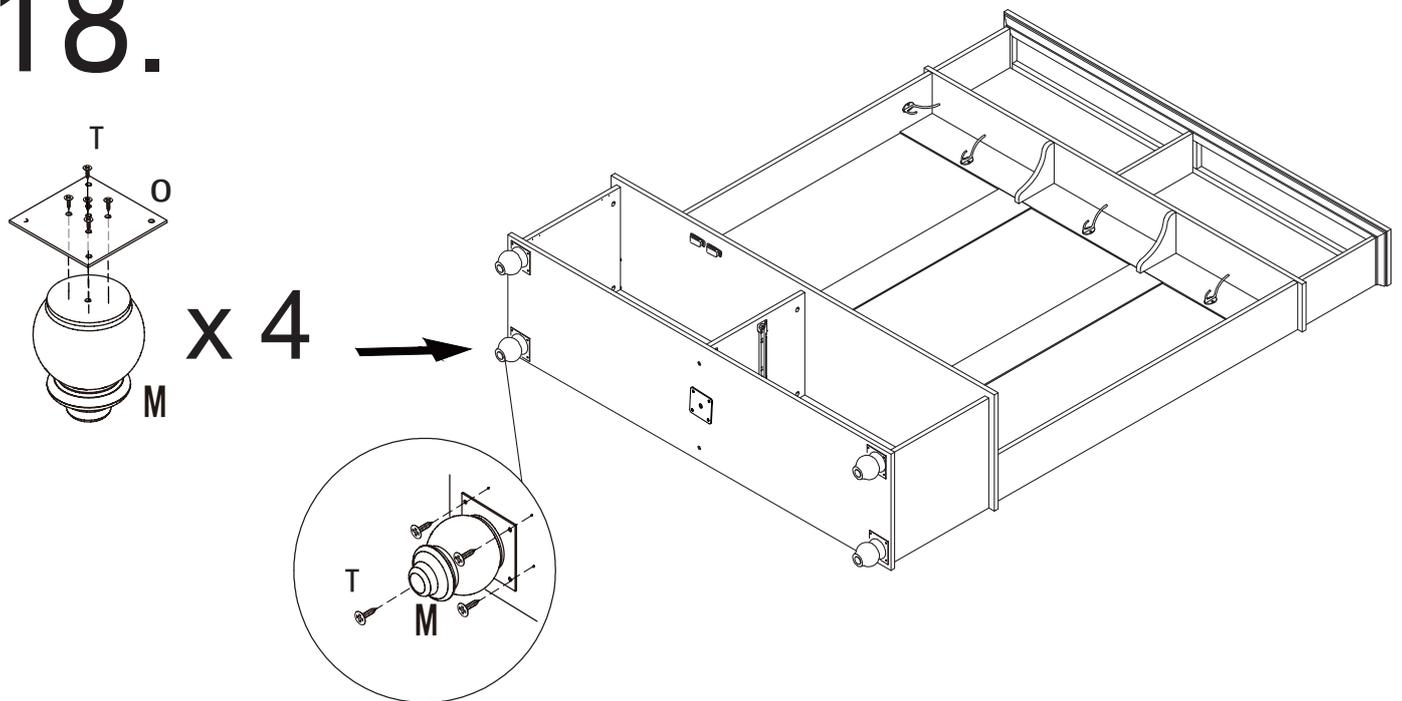

Align the "O" intermediate hole with the "M" intermediate hole and tighten the other four holes

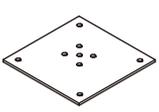M*4 	O*4 	T*36 
---	---	--


19.

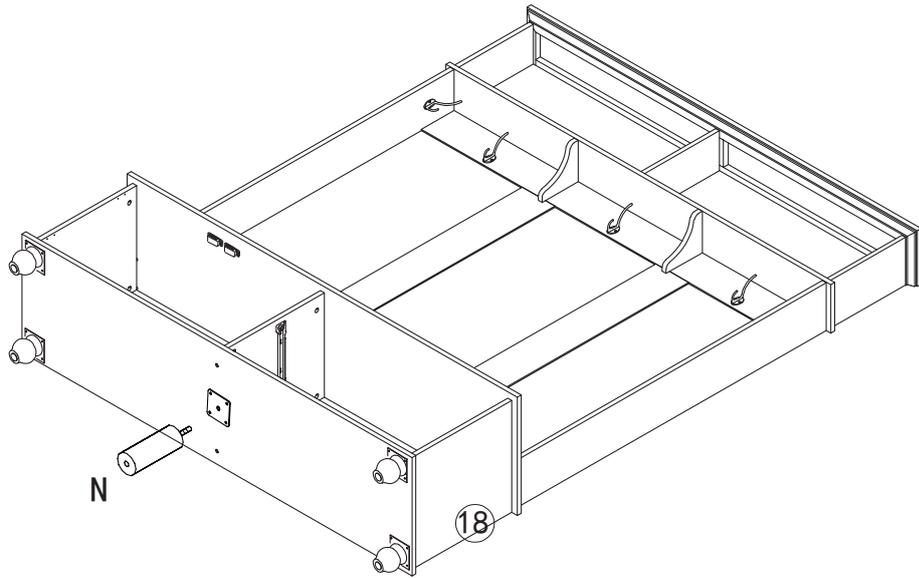

N*1



20.

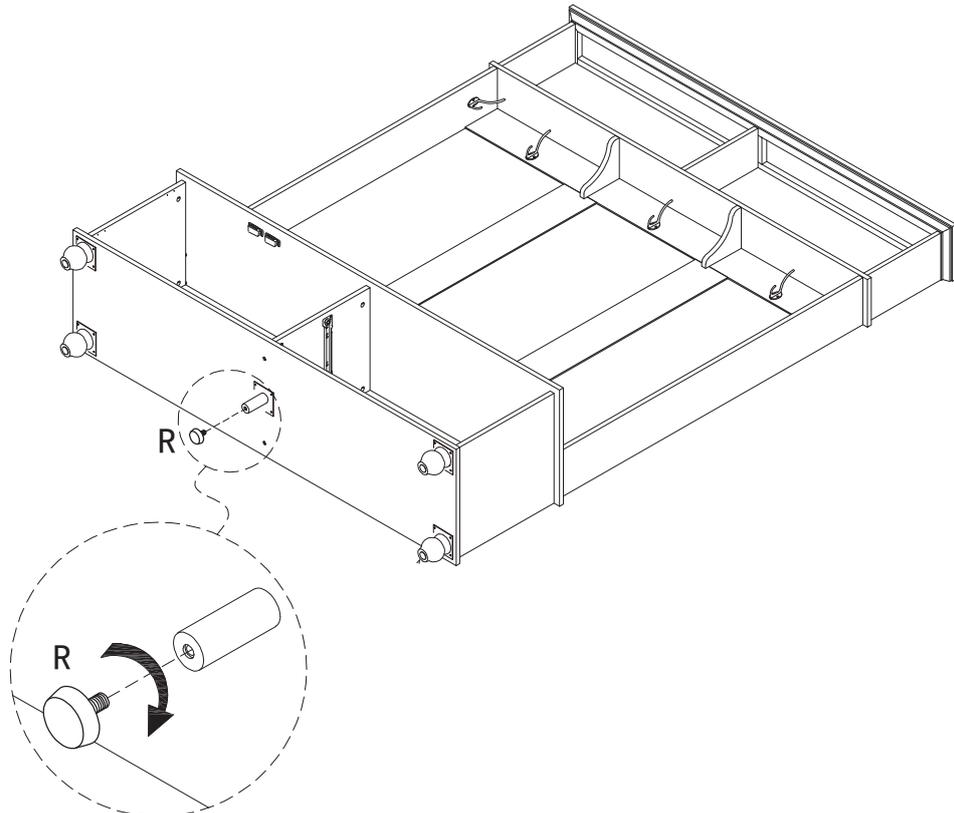


R*1




Adjust the height of the footing by rotating it


21.

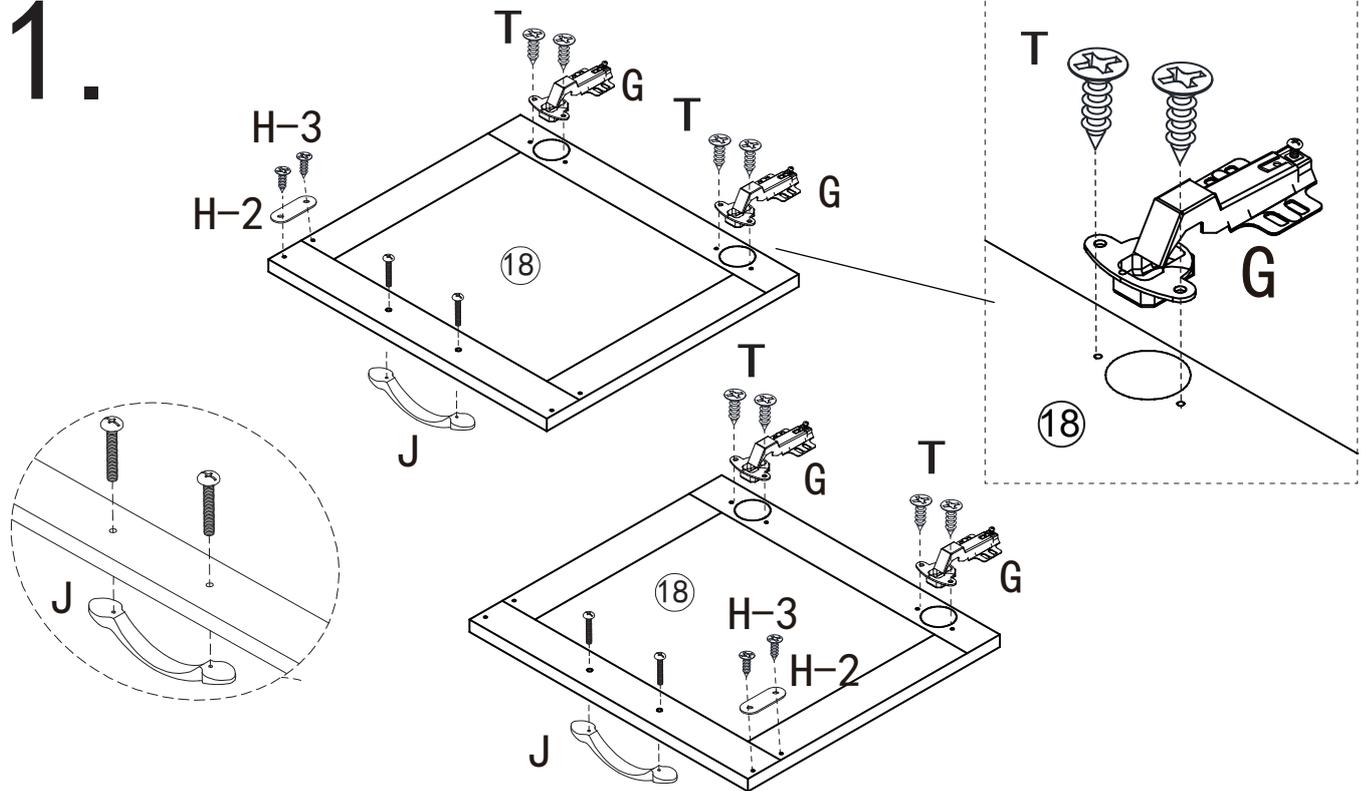


G*4 	J*2 	H-2*2 	H-3*4 	T*8 
---	--	--	---	---

22. Step X2

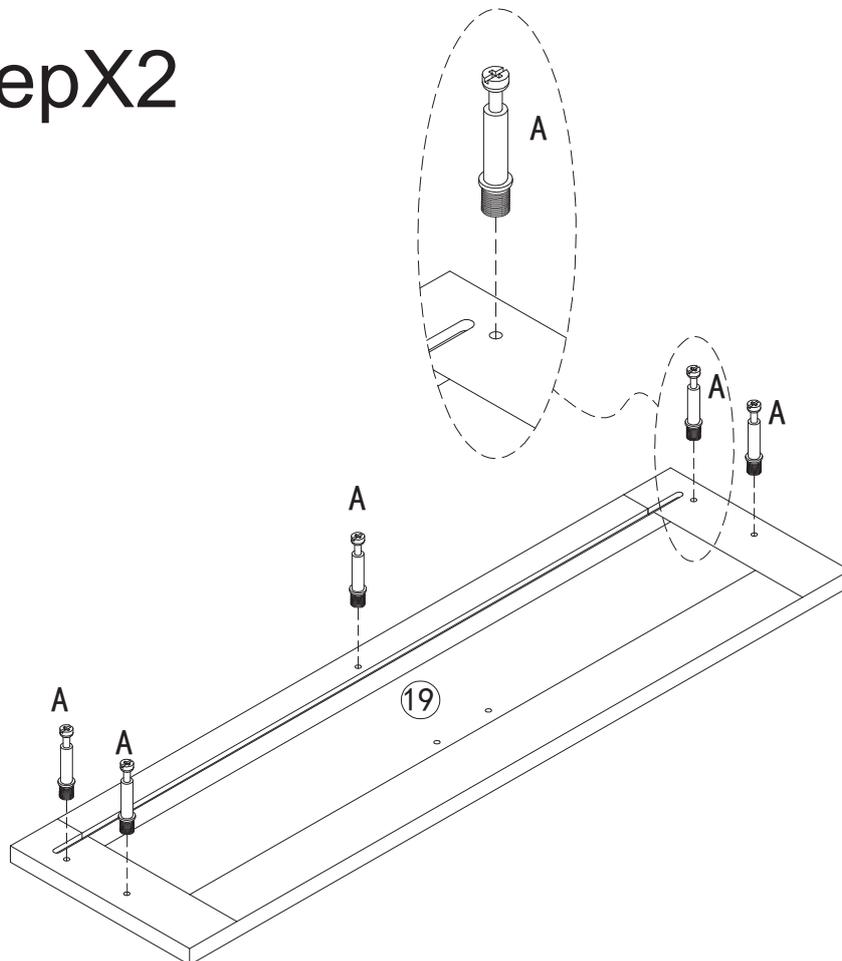

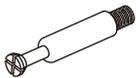A*10 
--

23. StepX2

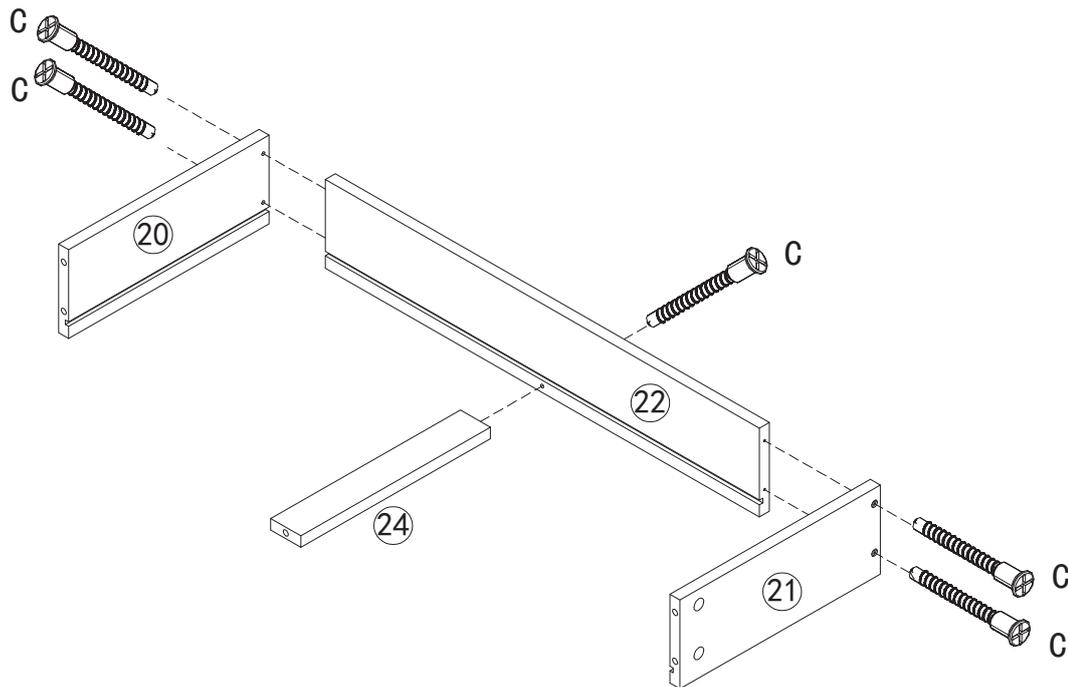


C*10




5*40mm

24. StepX2

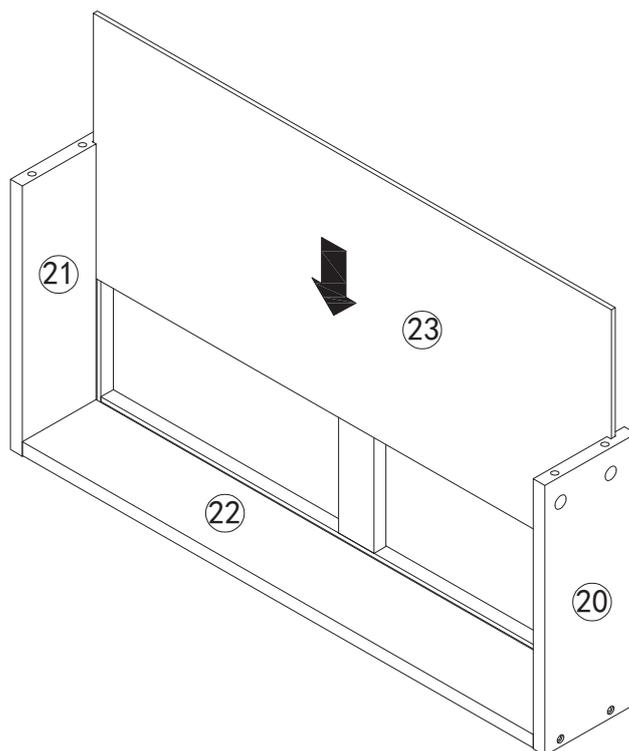


25. StepX2

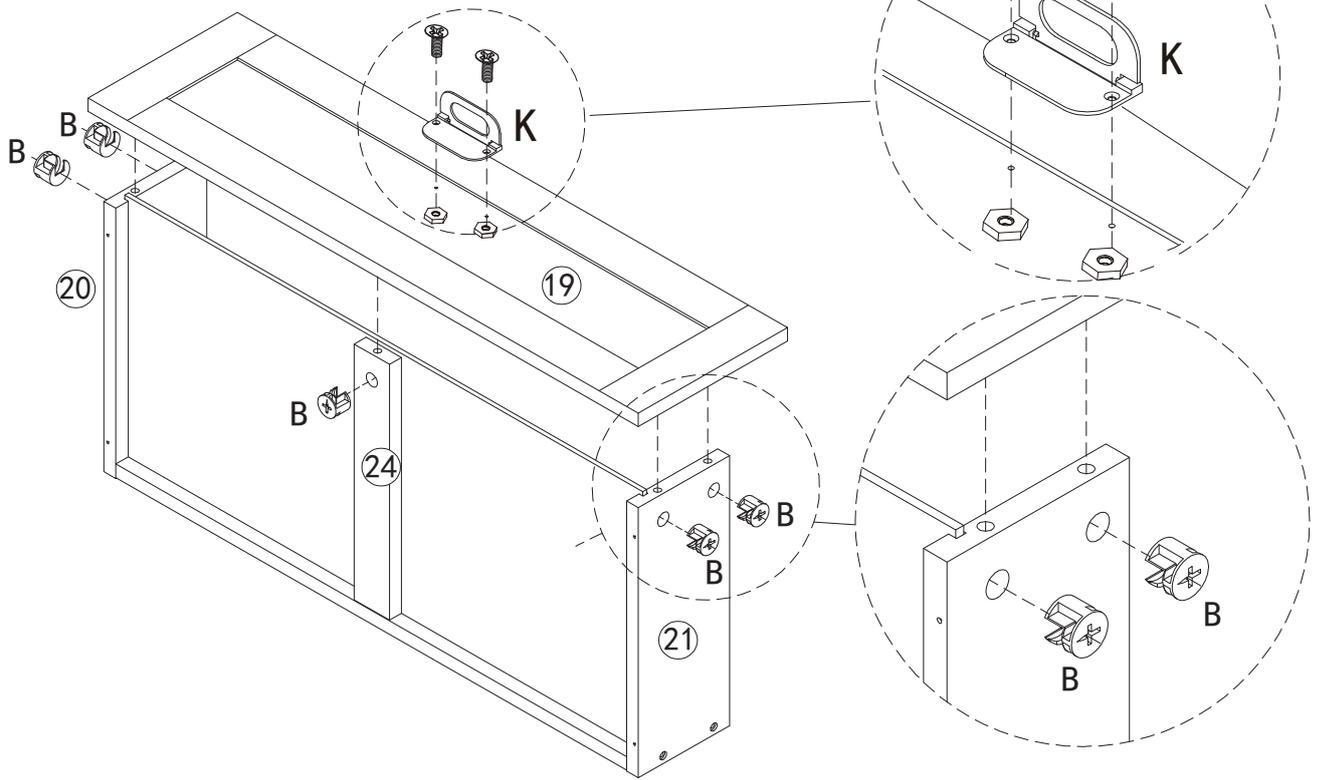


B*10




K*2

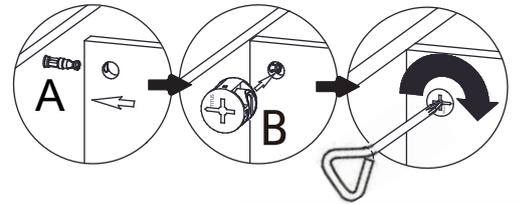


26. StepX2

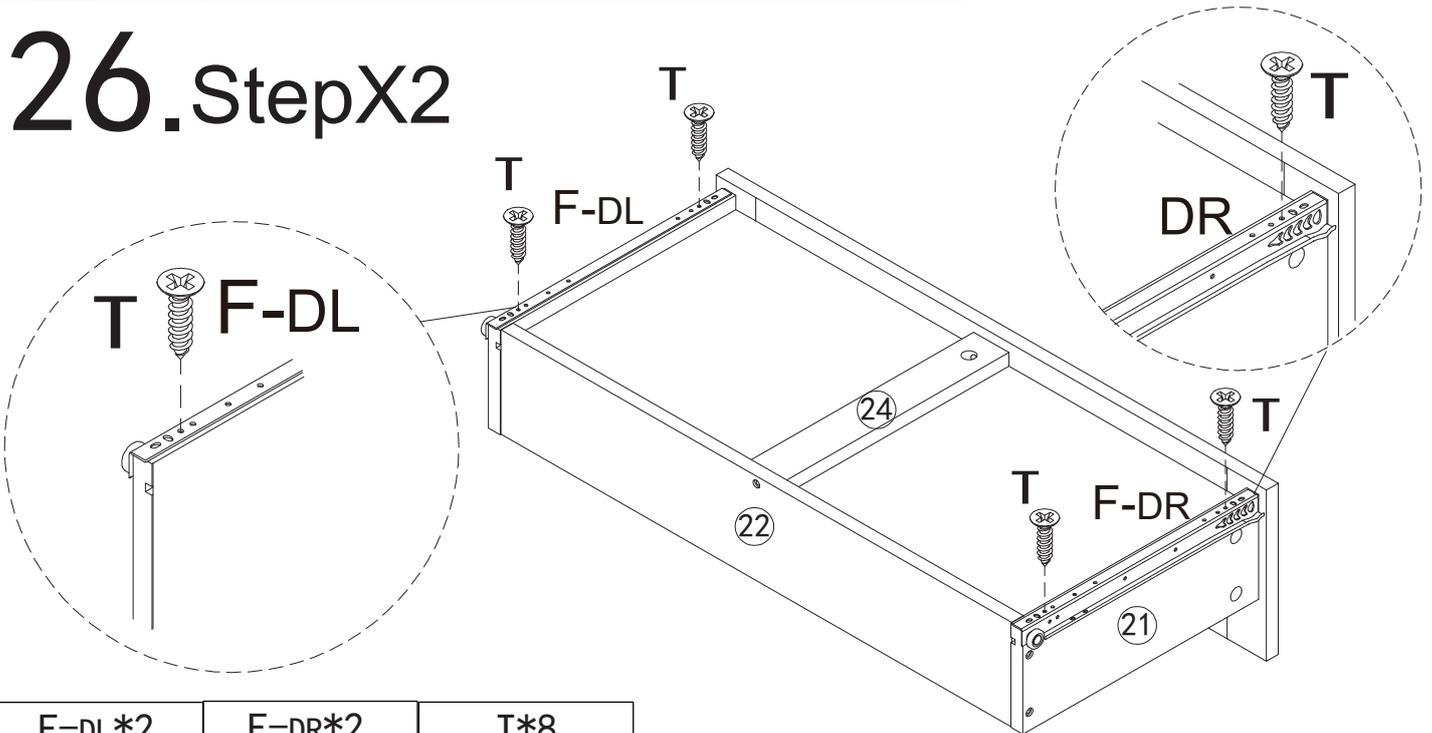

F-DL*2

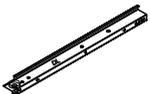


F-DR*2

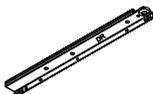


T*8



27.

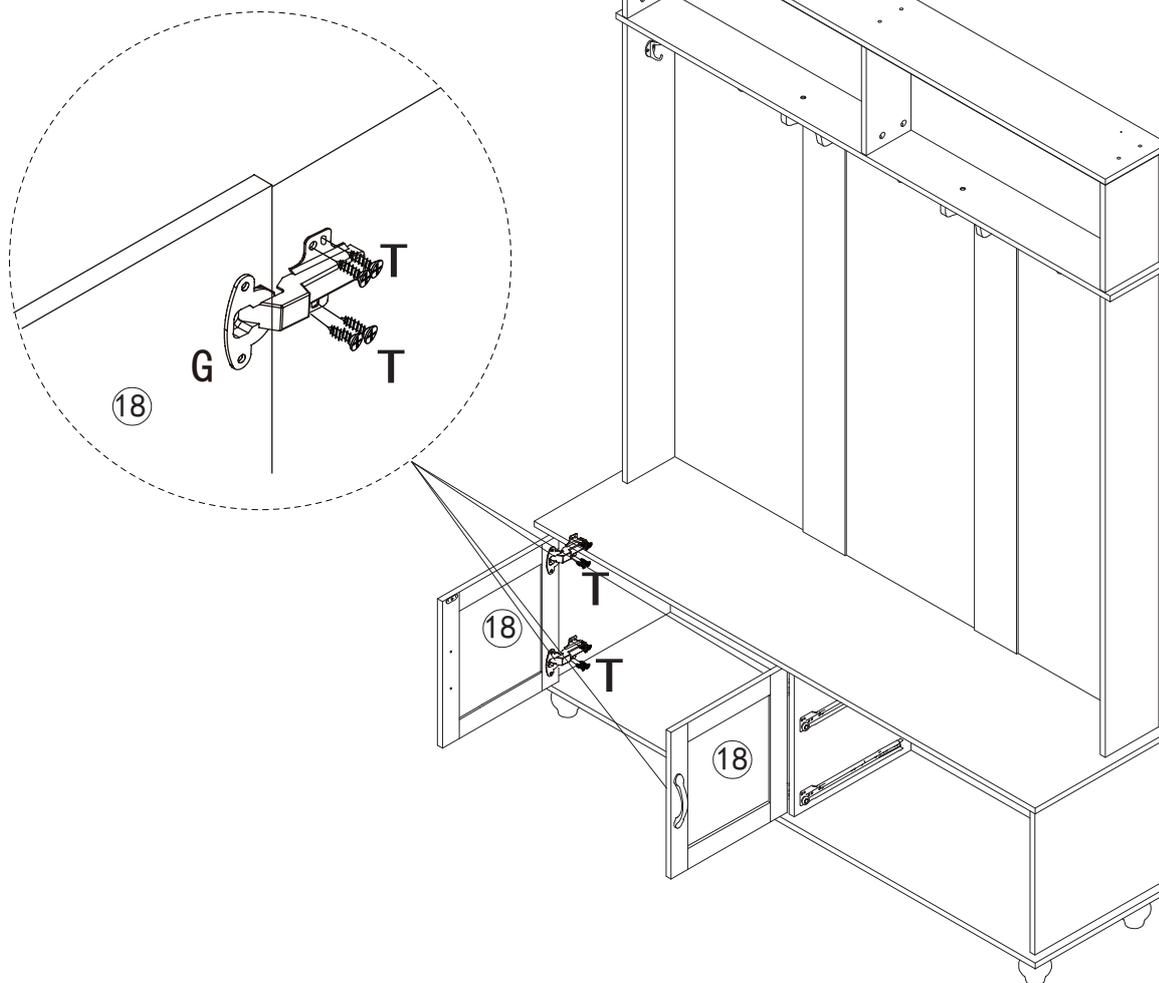

When the hinges are installed, you can refer to the pictures to adjust crevice of the doors till it's perfect:


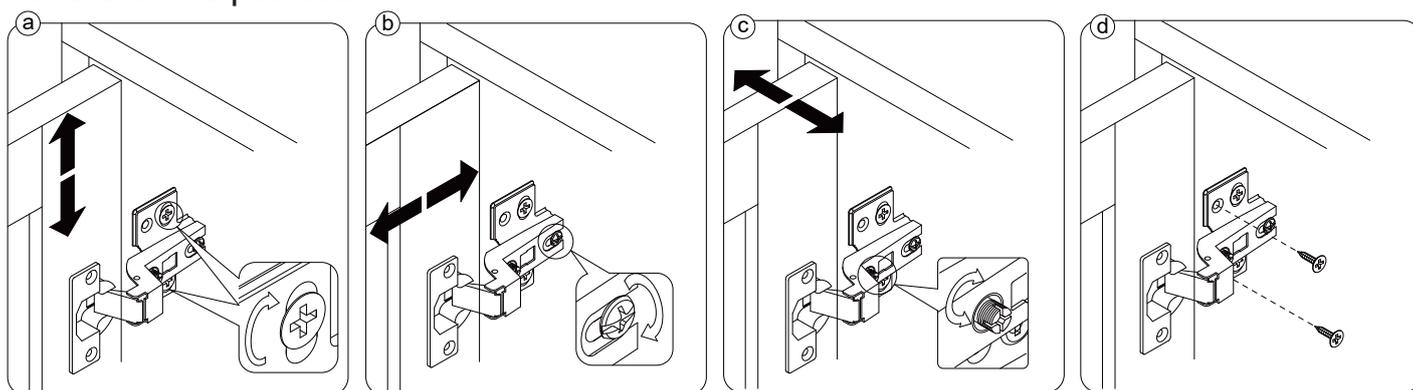


1. To adjust the doors up and down, please refer to step (a)
2. To adjust the distance between the doors and side panels, please refer to step (b)
3. To adjust the gap between two doors, please refer to step (c)
4. After the adjustment finished, please tight the screws, refer to step (d)

T*16



28.

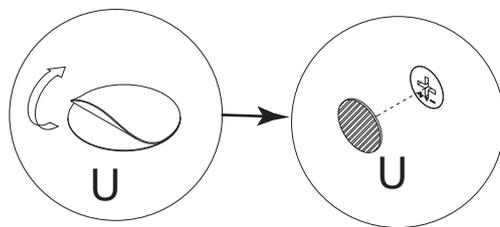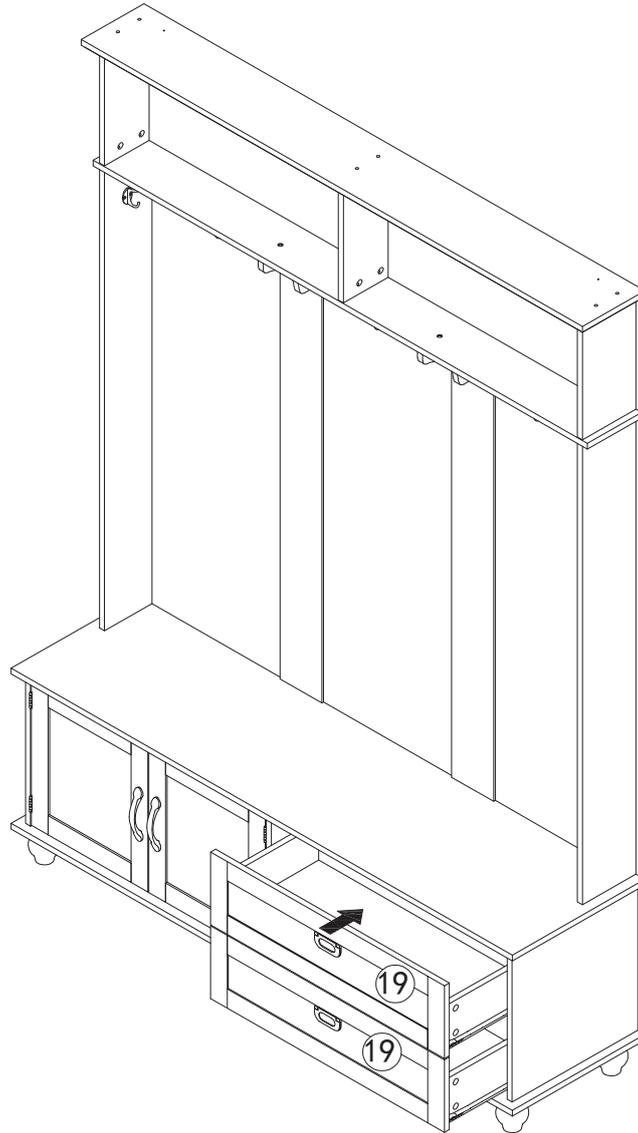


Please stick the hardware "U" on the exposed cam lock hole that makes your product more beautiful.

U*25



29.

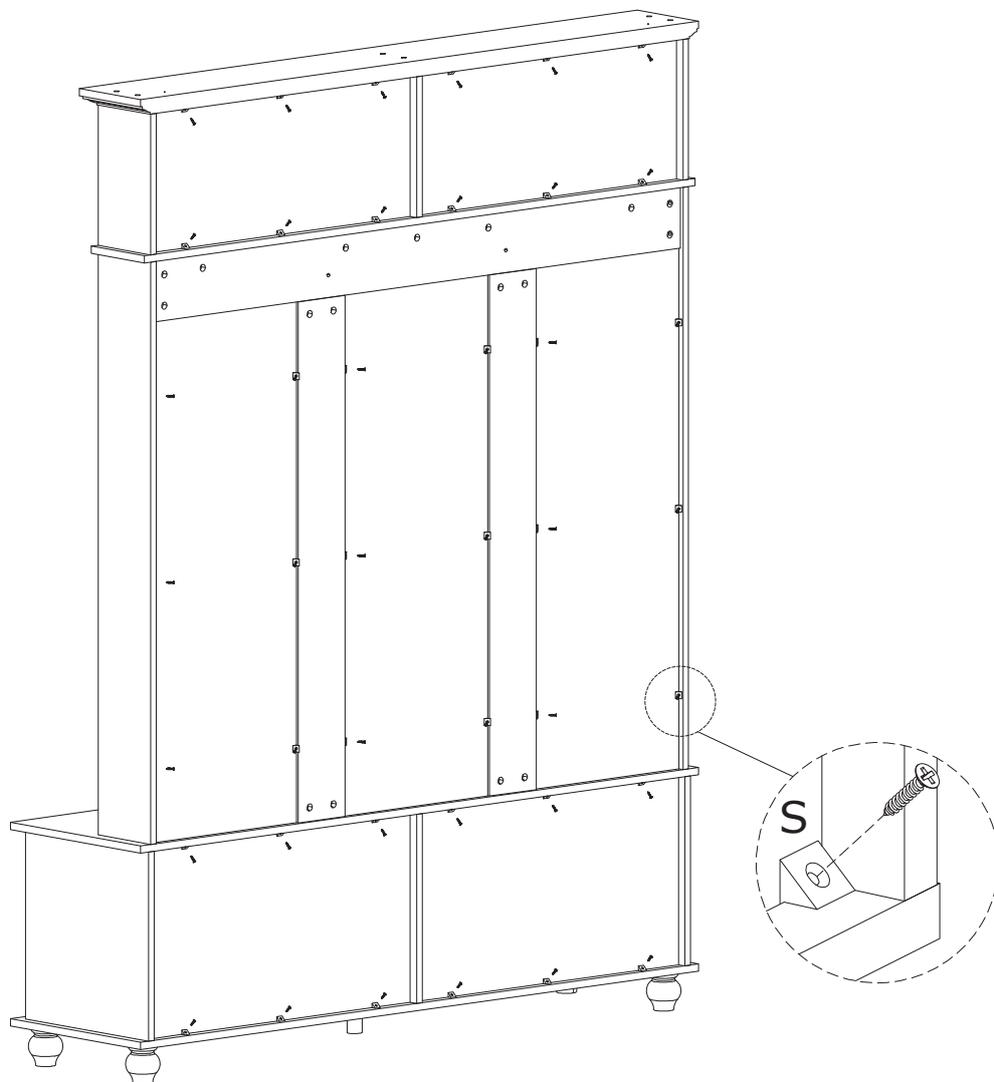


As the picture shows,
Fix hardware "S" into the gap with screws
to make the back panel more stable.

S*42






30.

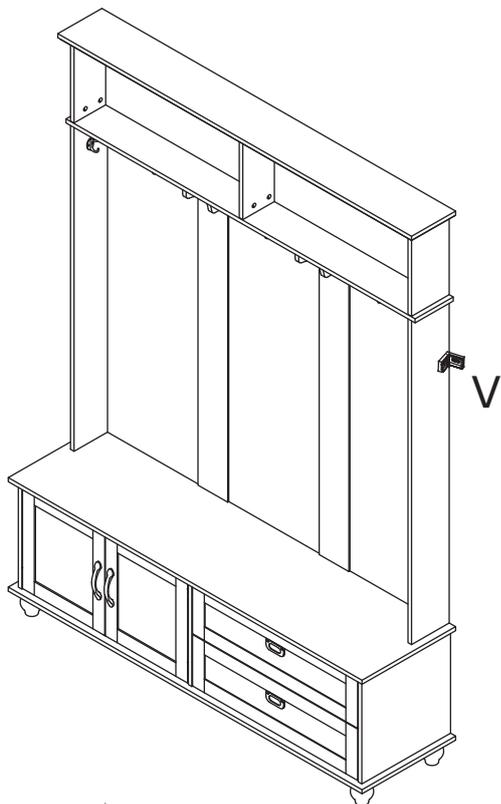

OR

This is anti-dumping L-type iron sheet, fixed to the wall of the product, can be required to change the installation location

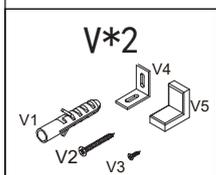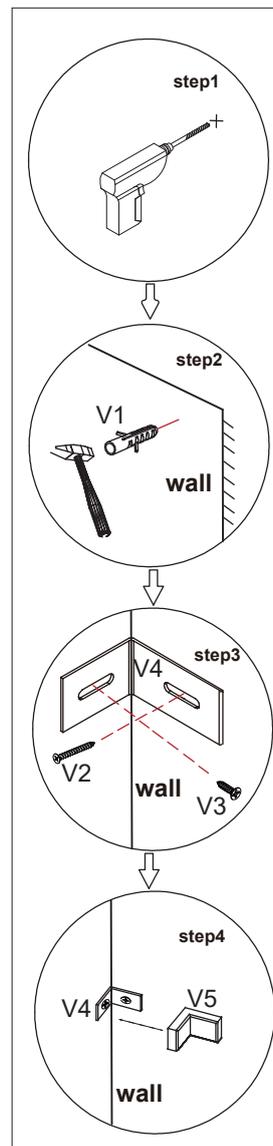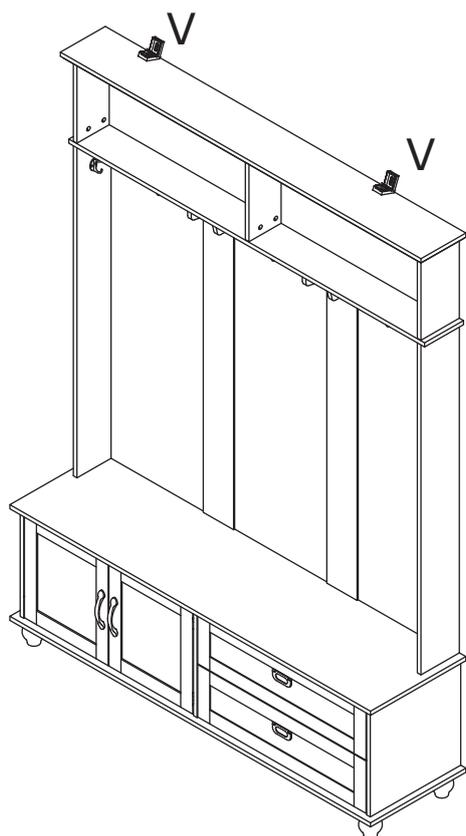

31.

