


Kitchen Island Carts

Assembly Instructions - Please keep for future reference

N707P173036

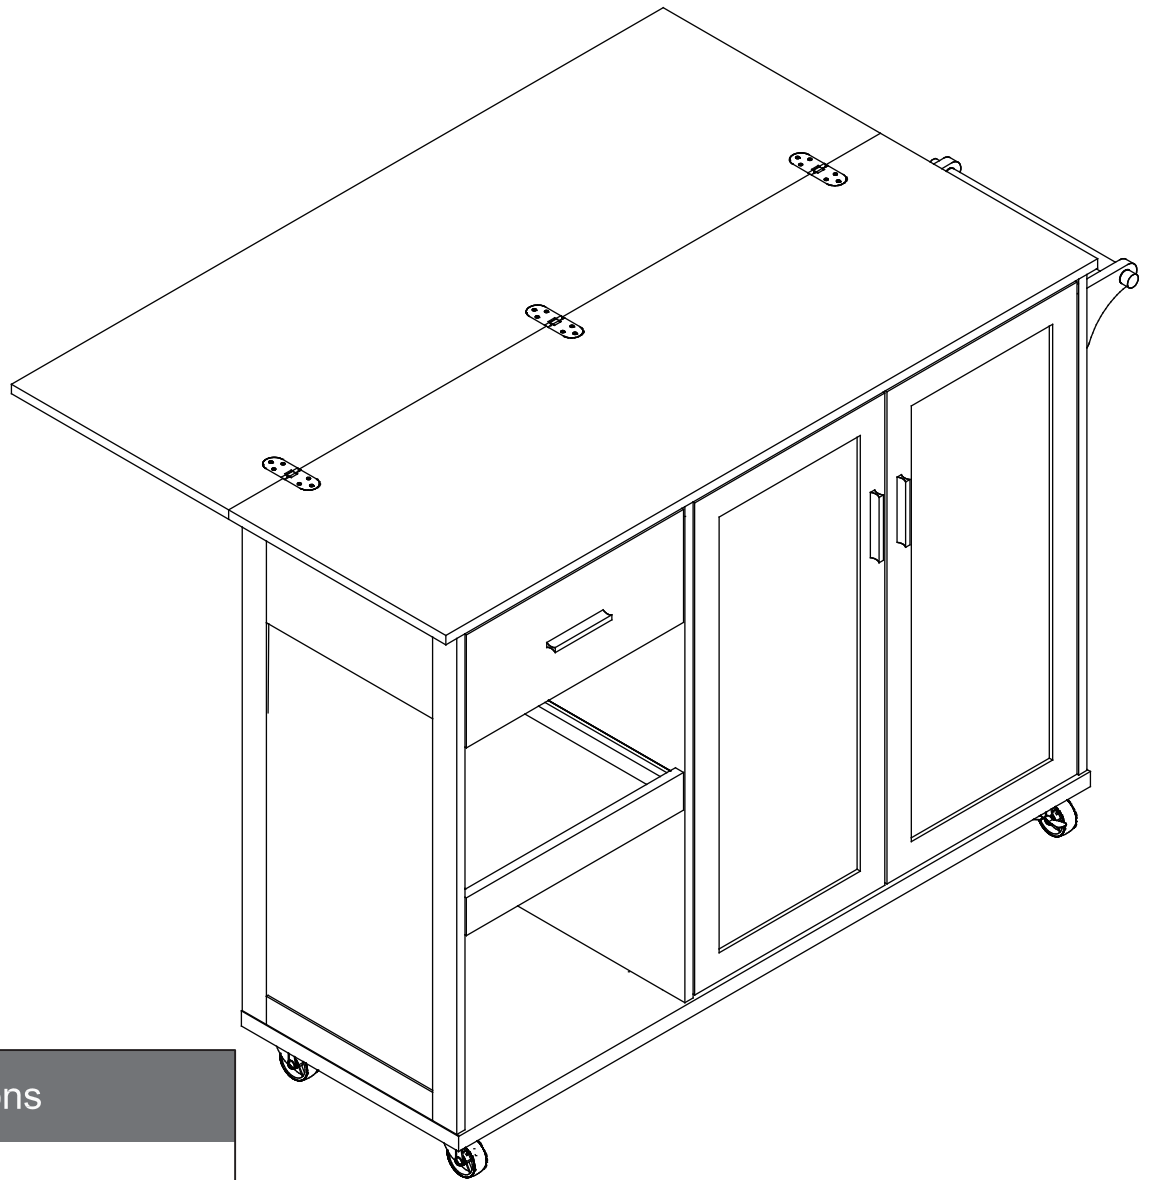

Dimensions

Width-47.2inch

Depth-16.6inch+16.6inch

Height-37inch

Important – Please read these instructions fully before starting assembly

Issue 1 - 08/08/24



Safety and Care Advice

Important – Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- During assembly do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



power drill is set on a low torque setting.

- To reduce the likelihood of damaging your product please ensure that your

Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts
- Regularly check and ensure That all bolts and fittings are tightend properly.

WARNING In order to help prevent overturning – please follow these instructions

To help prevent product toppling over please follow the below steps:-

Use the anti tip strap or wall fixing method provided (if applicable)
Do not allow children to climb or hang on the furniture
Do not open more than one drawer at a time
Do not place heavy items in the top drawers
Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose













Please note that only the anti tip strap is provided.

You will need to provide wall plugs and screws applicable for your wall type

Components - Fittings


Please check you have all the panels listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

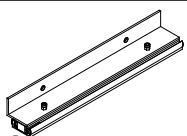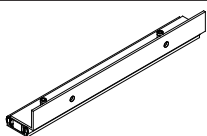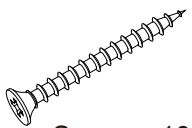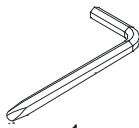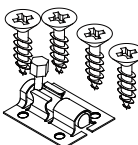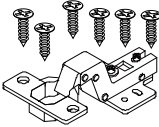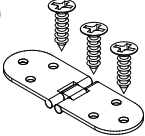(A)  Cam Bolt x 21+2	(B)  Cam lock x 21+2	(C)  6*30mm Dowel x 21+2	(D)  Drawer slide x 4
(E)  3*12mm Screw x 16+1	(F)  3.5*14mm Screw x 12+1	(G)  Slide x 2	(H)  Slide x 1
(I)  4*30mm Screw x 10+1	(J)  Magnetic impact x 1	(K)  Allen key x 1	(L)  Locking caster x 2
(M)  Caster x 3	(N)  x 2	(O)  Laminate support x 8+1	(P)  Suction sheet x 2
(Q)  4*40mm Screw x 4	(R)  x 4set	(S)  4*18mm Handle x 3set	(T)  x 3

Tools required

Ruler - Use this ruler to help correctly identify the screws

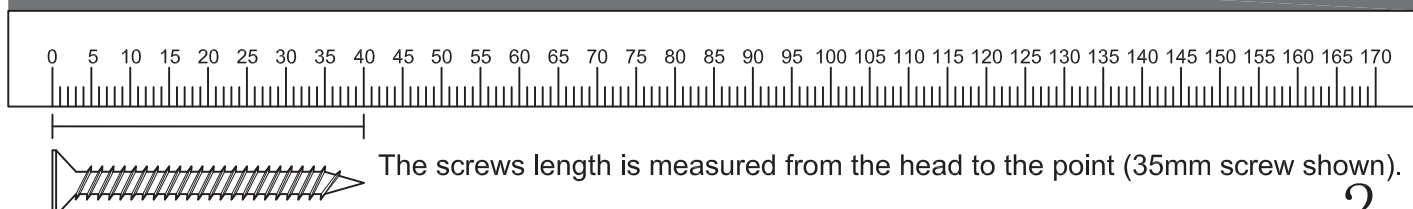


Using Camlocks

Step 1

Connect the male camlock as directed in the assembly instructions using a screwdriver.

1


DO NOT OVER TIGHTEN.
NE PAS SERRER EXCESSIVEMENT.

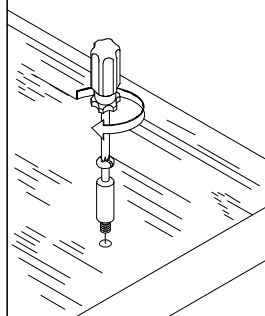

Step 2

Push the male camlock into the entry hole.

2

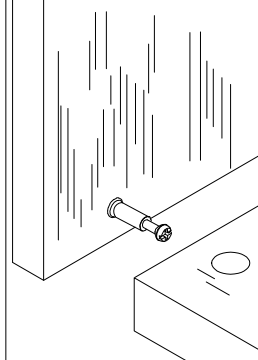


Step 3

Insert the female camlock as shown in the instruction.

Note: ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

3

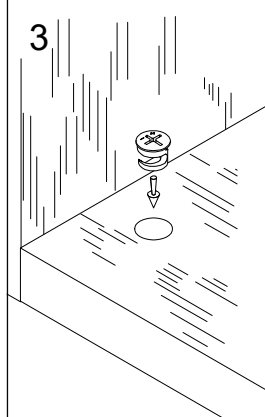


Step 4

Turn the female camlock clockwise with a screwdriver.


You should feel a click when the camlock is locked in place.

The joint is now secure.
























4

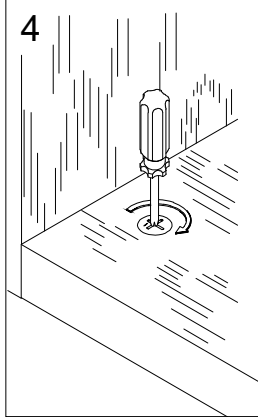

Assembly Instructions

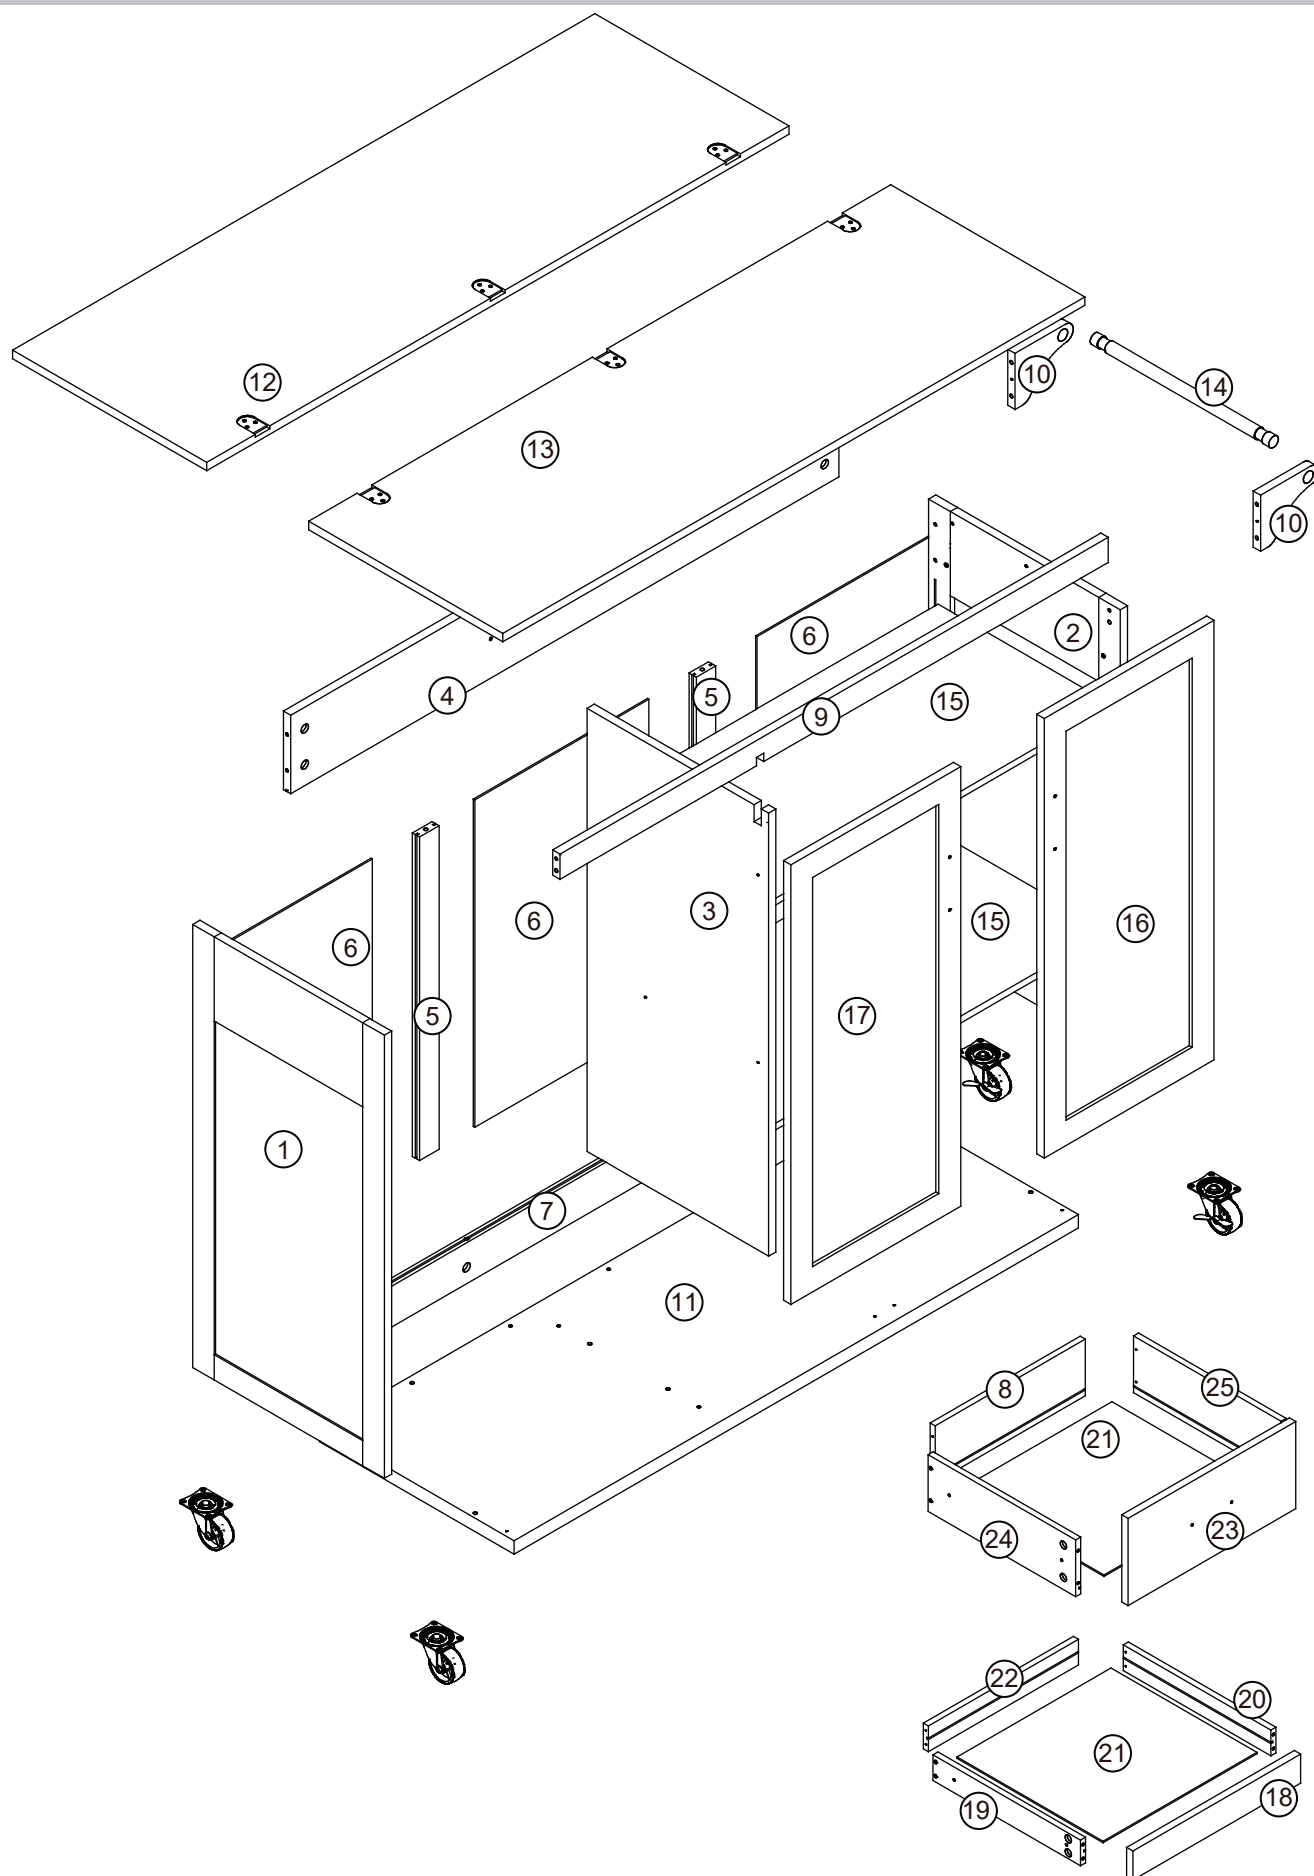


Assembly Instructions

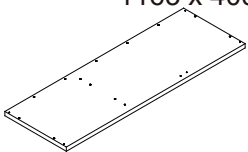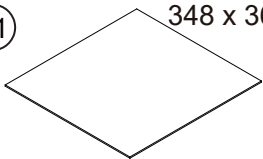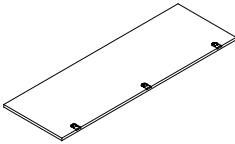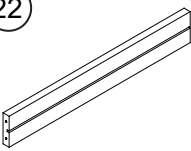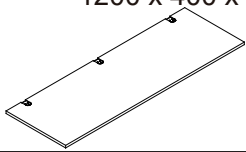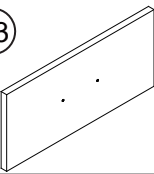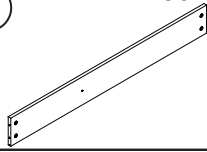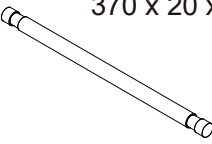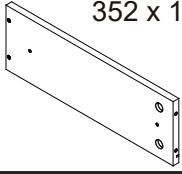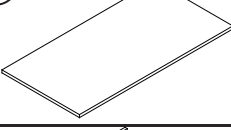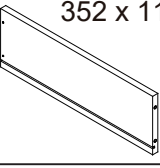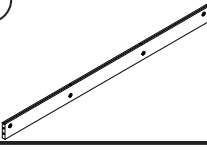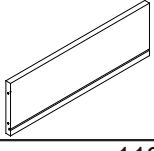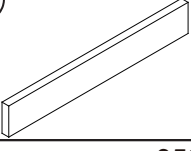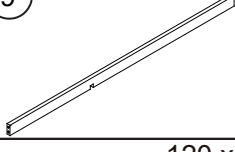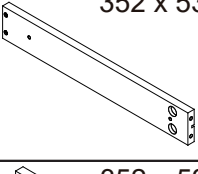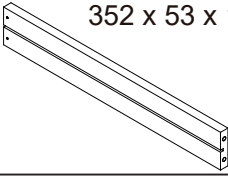① 790 x 395 x 15 mm  1	⑪ 1163 x 400 x 24 mm  1	⑳ 348 x 367 x 3 mm  2
② 790 x 395 x 15 mm  1	⑫ 1200 x 400 x 15 mm  1	㉒ 358 x 53 x 12 mm  1
③ 790 x 375 x 15 mm  1	⑬ 1200 x 400 x 15 mm  1	㉓ 400 x 180 x 15 mm  1
④ 1130 x 140 x 15 mm  1	⑭ 370 x 20 x 20 mm  1	㉔ 352 x 117 x 12 mm  1
⑤ 575 x 40 x 15 mm  2	⑮ 707 x 375 x 12 mm  2	㉕ 352 x 117 x 12 mm  1
⑥ 584 x 359 x 3 mm  3	⑯ 784 x 350 x 15 mm  1	
⑦ 1130 x 73 x 15 mm  1	⑰ 784 x 350 x 15 mm  1	
⑧ 358 x 117 x 12 mm  1	⑱ 400 x 60 x 15 mm  1	
⑨ 1130 x 45 x 15 mm  1	⑲ 352 x 53 x 12 mm  1	
⑩ 120 x 100 x 15 mm  2	㉖ 352 x 53 x 12 mm  1	


Assembly Instructions

Step 1



Pull inner and outer drawer runners apart before fixing them to panels.



Slide drawer runners apart until the drawer lock can be seen, as shown.

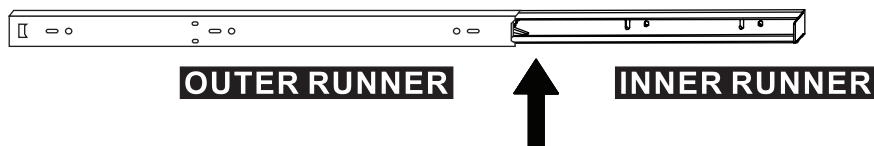

Press and hold the drawer runner lock and then continue to slide drawer runners apart, as shown.

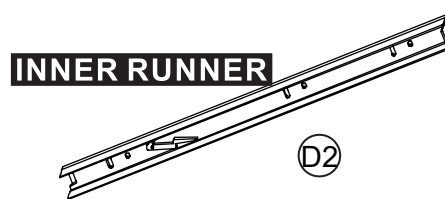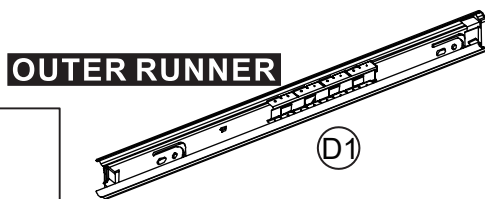



D




Drawer slide x 4

Your inner and outer drawer runners are ready to be fixed to panels.

Step 2

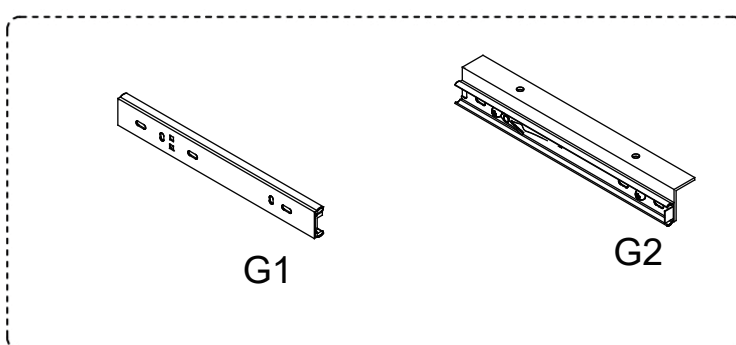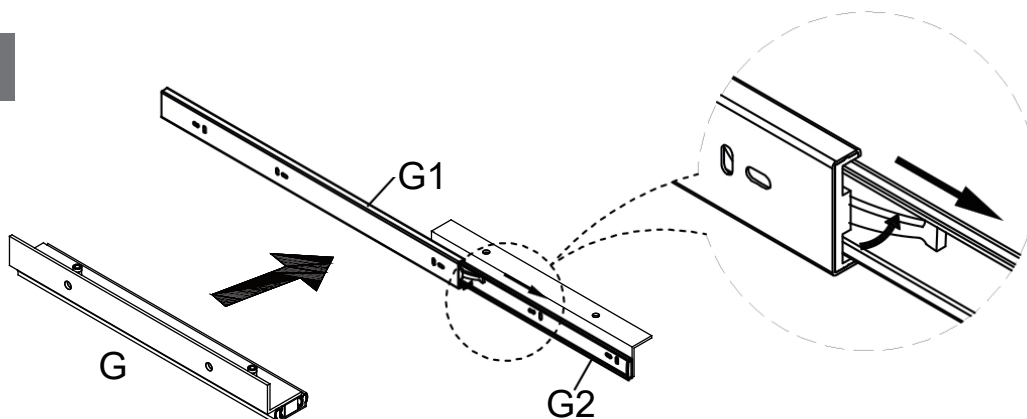



G

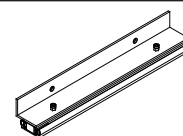






Slide x 2

Assembly Instructions

Step 3

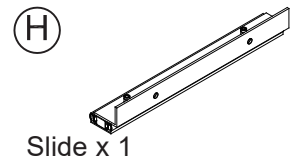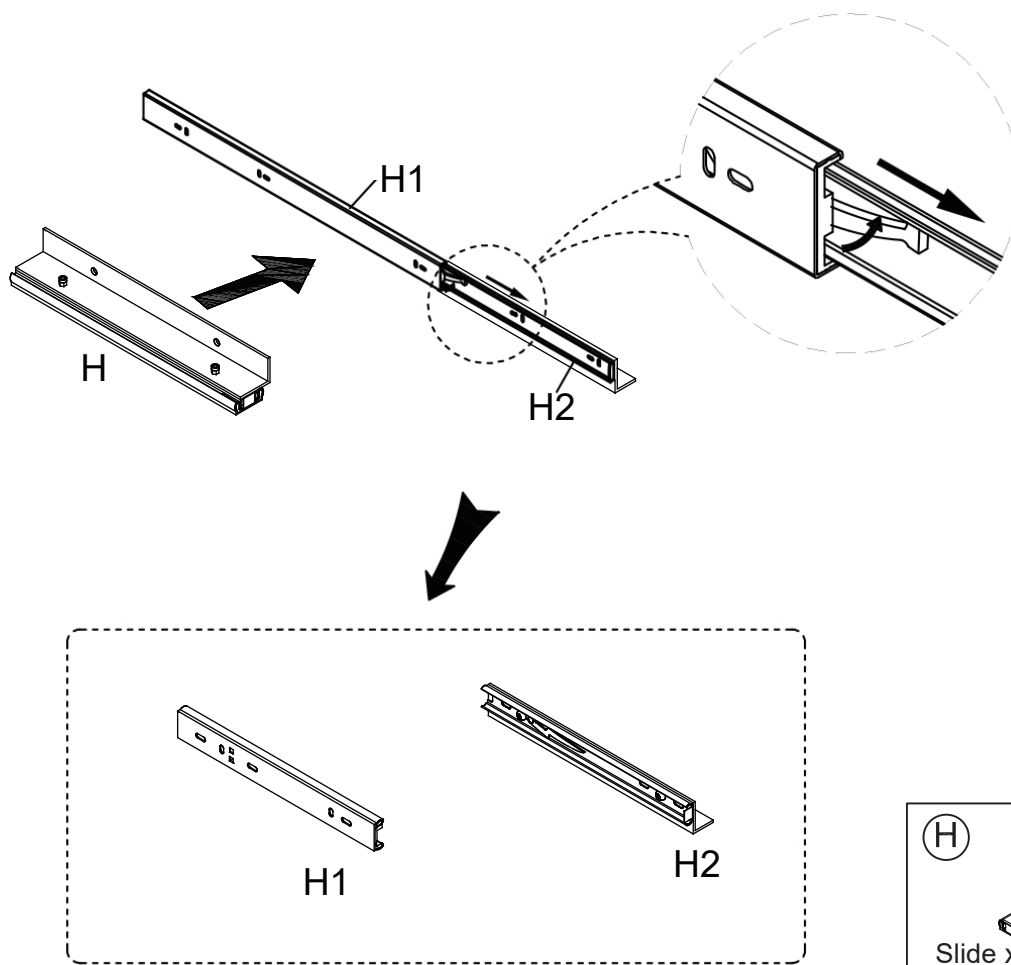





Step 4

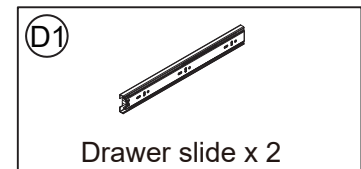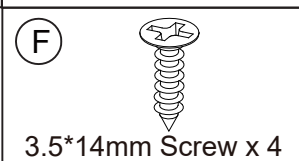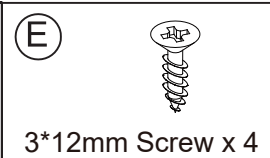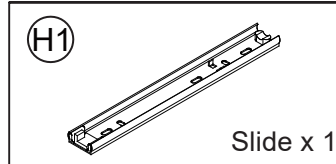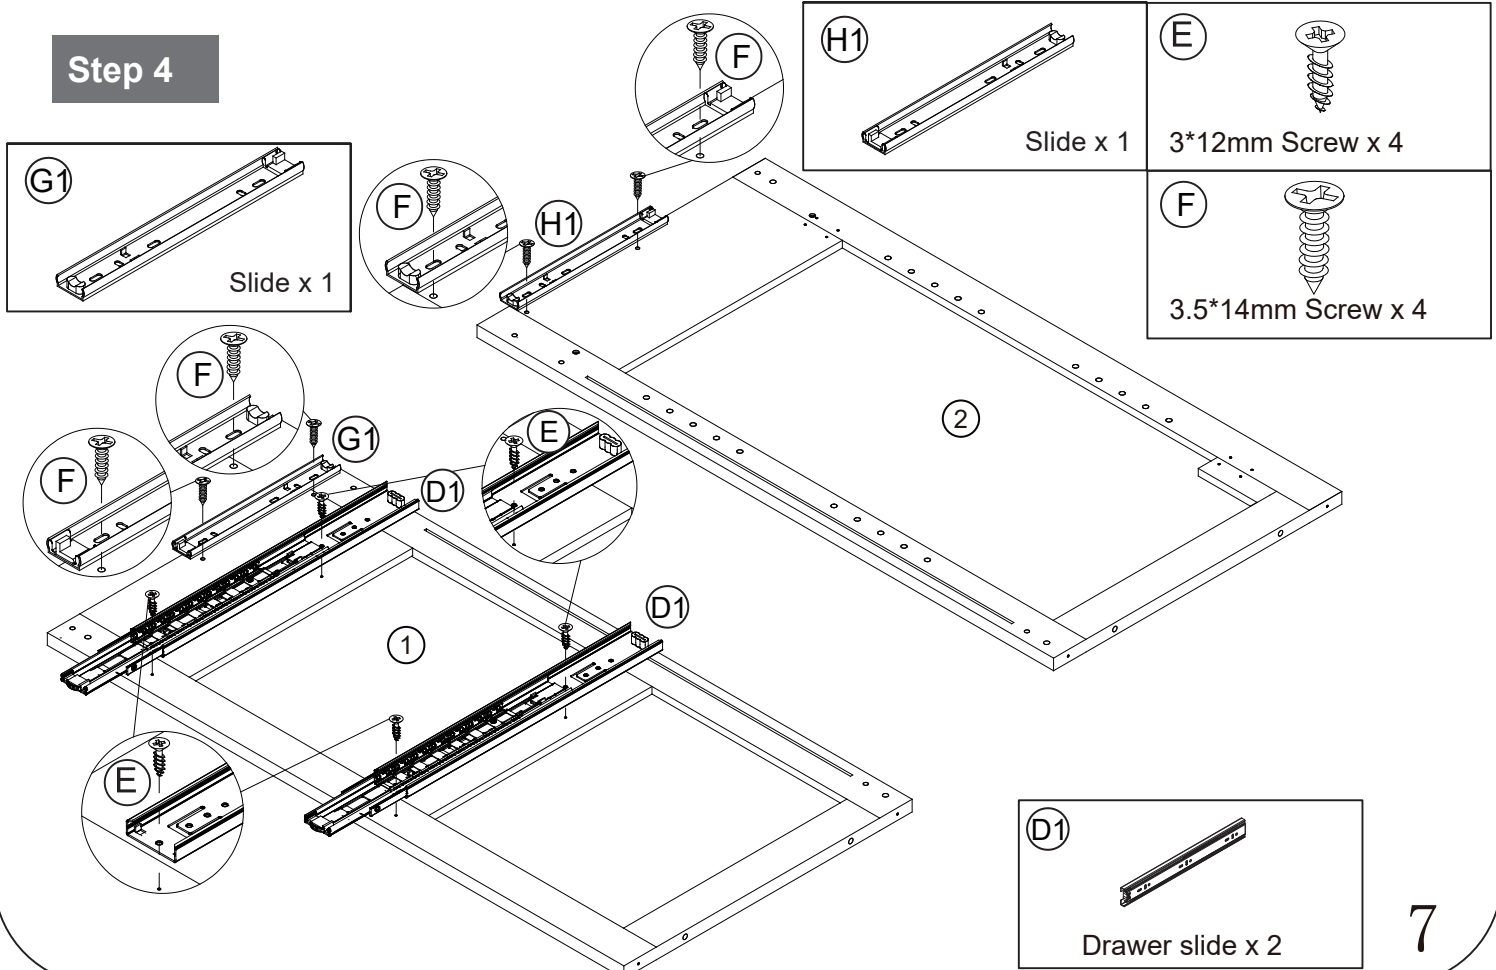


Assembly Instructions



Step 5

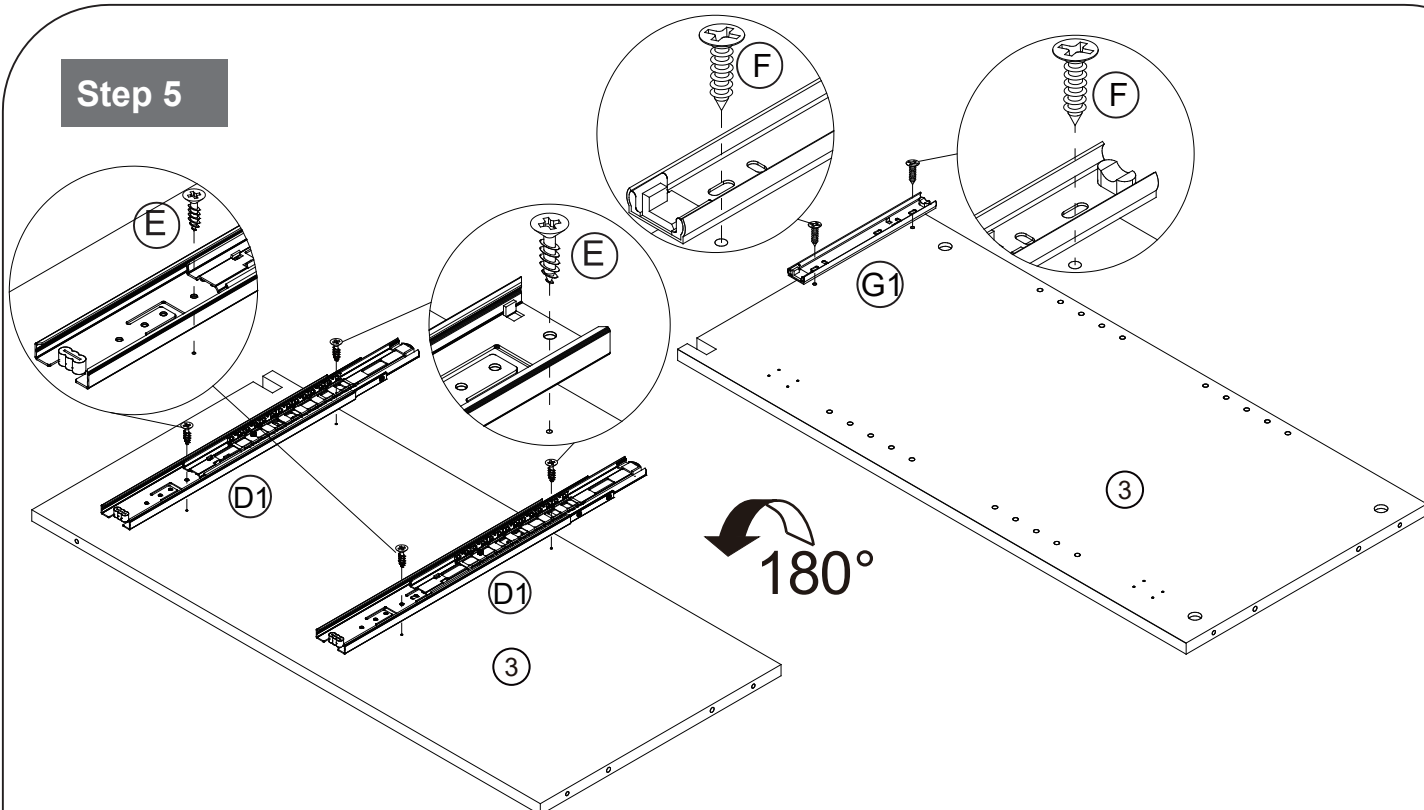

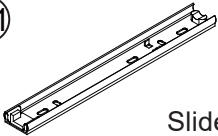 G1 Slide x 1	 F 3.5*14mm Screw x 2	 E 3*12mm Screw x 4	 D1 Drawer slide x 2
--	--	---	---


Step 6

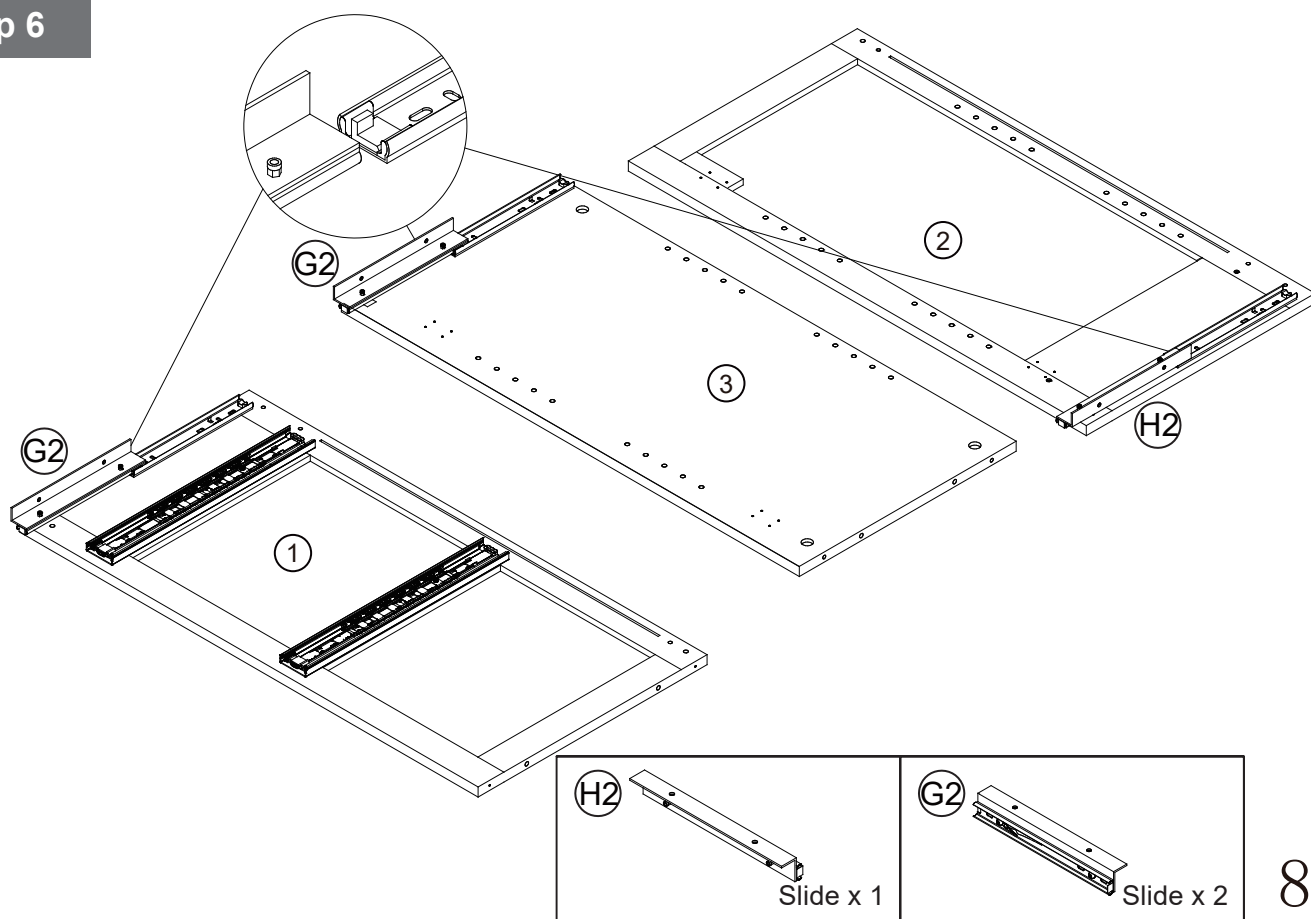

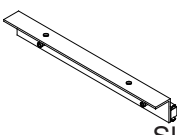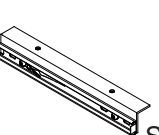
 H2 Slide x 1	 G2 Slide x 2
--	--

Assembly Instructions

Step 7

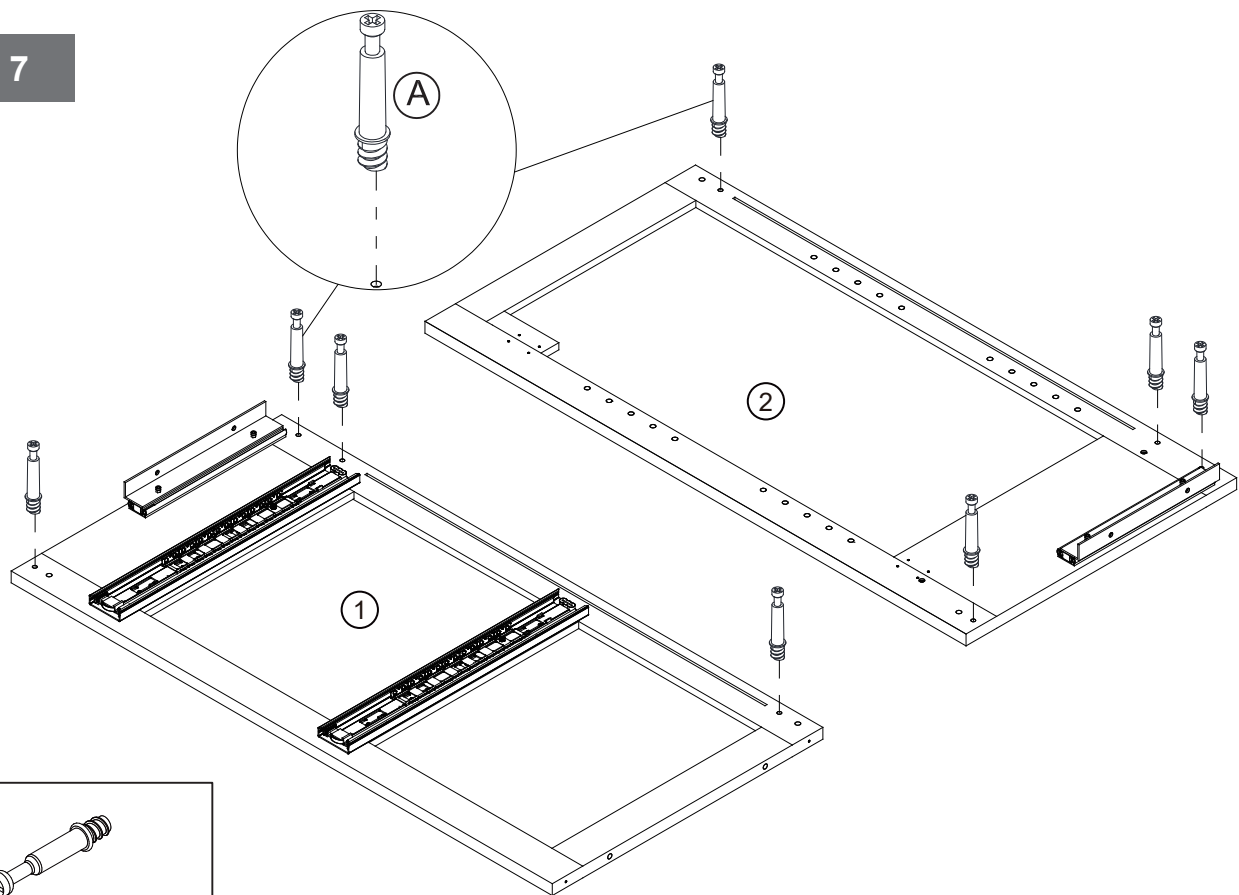


(A)




Cam Bolt x 8

Step 8

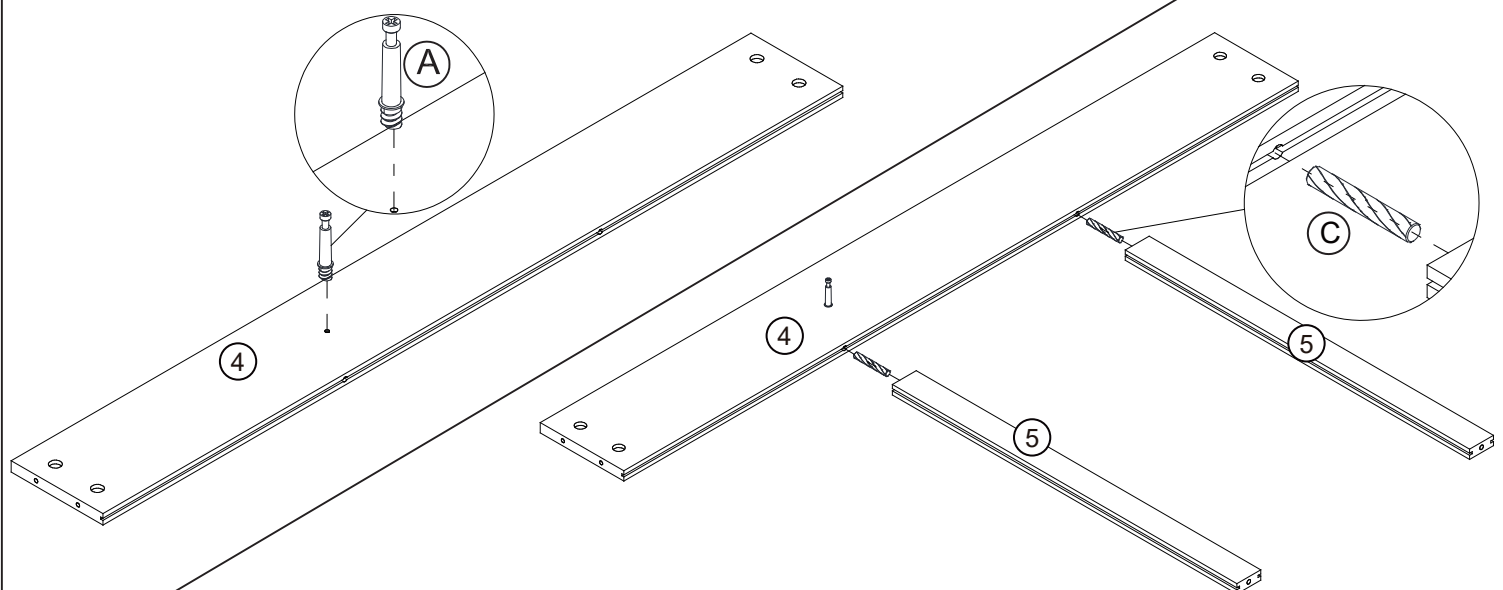

(A)



Cam Bolt x 1


(C)




6*30mm Dowel x 2

Assembly Instructions

Step 9

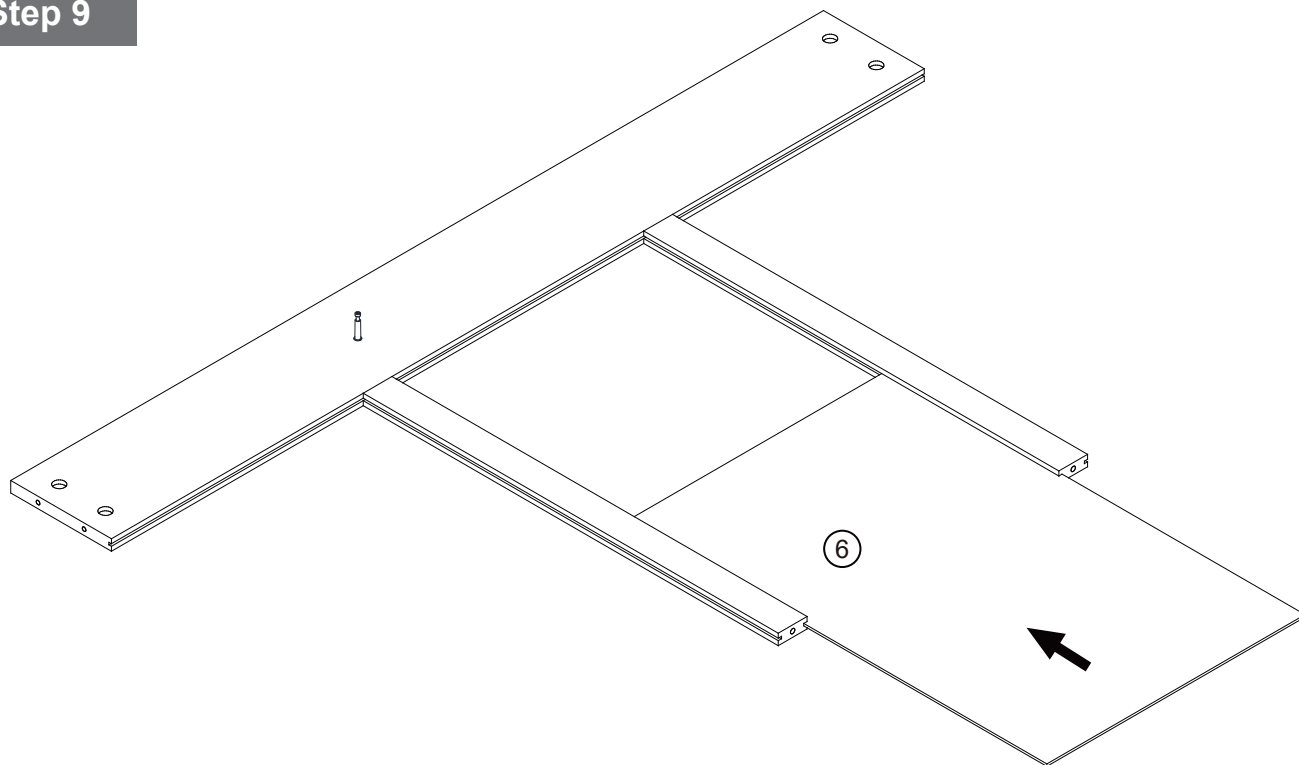


Step 10

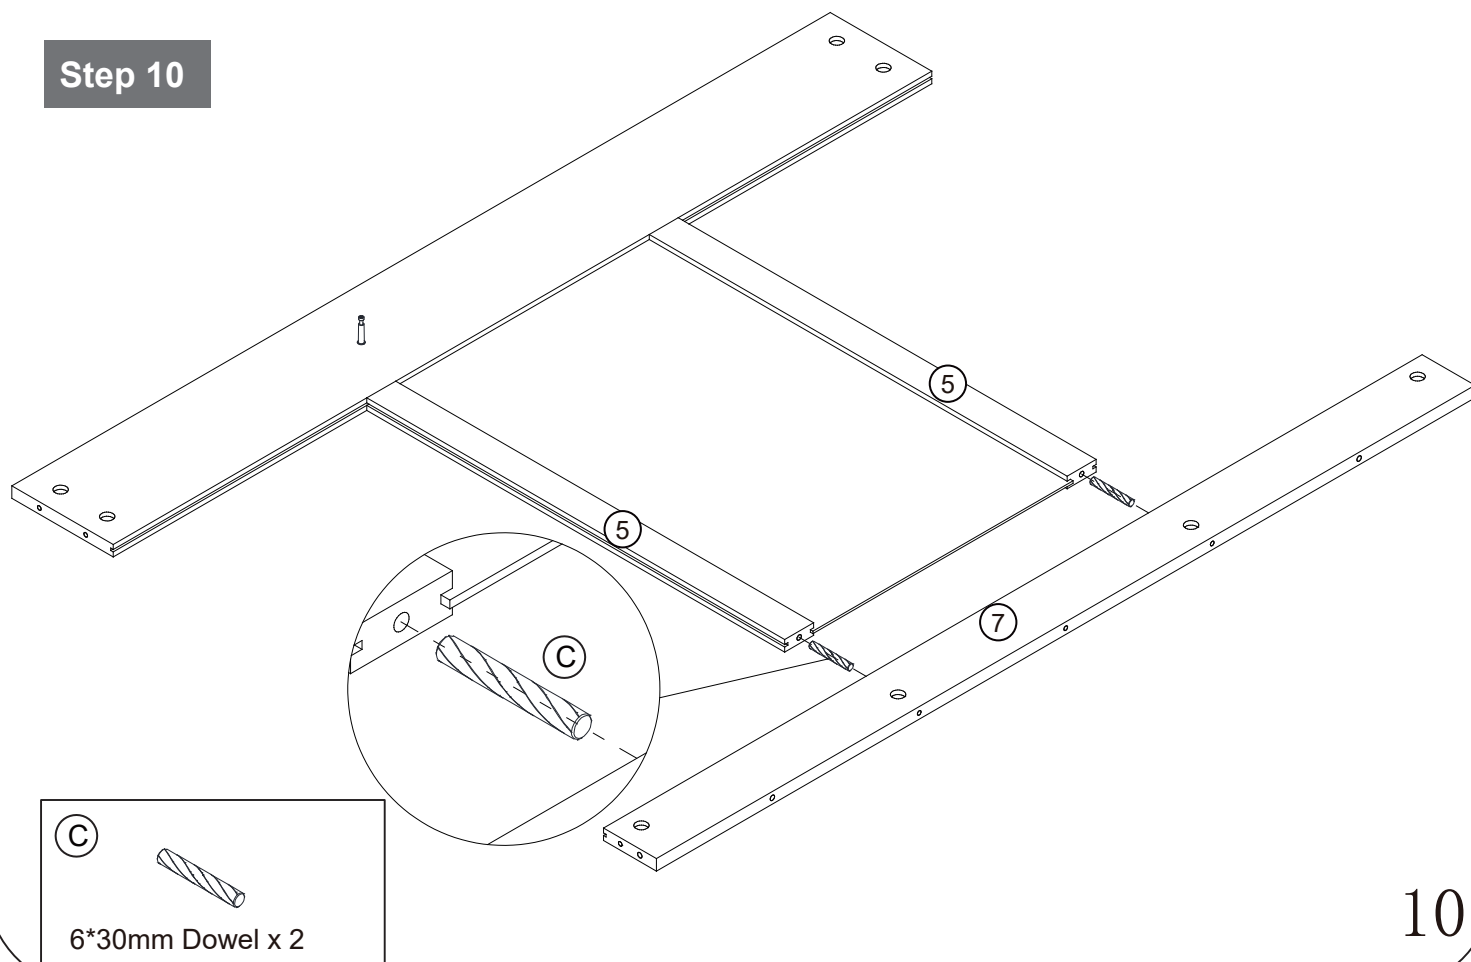


Assembly Instructions

Step 11

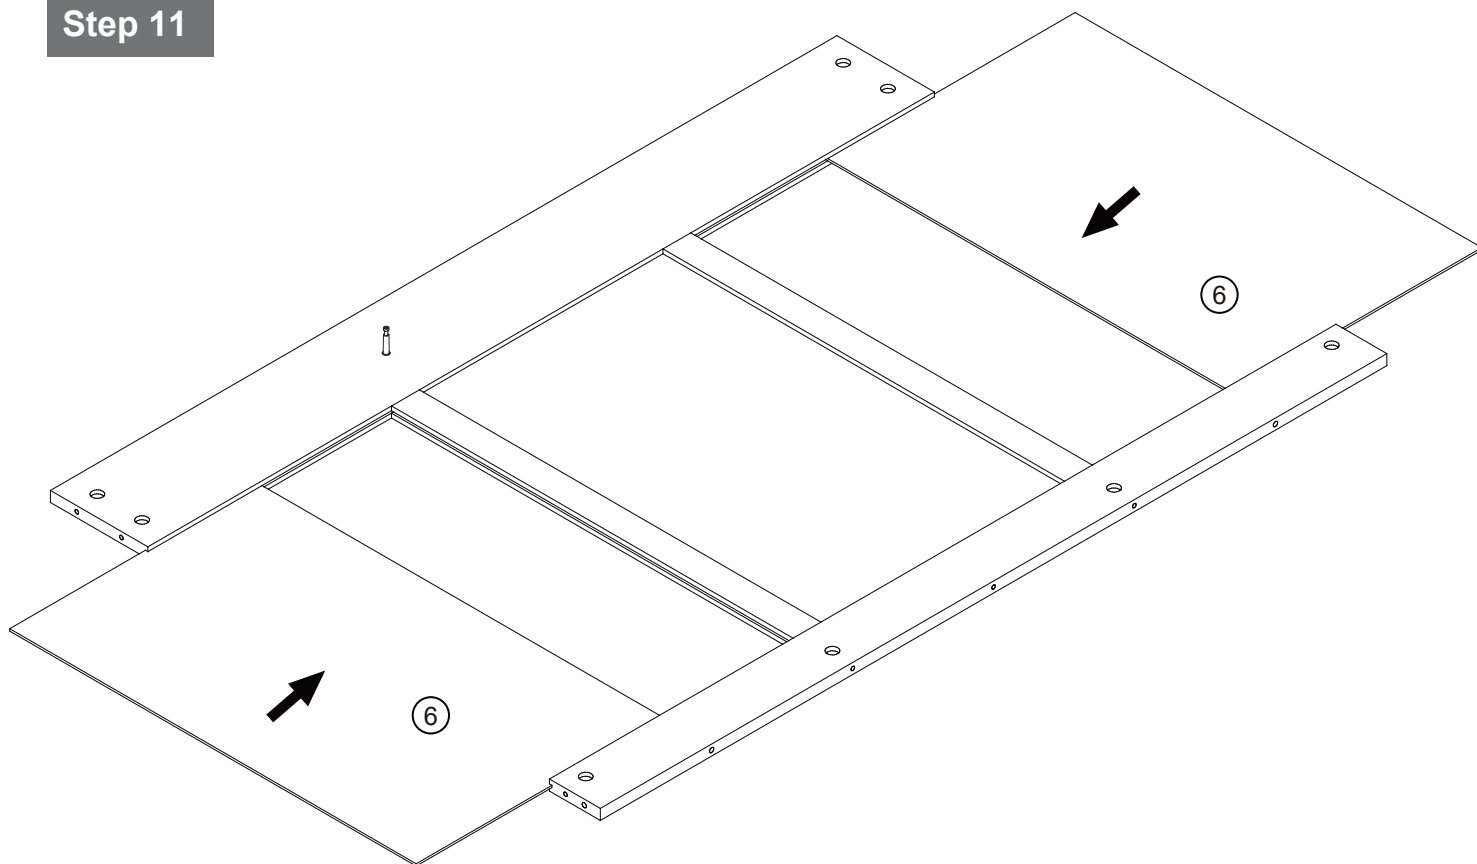

Step 12

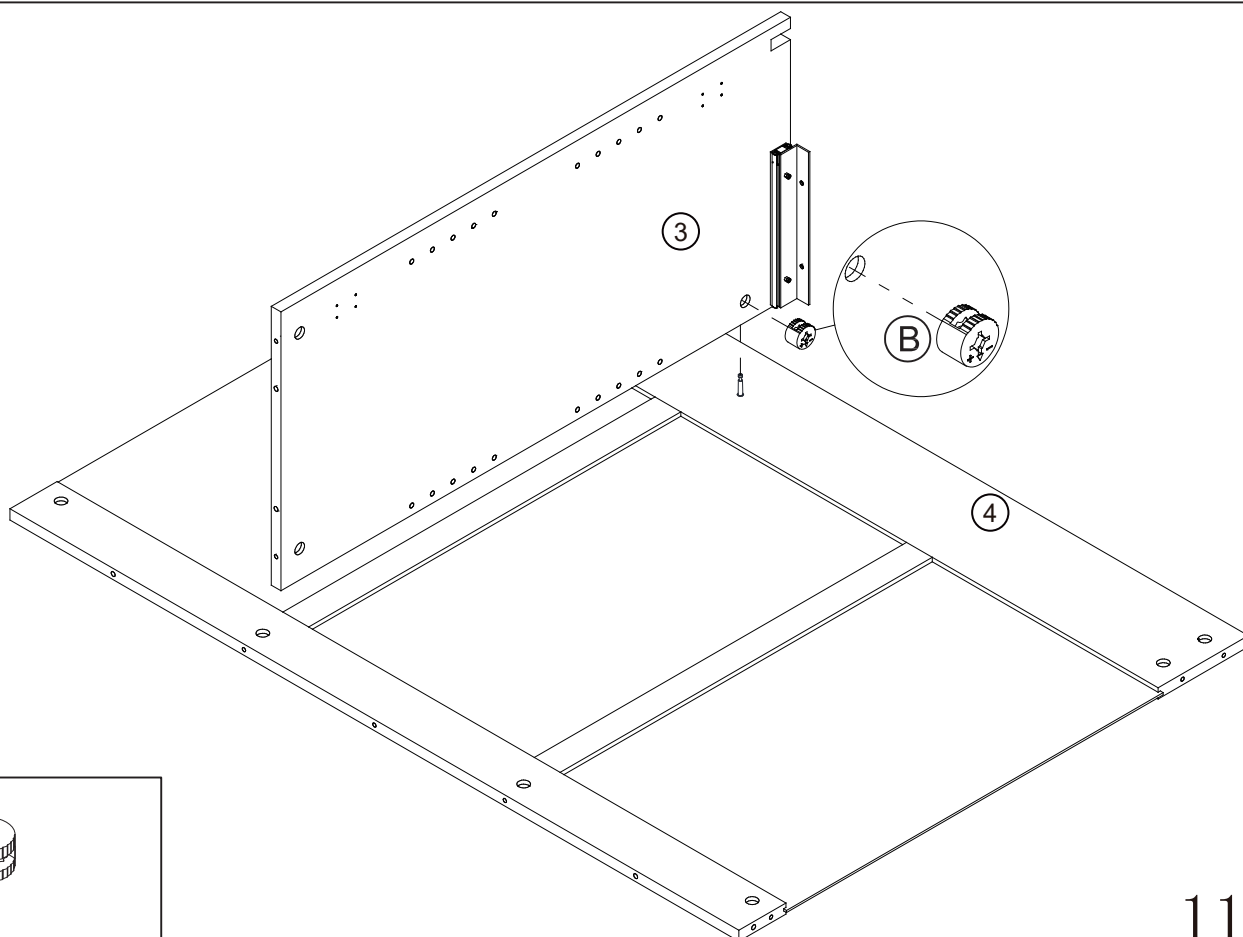


(B)




Cam lock x 1

Assembly Instructions

Step 13

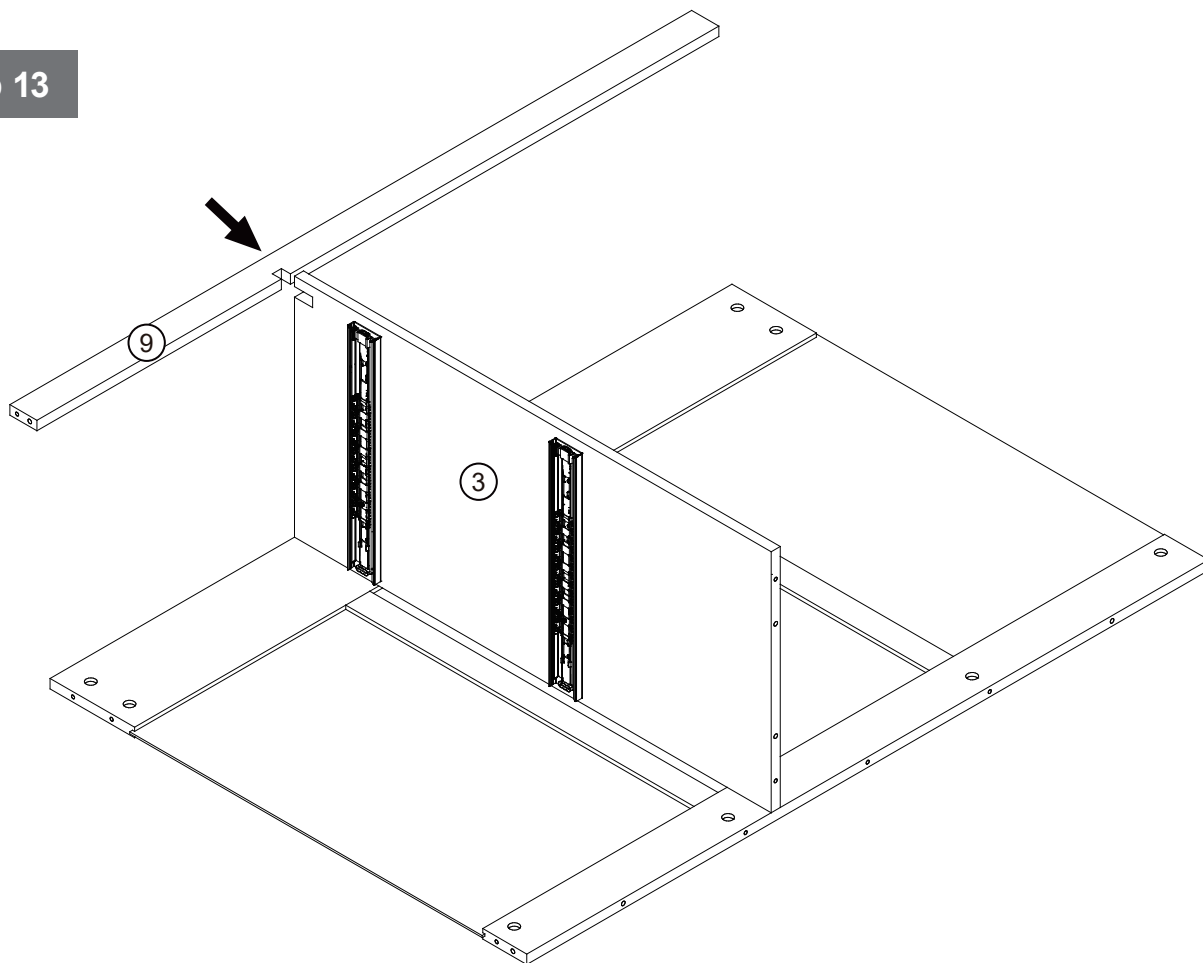

Step 14

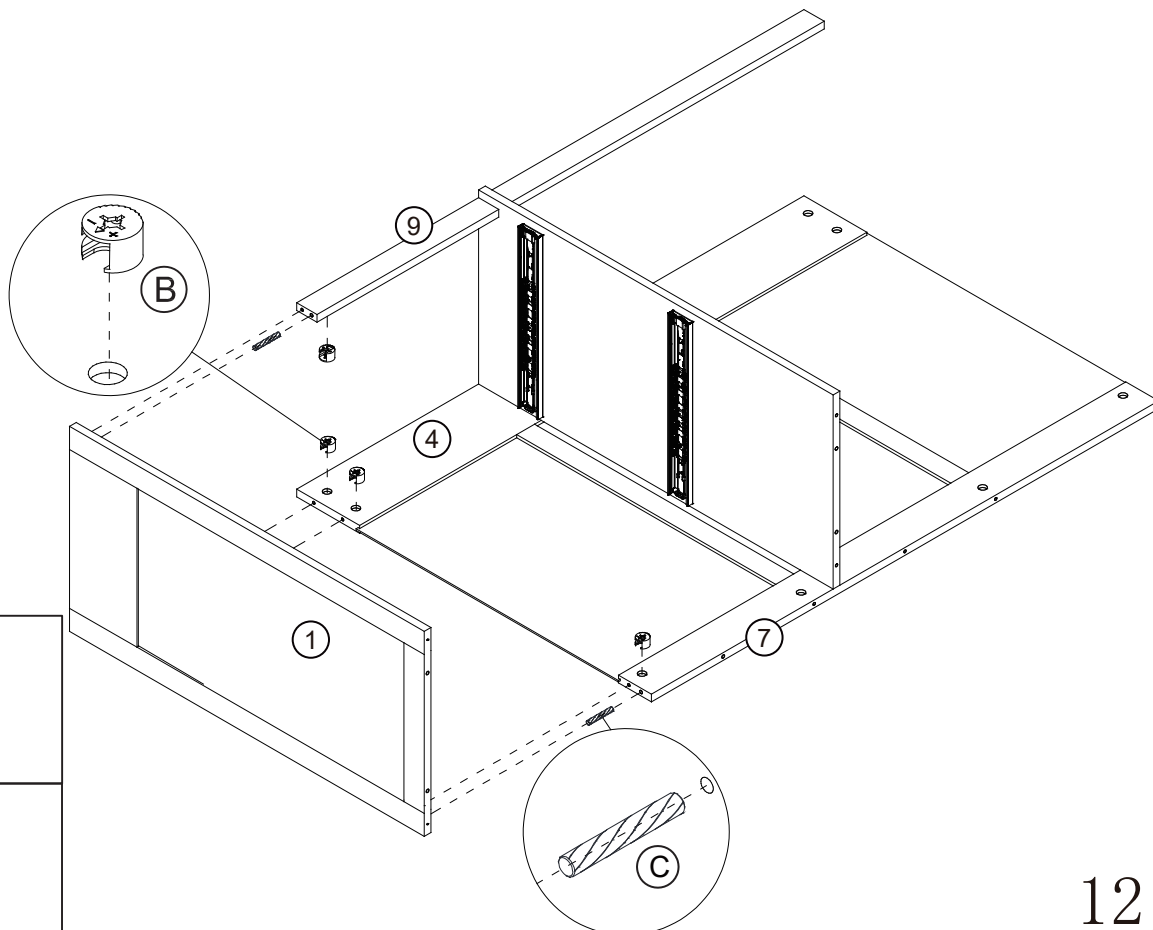


(C) 
6*30mm Dowel x 2


(B) 
Cam lock x 4

Assembly Instructions

Step 15

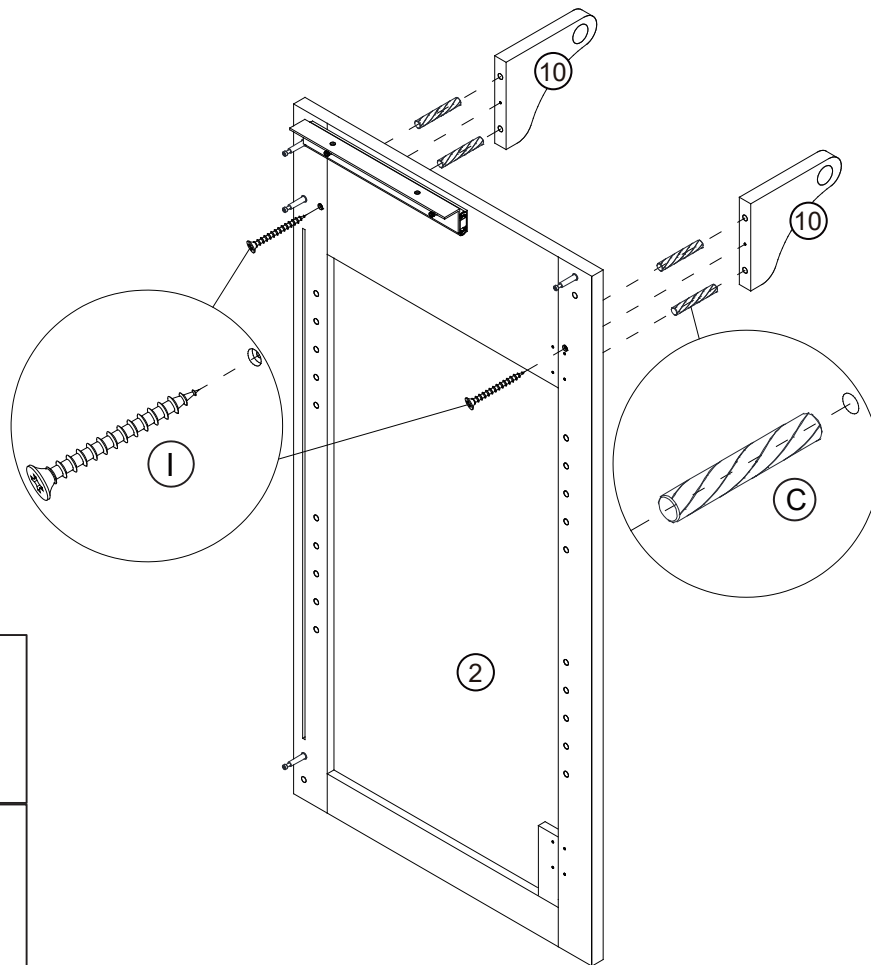

I

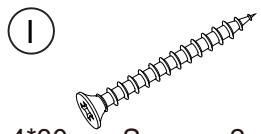


4*30mm Screw x 2

C



6*30mm Dowel x 4

Step 16

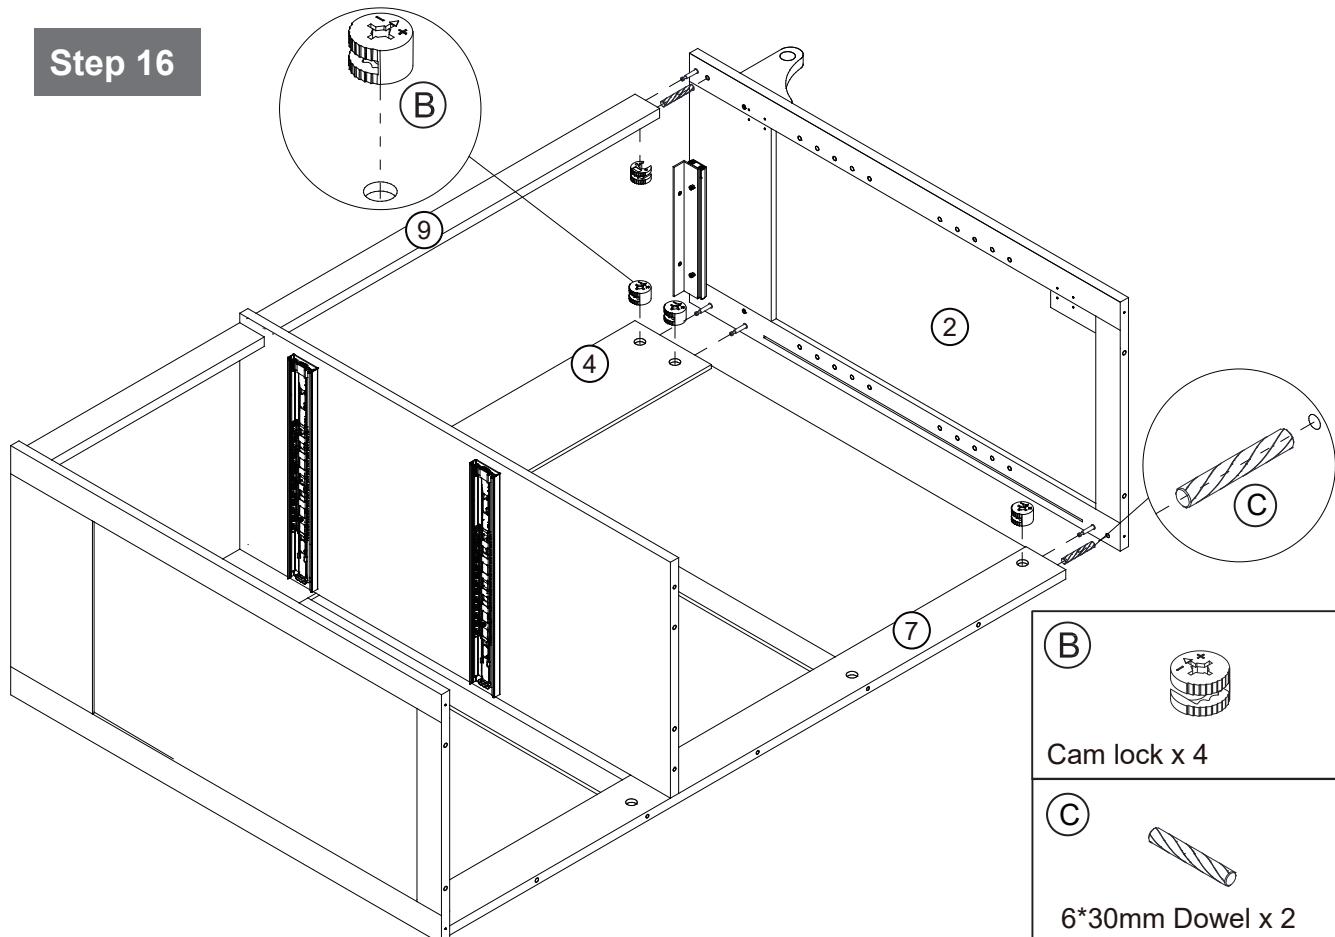

B



Cam lock x 4


C




6*30mm Dowel x 2

Assembly Instructions

Step 17

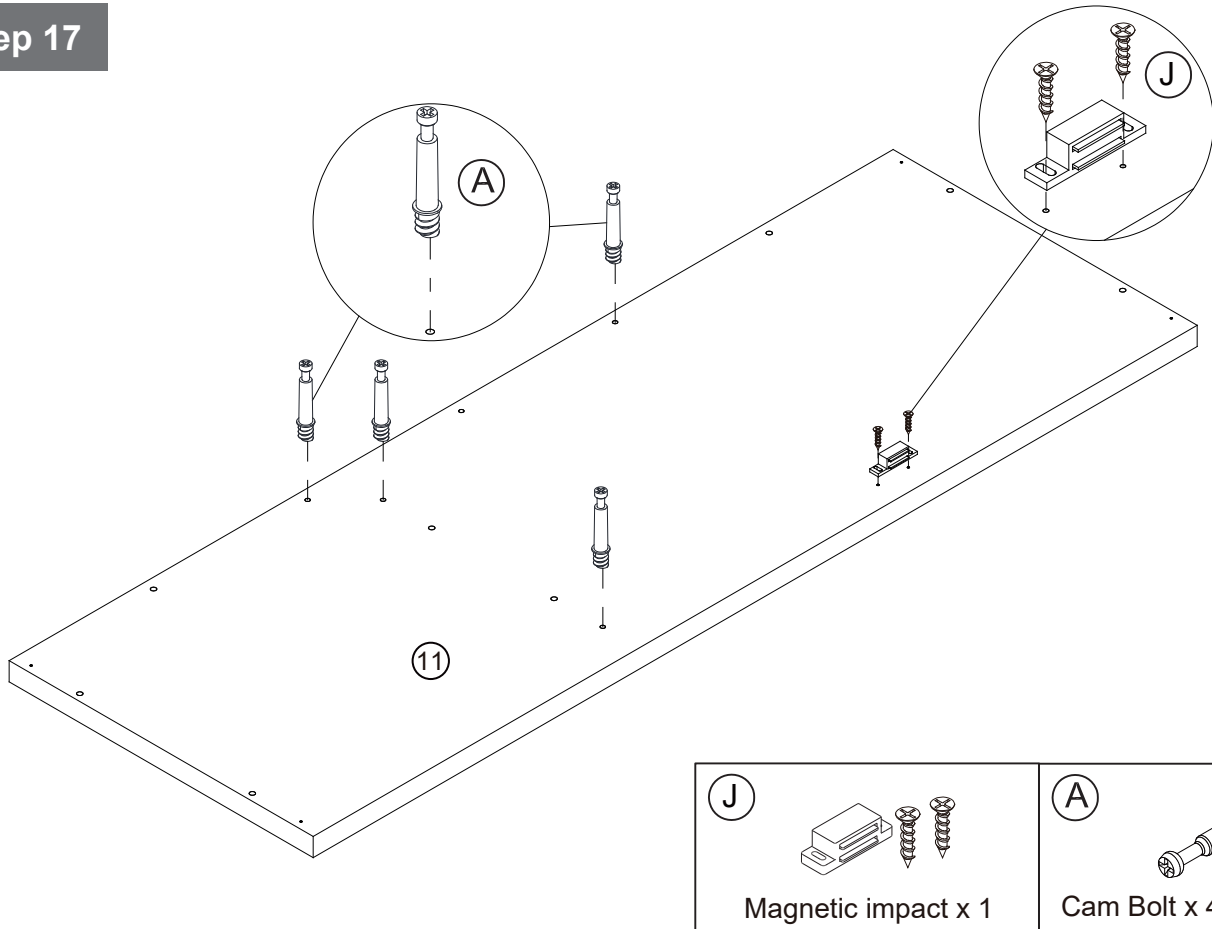


Step 18

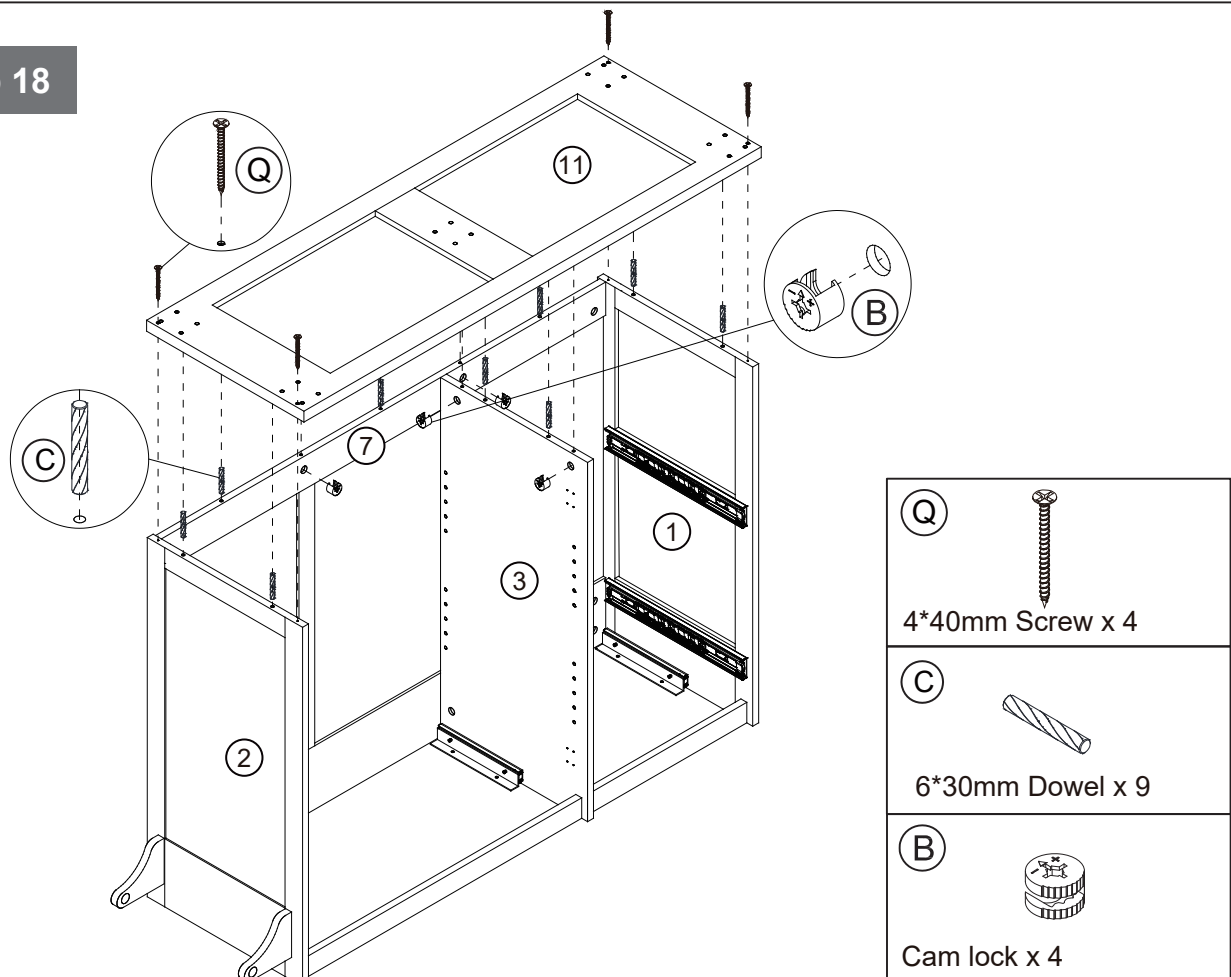


Assembly Instructions

Step 19


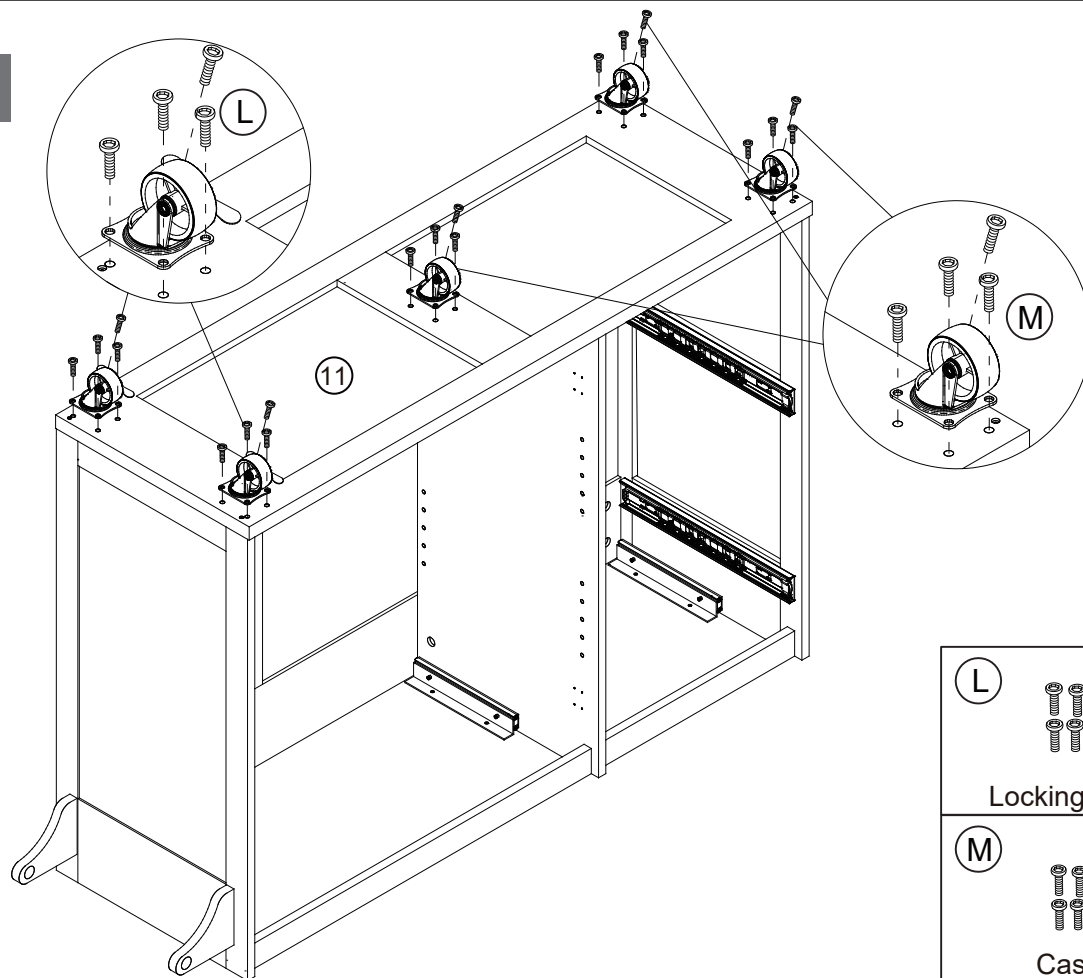


Step 20



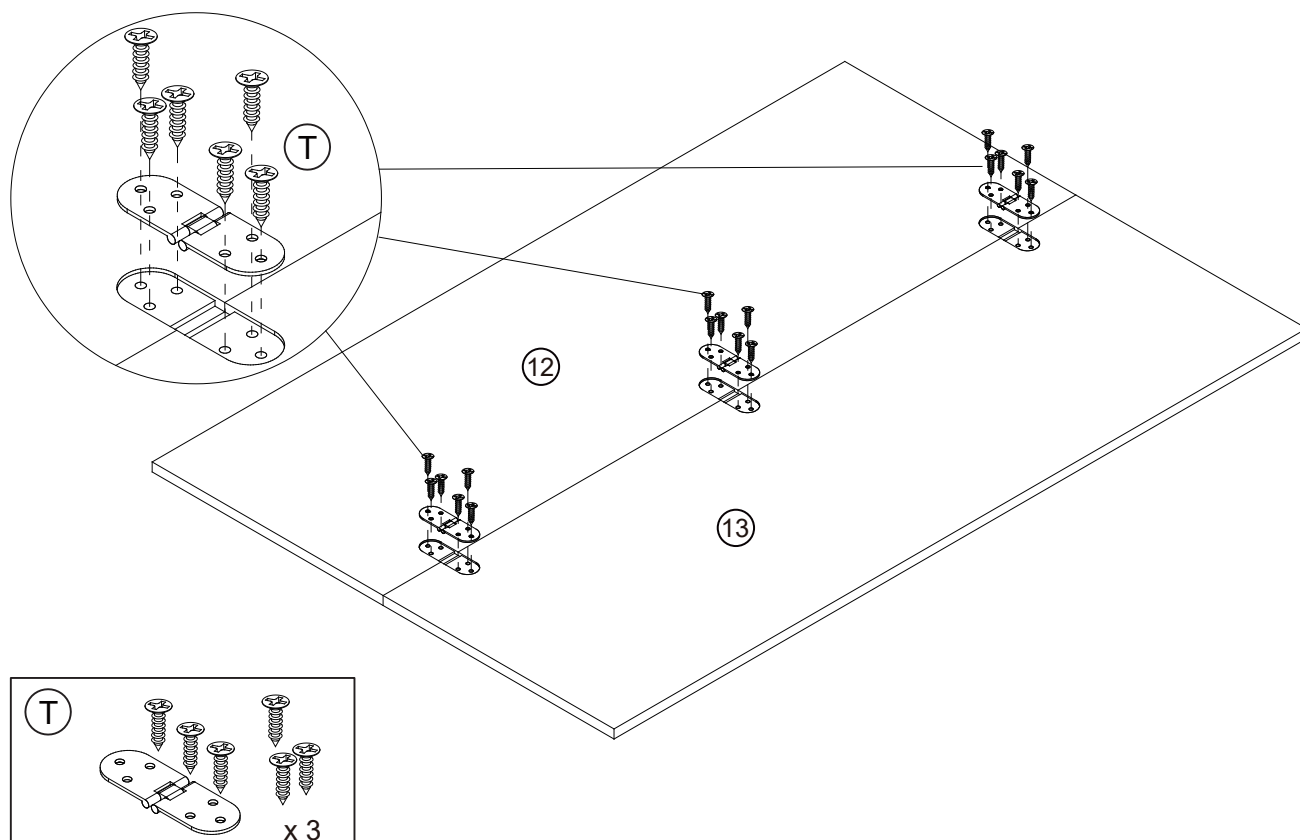


Assembly Instructions

Step 21

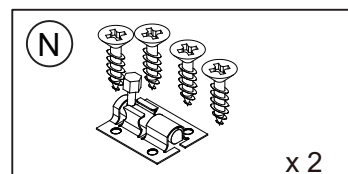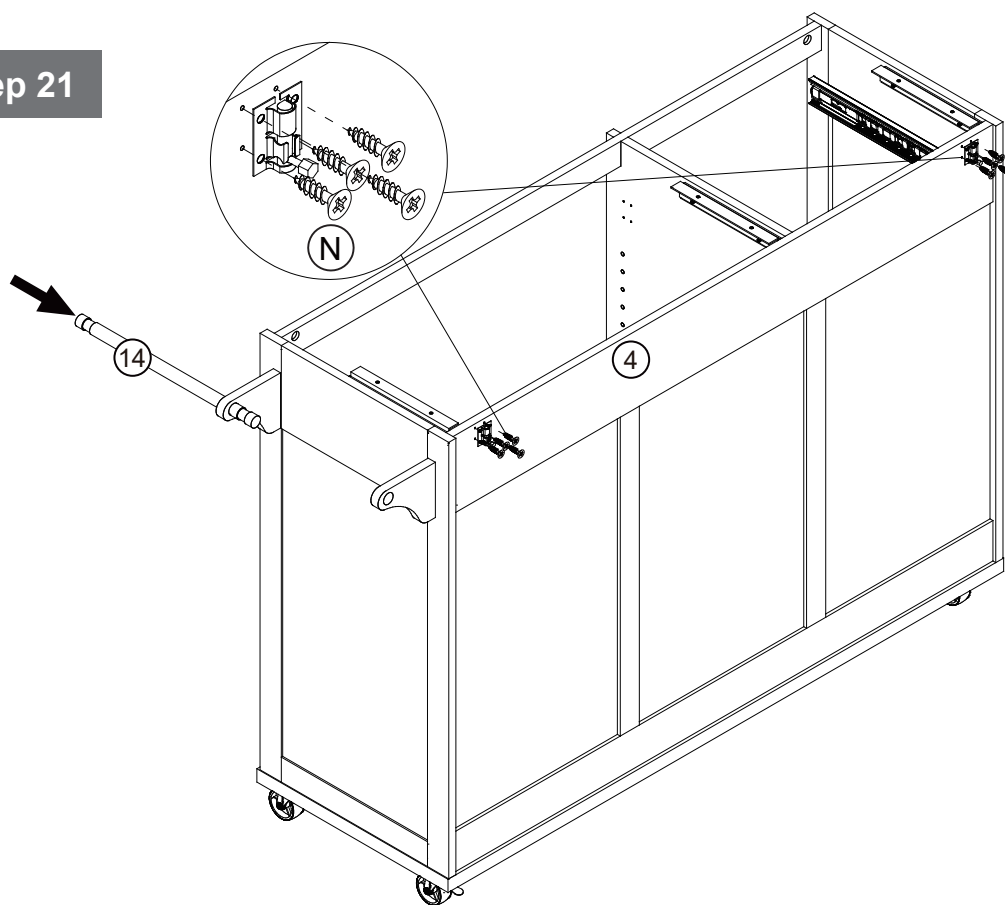


Step 22

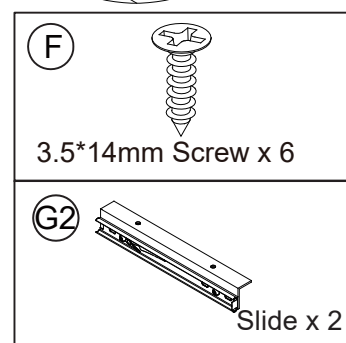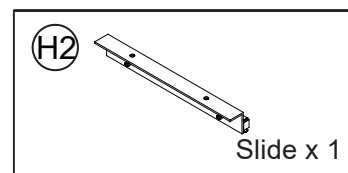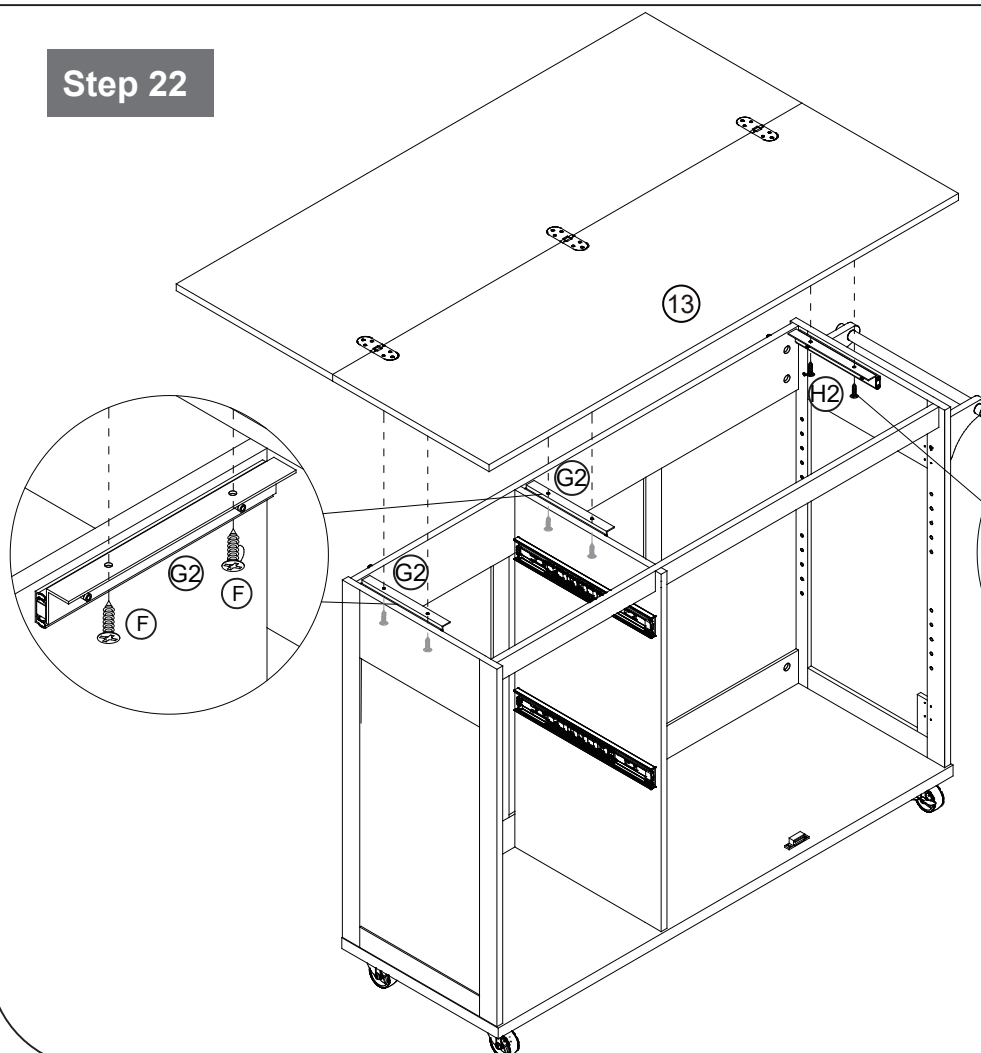

Assembly Instructions

Step 23

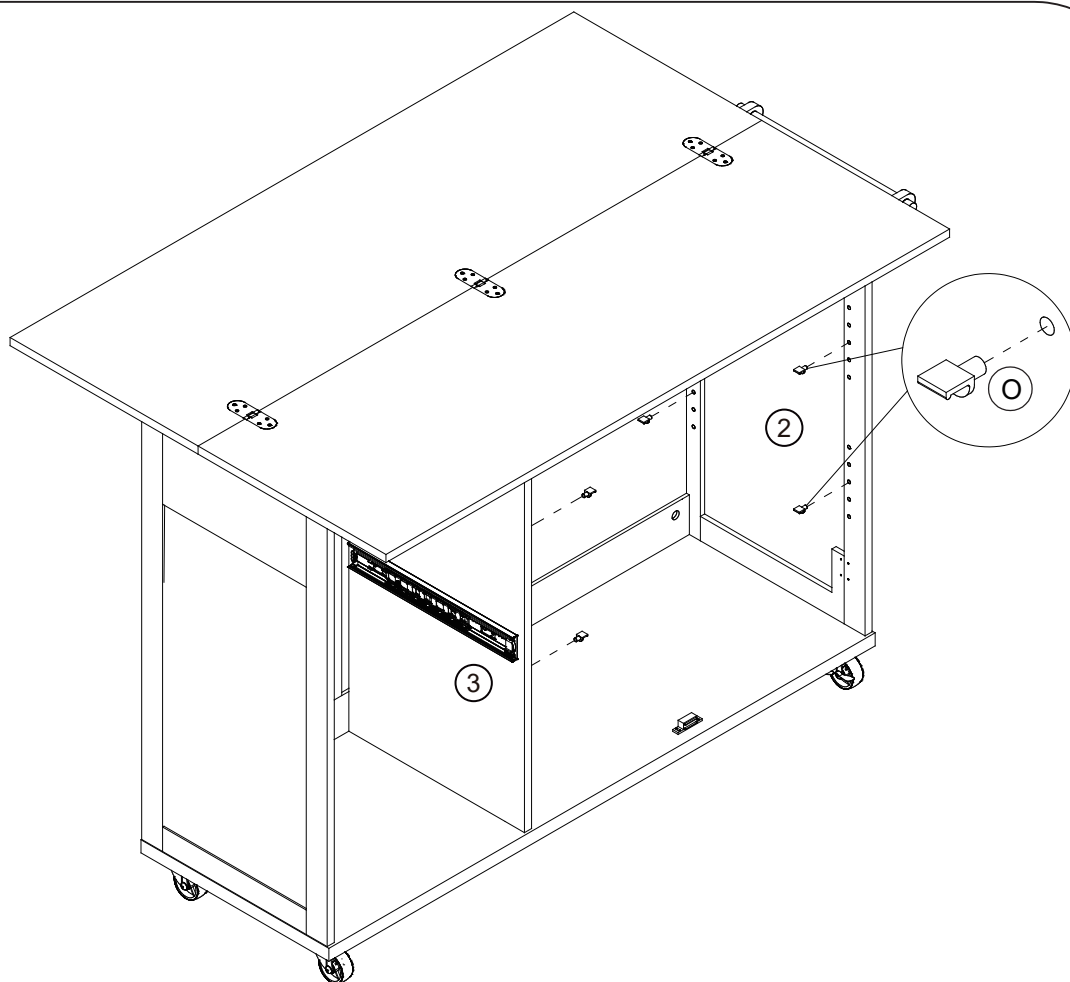


0




Laminate support x 8




Step 24

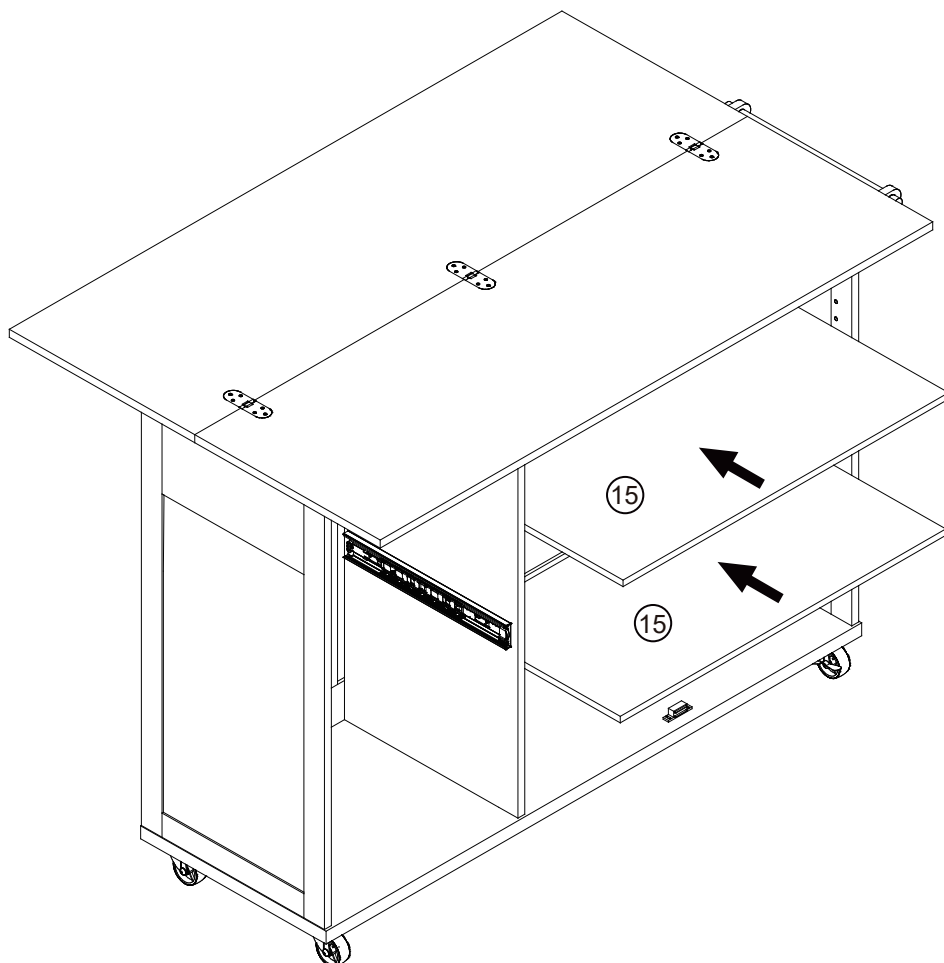

Assembly Instructions


Step 25

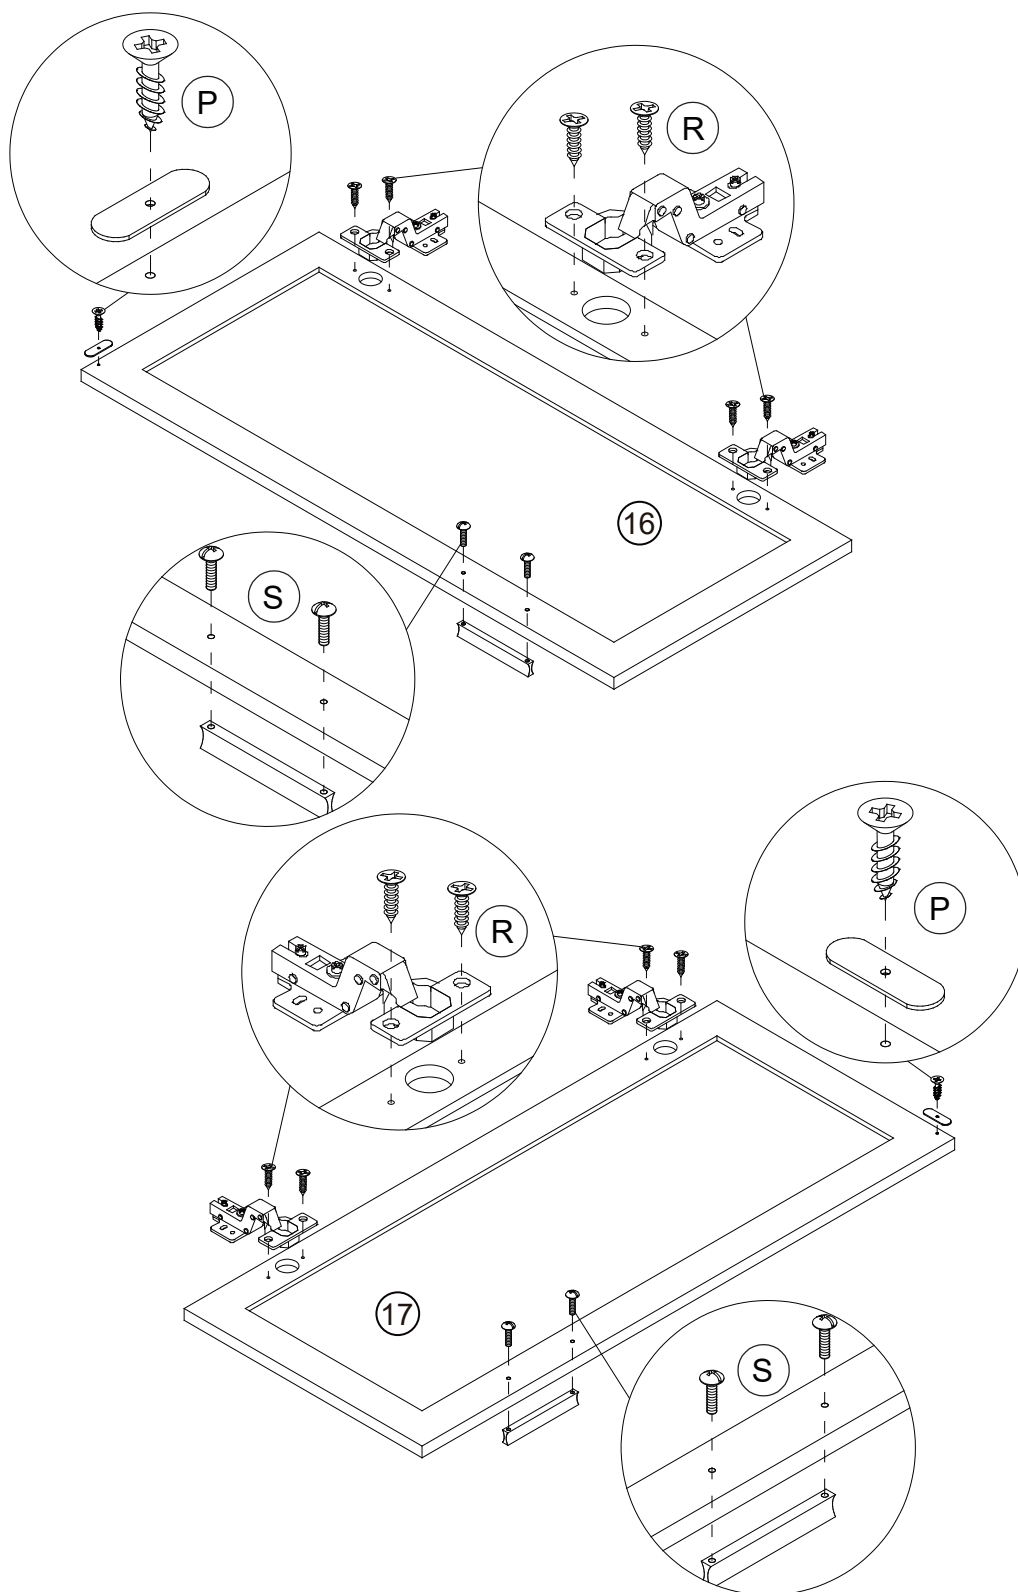


P  Suction sheet x 2	R  x 4set	S  4*18mm Handle x 2set
--	---	--

Assembly Instructions


Step 26

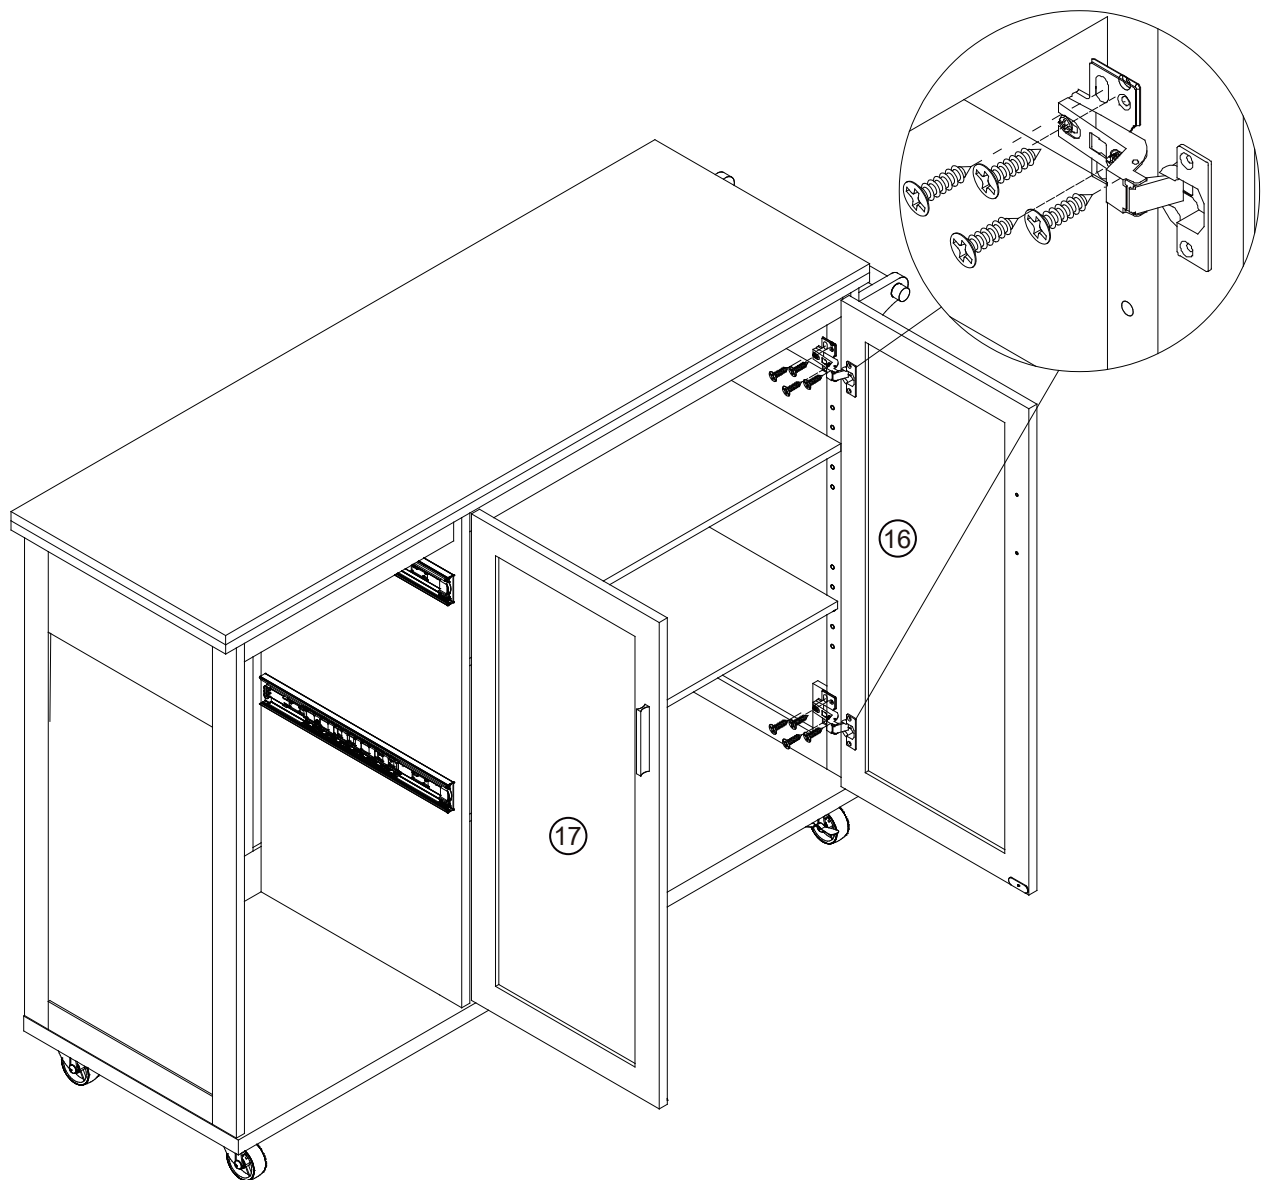


If the door can't close, please adjust the hinges as below.

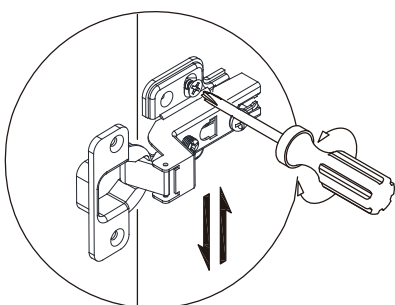

This is used to adjust the door panel in the up and down direction.

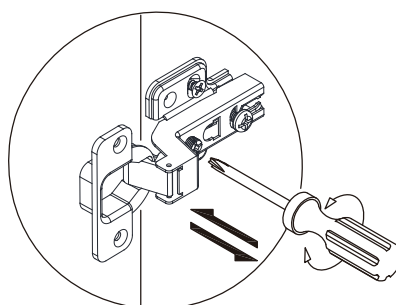


This is used to adjust the door panel in the left and right direction.

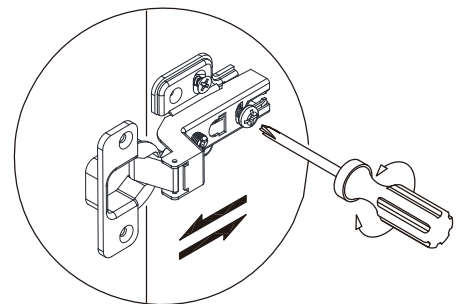


This is used to adjust the door panel in the front and rear.

Assembly Instructions


Step 27

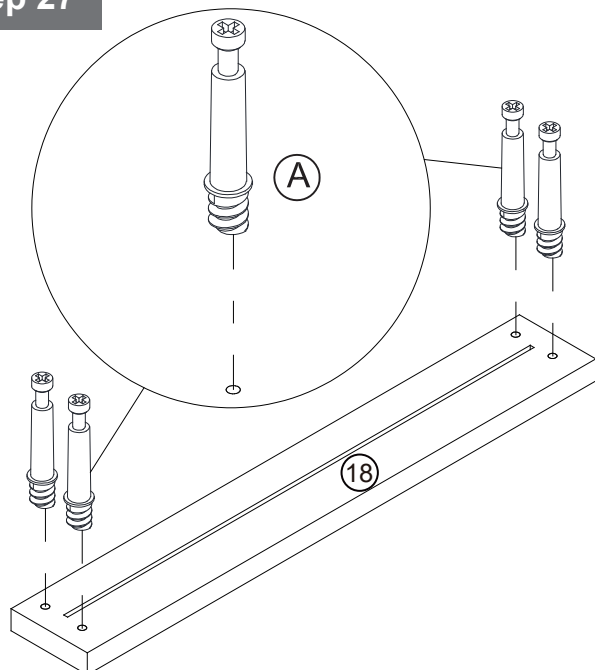



(A)



Cam Bolt x 4

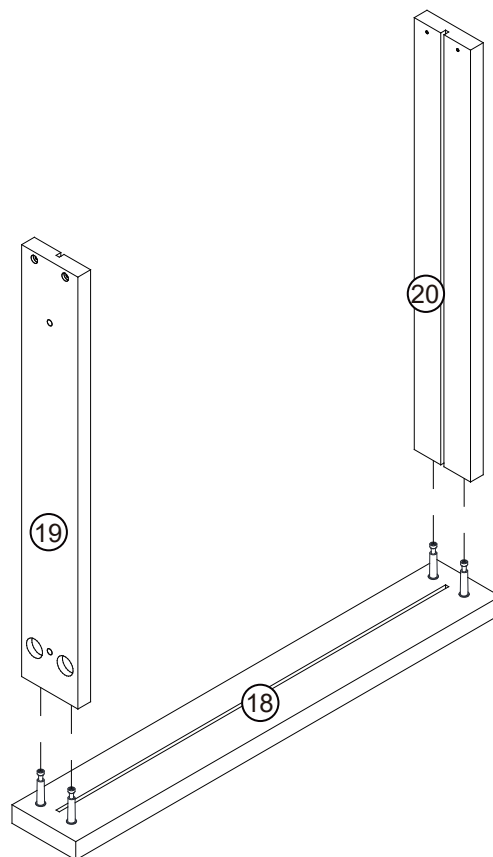

Step 28

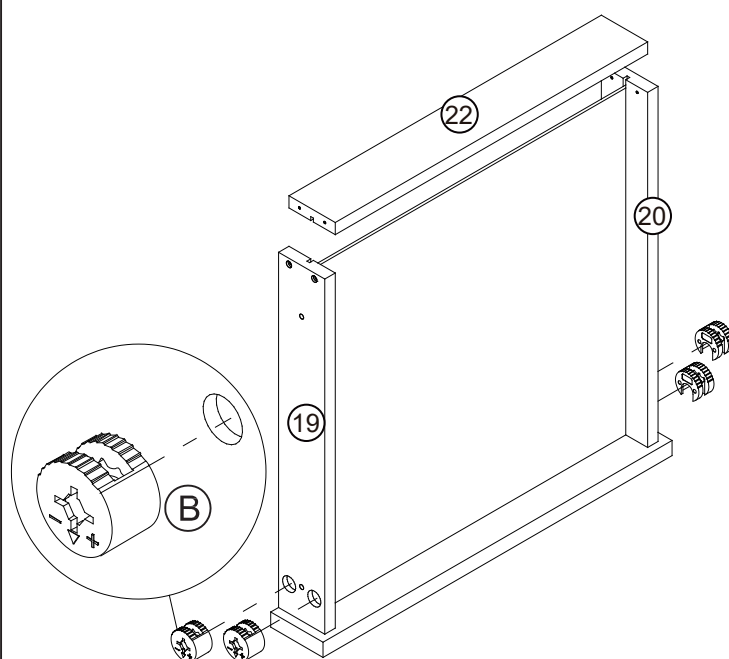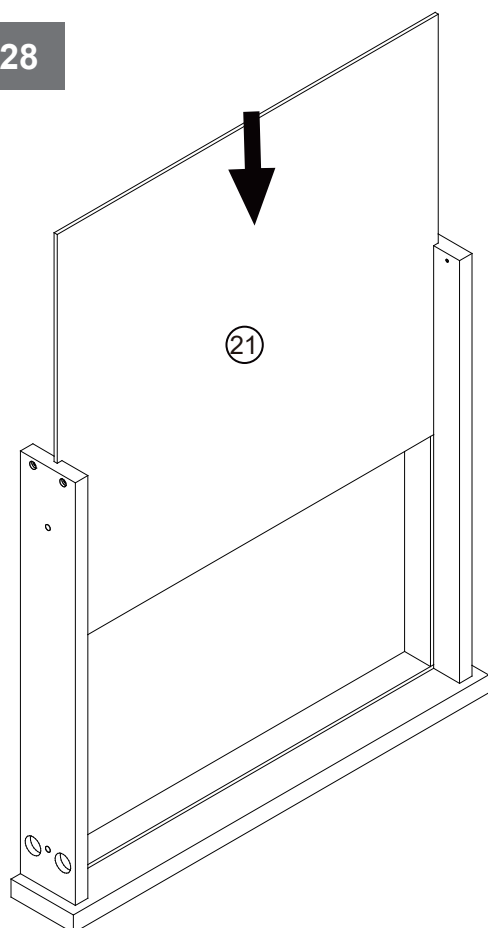



(B)




Cam lock x 4

Assembly Instructions

Step 29

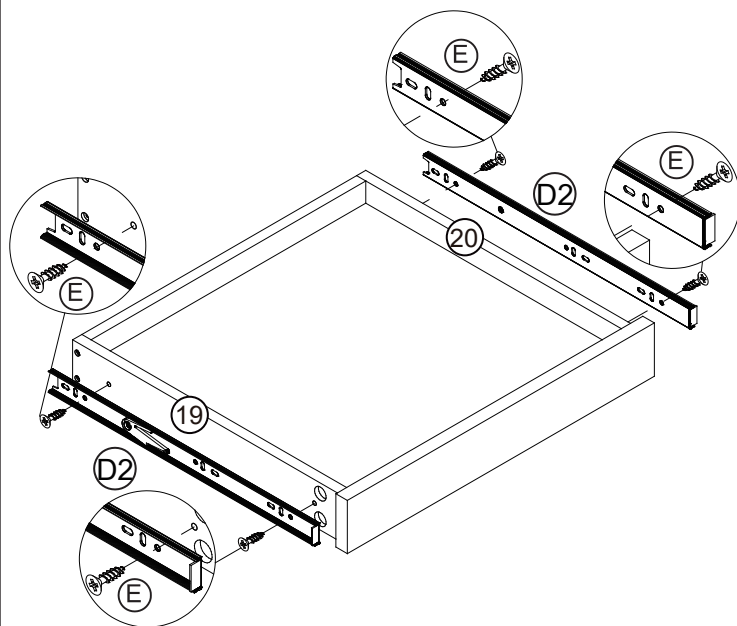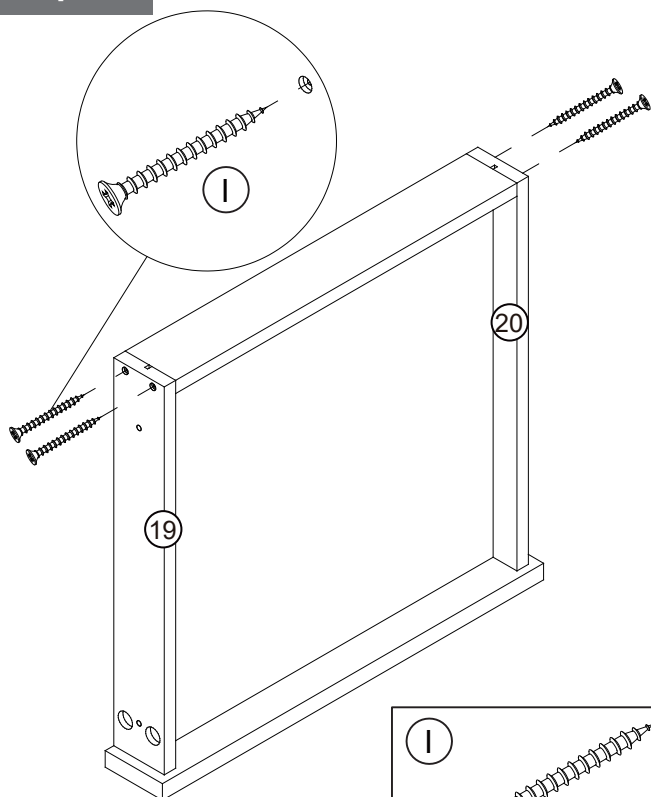

I

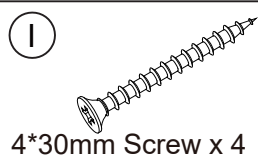


4*30mm Screw x 4

E





3*12mm Screw x 4

D2




Drawer slide x 2

Step 30

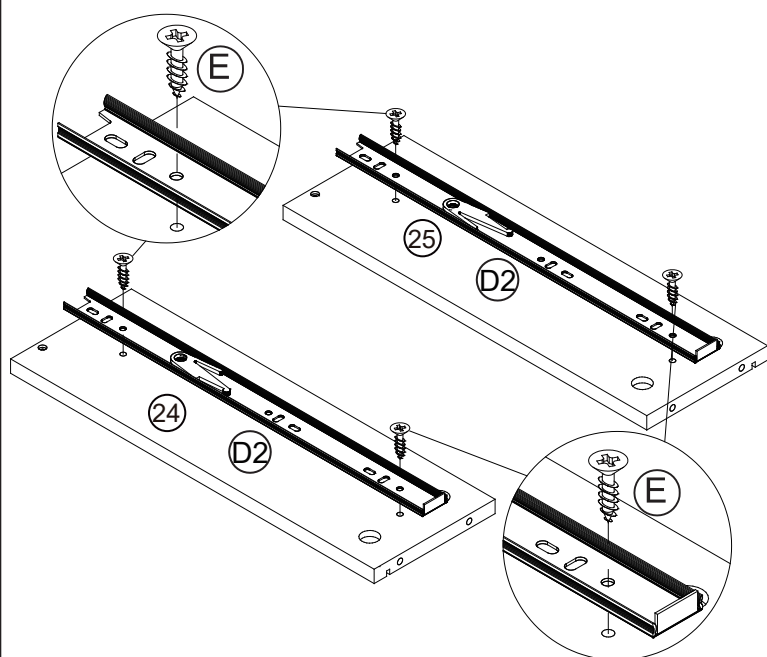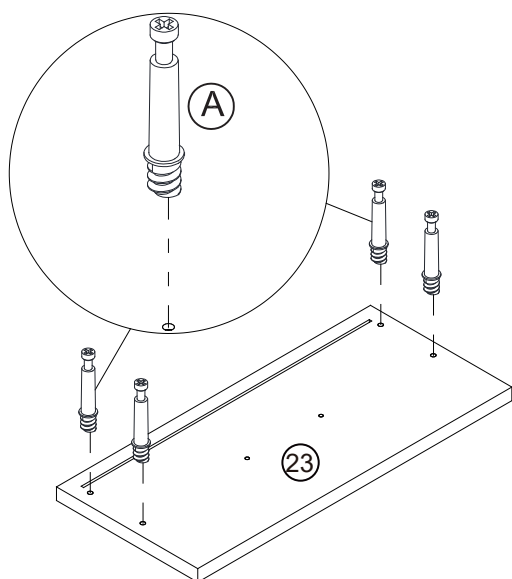


A




Cam Bolt x 4

D2



Drawer slide x 2



E





3*12mm Screw x 4

Assembly Instructions

Step 31

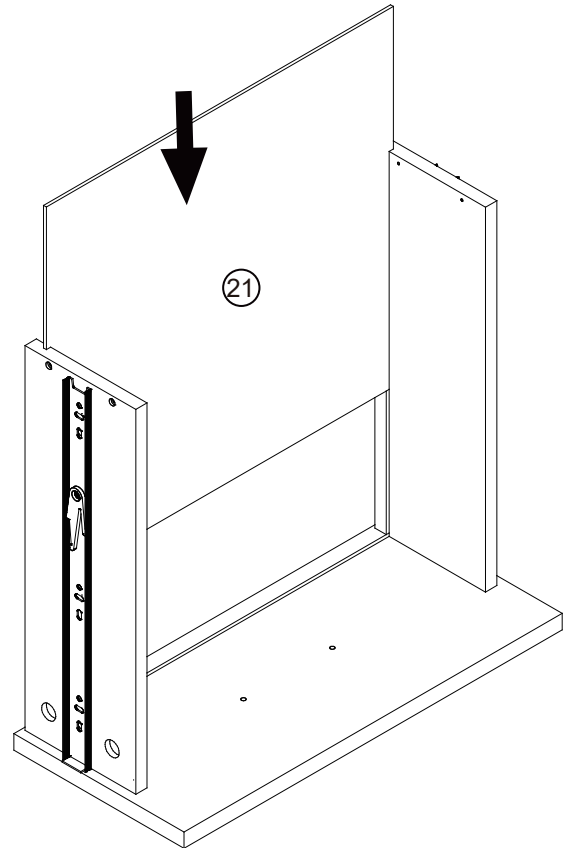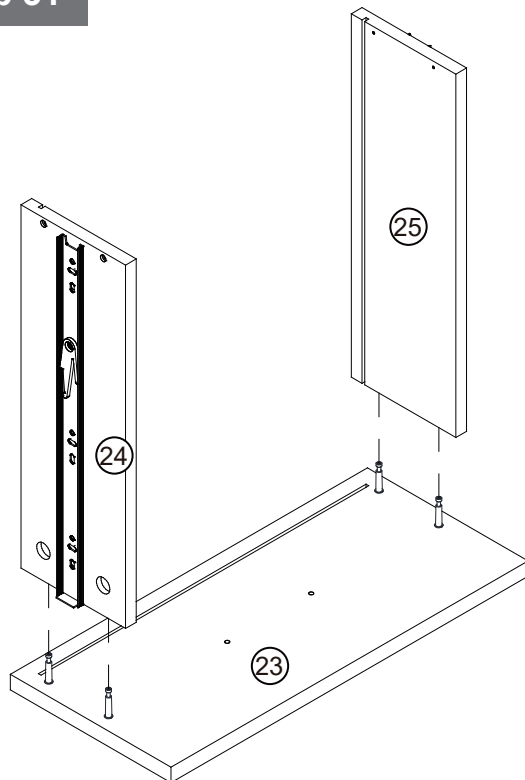

Step 32

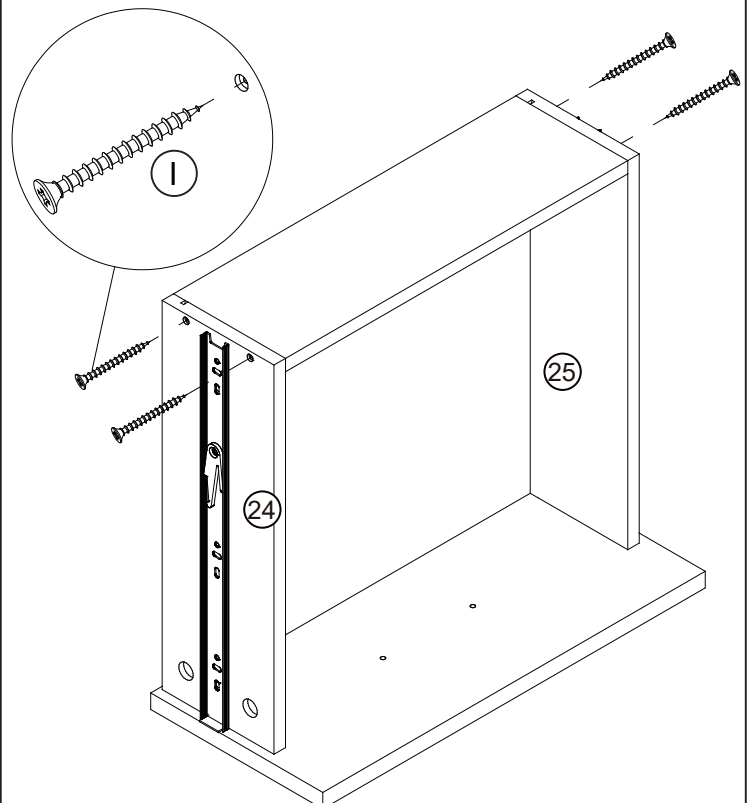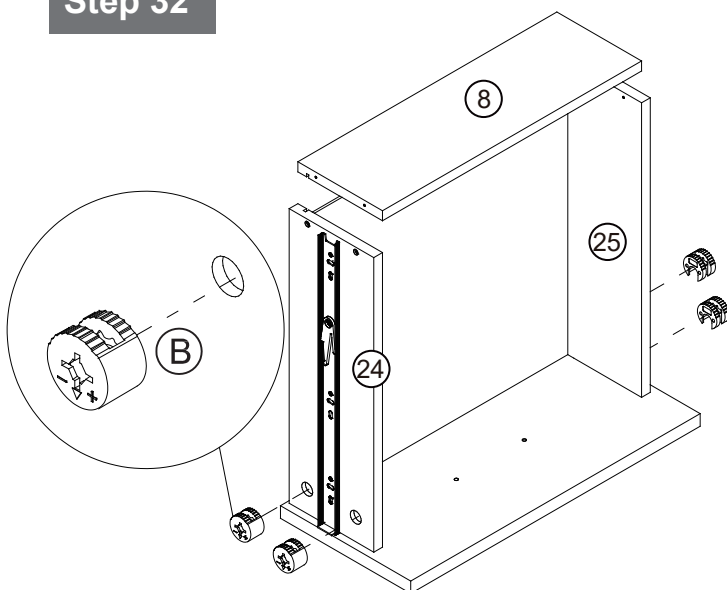


(B)



Cam lock x 4




(I)

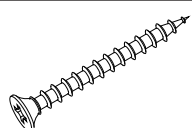


4*30mm Screw x 4

Assembly Instructions

Step 33

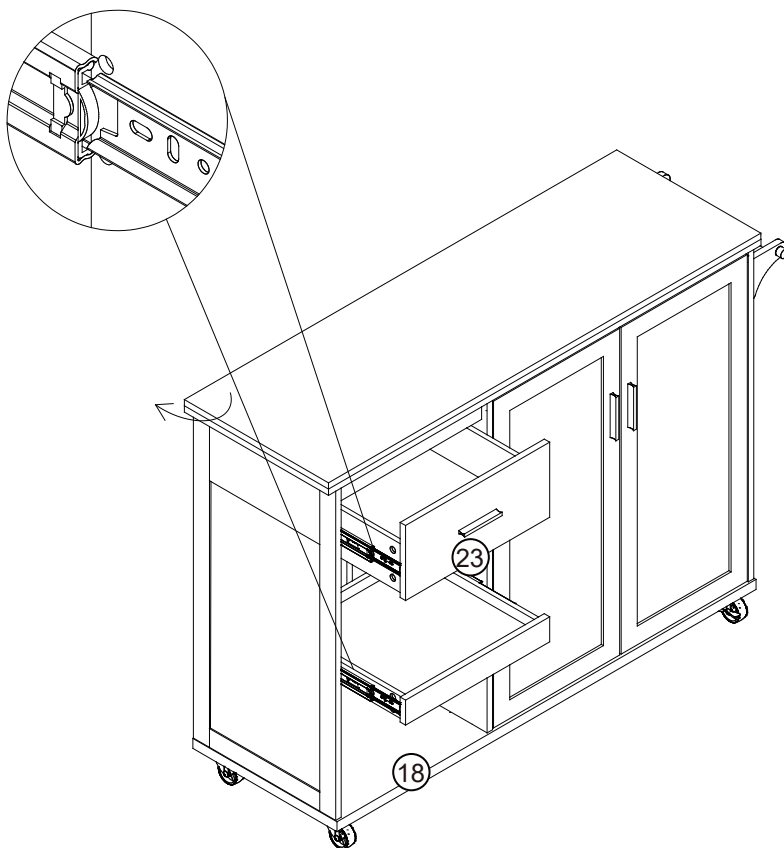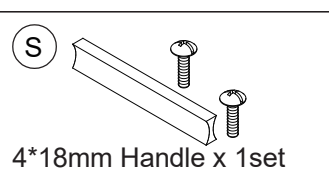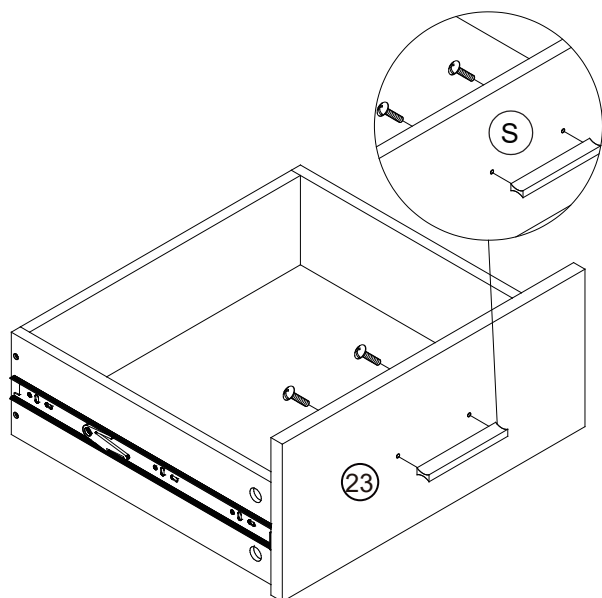


Step 34

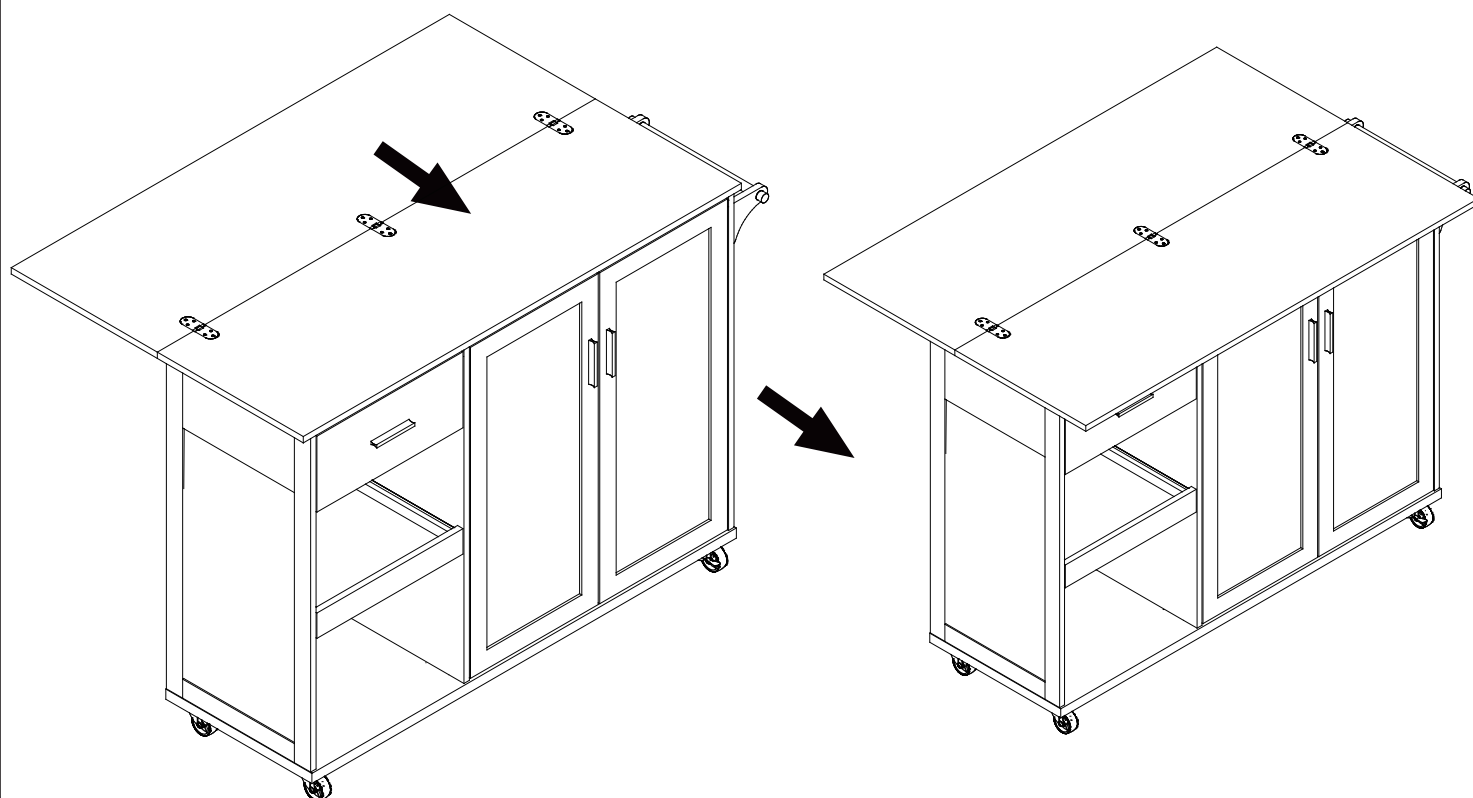


Assembly Instructions

Step 35




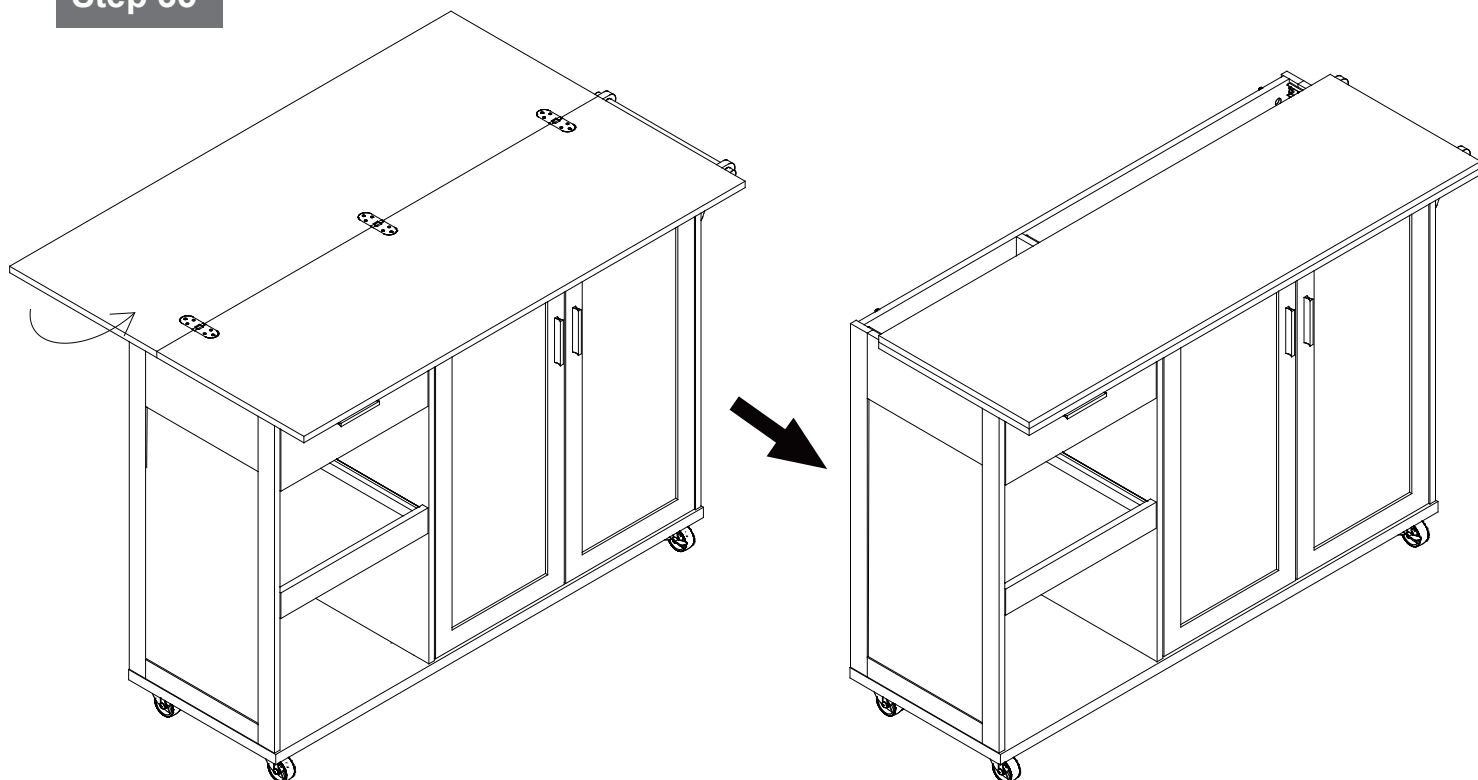


Step 36

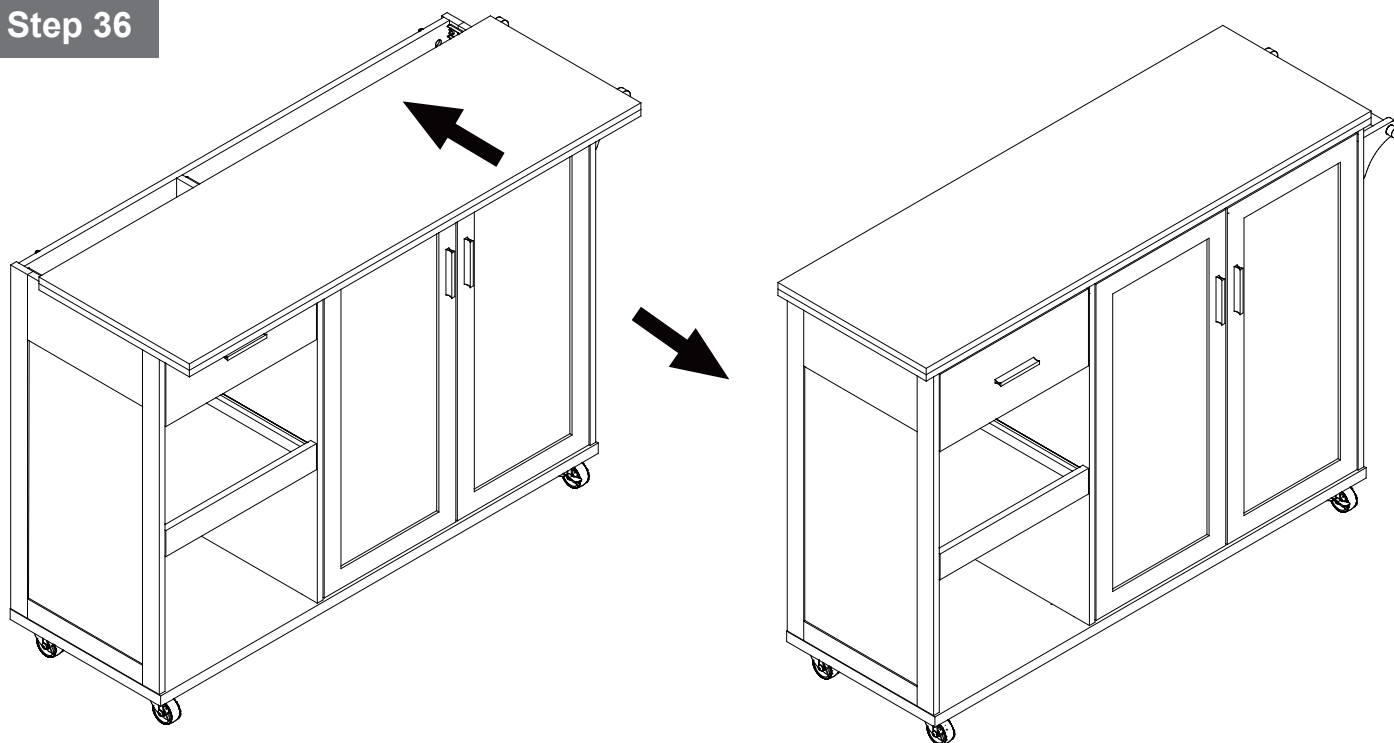

Assembly Instructions

Step 37

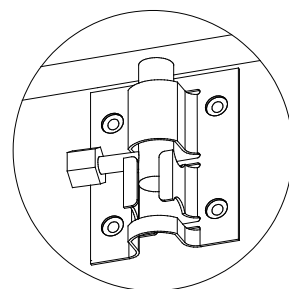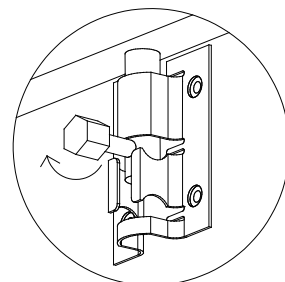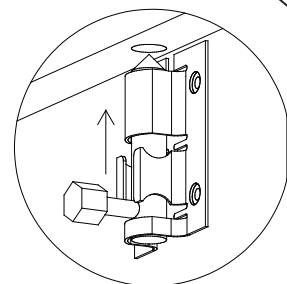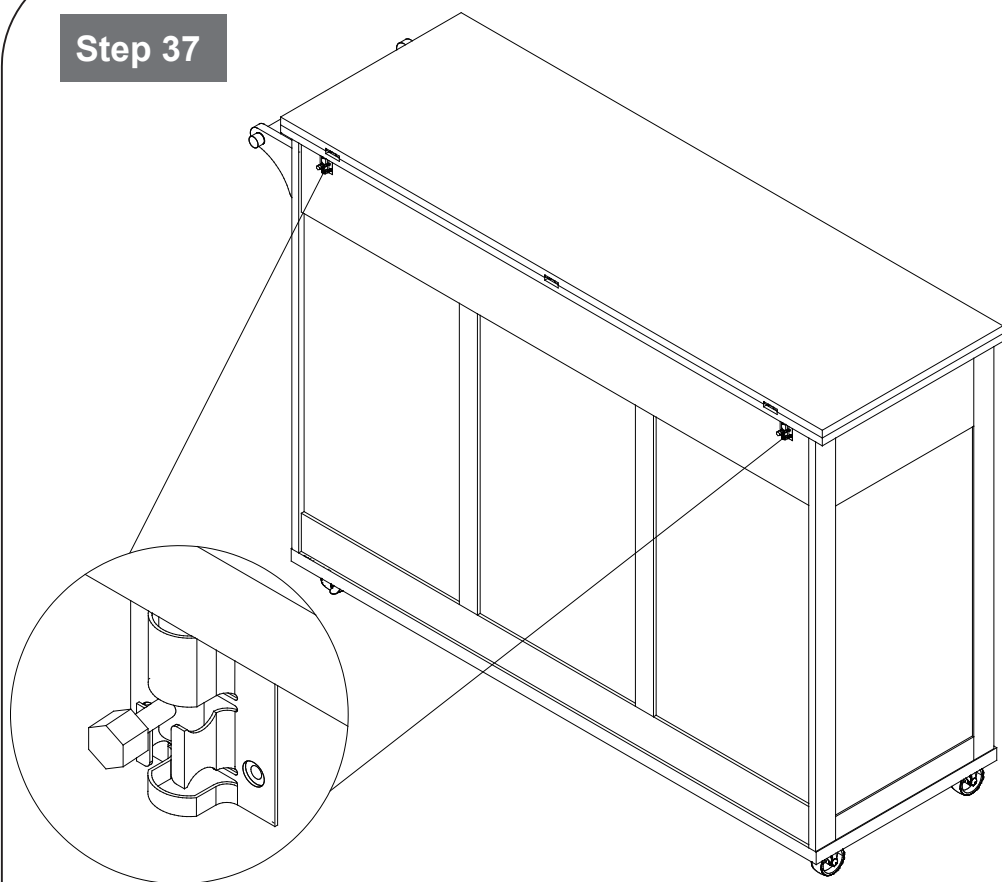

Step 38

