


## How to Install J-Trim for Fasade Glue-up Ceiling Tiles

### Fasade Ceiling J-Trim Installation

Insert panel into the Edge J-Trim if applicable. If using the Edge J-Trim, attach the trim up to the ceiling before installing the ceiling panels. The trim can be bonded to the wall using PL Premium adhesive by applying a 1/8 inch bead to the back of the trim and pressing firmly into the drywall. Staples can be used to tack trim in place until adhesive is cured (24 - 48 hours). Alternatively, drywall screws can also be used to attach trim to wall. Do not over-tighten screws.

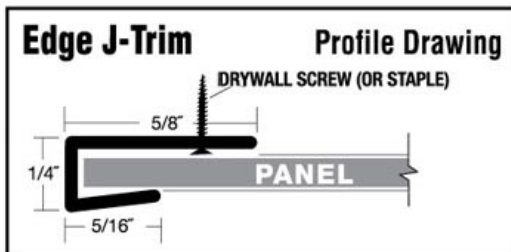

## How to Install Trims for Fasade 4x8 Wall Panels

Adhere J-trims using double-sided tape or tube adhesive. Inside corners don't require any adhesive. They stay secure as two backsplash panels connect to them.

If the area to be covered ends on a flat wall, and you desire to finish the cut edge of the last panel, it can be done by using a piece of matching Edge J-Trim. This trim piece slides onto the cut edge of the panel.

If you have an inside corner, we recommend using a piece of matching Inside Corner Trim. See drawing below.

