




AN ORIGINAL GRANITE BRACKET™ PRODUCT

INDUSTRIAL DOUBLE SIDED ISLAND SUPPORT BRACKET

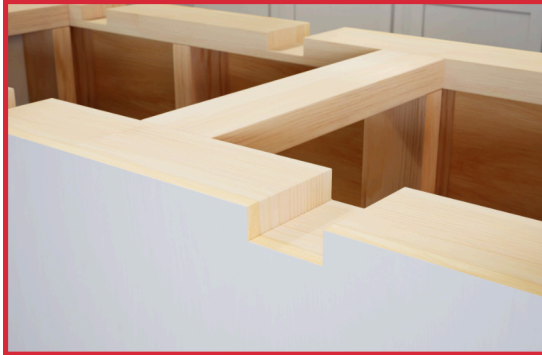

1. Mark 2"-4" from the outer edge of the cabinet or half walls for your first notch to be cut. Then set marks for the remaining brackets every 16"-20" apart. With your brackets properly spaced, rout or chisel a 2.5" wide by 1" deep notch for each bracket.



2. Once your kitchen island or half walls are notched, place your brackets in the notch. Ensure the top of the brackets are flush and level with the kitchen cabinet or half walls.



4. Now that your brackets are properly secured and in place. Place the countertop of your choosing on top of the brackets.



5. With your countertop now resting upon your brackets, we recommend applying a bead of clear silicone adhesive around the brackets.



SCAN FOR
MORE PRODUCTS

ORIGINALGRANITEBRACKET.COM | 888-584-1112

*AVAILABLE
IN MULTIPLE SIZES