


7. Parts Breakdown

FIGURE 7

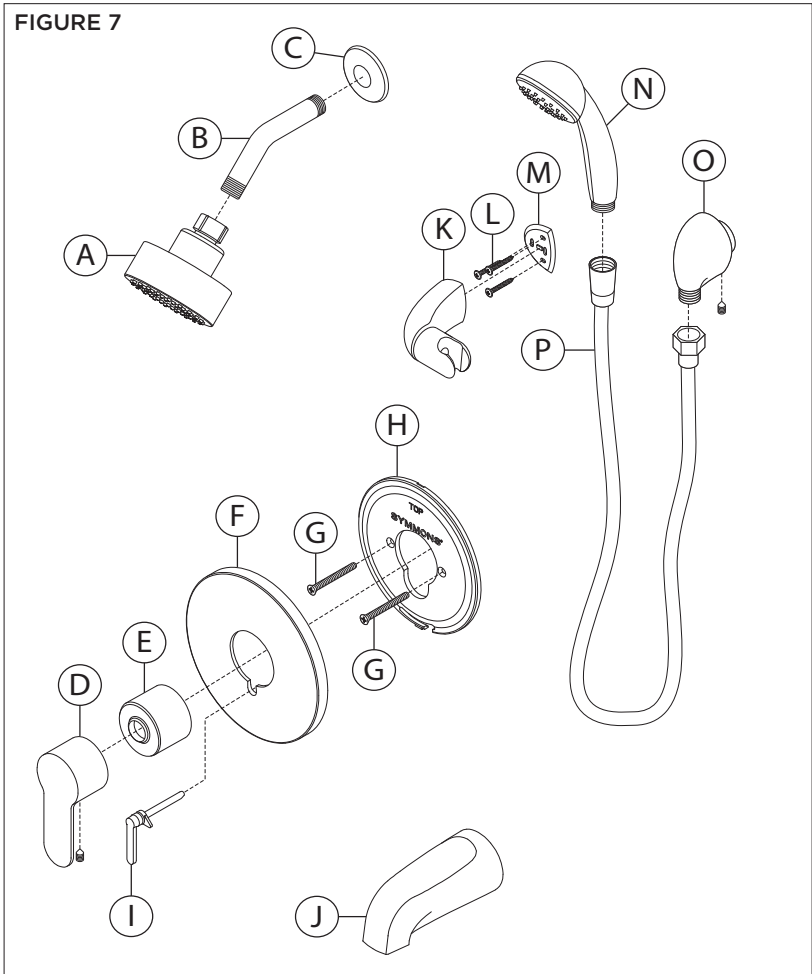

*Order in-line vacuum breaker (EF-109) for hand shower systems without dual checks.

Replacement Parts		
Item	Description	Part Number
A	Showerhead	672SH
B	Shower Arm	300S
C	Flange	
D	Handle Assy.	RTS-084
E	Dome Cover	T-19
F	Shower Escutcheon	S-6700-ESC
G	Screws	
H	Mounting Plate	
I	Diverter/Volume Control Handle	RTS-083
J	Tub Spout	060
K	Wall Cradle	EF-106
L	Screws	
M	Mounting Plate	
N	Hand Shower	EF-100
O	Wall Elbow	EF-105
P	60" Hose	RTS-045

Notes:

- 1) Append appropriate suffix for premium finish.
- 2) Append appropriate flow rate to showerhead or hand shower for low flow.
- 3) Apply a bead of silicone around the perimeter of all shower trim installed flush to the finished wall. Leave opening on bottom of escutcheons for weep hole.
- 4) Apply plumber tape to all threaded connections.