












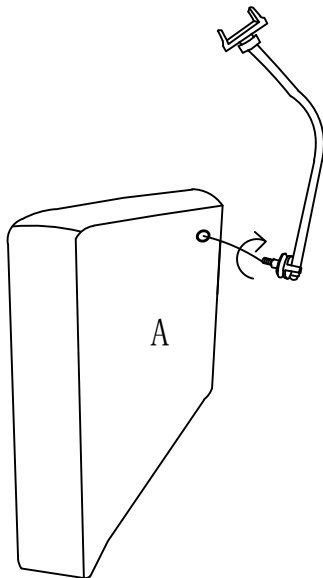
# YMX-35

## Accessories list


### Armrest(sitting sofa)

<p>A</p>  <p>Right armrest (1)</p>	<p>B</p>  <p>Left armrest (1)</p>	<p>C</p>  <p>(XL8009) Hardware (4)</p>	<p>D</p>  <p>6*18 Screw (8)</p>	<p>E</p>  <p>M4*100*40 Wrench (1)</p>	<p>F</p>  <p>606#Sofa foot (2)</p>
<p>G</p>  <p>60*60 Woolenmat (2)</p>	<p>H</p>  <p>8*65 Screw (2)</p>	<p>I</p>  <p>8*17 Gasket (2)</p>	<p>J</p>  <p>M5*105*55 Wrench (1)</p>	<p>K</p>  <p>Armrest phone holder (1)</p>	


STEP1: Install the armrest phone holder that sits on the right armrest.




STEP2: Install armrest screw

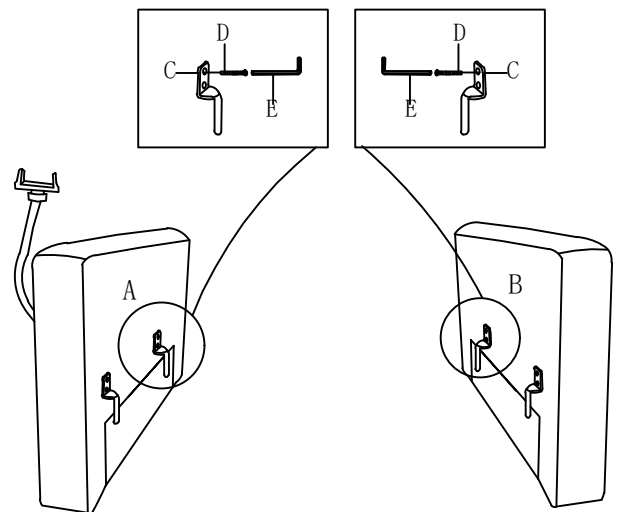



STEP3: Install armrest feet and woolenmat

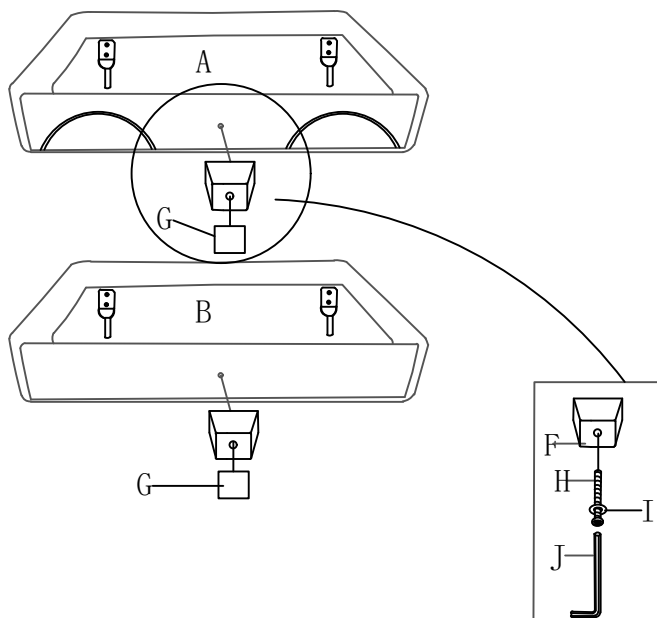

STEP4: Assembly completed.

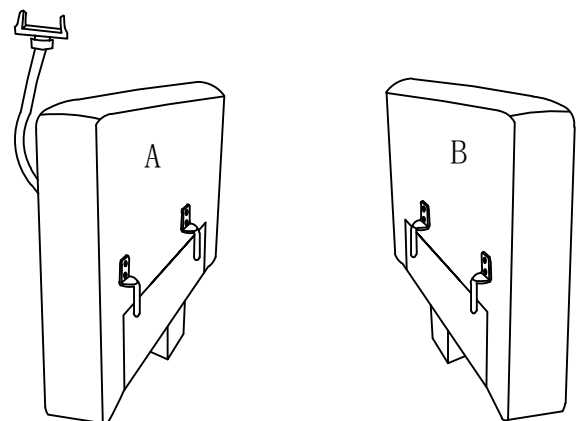






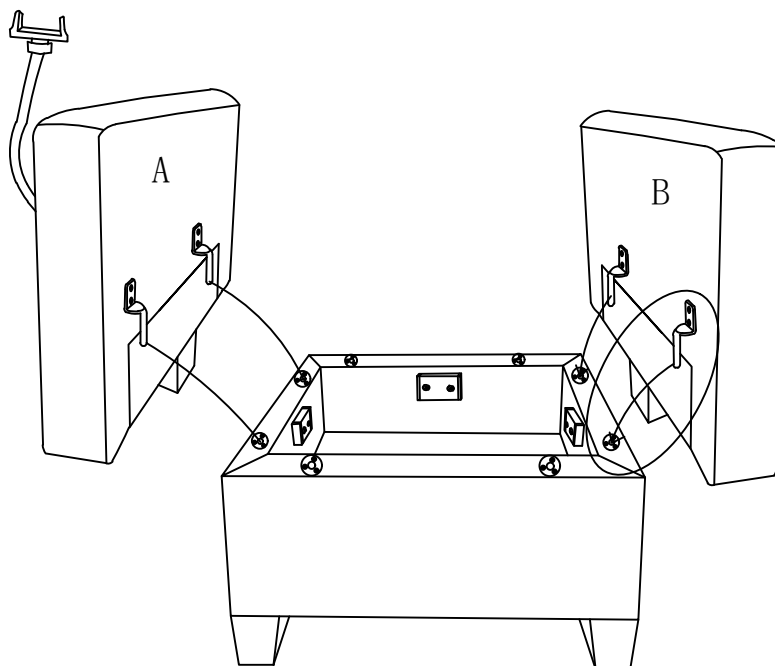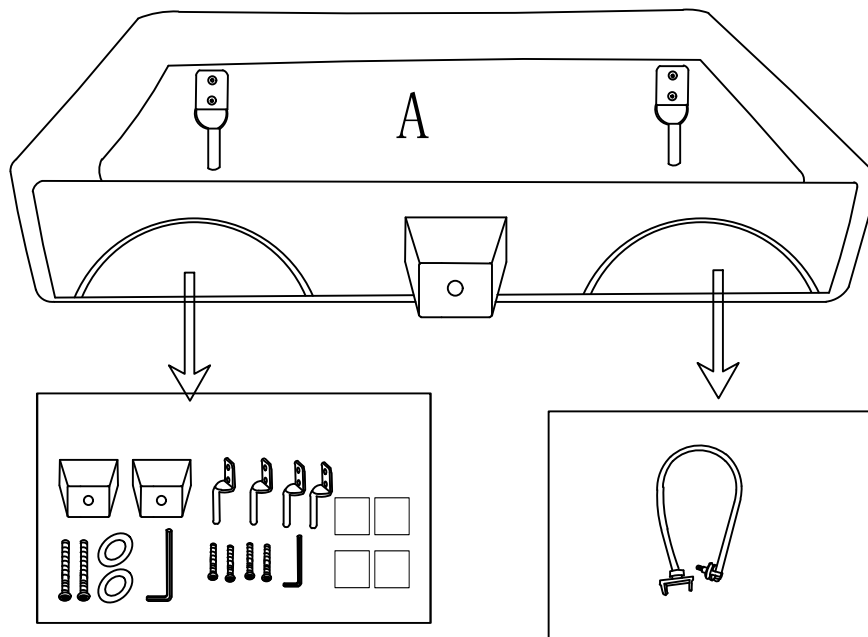



Armrest feet, hawaeand and armrest phone holder brackets are placed on the inner side of the armrest base fabric.





# YMX-35

## Accessories list

### OTTOMAN


<p>A</p>  <p>Ottoman frame(1)</p>	<p>B</p>  <p>Ottoman base plate(1)</p>	<p>C</p>  <p>Ottoman cushion(1)</p>	<p>D</p>  <p>606#Sofa foot(4)</p>	<p>E</p>  <p>8*65 Screw(4)</p>
<p>F</p>  <p>8*17 Gasket(4)</p>	<p>G</p>  <p>M5*105*55 Wrench(1)</p>	<p>H</p>  <p>(F-8944)U connector(2)</p>	<p>I</p>  <p>60*60 Woolenmat(4)</p>	

STEP1: Install the ottoman feet and woolenmat

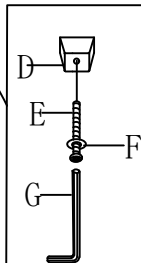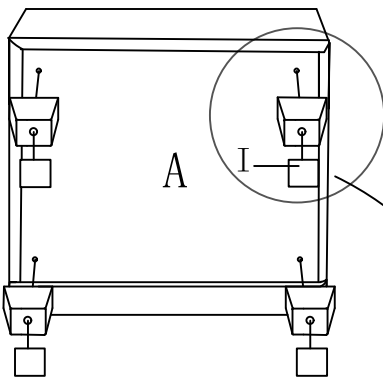


STEP2:

place the base plate to ottoman.

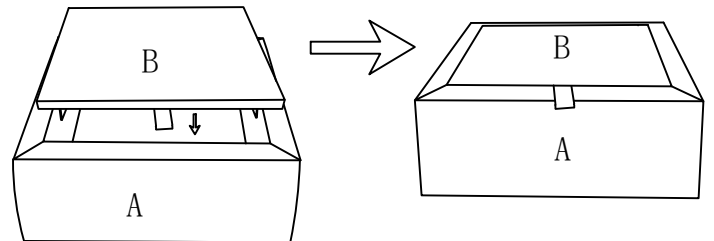


STEP3:

Cut the compression bag



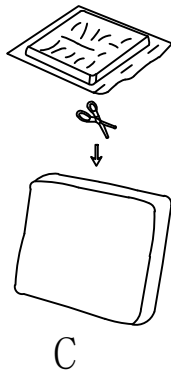


STEP4:

Assembly completed

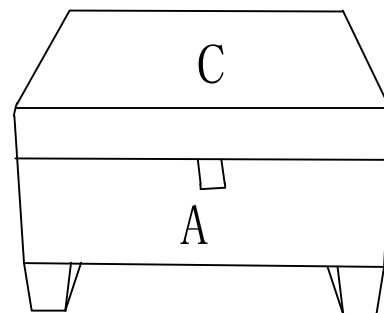








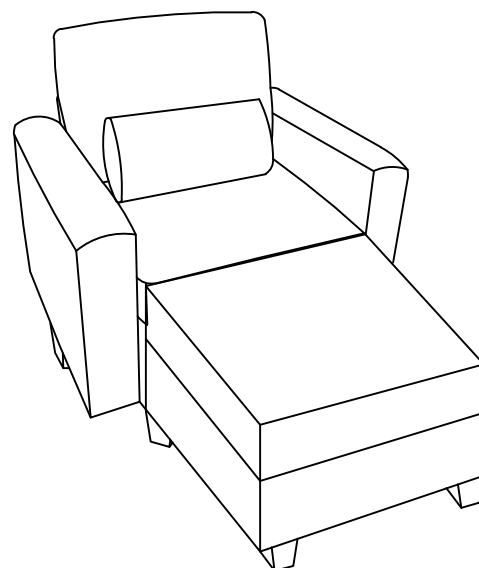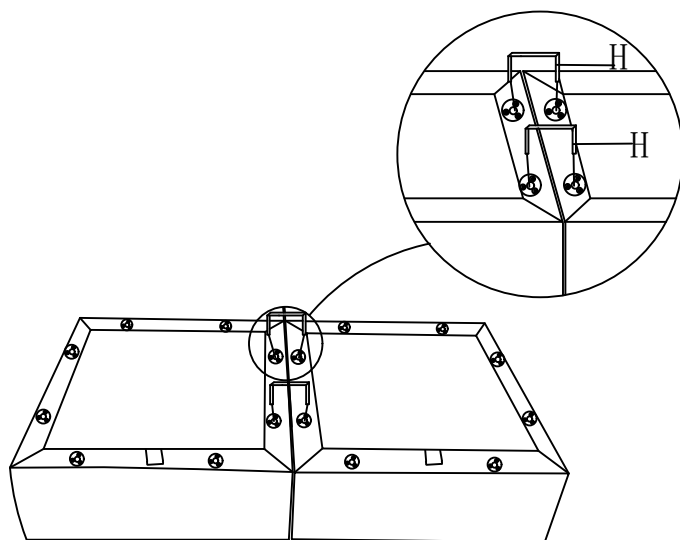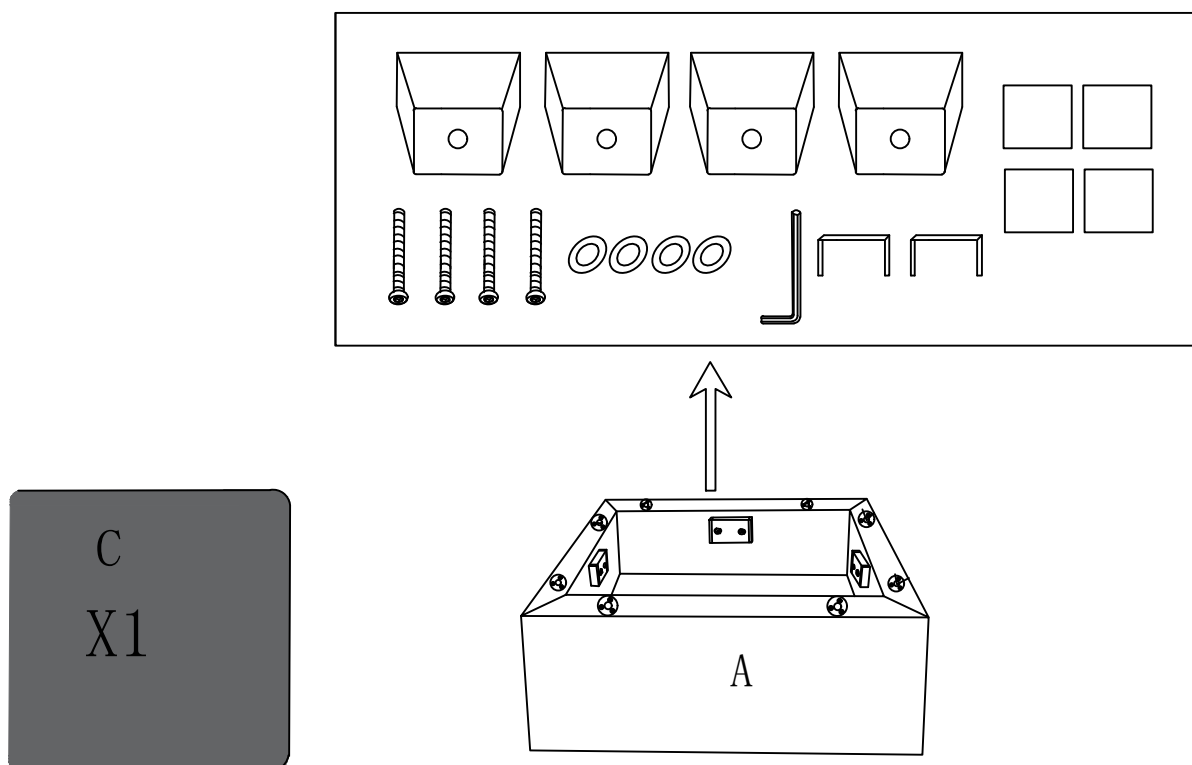







Sofa feet, hardware and ottoman cushion are placed in the ottoman frame.




# YMX-35

## Accessories list


### 1 Seater

A  Seat frame(1)	B  Backrest(1)	C  Seat frame plate(1)	D  Seat cushion(1)	E  Back cushion(1)
F  Soft bag(1)	G  (XL8009) Hardware (2)	H  6*18 Screw(4)	I  M4*100*40 Wrench(1)	J  606#Sofa foot (4)
K  8*65 Screw(4)	L  8*17 Gasket(4)	M  M5*105*55 Wrench(1)	N  (F-8944)U connector(2)	O  60*60 Woolenmat(4)


STEP1: Install the legs of sofa and woolenmat

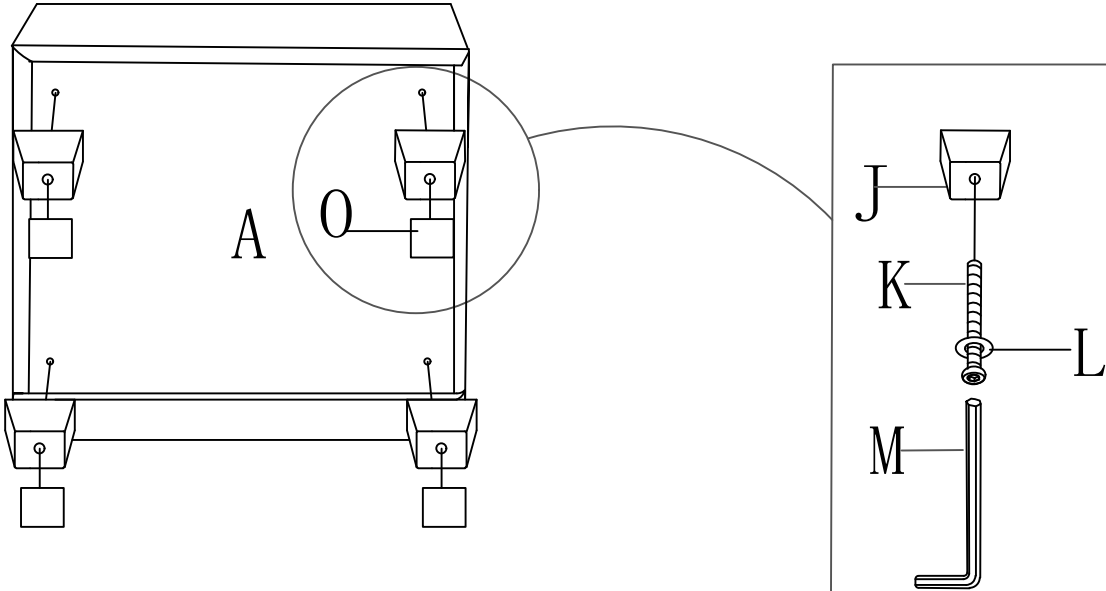


STEP2: Install backrest hardware.

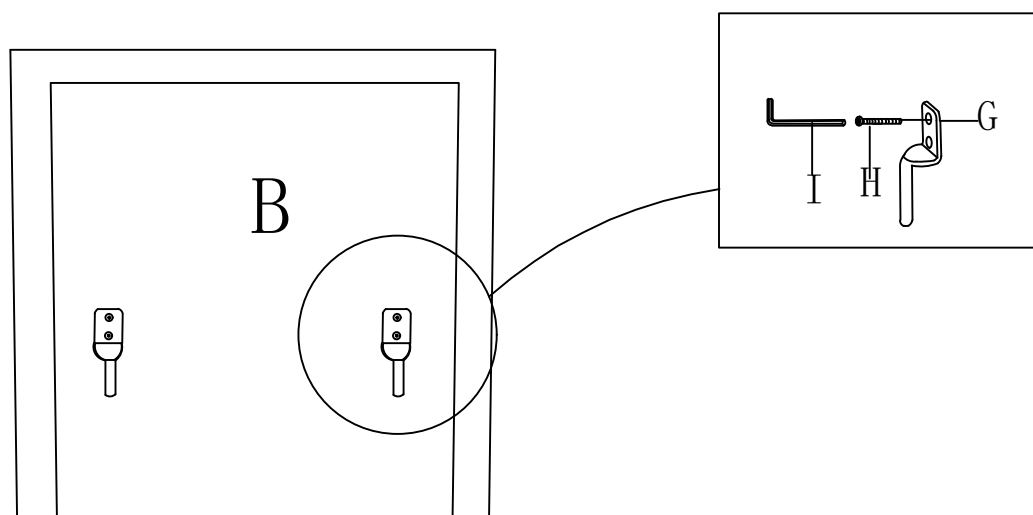


STEP3: Insert the backrest into the sofa base.

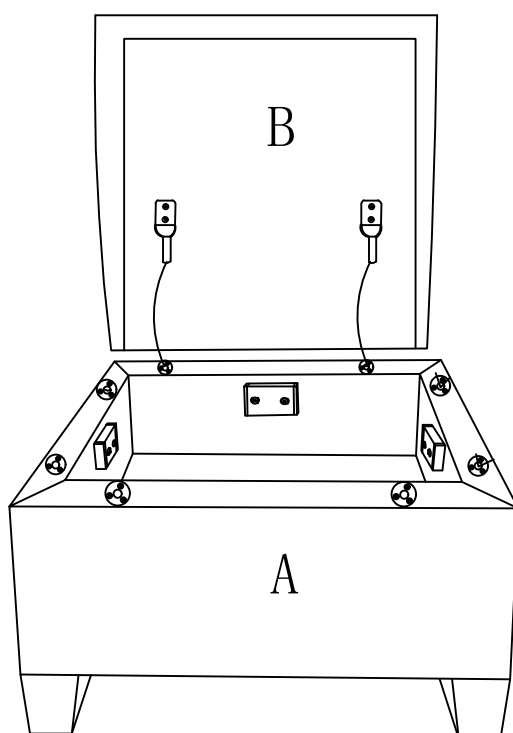


STEP4: Put the seat frame plate board at the seat frame

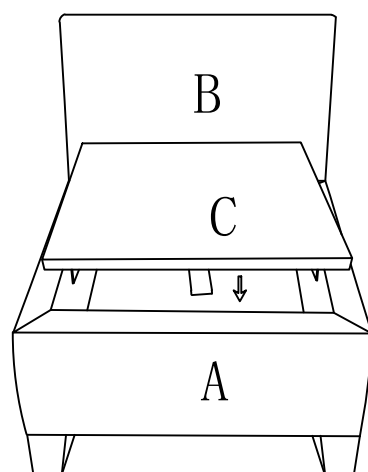

STEP5: Cut the compression bag.

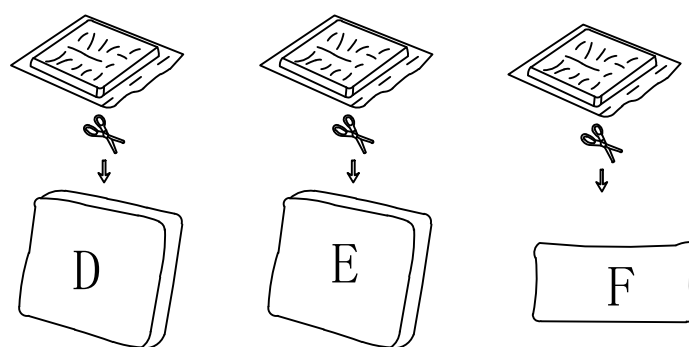

STEP6: Assembly completed

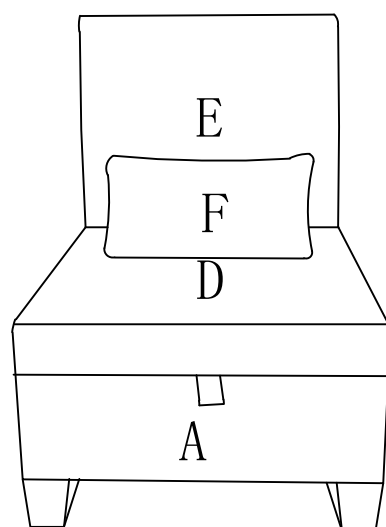

Sofa feet and hardware, seat cushion ,back cushion, and sofa bag are all placed in the seat frame.

