

CenterPointe 3-Pack Floating Shelves Kit

Add functional style to any space with the unique look of real wood

CenterPointe floating shelves help you create a functional and beautiful display space in your home.


IMPORTANT INFORMATION ABOUT YOUR CENTERPOINTE FLOATING SHELVES

- **CAUTION:** The maximum capacity, when properly installed into wood studs is **50 lbs. for the 48" shelf**, and **25 lbs. for the 24" shelves**
- For indoor installation only
- Do not install shelves into metal wall studs
- To clean your CenterPointe Floating Shelves, simply wipe clean with a damp cloth. Do not utilize abrasive cleaners or cleaning tools. Always test cleaning products in an inconspicuous area first


WHAT'S INCLUDED:




(14) 1-1/2" Mounting Screws

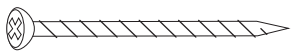

(4) Wall Anchors

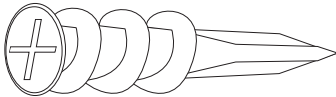


(7) 1-1/8" Finishing Screws




(1) 48" Mounting Bracket



(2) 24" Mounting Brackets

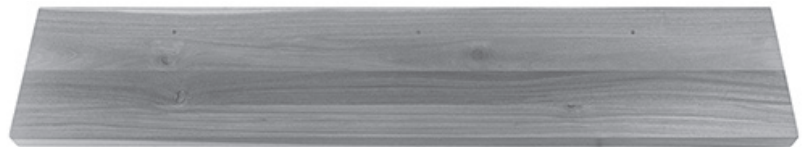

(1) 48" x 9-1/2" x 1-1/2" Shelf

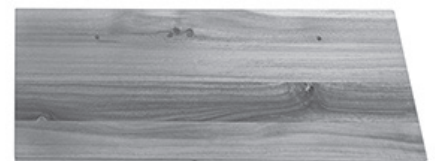


(2) 24" x 9-1/2" x 1-1/2" Shelves


TOOLS REQUIRED:



Pencil

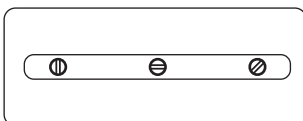


4' Level

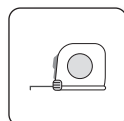


Measuring
Tape



Stud
Finder

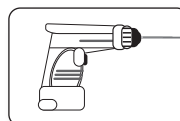

Multi-bit
Drill


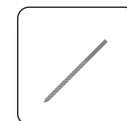


3/16"
Drill Bit



#3 Phillips Head
Screwdriver

STEP 1: LOCATE & MARK WALL STUD

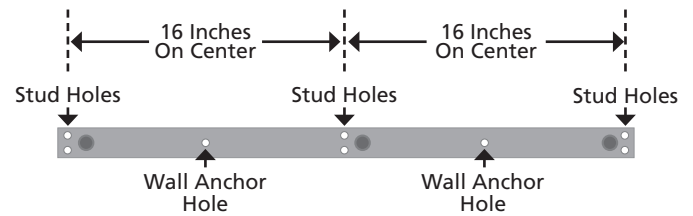
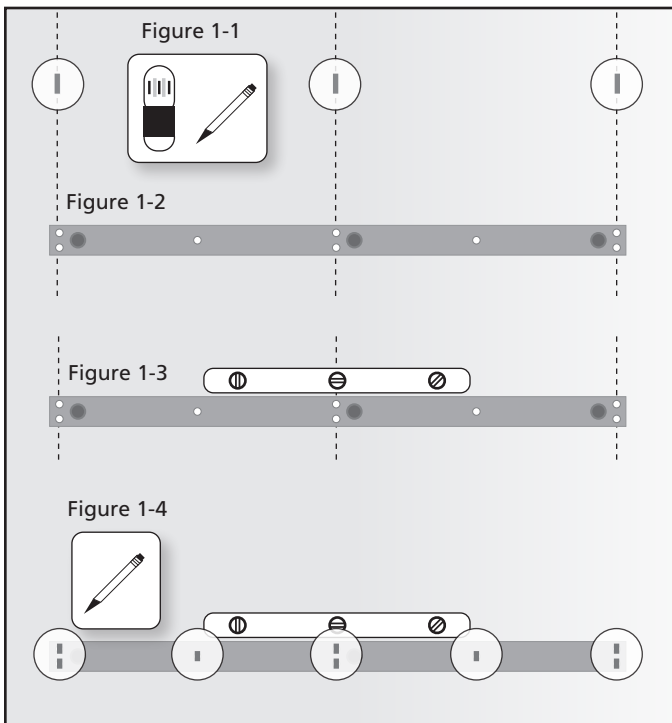



To properly and safely install your CenterPointe Floating Shelves, **it is imperative to attach your shelves to the wall studs**. Using your stud-finder device, locate the wall studs and lightly mark their location on the wall with a pencil (Figure 1-1). Then remove the mounting bracket from the shelf. Test fit the bracket to the wall making sure to align the two screw holes with the stud locations you marked on the wall (Figure 1-2). Use the level to ensure the bracket is level (Figure 1-3). Finally using a pencil, mark the bracket screw locations with a pencil (Figure 1-4).

STEP 2: ATTACH BRACKET TO WALL

First, install the wall anchors in the single screw locations of the bracket. Using a drill and a 3/16" drill bit, make a pilot hole for the wall anchors. Then screw the anchors into the pilot holes with a #3 Phillips head screwdriver. Make sure the lip of the anchor is flush with the drywall and that it doesn't penetrate into the surface (Figure 2-1). Next, locate the 1-1/2 inch mounting screws and screw them into the ends (double hole locations) first and then into the single hole locations (Figure 2-2) and into the wall anchors, making sure the bracket remains level throughout the process (Figure 2-3).

Note:

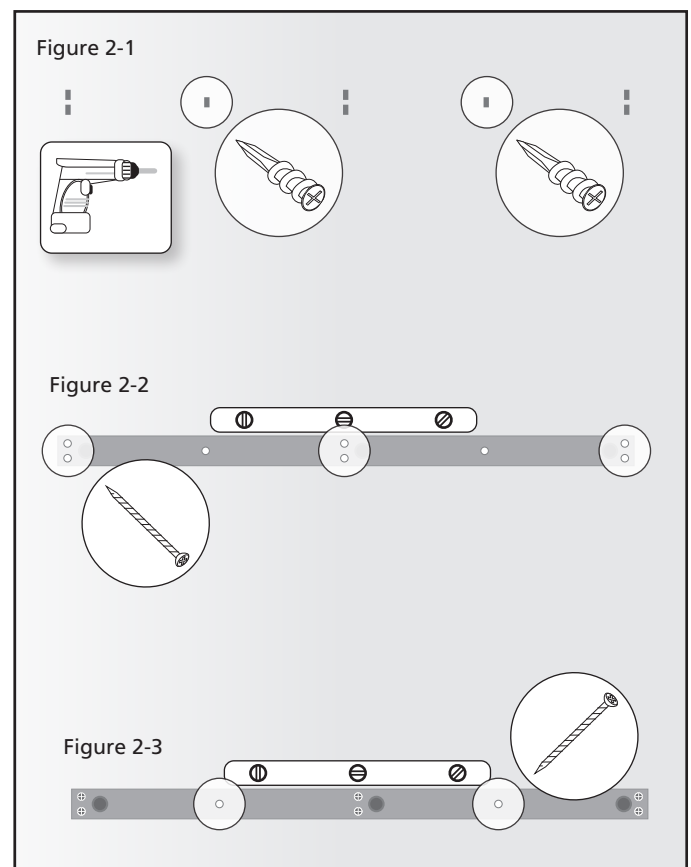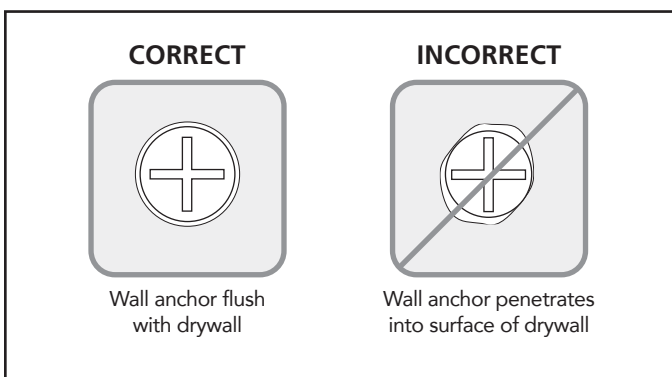

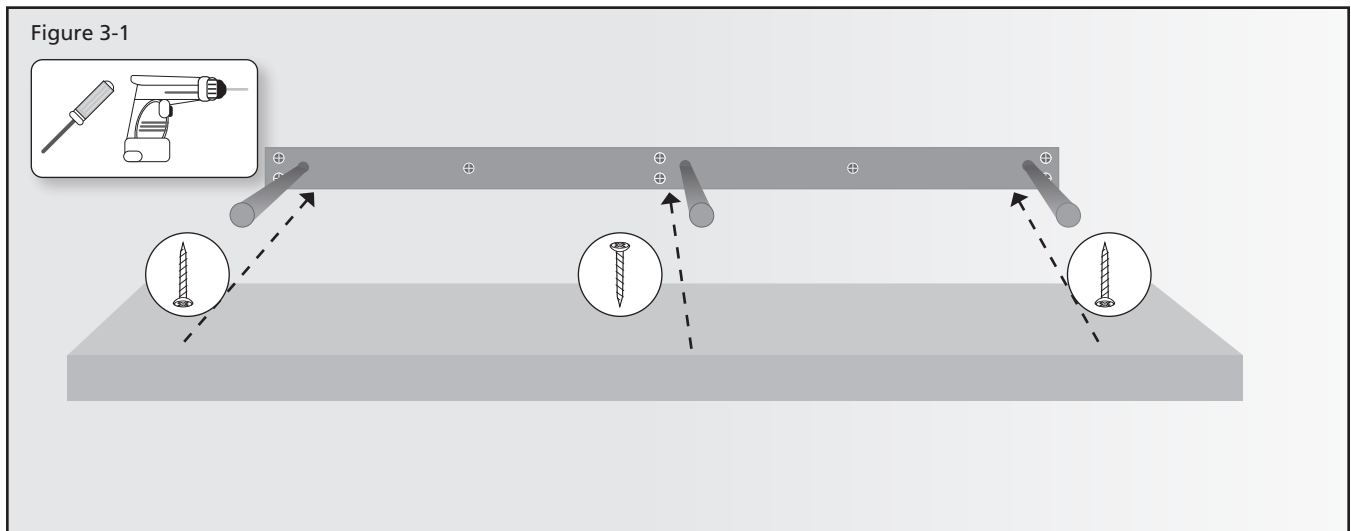

Align the mounting bracket with the pre-drilled holes on the back side of the shelf and slide into place. Locate the 1-1/8 inch finishing screws and using a drill, screw them into the pre-drilled holes on the face of the shelf (Figure 3-1).

Note: Depending on the height at which you install your shelves, you may wish to conceal the finishing screws. You can install them either into the top or bottom of the shelf, whichever is less noticeable for your application.

Repeat process with additional shelves.

Have Questions? Contact our Technical Service Team at 1-800-827-10345

All VT CenterPointe products are backed by VT's 90-day limited warranty.

Learn more at vtindustries.com



VT CUSTOMER SERVICE
525 N. 16TH STREET
SAC CITY, IA 50583
P. 712.662.4177 - 888.287.8356 F. 712.368.4188