



- 1** Attach 2 hinges to door with 3 screws included for each hinge

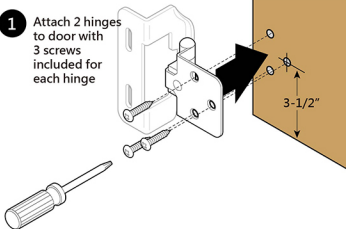

Note: This hinge designed for face-frame cabinets only.

- 2** Place the 2 hinges onto cabinet, align door vertically, drill pilot holes and then secure with 2 screws included for each hinge

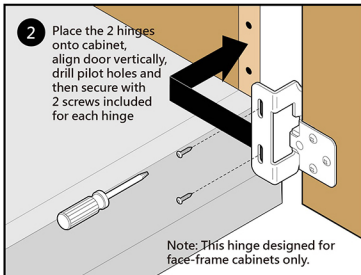

Note: This hinge designed for face-frame cabinets only.