Toilet Seat Installation



PARTS LIST



Tray (2x)



Rubber Pad

(2x)




Self-Aligning Nut (2x)



Screwdriver (Common or Phillip's Head)

TOOLS NEEDED

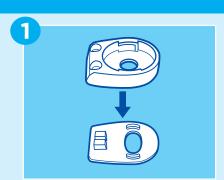

Insert Rubber Pads into the bottom of the Mounting Trays.




Place the Mounting Trays over the holes on the bowl.



Slide the **Bolt** into the **Mounting Tray**, through the toilet, and into the Self-Aligning Nut below.




Secure the Self-Aligning Nut to Bolt by turning it clockwise. Finger tighten only.

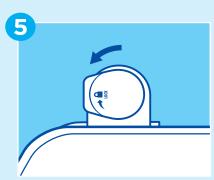

Be sure the Dials on the Toilet Seat are in the Unlocked position.




Place the Toilet Seat over the Toilet and align the Dials over the Mounting Trays. Then lower into place.

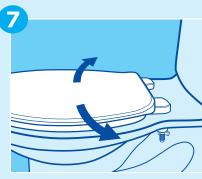

Check alignment and fit of the toilet seat. Carefully lift the seat off of the Mounting Trays.



Tighten the Bolts securely with a flat head screwdriver.

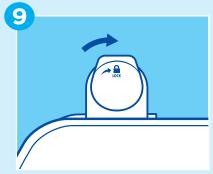

Place the toilet seat back onto the Mounting Trays. Turn the Dials to the right to lock the toilet seat in position.

How to Clean



1. Turn the **Dials** to the left to the Unlocked position.







4. When surface is clean align the toilet seat **Dials** over the **Mounting Trays** and lower into place.



5. Turn **Dials** to the right to lock toilet into position.