


# 55" TV MEDIA STAND WITH ELECTRIC FIREPLACE KD INSERTS HEATER

## ASSEMBLY, CARE & USE INSTRUCTIONS

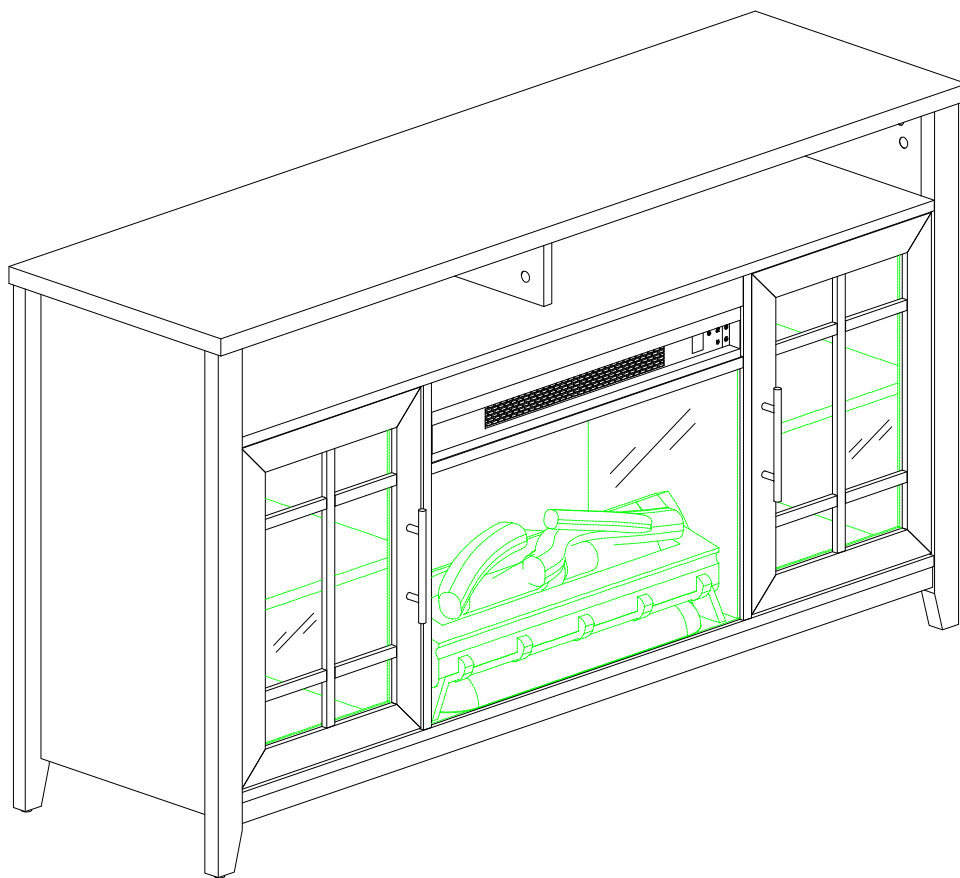

W100-23KD-GW Gray Wash Color

W100-23KD-RB Reclaimed Barnwood Color

---

### THANK YOU

We appreciate the trust to purchase our electric fireplace media mantel. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs. Thank you for choosing us!

Made in China

## ASSEMBLY TIPS

---

Before you begin, locate the instructions and hardware. Take out all the parts and compare them to the diagrams below. Be sure you have all the parts and can identify them.

Two people are required to assemble this product. Assembly time will take approximately 30-90 minutes.

Before assembly, use scissors to unwrap the parts from the packaging.

DO NOT use a box cutter or exacto-knife as you may cut into the mantel pieces inside the box and damage the finish. Check for the hardware tie which is RED and located inside the packaging, taped to the top box.

DO NOT discard any pieces.

## CAUTION

---

There are small components used in the construction of this product.


Loose items should be kept away from pets and children to avoid a choking hazard. Keep all plastic and packaging film away from pets and children to avoid suffocation.

## CARE AND MAINTENANCE


---

1. Dust your fireplace mantel regularly with a soft non-lint producing cloth or household dusting product.
2. You can clean your fireplace insert with a gentle non-abrasive household cleaner. Make sure to dry your fireplace immediately with a soft cloth or towel.

## TOOLS REQUIRED ( NOT INCLUDES )

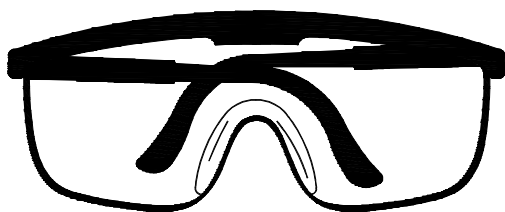


Safety goggles



























Phillips screwdriver

# PARTS LIST

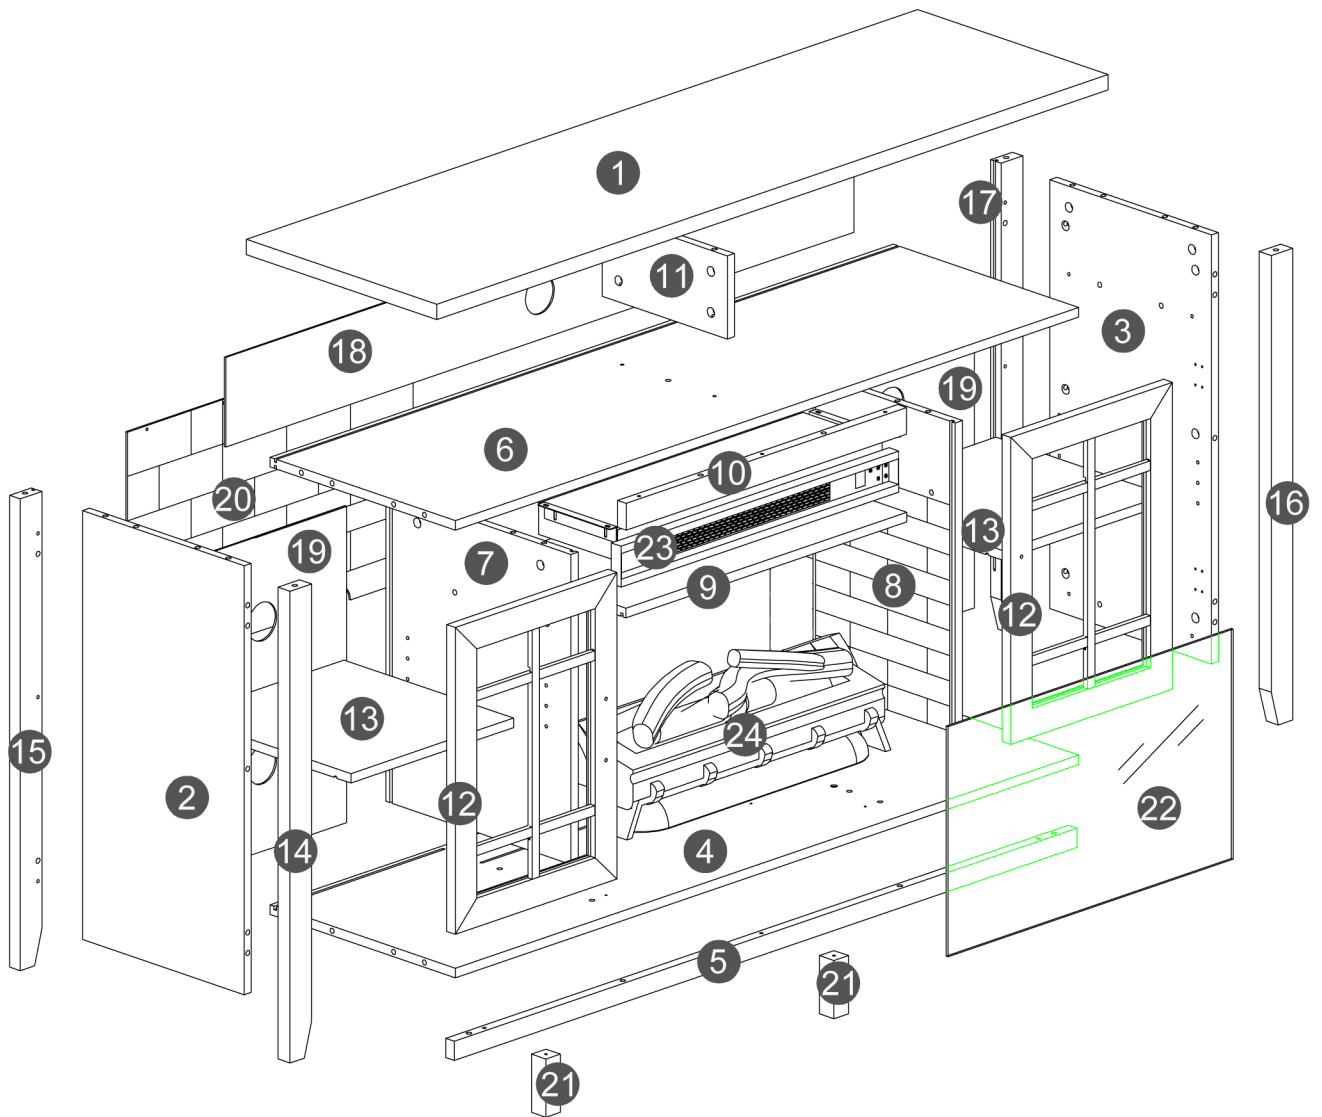











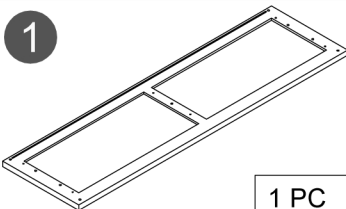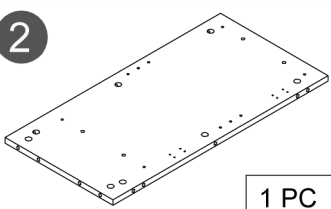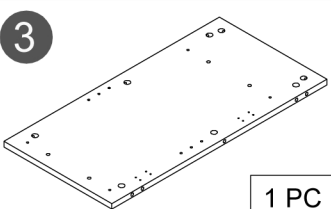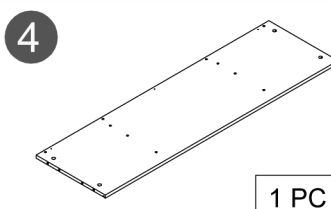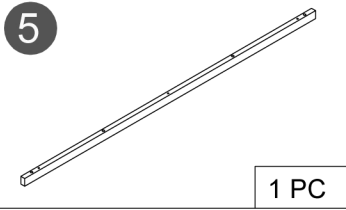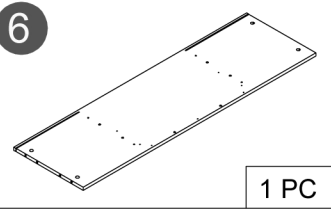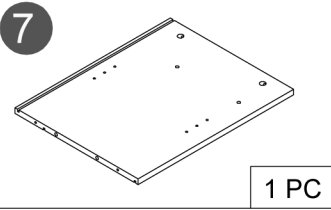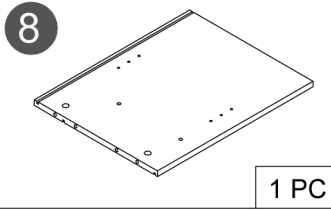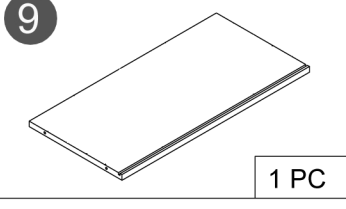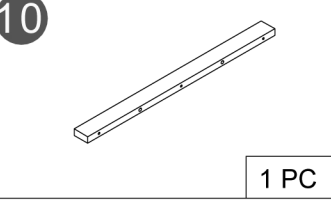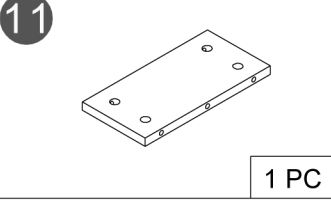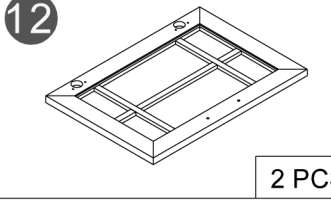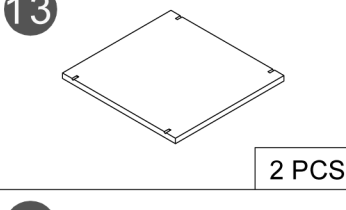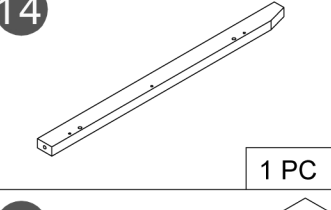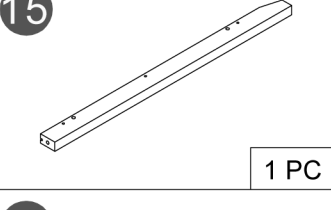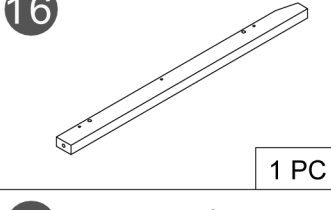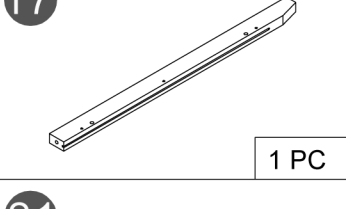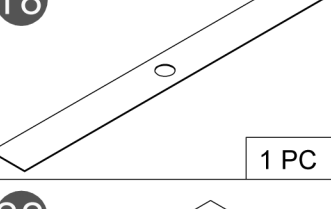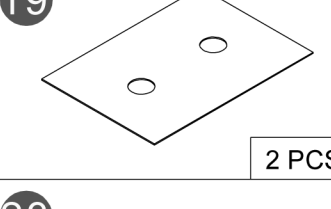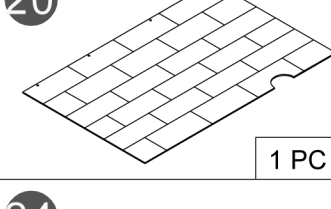
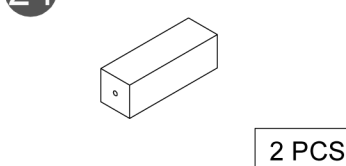
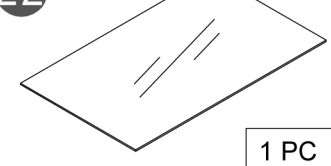
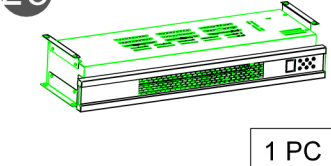
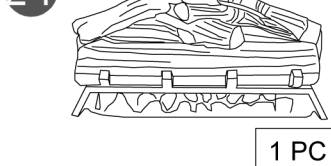





# Assembly steps(EN)

 <p>1 PC</p>	 <p>1 PC</p>	 <p>1 PC</p>	 <p>1 PC</p>
 <p>1 PC</p>	 <p>1 PC</p>	 <p>1 PC</p>	 <p>1 PC</p>
 <p>1 PC</p>	 <p>1 PC</p>	 <p>1 PC</p>	 <p>2 PCS</p>
 <p>2 PCS</p>	 <p>1 PC</p>	 <p>1 PC</p>	 <p>1 PC</p>
 <p>1 PC</p>	 <p>1 PC</p>	 <p>2 PCS</p>	 <p>1 PC</p>
 <p>2 PCS</p>	 <p>1 PC</p>	 <p>1 PC</p>	 <p>1 PC</p>






# HARDWARE LIST:

<b>A</b>  32 PCS	<b>B</b>  ø15*12 32 PCS	<b>C</b>  Ø8*30mm 40 PCS	<b>D</b>  2 PCS
<b>E</b>  M4*23mm 4 PCS	<b>F</b>  4 PCS	<b>G</b>  8 PCS	<b>H</b>  M4 1 PCS
<b>I</b>  20 PCS	<b>J</b>  ø3.5*14mm 48 PCS	<b>K</b>  6 PCS	<b>L</b>  32 PCS
<b>M</b>  ø7*50 10 PCS	<b>N</b>  ø4*35mm 6 PCS	<b>O</b>  ø4*16mm 4 PCS	<b>P</b>  4 PCS
<b>Q</b>  4 PCS	<b>R</b>  2 PCS	<b>S</b>  ø4*35mm 4 PCS	<b>T</b>  ø3.5*12mm 8 PCS

Assembly steps(EN)


STEP 1

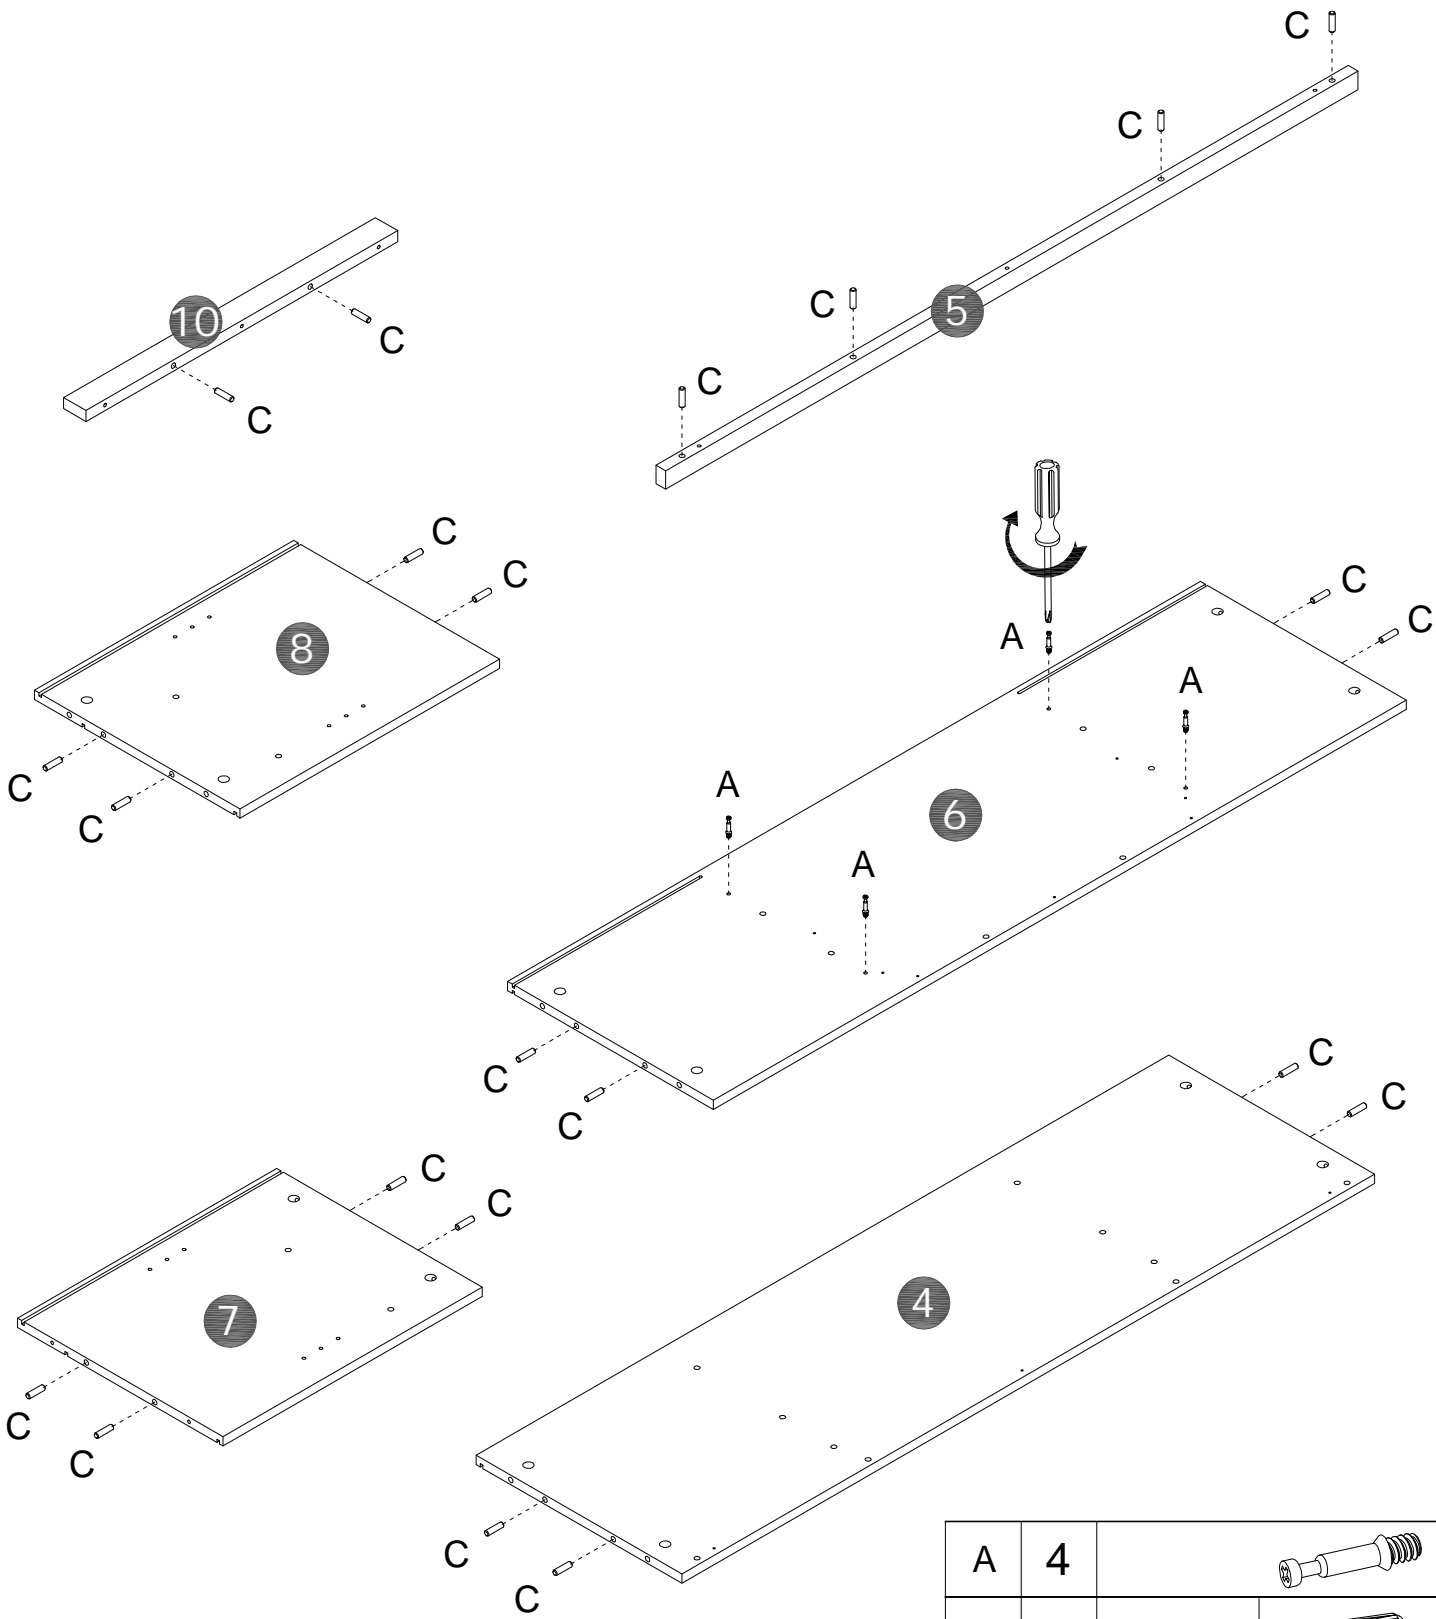


A	4		
C	22	Ø8*30MM	


Assembly steps(EN)


STEP 2

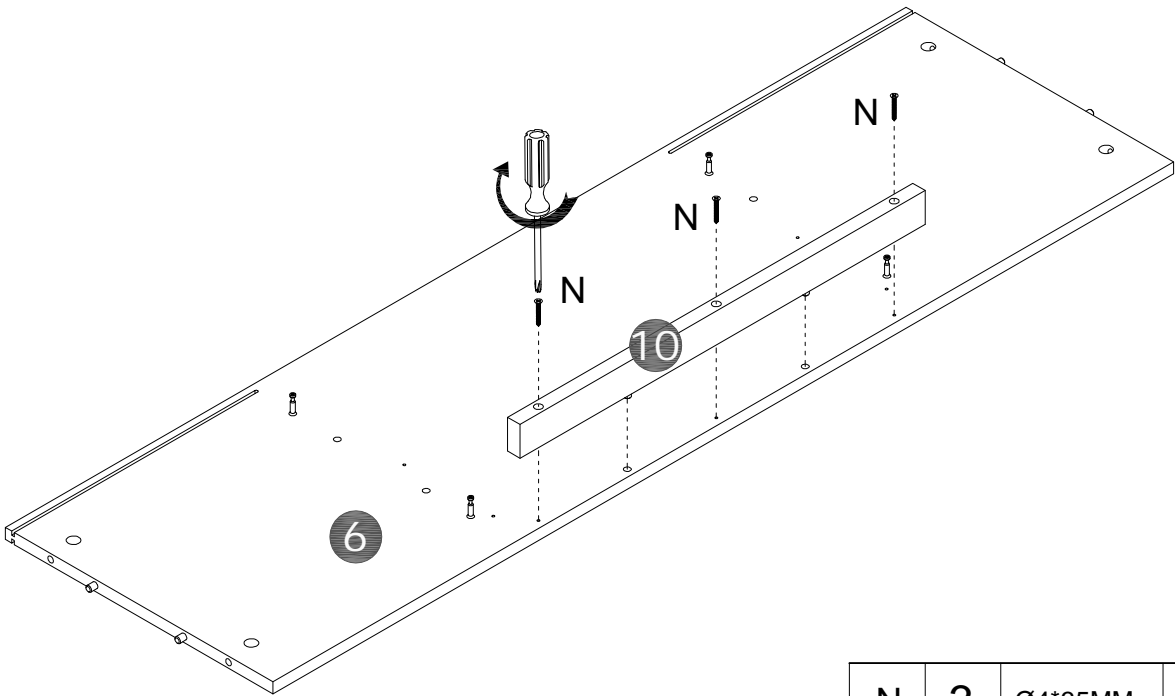

N	3	Ø4*35MM	
---	---	---------	---------------------------------------------------------------------------------------


STEP 3

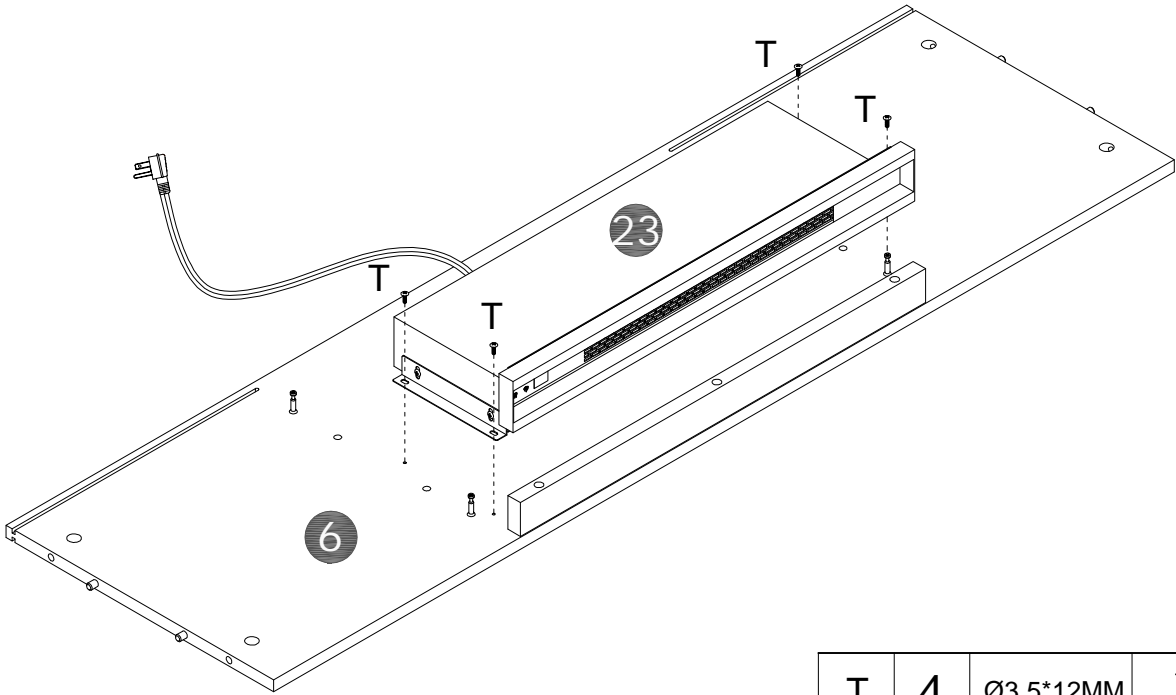


T	4	Ø3.5*12MM	
---	---	-----------	---------------------------------------------------------------------------------------

Assembly steps(EN)

STEP 4

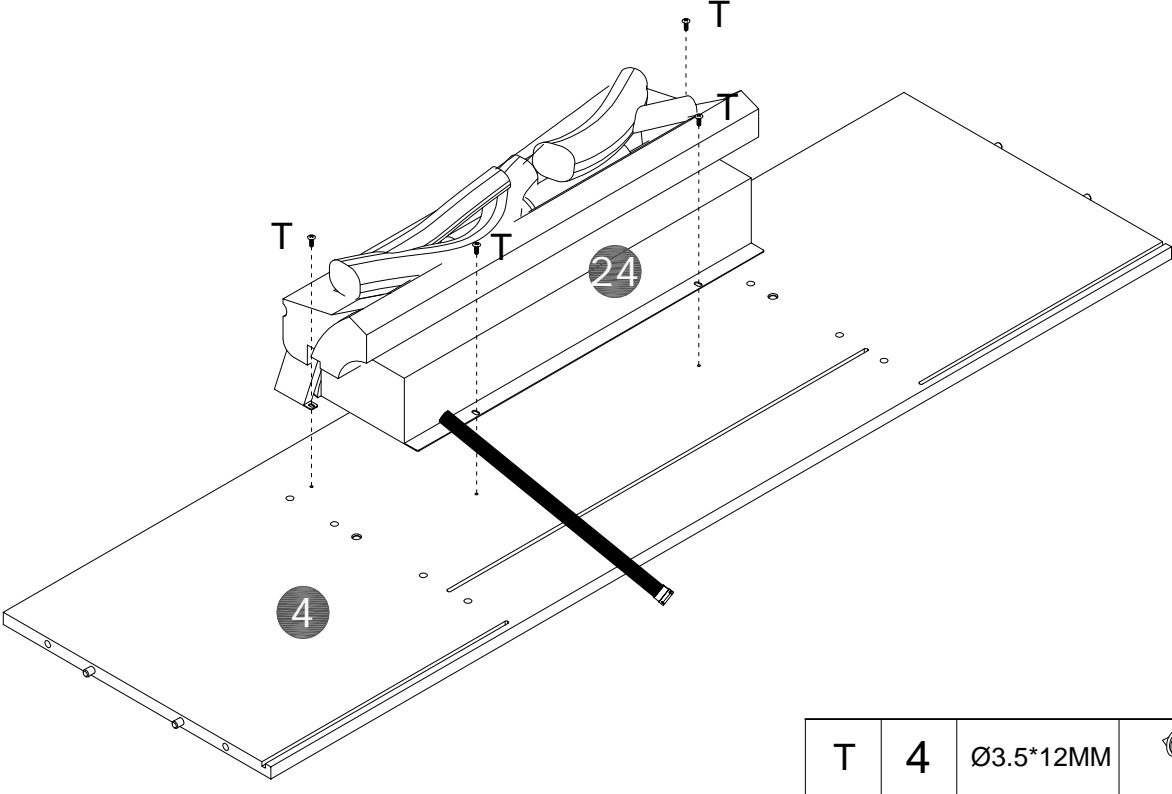




STEP 5

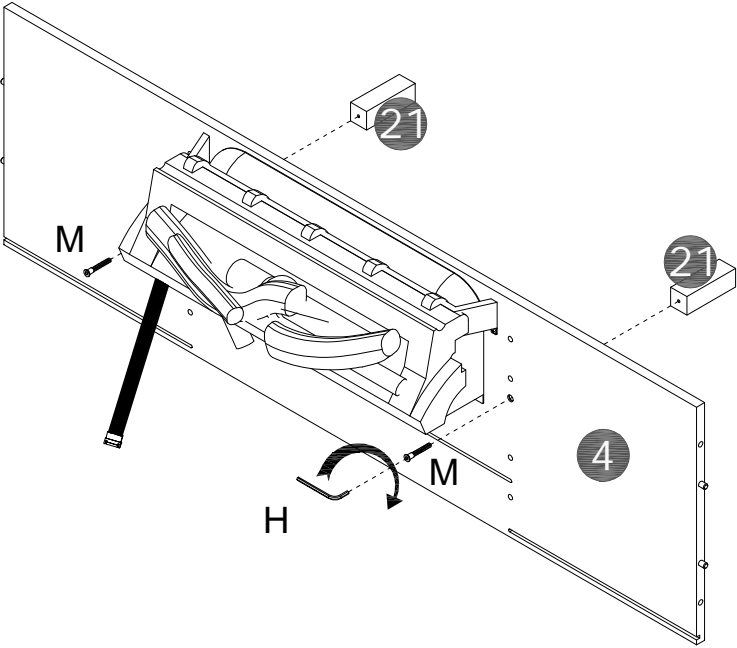


# Assembly steps(EN)


## STEP 6

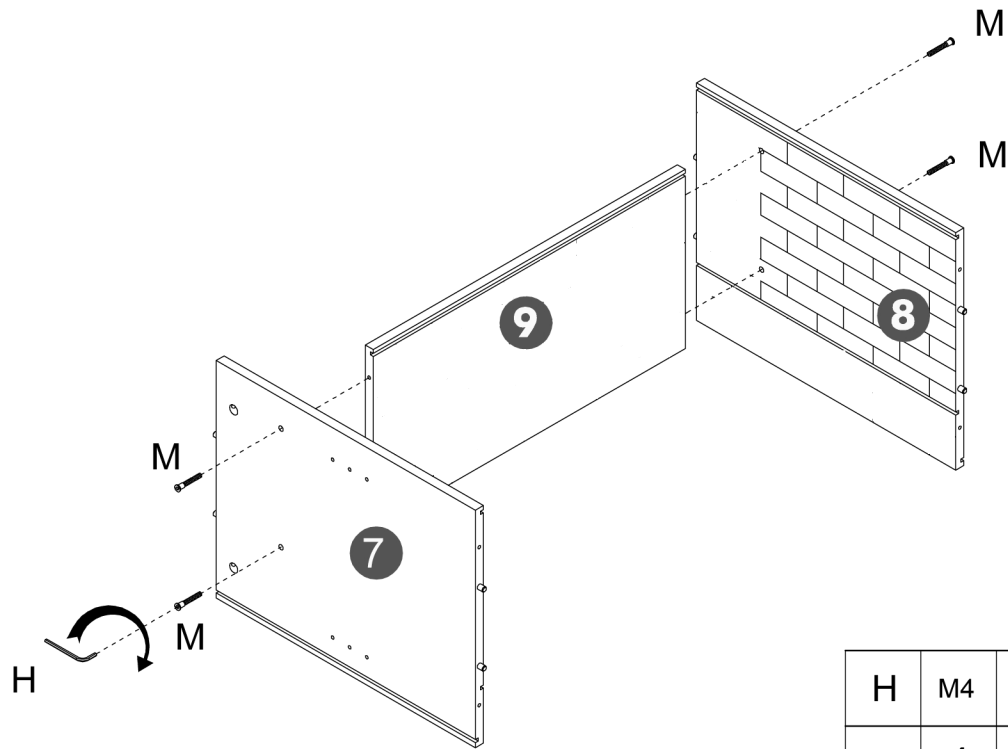

H	M4	
M	4	


## STEP 7

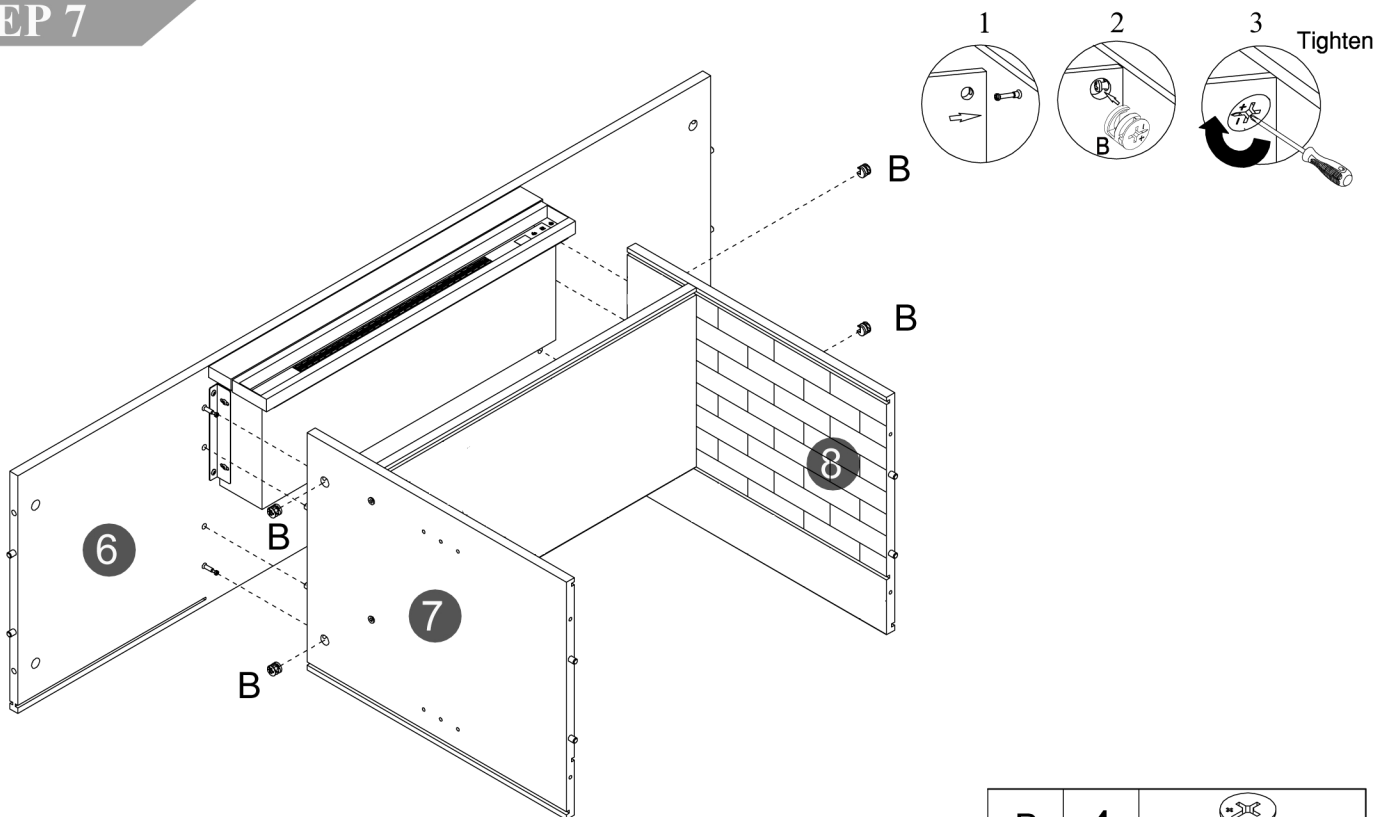


B	4	
---	---	---------------------------------------------------------------------------------------

# Assembly steps(EN)

## STEP 8

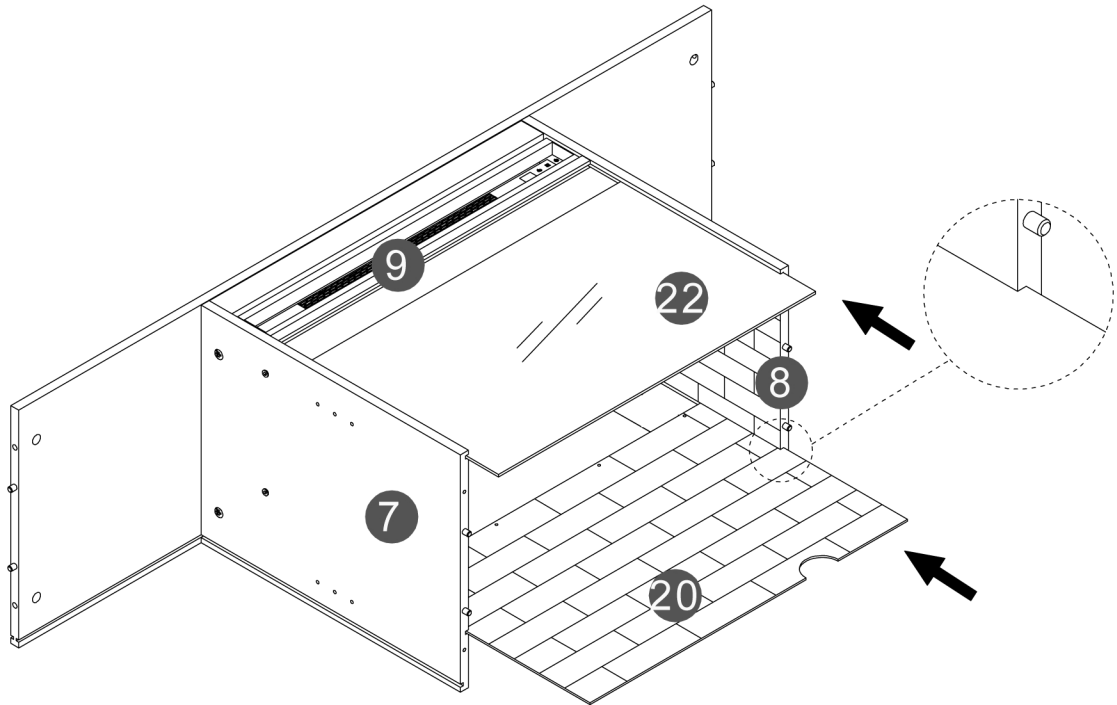


## STEP 9

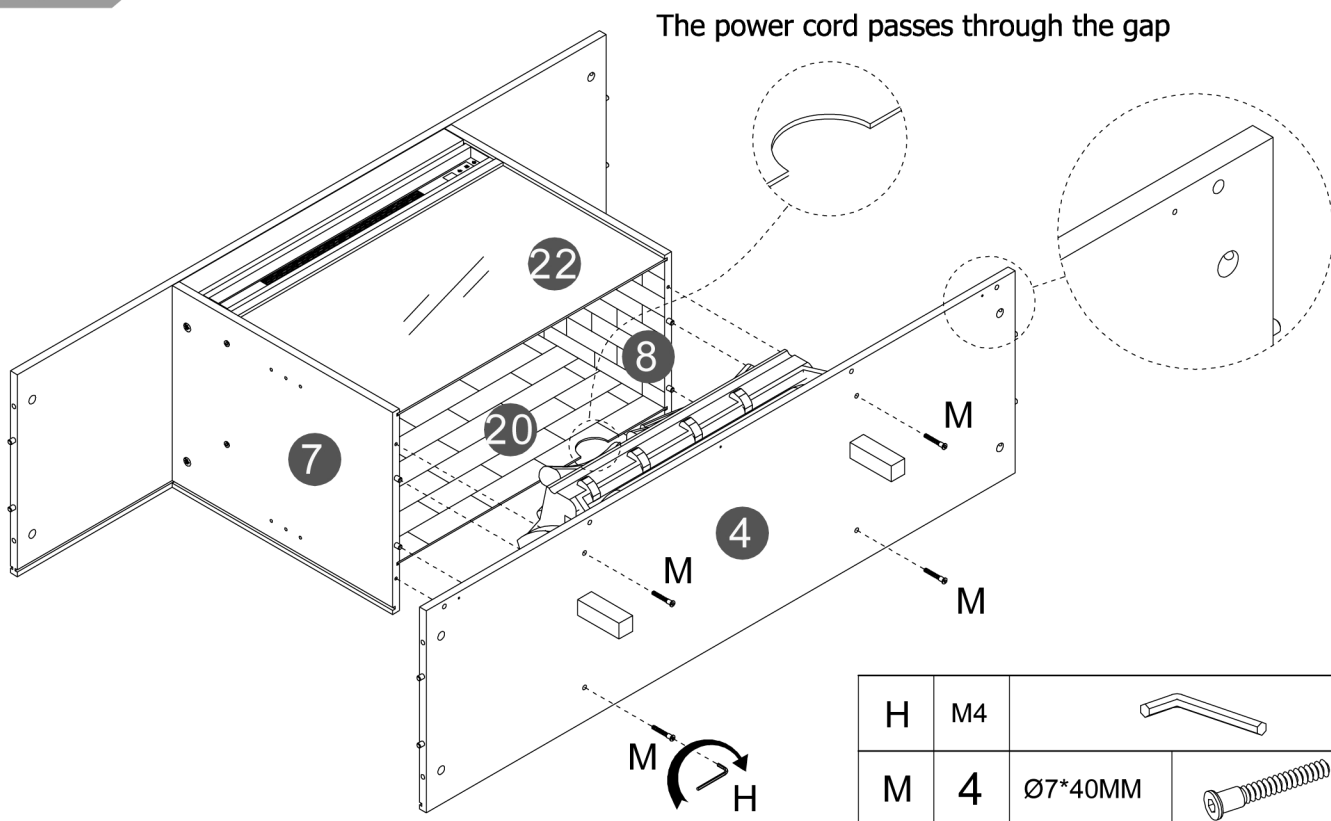


Assembly steps(EN)

STEP 10






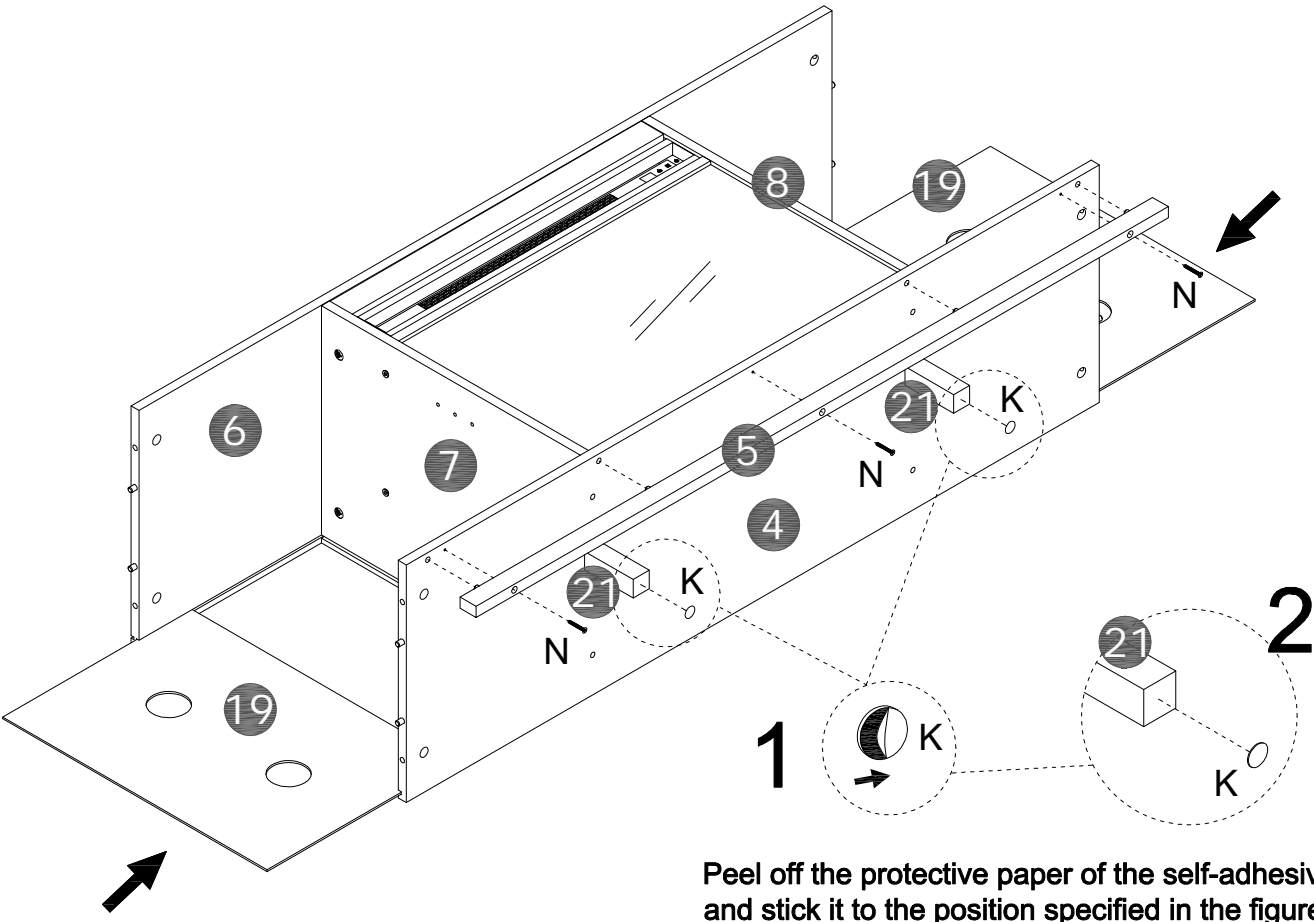


Peel off the protective paper of the self-adhesive and stick it to the position specified in the figure.

K	2		
N	3	Ø4*35MM	

Assembly steps(EN)

STEP 11

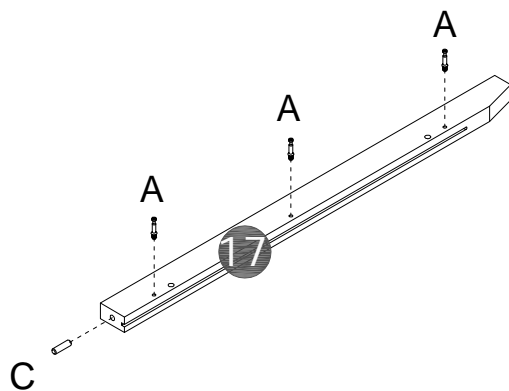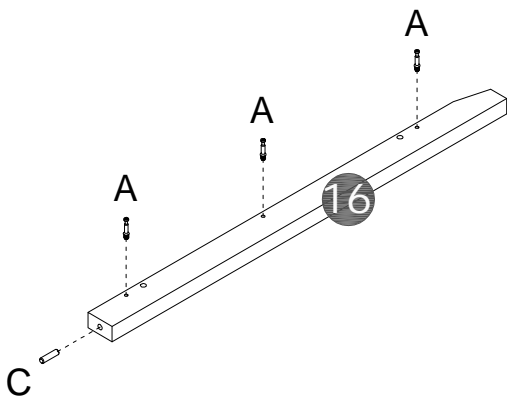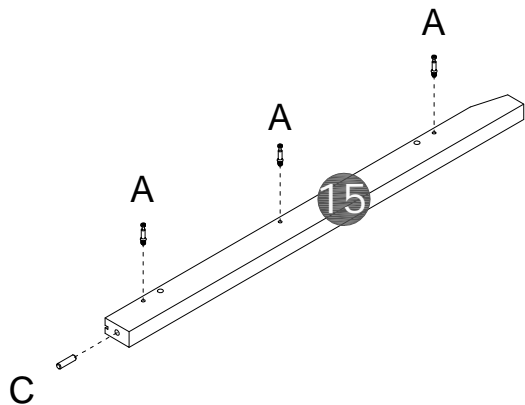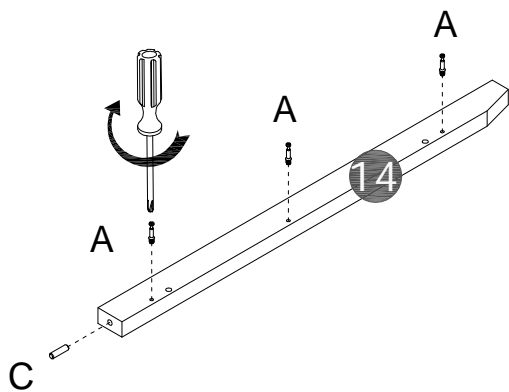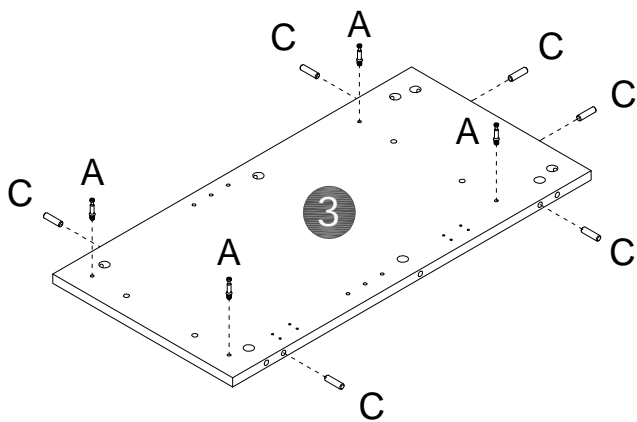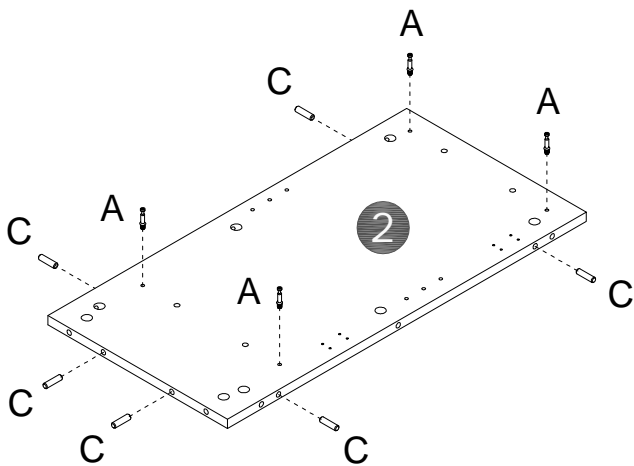


A	20		
C	16	Ø8*30MM	




# Assembly steps(EN)

## STEP 12

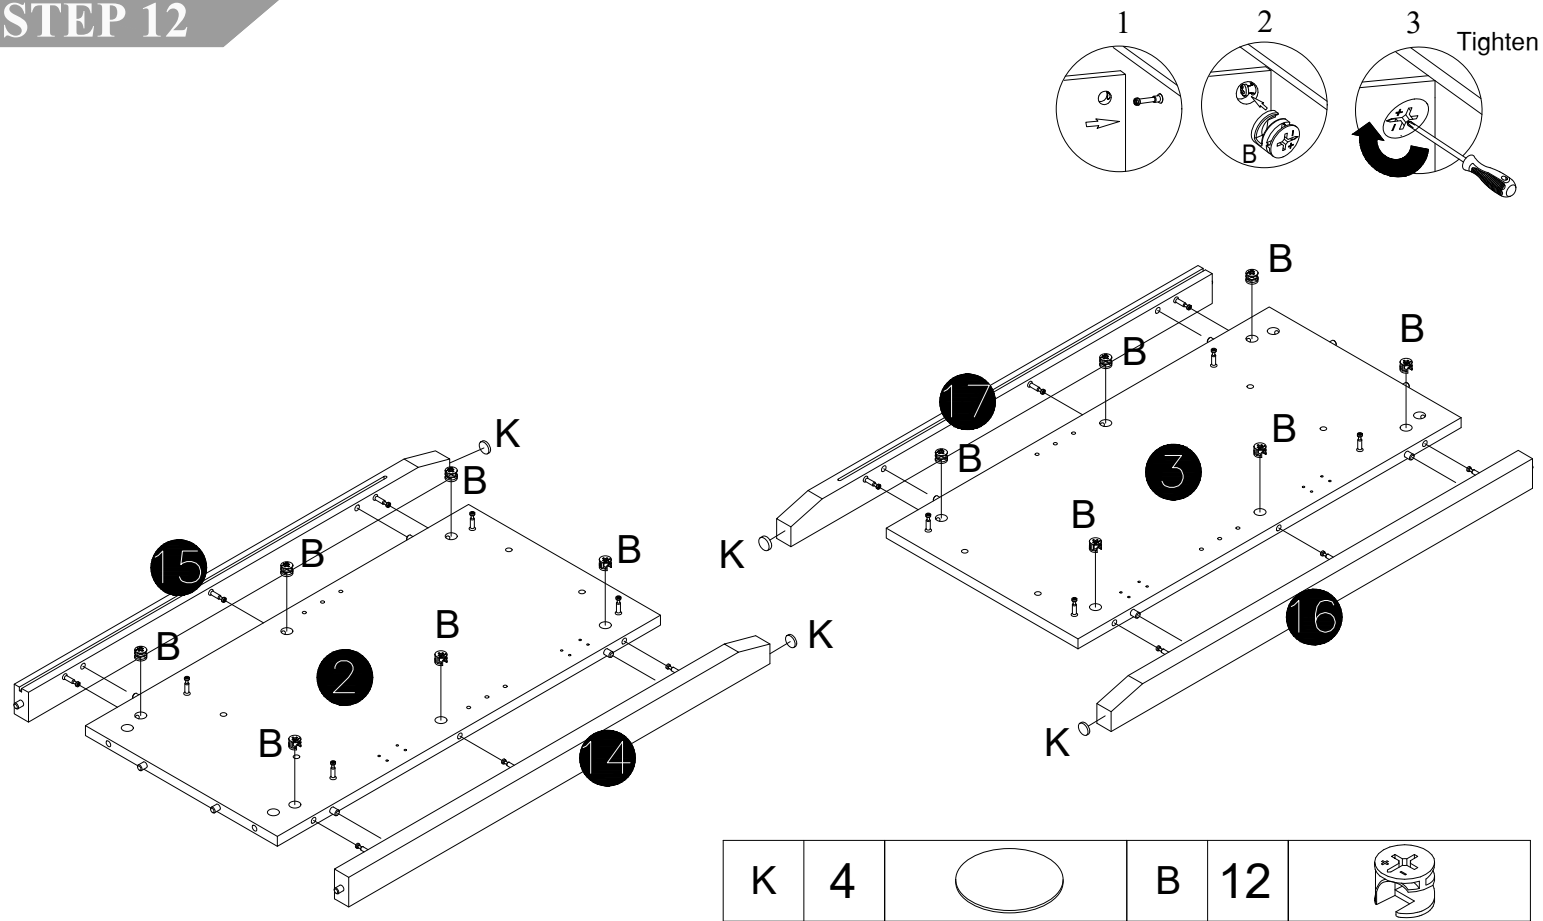


## STEP 13

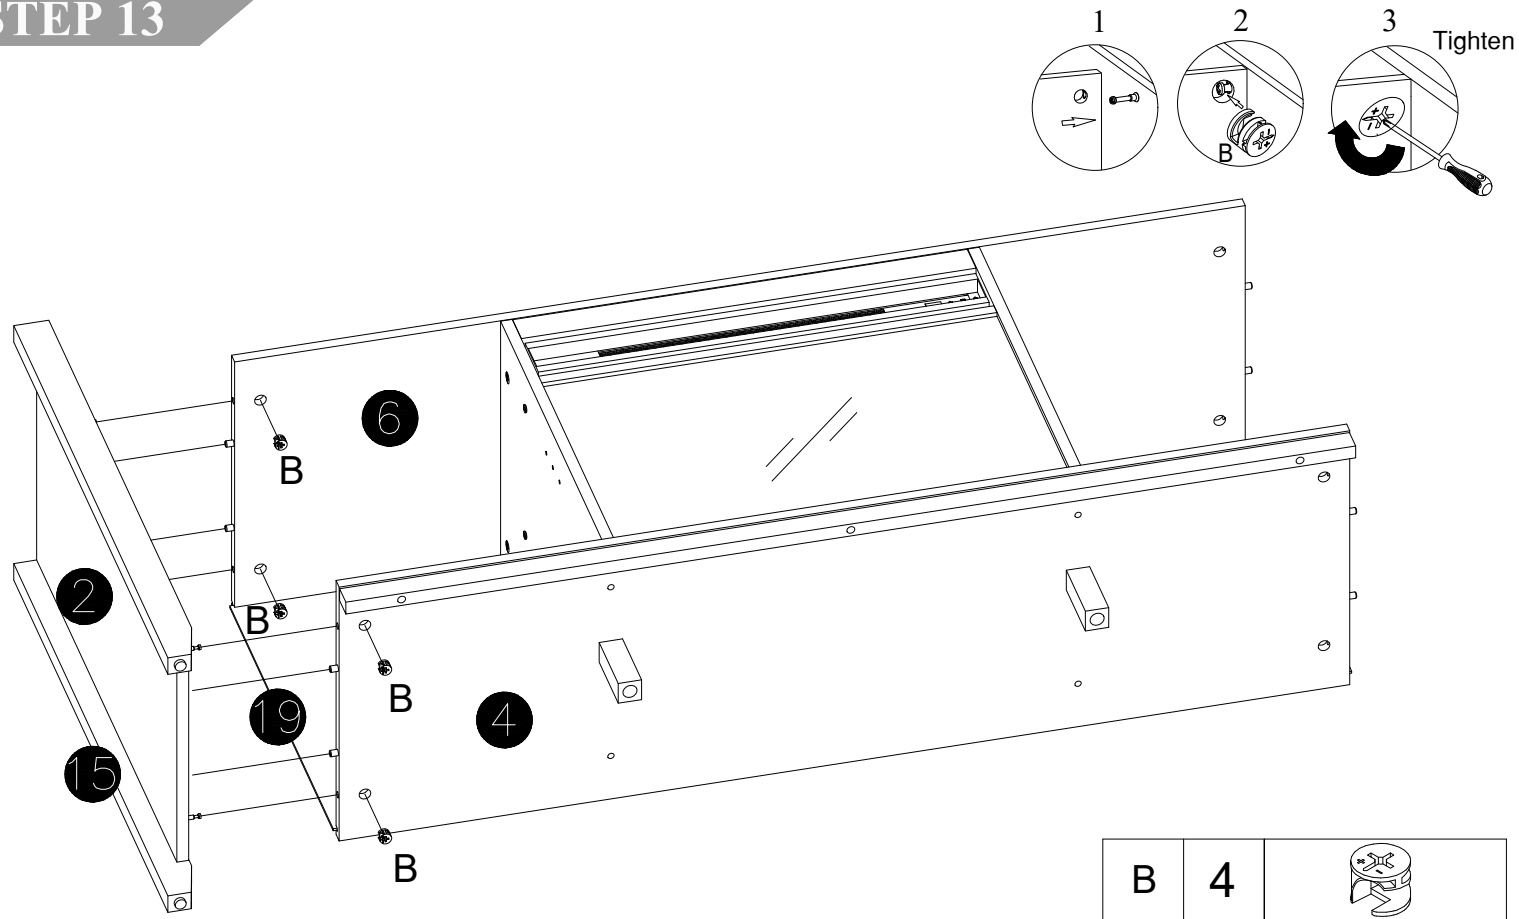


Assembly steps(EN)

STEP 14


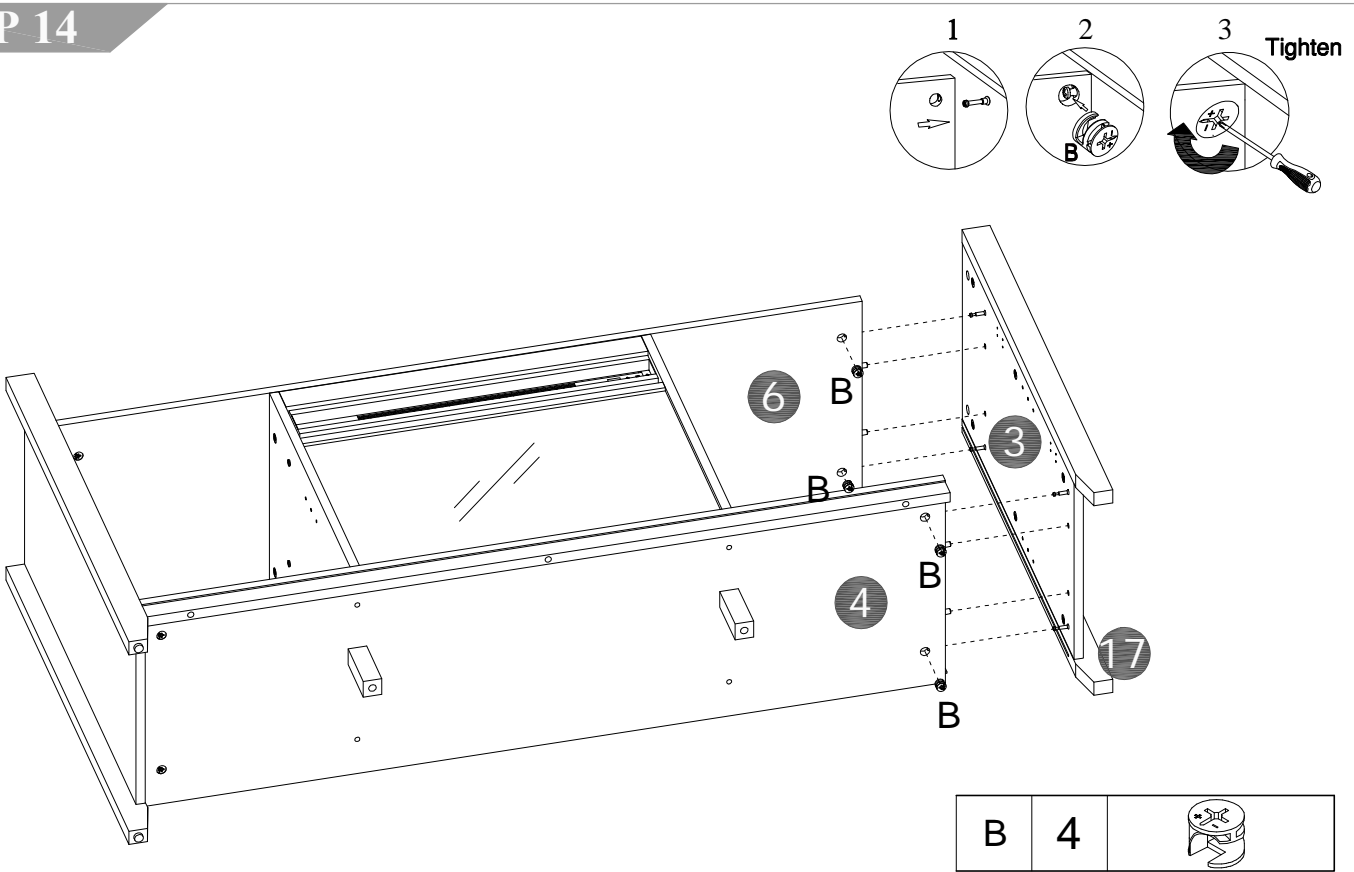



STEP 15

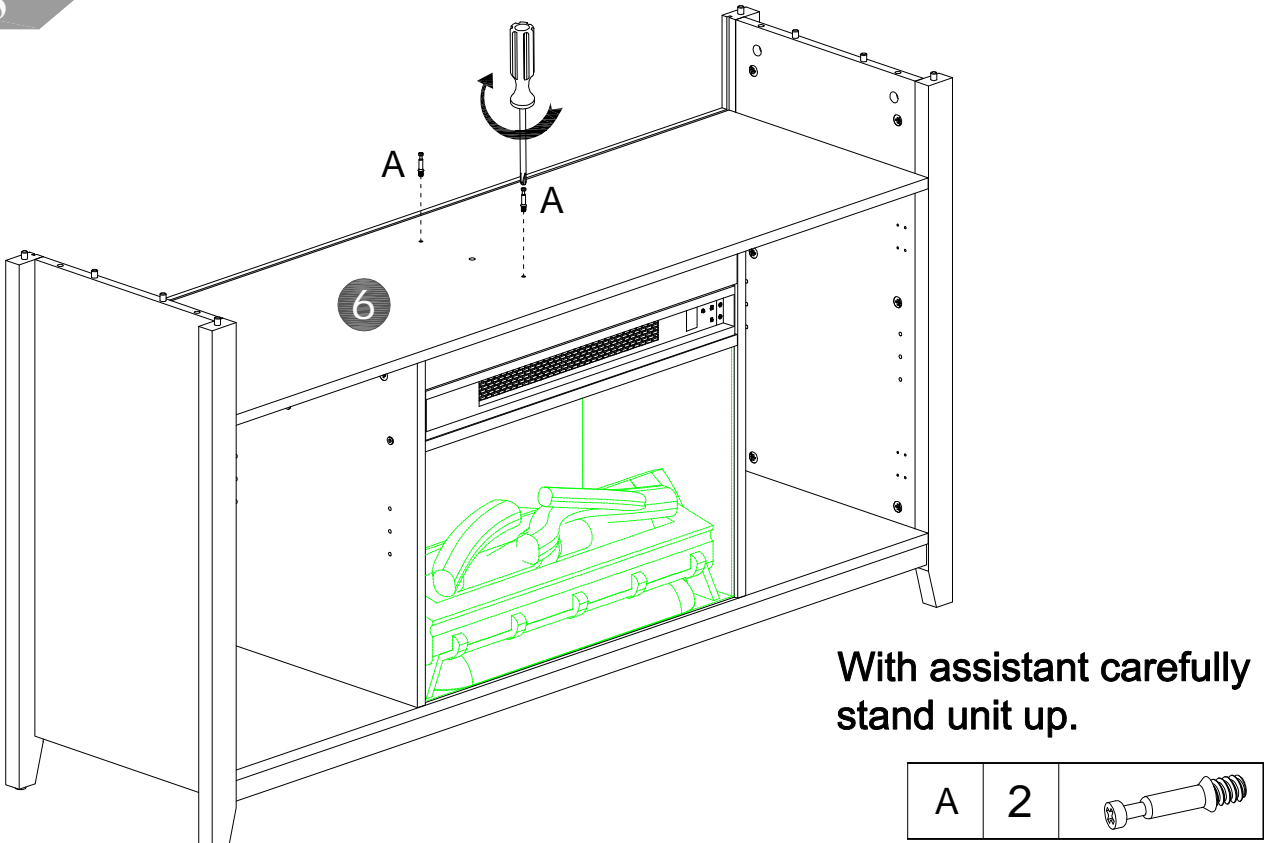



Assembly steps(EN)


STEP 16

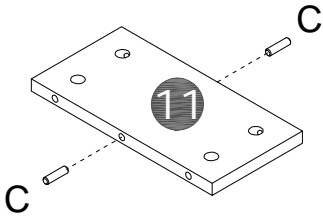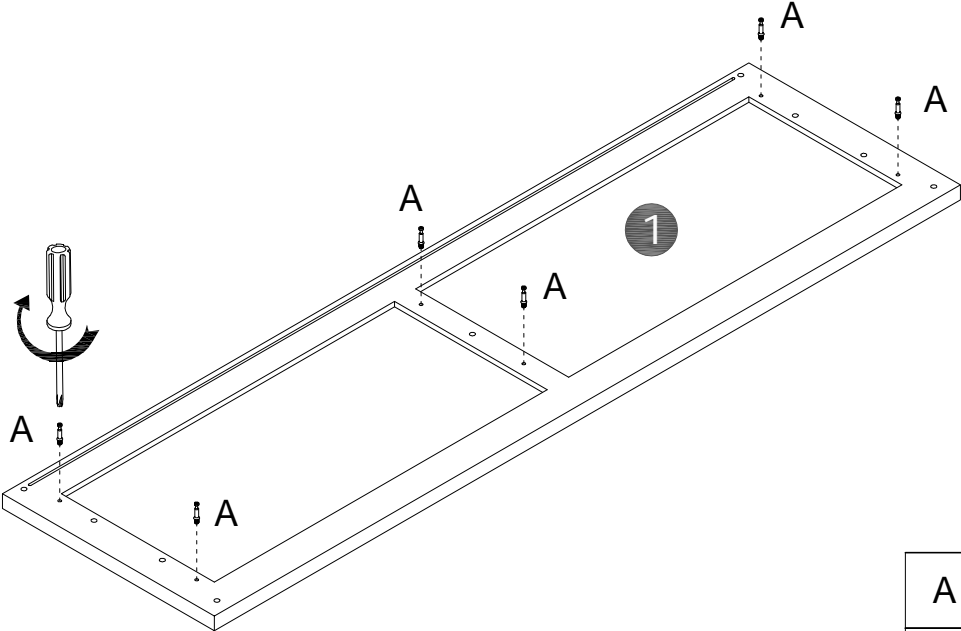

A	6		
C	2	Ø8*30MM	

STEP 17

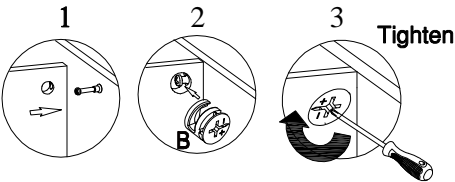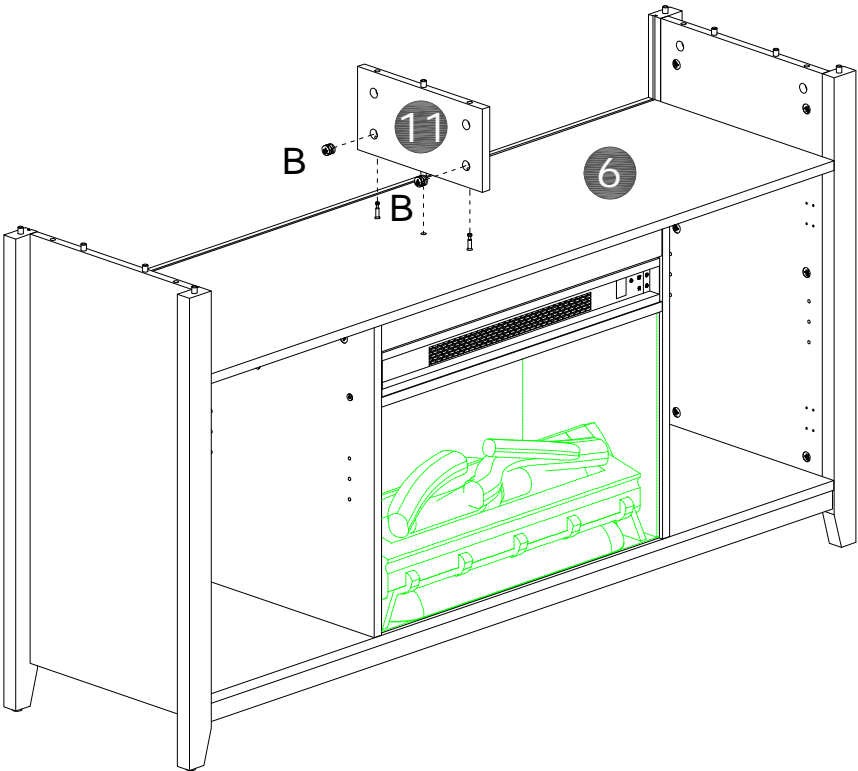


B	2		
---	---	--	---------------------------------------------------------------------------------------

## STEP 18



An assistant is required.

B	6	
---	---	--

B	6	
---	---	---------------------------------------------------------------------------------------


Assembly steps(EN)

STEP 20

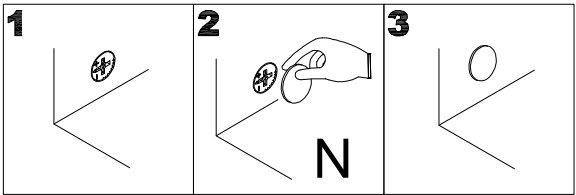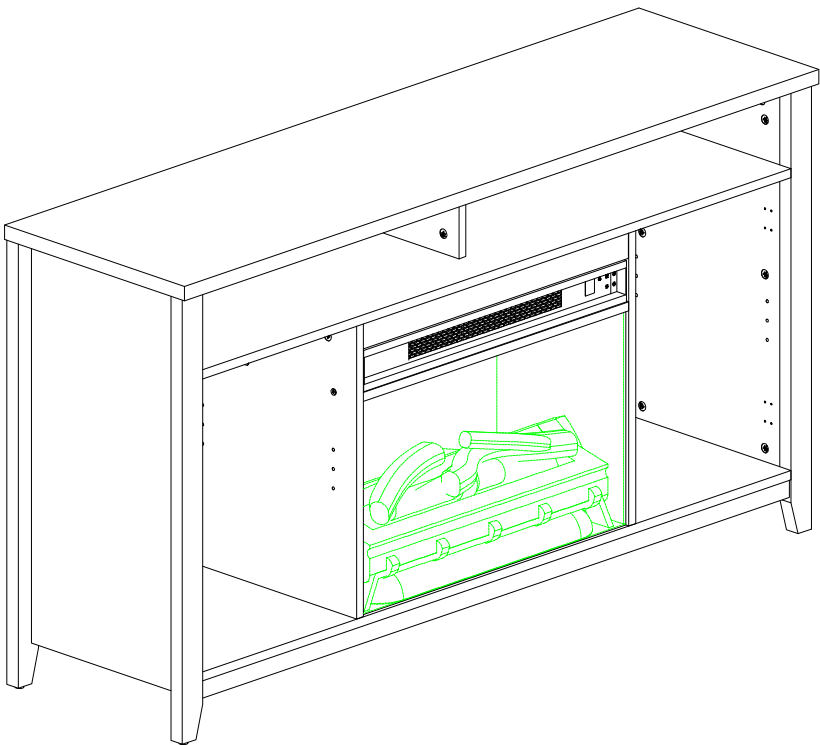

L	32	
---	----	--


STEP 21

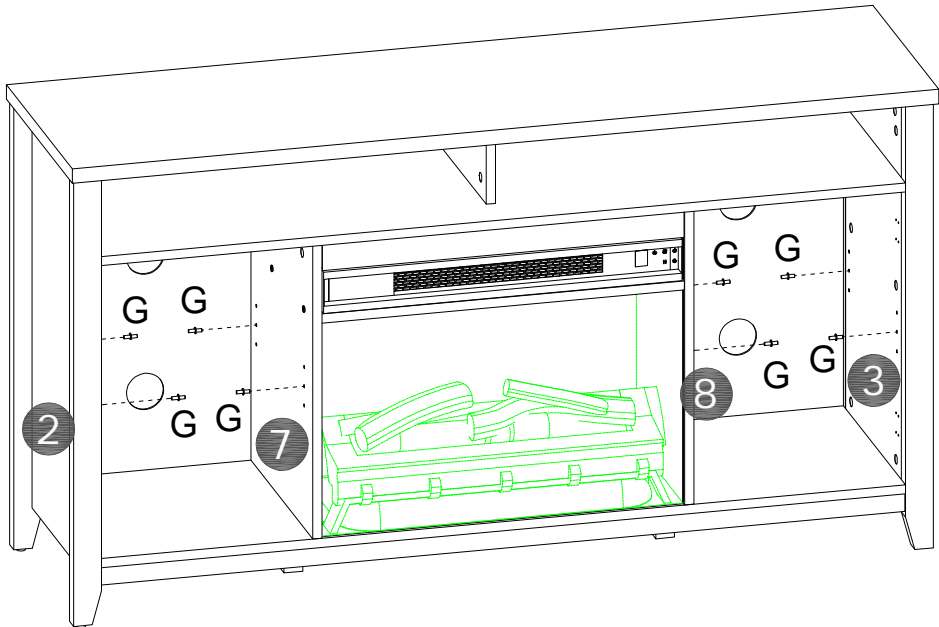


G	8	
---	---	--

# Assembly steps(EN)





## STEP 22

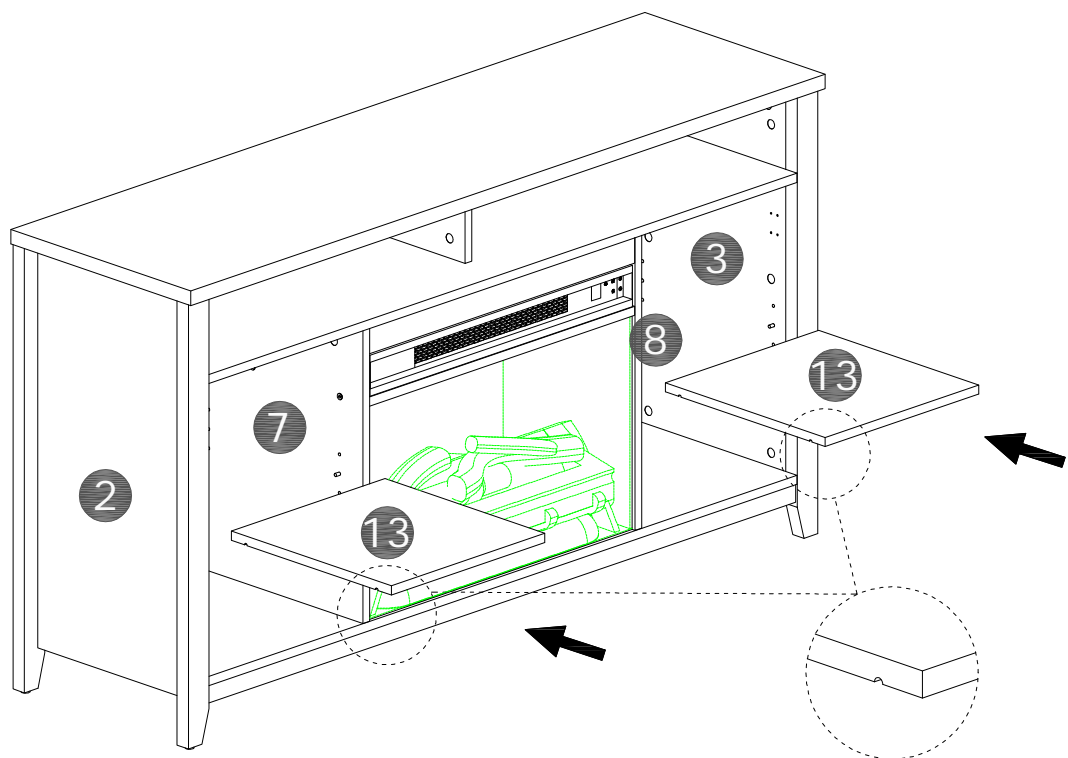

## STEP 23


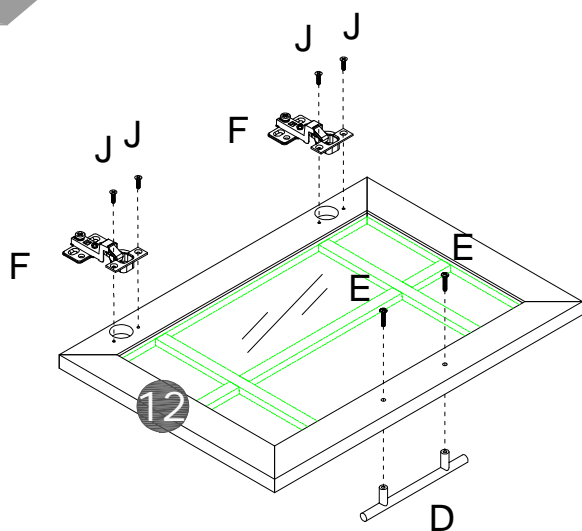



x 2

D	2			J	8	Ø4*14MM	
				F	4		
E	4	M4*23MM					



## Assembly steps(EN)


### STEP 24

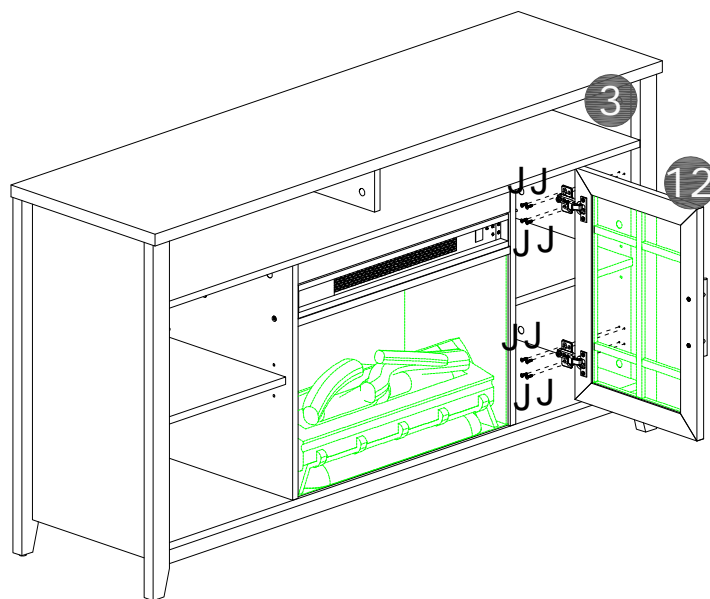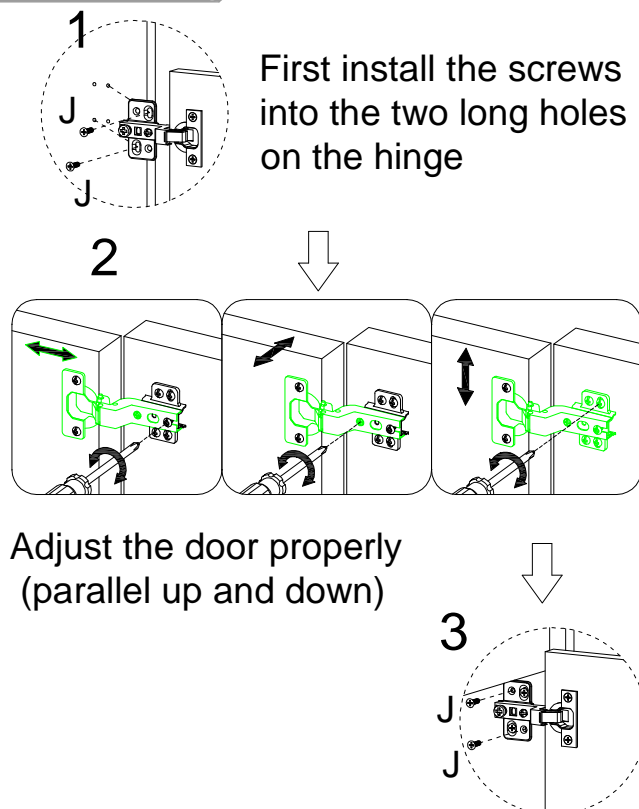

J	8	Ø4*14MM	
---	---	---------	---------------------------------------------------------------------------------------


### STEP 25

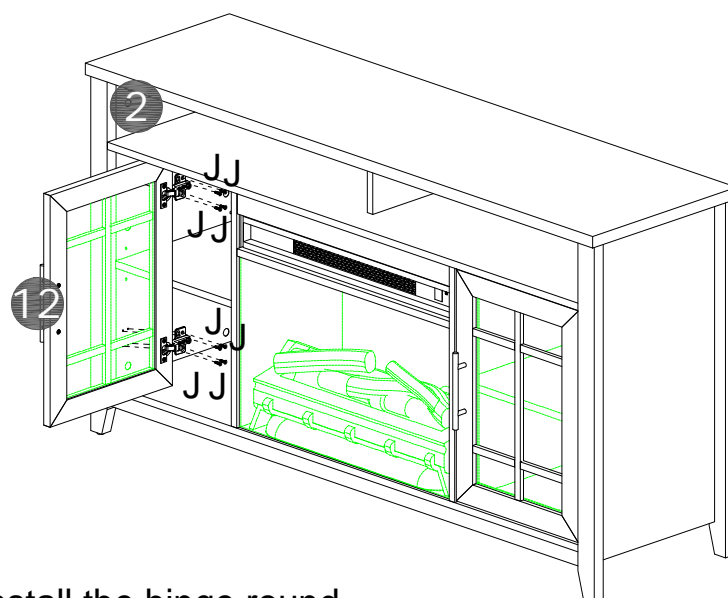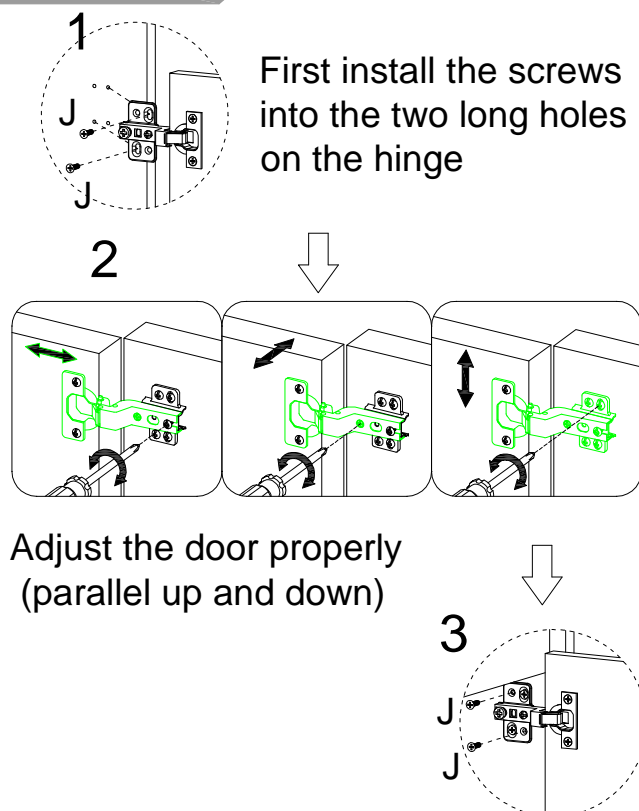




J	8	Ø4*14MM	
---	---	---------	---------------------------------------------------------------------------------------

Assembly steps(EN)


STEP 26


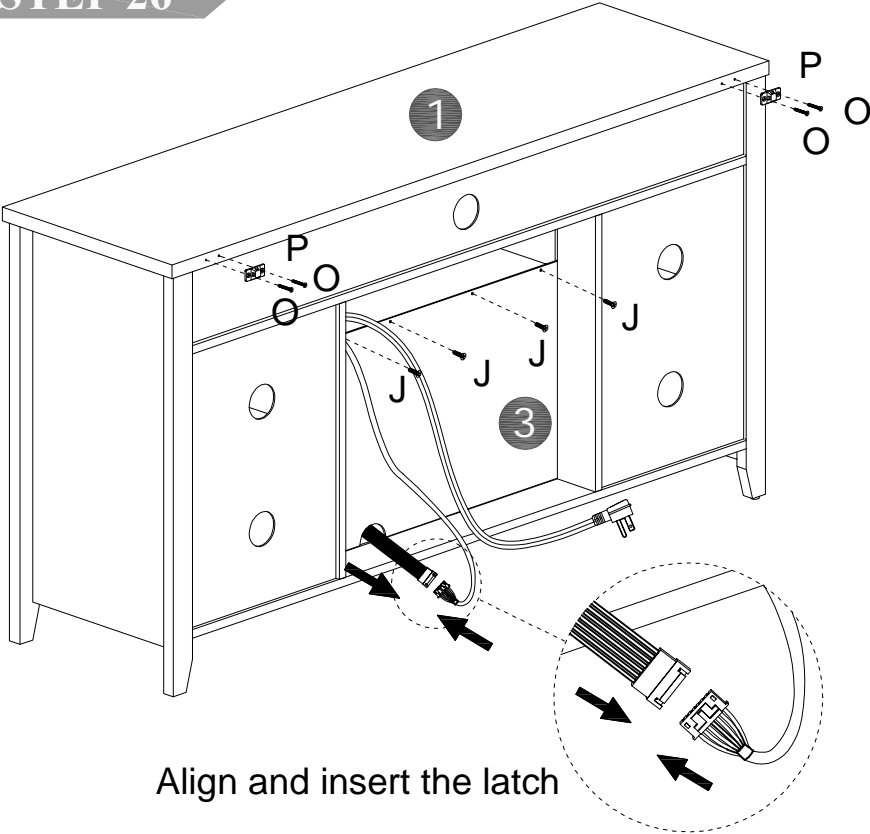


Align and insert the latch

J	4	Ø3.5*14MM	
P	2		
O	4	Ø4*16MM	

STEP 27

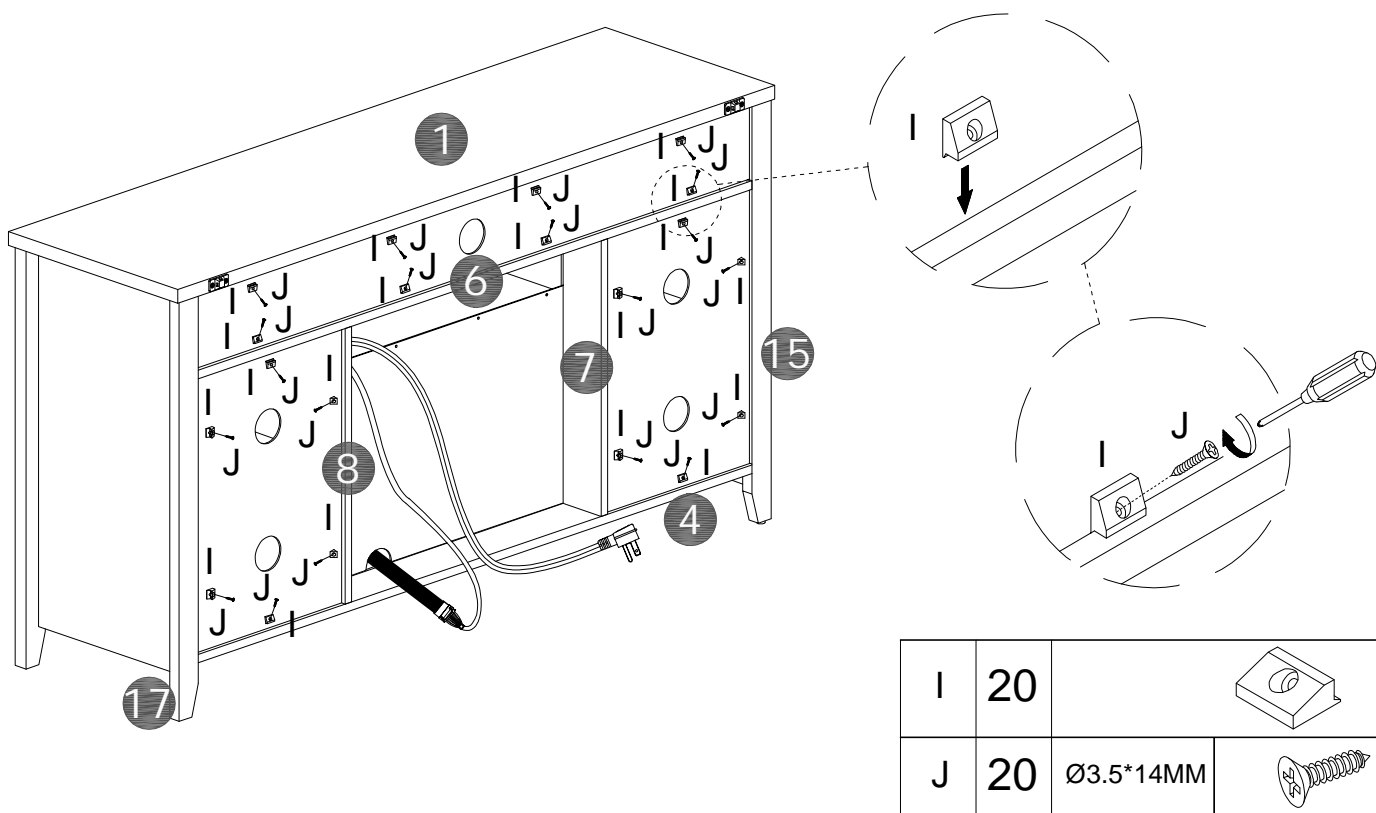



I	20		
J	20	Ø3.5*14MM	



# Assembly steps(EN)

## STEP 28



1. Place unit in desired location.
2. Locate wall stud nearest unit center.
3. On wall, mark the center of the hole.
4. If a wall stud cannot be located mark hollow wall at unit center.

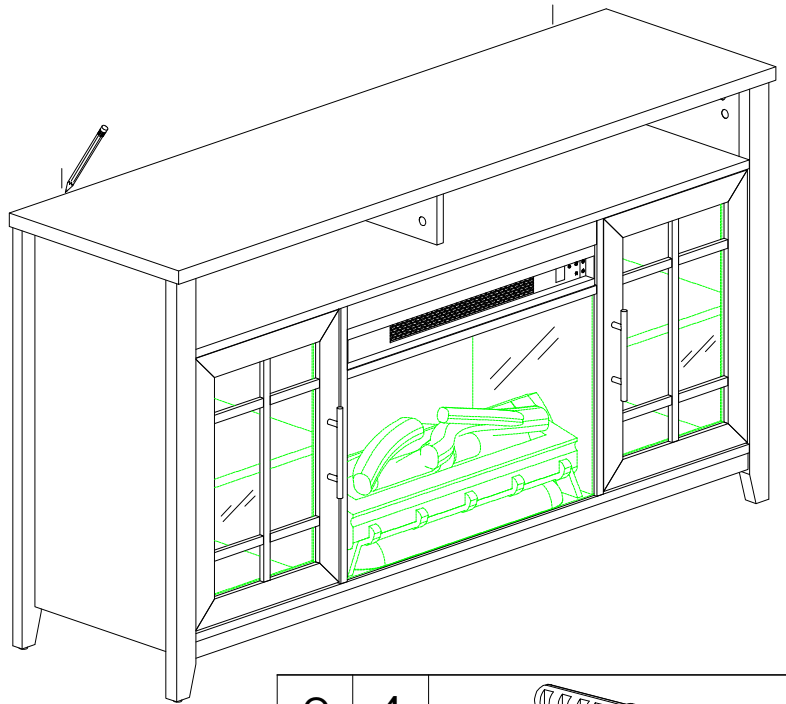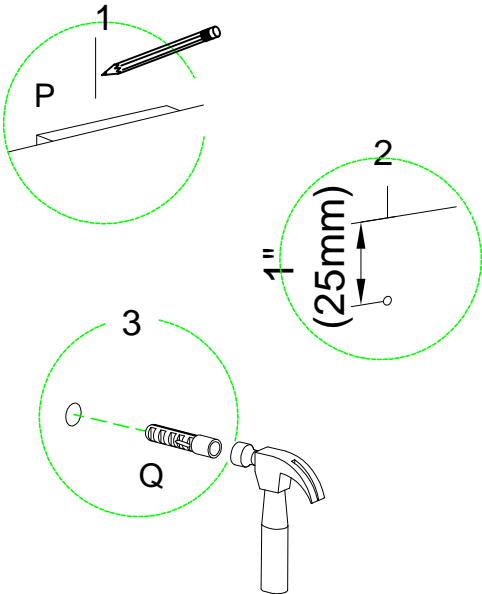

Q	4	
---	---	--

## STEP 29

1. Insert drywall screw into metal bracket and into drywall anchor.
2. Insert strap thru bracket attached to wall.
3. Pull lightly til strap stops. Assembly is complete.

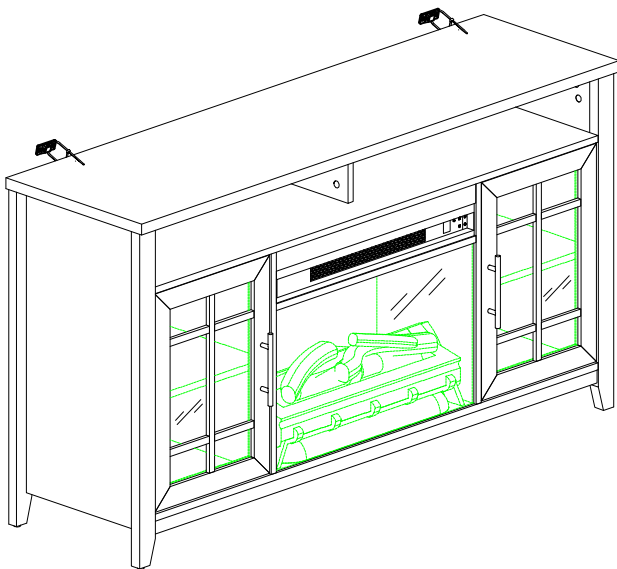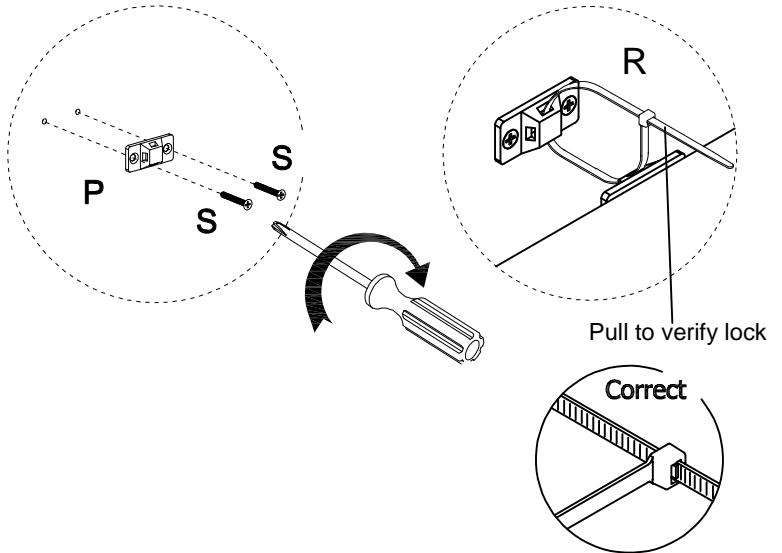


R	2		Nylon Cable Tie
P	2		
S	4	Ø4*35MM	

## Assembly steps(EN)

### STEP 30

**CAUTION:** This unit is intended for use only with the products and maximum weights indicated. use with other products or products heavier than the maximum weights indicated may result in instability causing possible injury.

Note: Flat Panel TVs with base support should be placed squarely in the center of the stand with no overhang on any side.

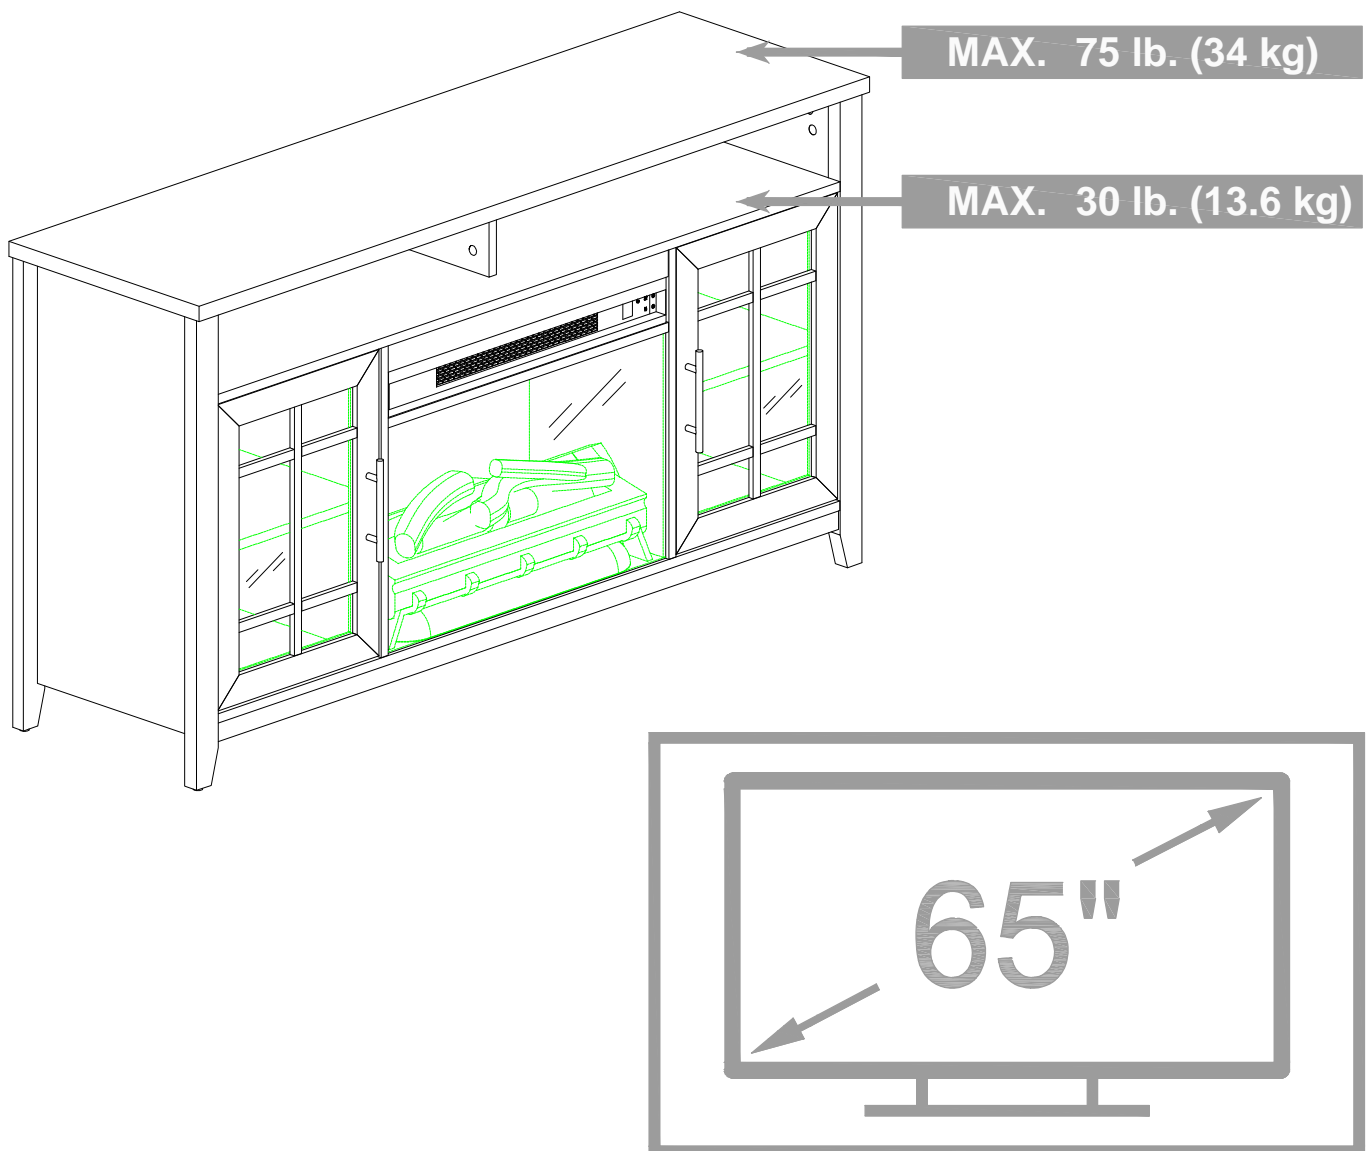

**YOU'RE FINISHED!**