


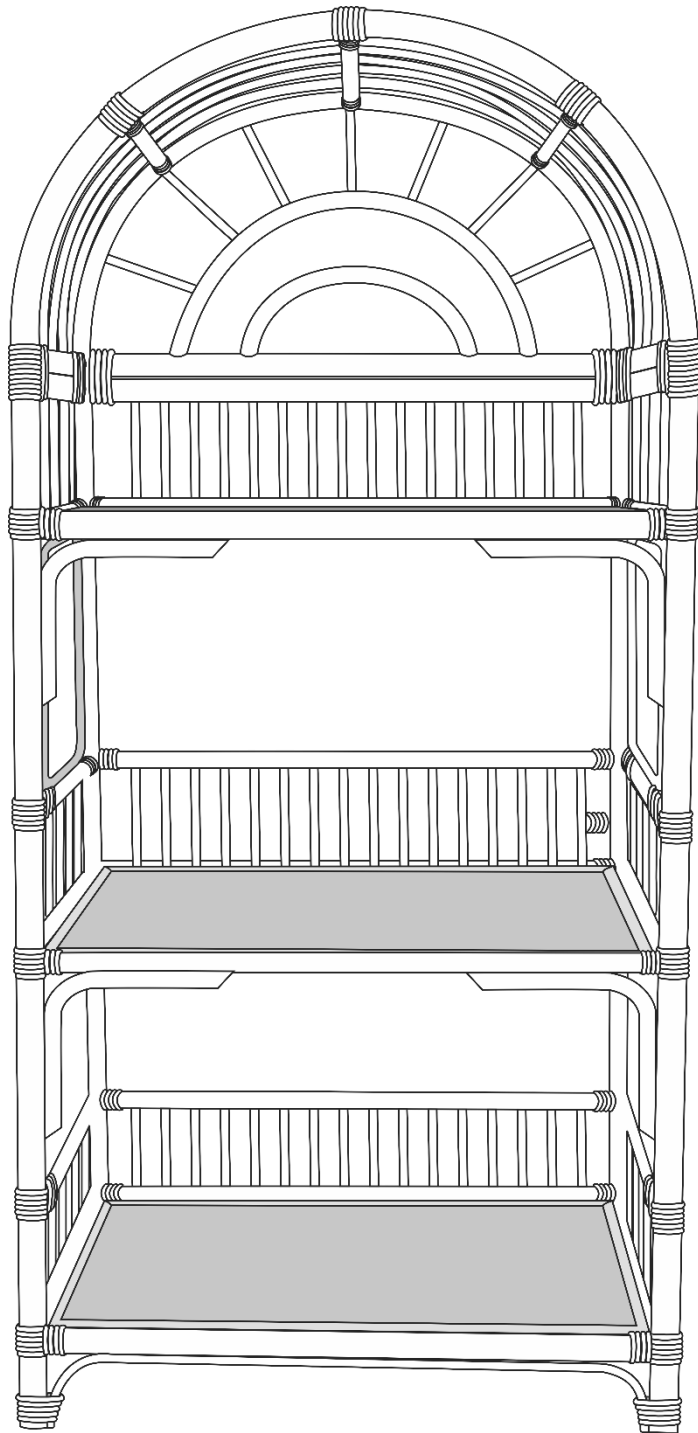

ASSEMBLY INSTRUCTIONS

Bookshelf

EEI-7941 / V1.07.24.26

modway



Questions? Contact us!

609.256.9000

cs@modway.com

Welcome.

Let's get started.

Before you begin, here are some things to keep in mind:

Assembly will take most people **about 30 minutes**. Consider having a friend help you!

Only use hand tools to assemble this item.

Do not use power tools. Do not tighten bolts or screws completely until all hardware is lined up and inserted into the holes.

Read through all of the instructions before starting. Make sure you have all parts and components before discarding any packing materials.

Do not over-tighten screws and bolts to avoid stripping the hardware or cracking the item.

Assemble your item on a flat, carpeted area, with plenty of space to work. This will prevent damage and scratches to your floors or the item while you're assembling the product.

Keep all components and packaging out of reach of children or animals to avoid risk of choking or suffocation.

Care Instructions-Refer to the Care Instructions Card.

WAIT!

Missing parts or hardware? Need assistance?

Contact us before returning your item.


We're here to help!



HARDWARE INCLUDED IN THE BOX:

A		Bracket	X2
B		Screw M7.5 x 15mm	x2
C		Fischer S8 30mm	x2
D		Screw M7.5 x 30mm	x2
E		Stainless Wire 200mm	X1

WHAT YOU NEED:




Phillips Head Screwdriver

YOU MAY ALSO NEED:

Power Drill

FURNITURE COMPONENTS INCLUDED IN THE BOX:

1

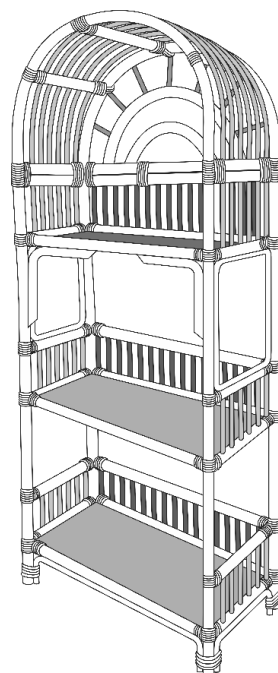

1.

Rattan cabinet

X1



1. Secure the provided mounting bracket (A) to the rattan cabinet (1) using screws (B) included in the kit.
2. Ensure the bracket is firmly attached before proceeding.

HARDWARE :

A	Bracket	x1
B	Screw M7.5 x 15mm	x2

COMPONENTS

1	Rattan Cabinet	x1
----------	----------------	----

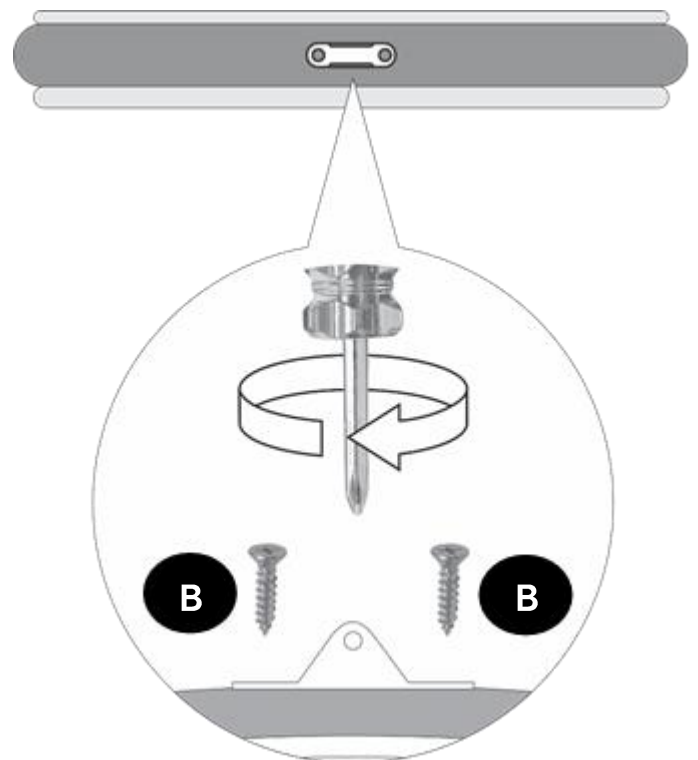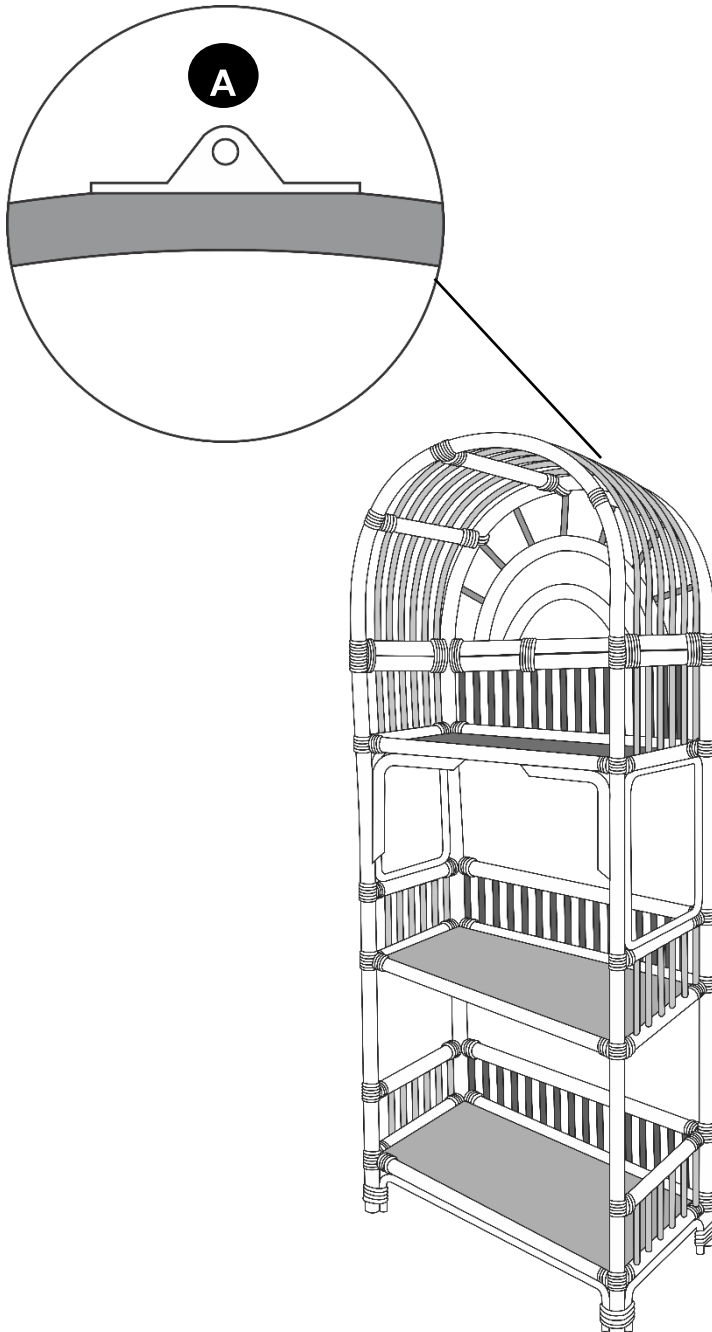


STEP 02


HARDWARE:

A	Bracket	x1
C	Fischer S8 30mm	x2



Note : Different wall materials require unique wall fastener. The Fischer (C) and Screw (D) are designated for fixing to concrete wall only. Please consult your local hardware store to ensure you are using the correct hardware for your wall type.

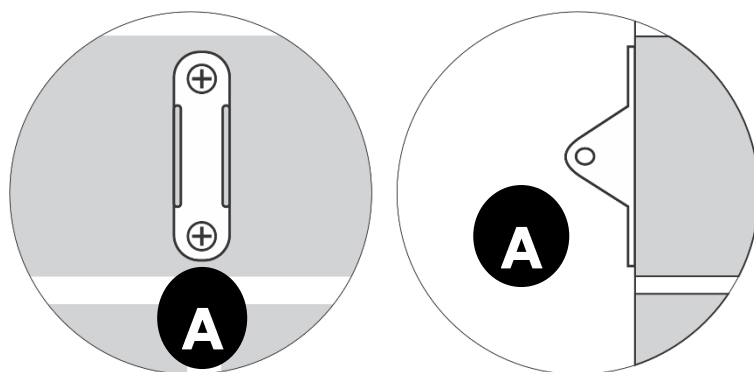

The bracket (A) can be mounted on the wall in either a vertical or horizontal position.

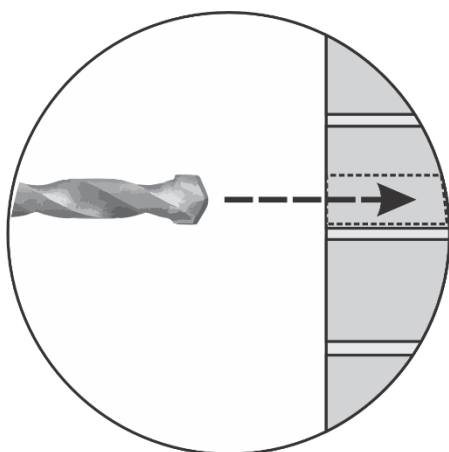

To install the Fischer plug (C), drill a hole in the wall using a 3/8" wall drill to a depth of 3cm.

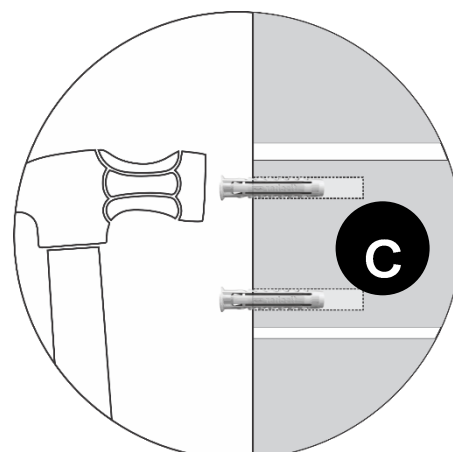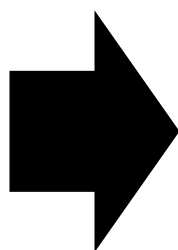

Tap with a hammer to insert the Fischer plug (C) into the wall.

STEP 03


HARDWARE:

D Screw M7.5 x 30mm x2


E Stainless Wire 200mm x1

COMPONENTS


1 Rattan Cabinet x1

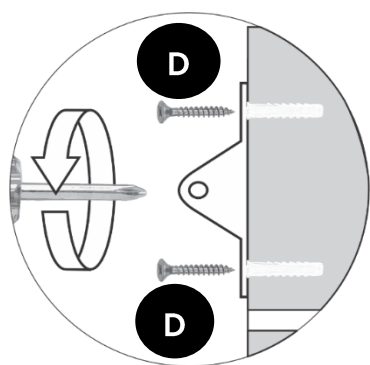

Once the Fischer anchors are installed, insert the **M7.5 x 30mm screw (D)** using a screwdriver.

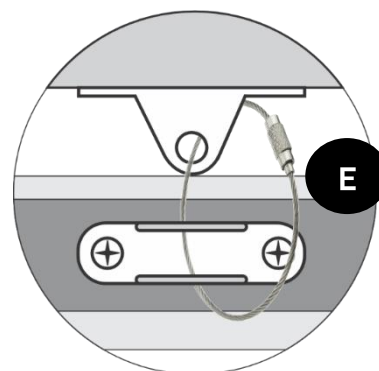


Horizontal Installation

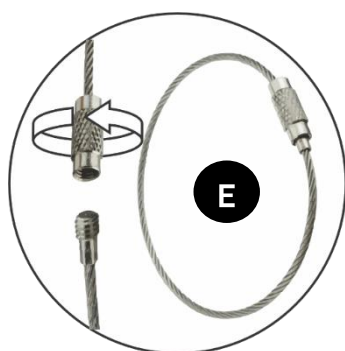

The Barrel Clasp is secured by joining the two ends via Clockwise rotation

Join the bracket on the wall with the bracket on the shelf, connecting them with the stainless wire, then Turn the barrel clasp to connect each end and lock it in place.

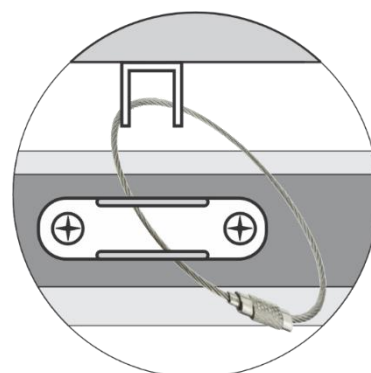

Vertical Installation

Great job!

Your new cabinet is complete.


CARING FOR YOUR ITEM

- Indoor use only
- Not contract grade.
- Clean using a non-abrasive cloth and a mild cleaner.
- Never use harsh chemicals, as they could damage the finish or integrity of the item.

Max 30kgs

Max 30kgs

Max 30kgs

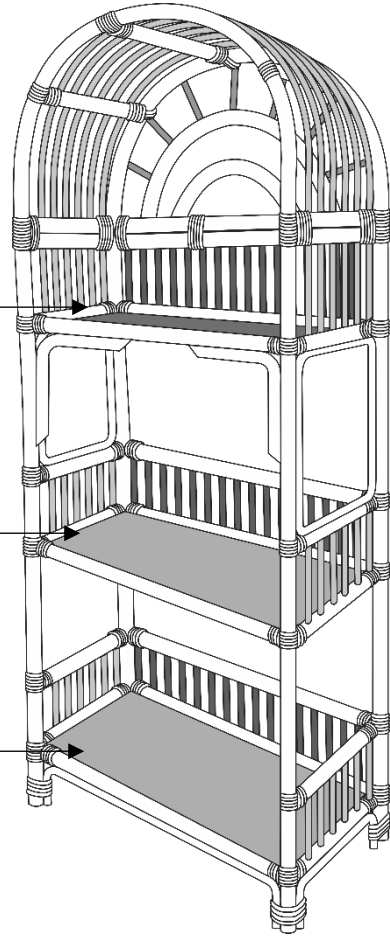

CONNECT WITH US!

Tag us **@modway.furniture** and **#MyModwayHome**
for a chance to be featured.

modway



Questions? Contact us!

609.256.9000

cs@modway.com