

Prime Sports Rubber Flooring is the put anywhere, ready for anything, heavy-duty interlocking tile. It is designed for use in small areas of larger rooms such as workout areas, laundry rooms, craft areas, garage spaces to protect existing flooring while providing comfort underfoot. Due to the recycled nature of this product, color can vary from piece to piece and material may contain skive marks (marks across the surface of the material from cutting) from the manufacturing process.

1. PREPARE the existing floor for installation by sweeping away any dirt or debris. Have a few tools available to help with the installation: a straight edge, chalk or pencil, utility knife, a scrap piece of thick cardboard or wood to cut on, and a transition piece to accommodate any door openings.

2. INSTALL

Interlocking cutting allowance of 10-12% should be added to the area depending on the pattern for installation.

Wall-to-Wall: If installing an entire room, allow a 1/8" expansion gap around the perimeter of the room.

1. Start in a far corner of the room to begin installation and work towards the doorway. To ensure a tight fit against the wall, cut away the tabs on the edges. To create the first corner piece, cut away the tabs on two edges. Cut on a scrap piece of thick cardboard or wood to avoid damage to floors or carpets.

2. Press the linking tabs into one another by starting at a corner and working across in both directions evenly to avoid stretching the tile.

3. When installing a transition piece at a doorway, please use the manufacturer's instructions.





Open Space: If installing a small space within a larger room, use chalk or pencil to mark the area to be covered.

1. Create the first corner tile by cutting away the tabs on two edges. Cut on a scrap piece of thick cardboard or wood to avoid damage to floors or carpets.


2. Lay the first corner piece in the far corner of your caulked area and start linking tile working across in both directions. Use the straight edge and utility knife to cut away the tabs on the edges.

3. COMPLETE


Once installation of the tiles is complete, remove all installation debris from the room and damp mop the surface with a mild detergent and rinse with clean cool water. Once dry, you can begin to enjoy your new Prime Sports flooring and your new space! Maintain your new floor by dust mopping or damp mopping as needed.

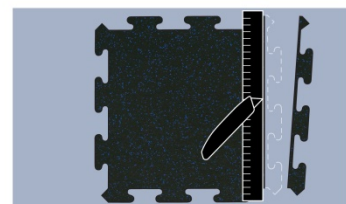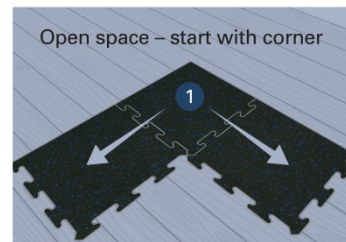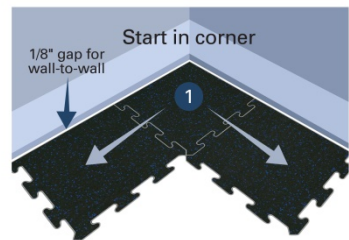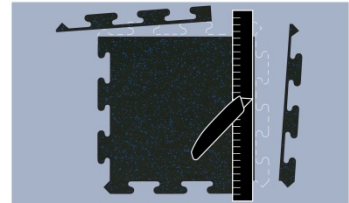

Los pisos de caucho Prime Sports se colocan en cualquier lugar, listos para cualquier cosa, baldosas entrelazadas de alta resistencia. Está diseñado para su uso en áreas pequeñas de habitaciones más grandes, como áreas de entrenamiento, lavanderías, áreas de manualidades, espacios de garaje para proteger los pisos existentes y brindar comodidad para los pies. Debido a la naturaleza reciclada de este producto, el color puede variar de una pieza a otra y el material puede contener marcas de biselado (marcas en la superficie del material del corte) del proceso de fabricación.

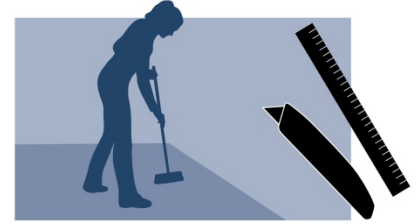


1. PREPARE el piso existente para la instalación barriendo la suciedad o los escombros. Tenga algunas herramientas disponibles para ayudar con la instalación: una regla, tiza o lápiz, un cuchillo, un trozo de cartón grueso o madera para cortar, y una pieza de transición para acomodar cualquier abertura de la puerta.

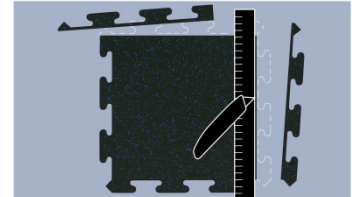

2. INSTALAR

Se debe agregar un margen de corte entrelazado del 10-12% al área según el patrón de instalación.

De pared a pared: si instala una habitación completa, deje un espacio de expansión de 1/8 "alrededor del perímetro de la habitación.

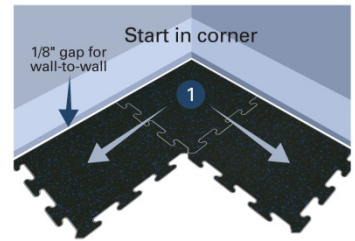


1. Comience en un rincón más alejado de la habitación para comenzar la instalación y avance hacia la entrada. Para asegurar un ajuste perfecto contra la pared, corte las lengüetas de los bordes. Para crear la primera pieza de esquina, corte las pestañas en dos bordes. Corte un trozo de cartón grueso o madera para evitar dañar los pisos o las alfombras.



2. Presione las pestañas de enlace entre sí comenzando en una esquina y trabajando en ambas direcciones de manera uniforme para evitar estirar la loseta.

3. Al instalar una pieza de transición en una puerta, siga las instrucciones del fabricante.

Espacio abierto: si instala un espacio pequeño dentro de una habitación más grande, use tiza o lápiz para marcar el área a cubrir.

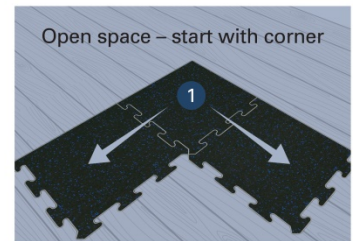

1. Cree el primer mosaico de esquina cortando las pestañas de dos bordes. Corte un trozo de cartón grueso o madera para evitar dañar los pisos o las alfombras.

2. Coloque la primera pieza de esquina en la esquina más alejada de su área calafatada y comience a unir los azulejos trabajando en ambas direcciones. Utilice la regla y el cuchillo para uso general para cortar las pestañas de los bordes.

3. COMPLETO

Una vez que la instalación de las baldosas esté completa, retire todos los escombros de la instalación de la habitación y pase un trapeador húmedo por la superficie con un detergente suave y enjuague con agua limpia y fría. Una vez seco, puede comenzar a disfrutar de su nuevo piso Prime Sports y de su nuevo espacio. Mantenga su nuevo piso trapeando el polvo o trapeando húmedo según sea necesario.

