


Assembly Instructions

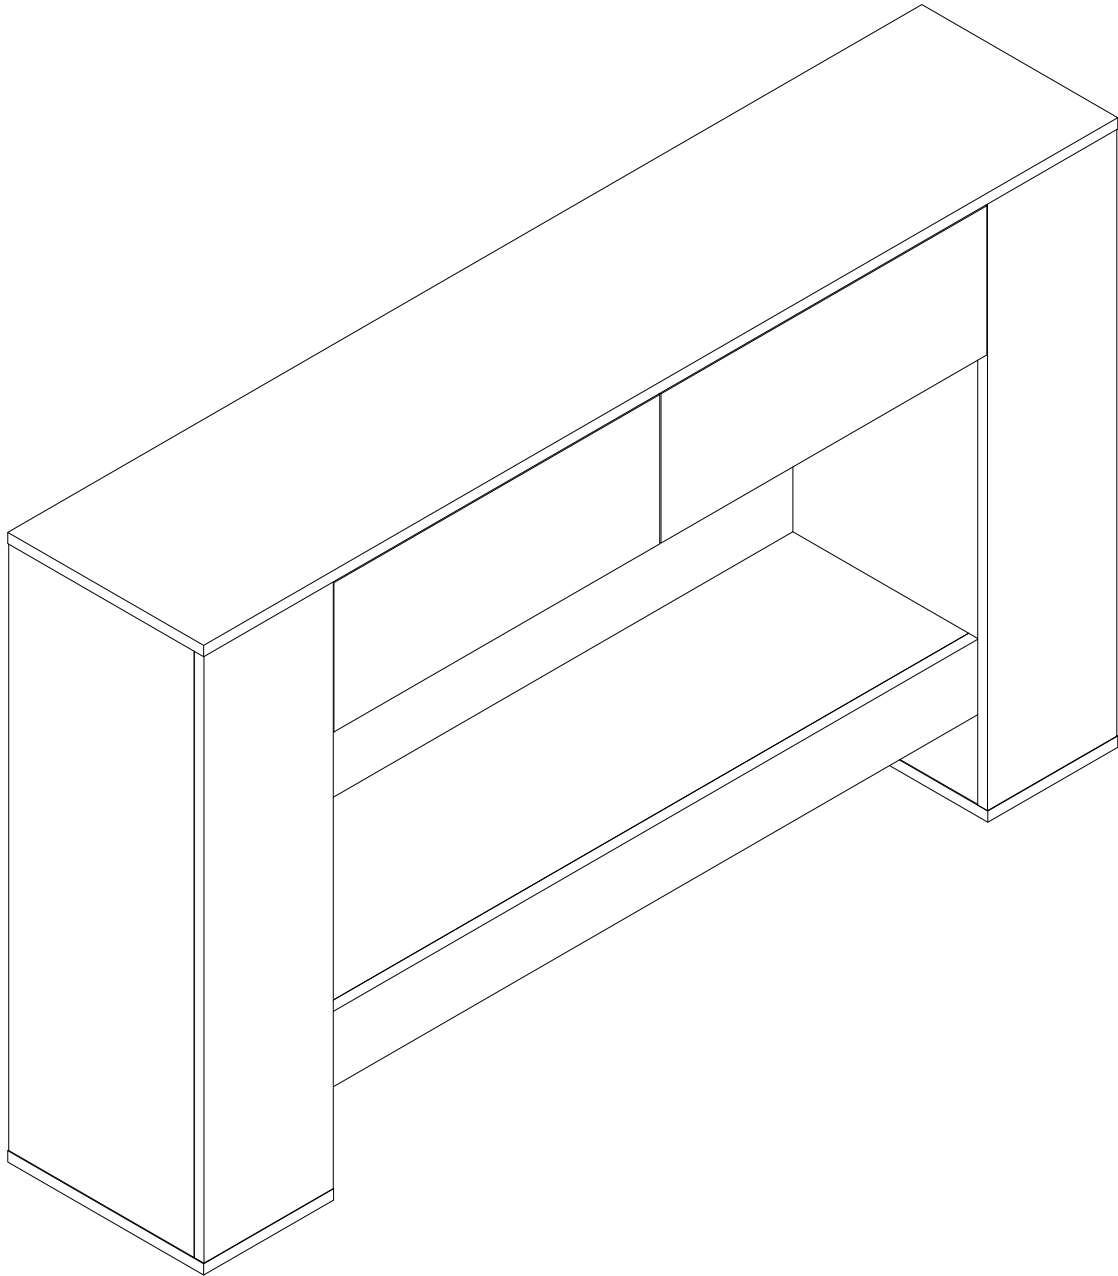


Console Table

Model No.
HOGA-RY0249

Contact Us




We're here to help you.

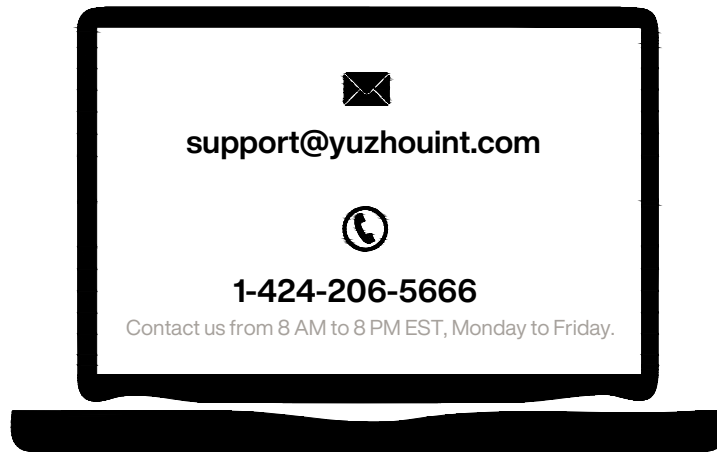

Your satisfaction is our top priority. If you encounter any issues with this product, such as missing or damaged parts, we're here to help. Please retain the original packaging and take photos of the packaging and the product, then contact us as soon as possible.


Warm Tips

1. Carefully read these instructions and keep them for future reference.
2. Check the parts list and confirm everything's there before starting assembly.
3. When assembling, put all parts on a soft, smooth surface like a carpet to avoid scratches.
4. Don't fully tighten screws until all parts are confirmed in place to avoid misalignment.

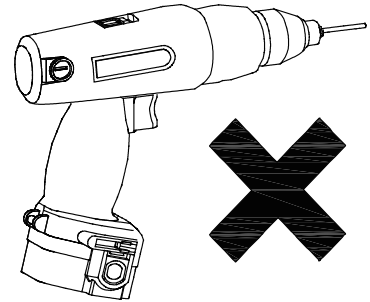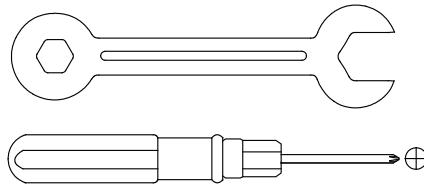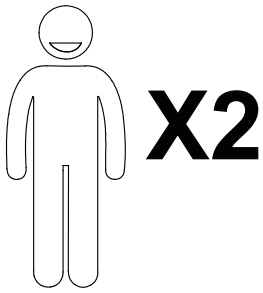



We recommend using hand tools for assembly.


If an electric screwdriver is used, reduce power and torque to avoid damage to the product.

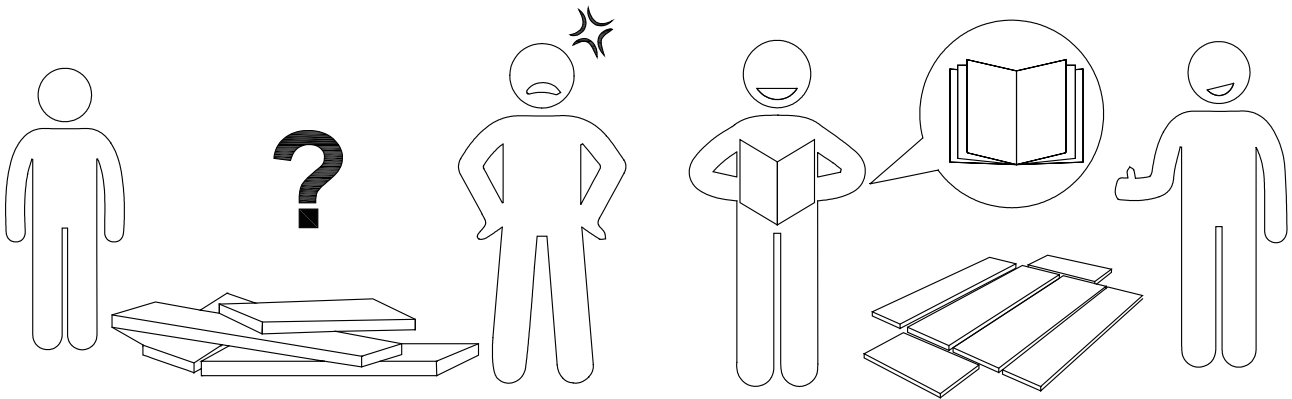

Install the Anti-Tip Straps

Using the anti-tip straps can reduce the risk of tipping over, but can not eliminate it.













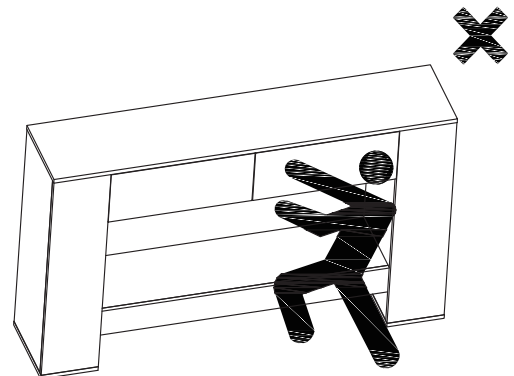
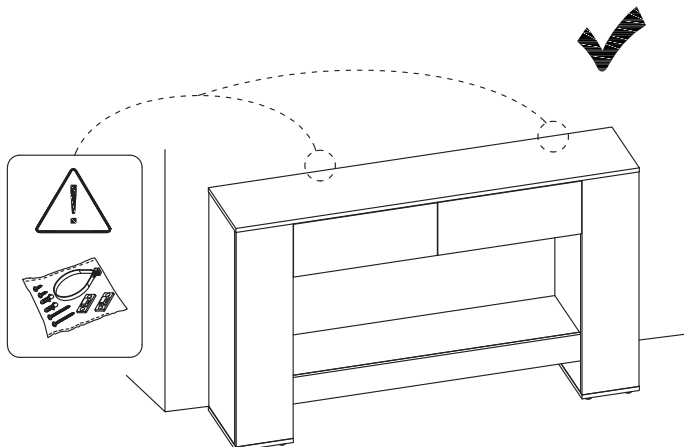


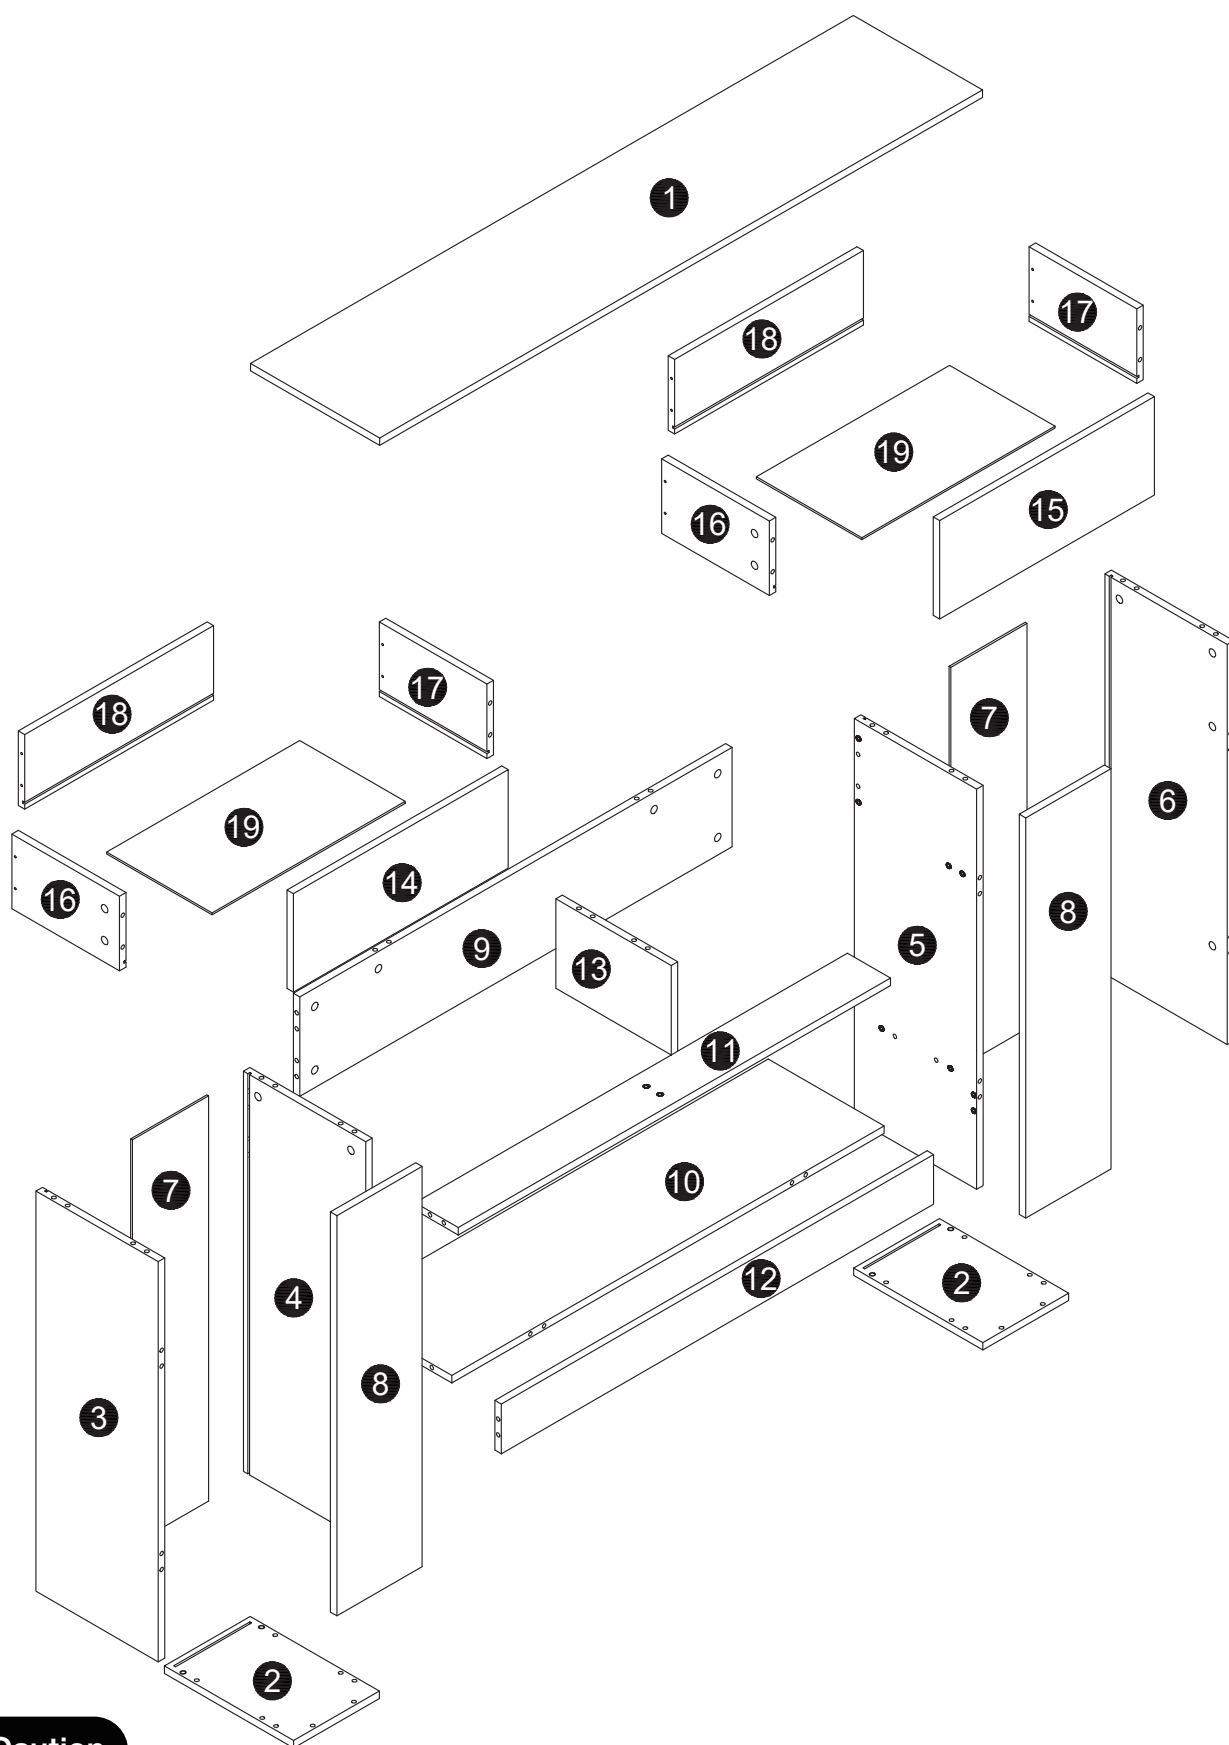





⚠ Caution





Make sure all parts are included. Most board parts are labeled or stamped on the raw edge. Contact us for a free replacement if you encounter any damaged or missing parts.


Parts List

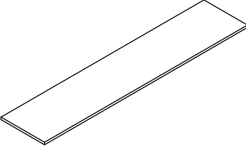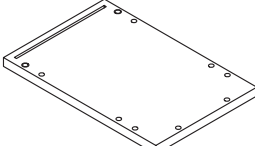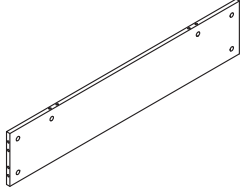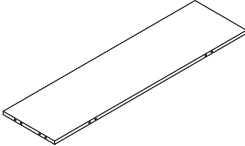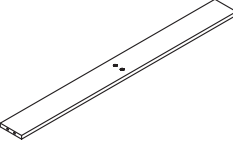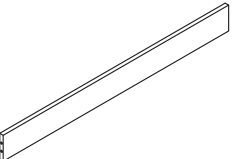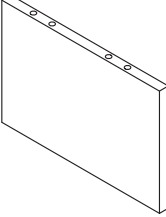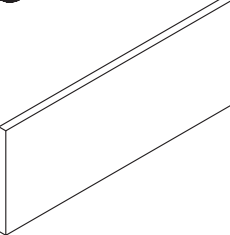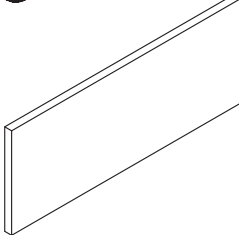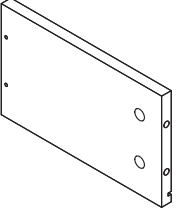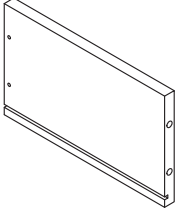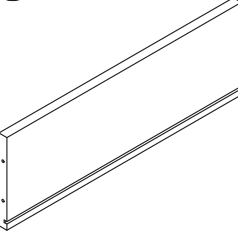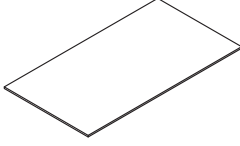1  1 pc	2  2 pcs	3  1 pc	4  1 pc	5  1 pc
6  1 pc	7  2 pcs	8  2 pcs	9  1 pc	10  1 pc
11  1 pc	12  1 pc	13  1 pc	14  1 pc	15  1 pc
16  2 pcs	17  2 pcs	18  2 pcs	19  2 pcs	

Hardware List

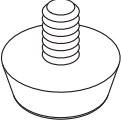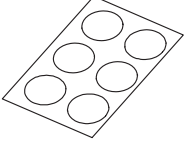
A	B	C	D	E	F
					
Ø19x8mm	Ø6x45mm	Ø15x12mm	Ø8x40mm	M6x55mm	Ø21MM
8 pcs	48 pcs	48 pcs	38 pcs	12 pcs	12 pcs

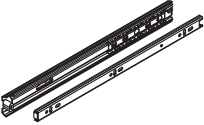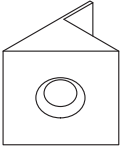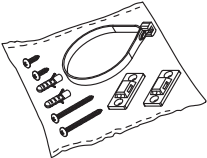G	H	I	J	K	L
					
250MM		Ø4x30mm	Ø3.5x15mm	M4	
2 stes	8 pcs	8 pcs	24 pcs	1 pc	2 pcs

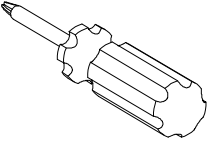
M					
					
80mm					
1 pc					

Installation of Cams and Pins

Read each step carefully before starting. Each step of instruction should be performed in the correct order. If these steps are not followed in sequence, assembly difficulties may occur.

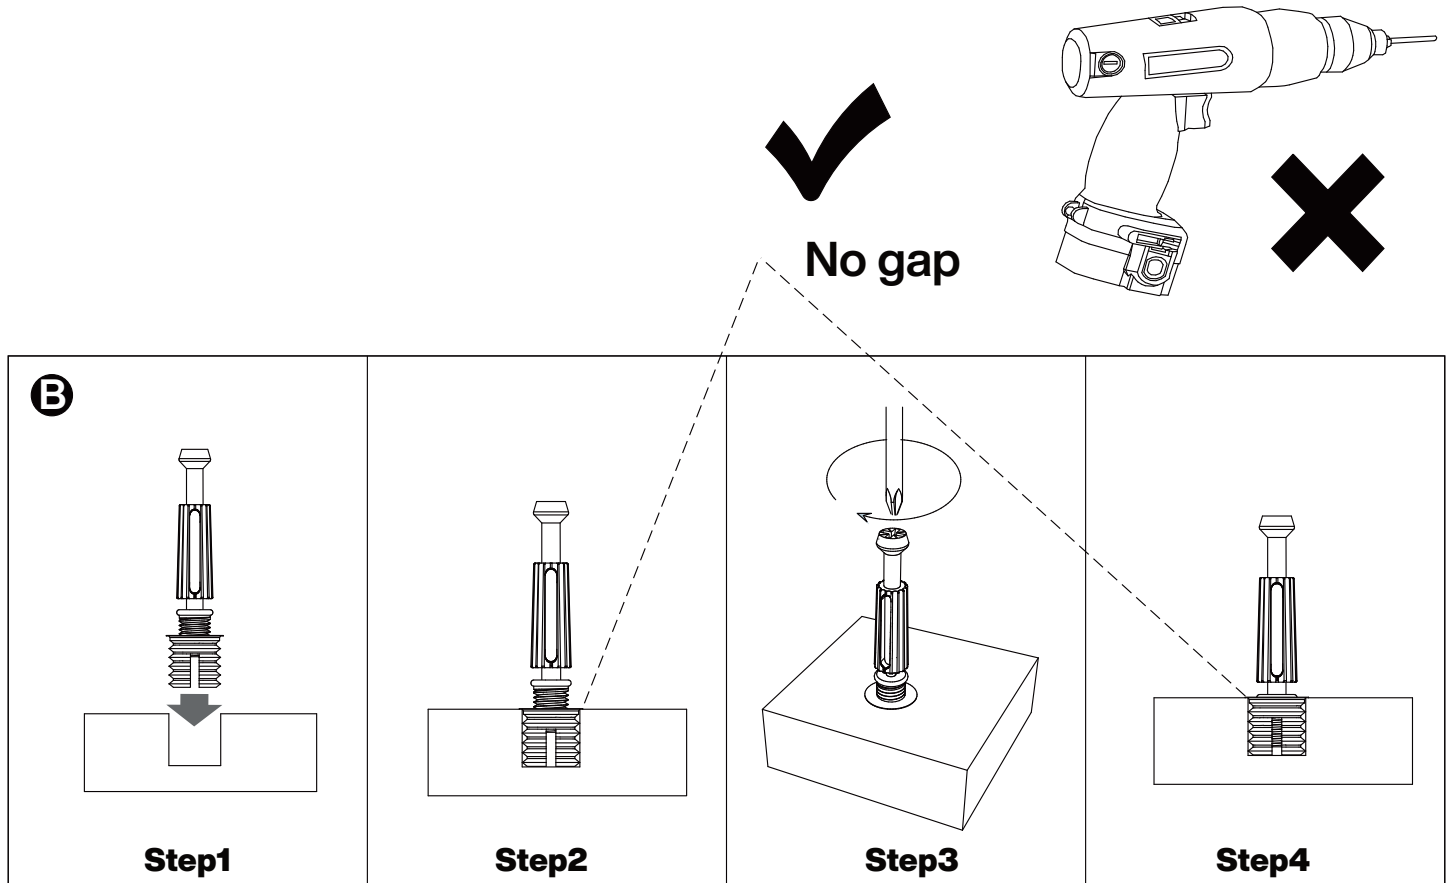


Screw the pin into the hole. Set the cams correctly by aligning the head of the cams with the lock pins. Lock the cam by turning the cam head with a screwdriver until it is tightened. Please do not use an electric screwdriver to assemble the unit.

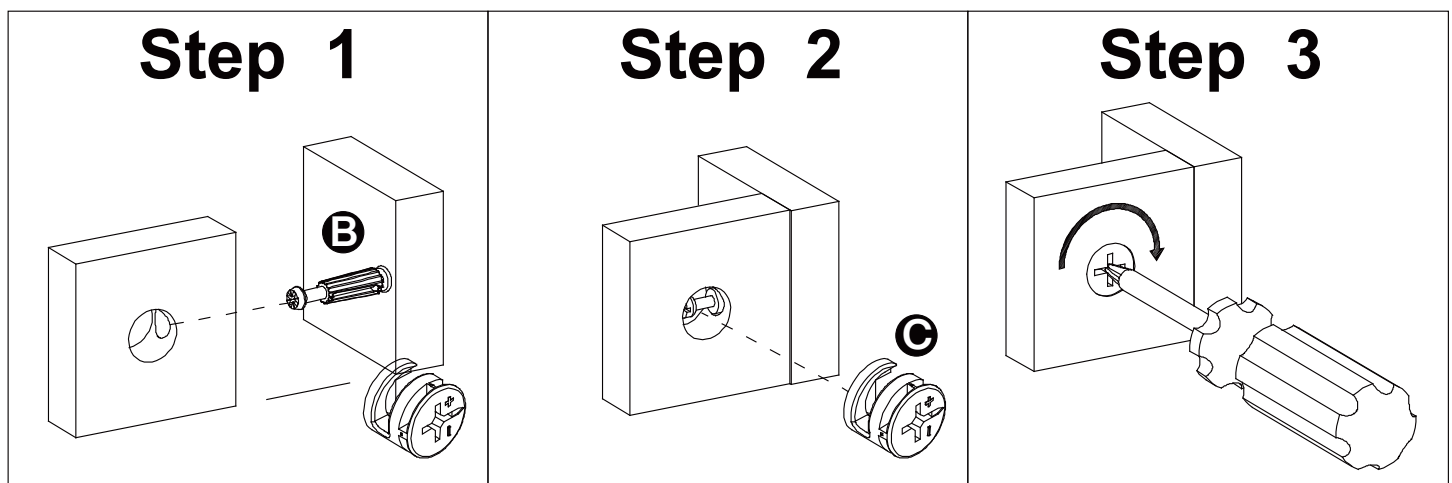


Please split component “G” into “G-1” and “G-2” before assembling the slide and then proceed to the next step of assembly

Step 1


Pull apart component "G" to each side, and then gently push up the lever of component "G-2"

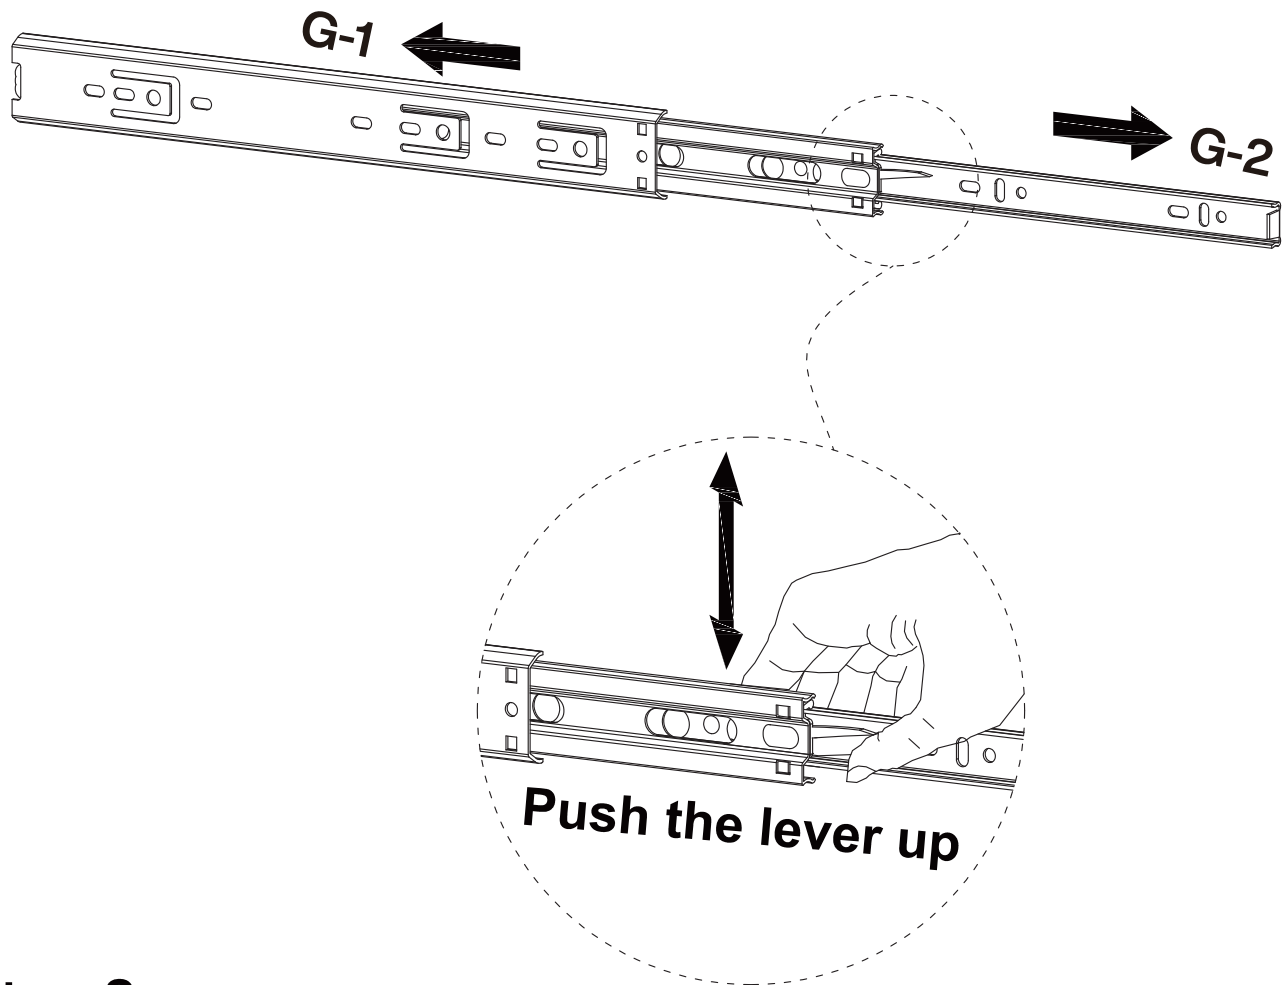



Step 2 Split component “G-1” and “G-2”

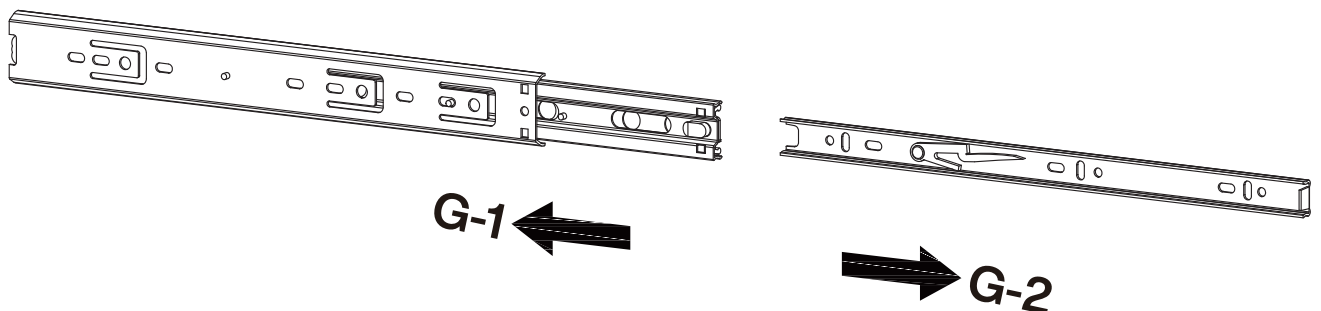



1

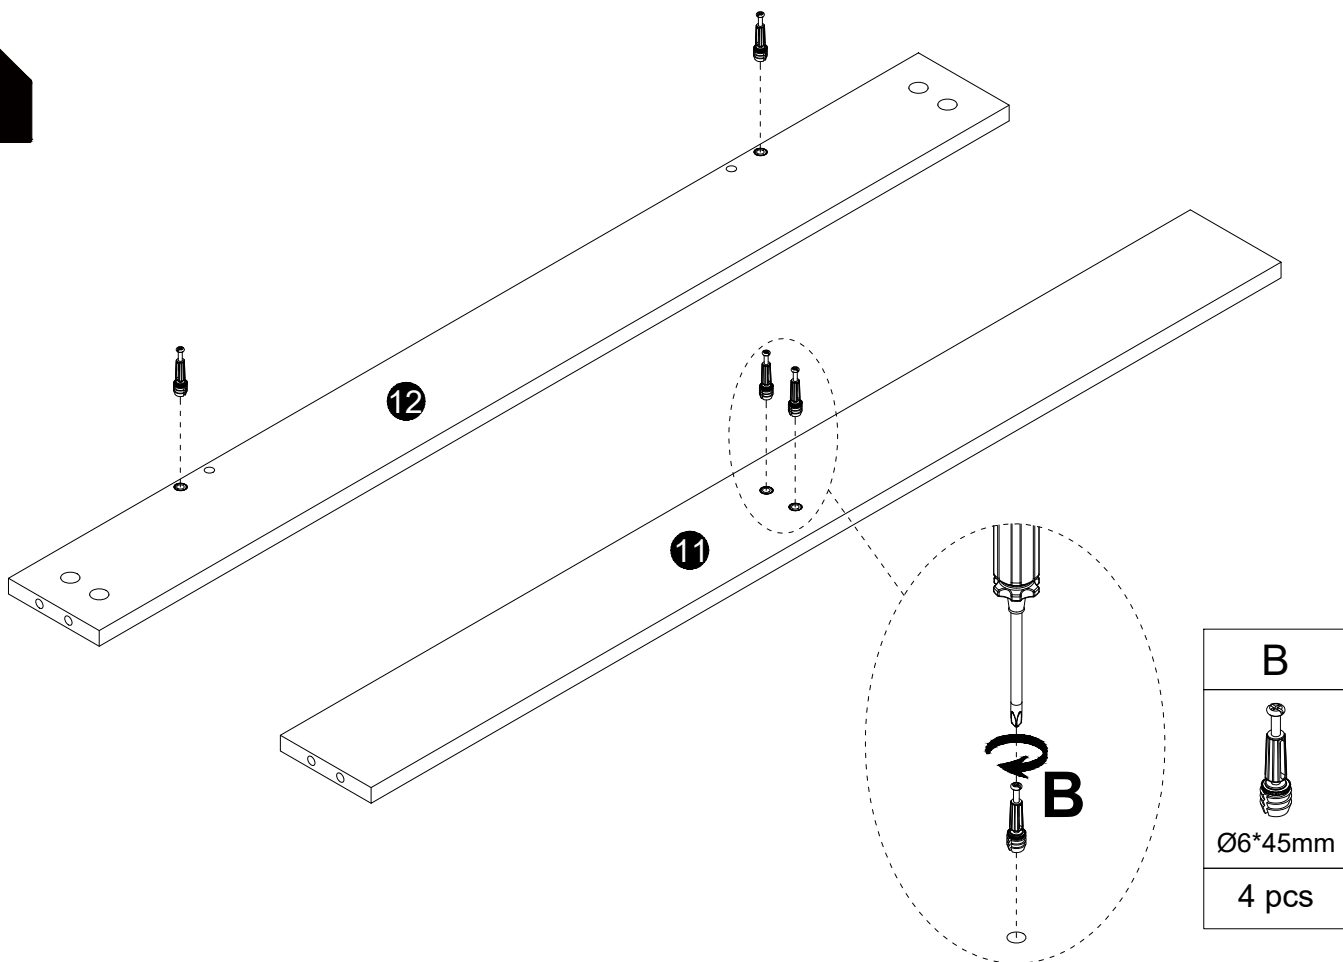

2

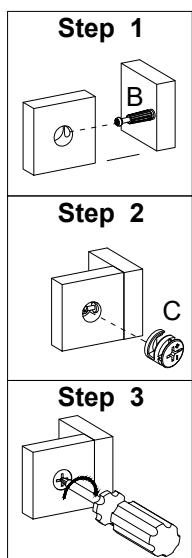
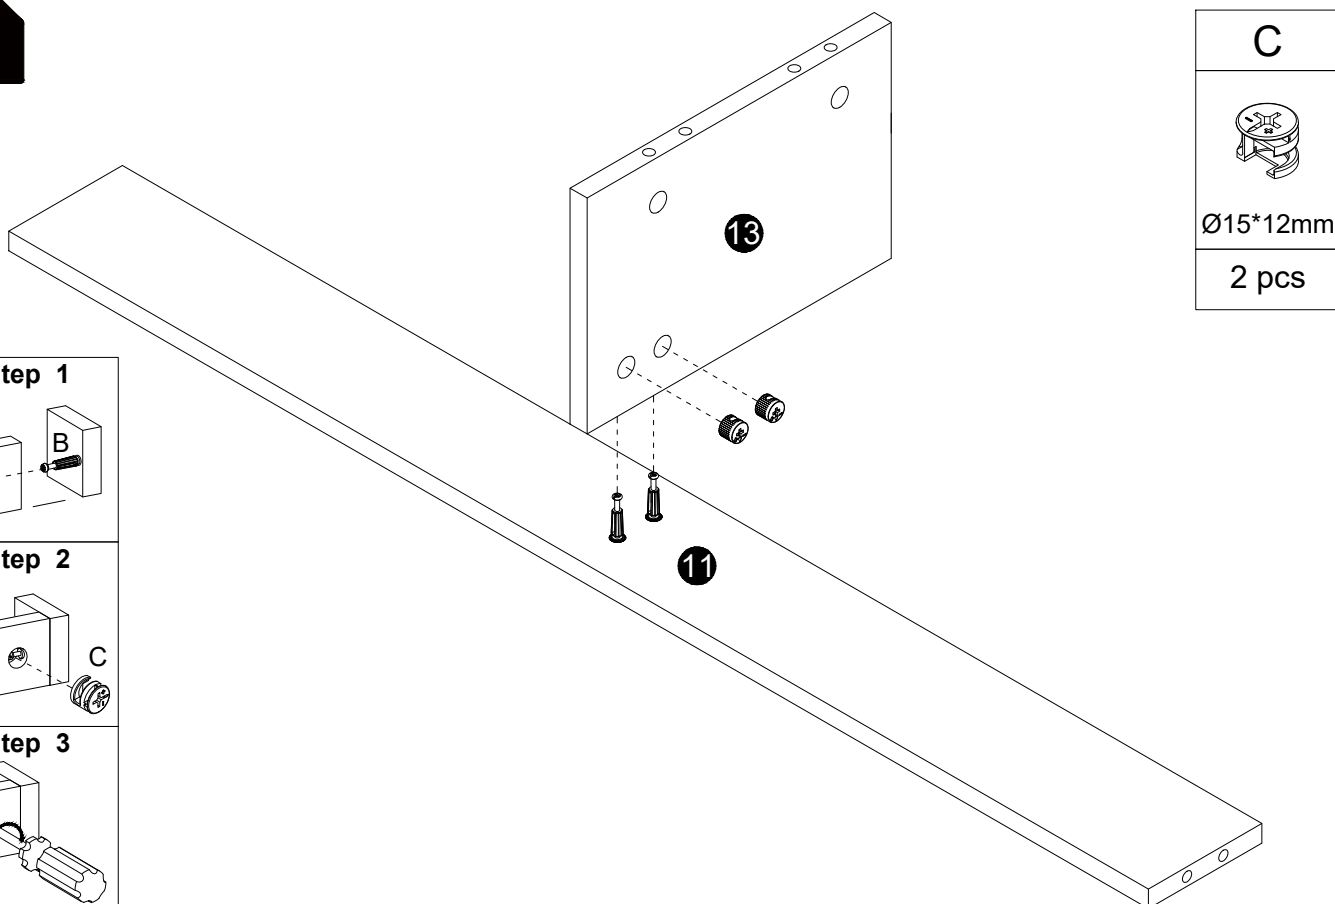



3

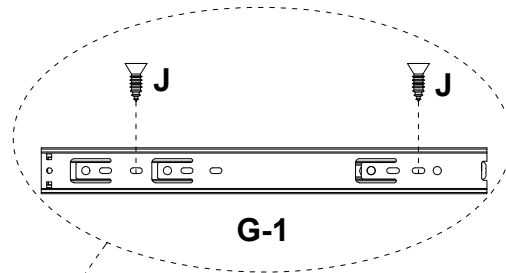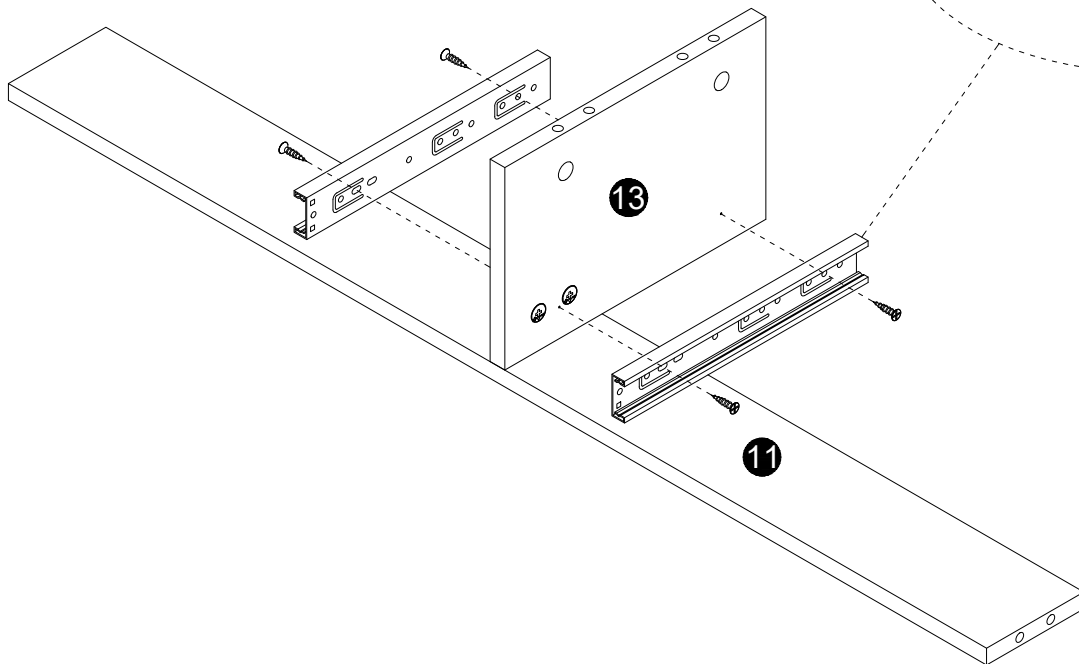


G-1	J
	
250MM	3.5*15mm
2 stes	4 pcs

4

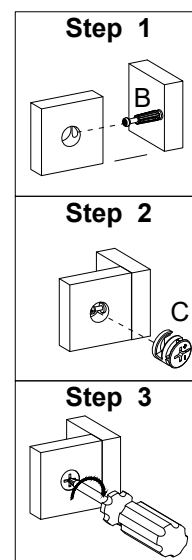
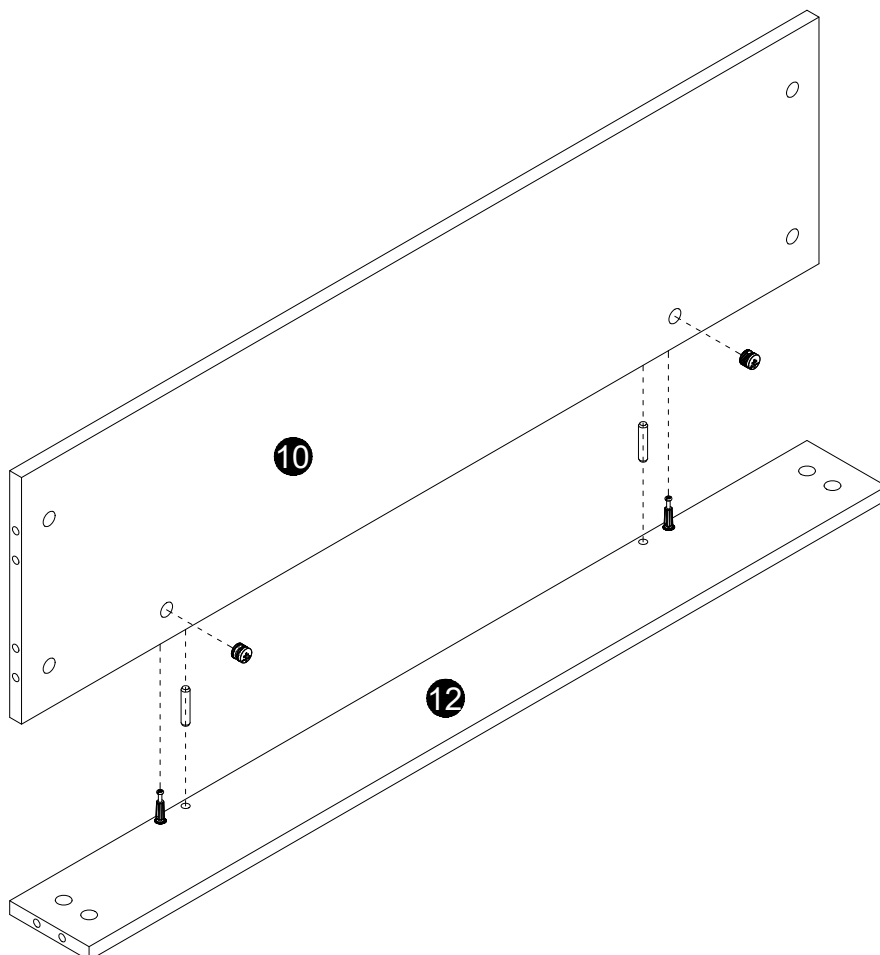



C	D
	
Ø15*12mm	Ø8*40mm
2 pcs	2 pcs

5

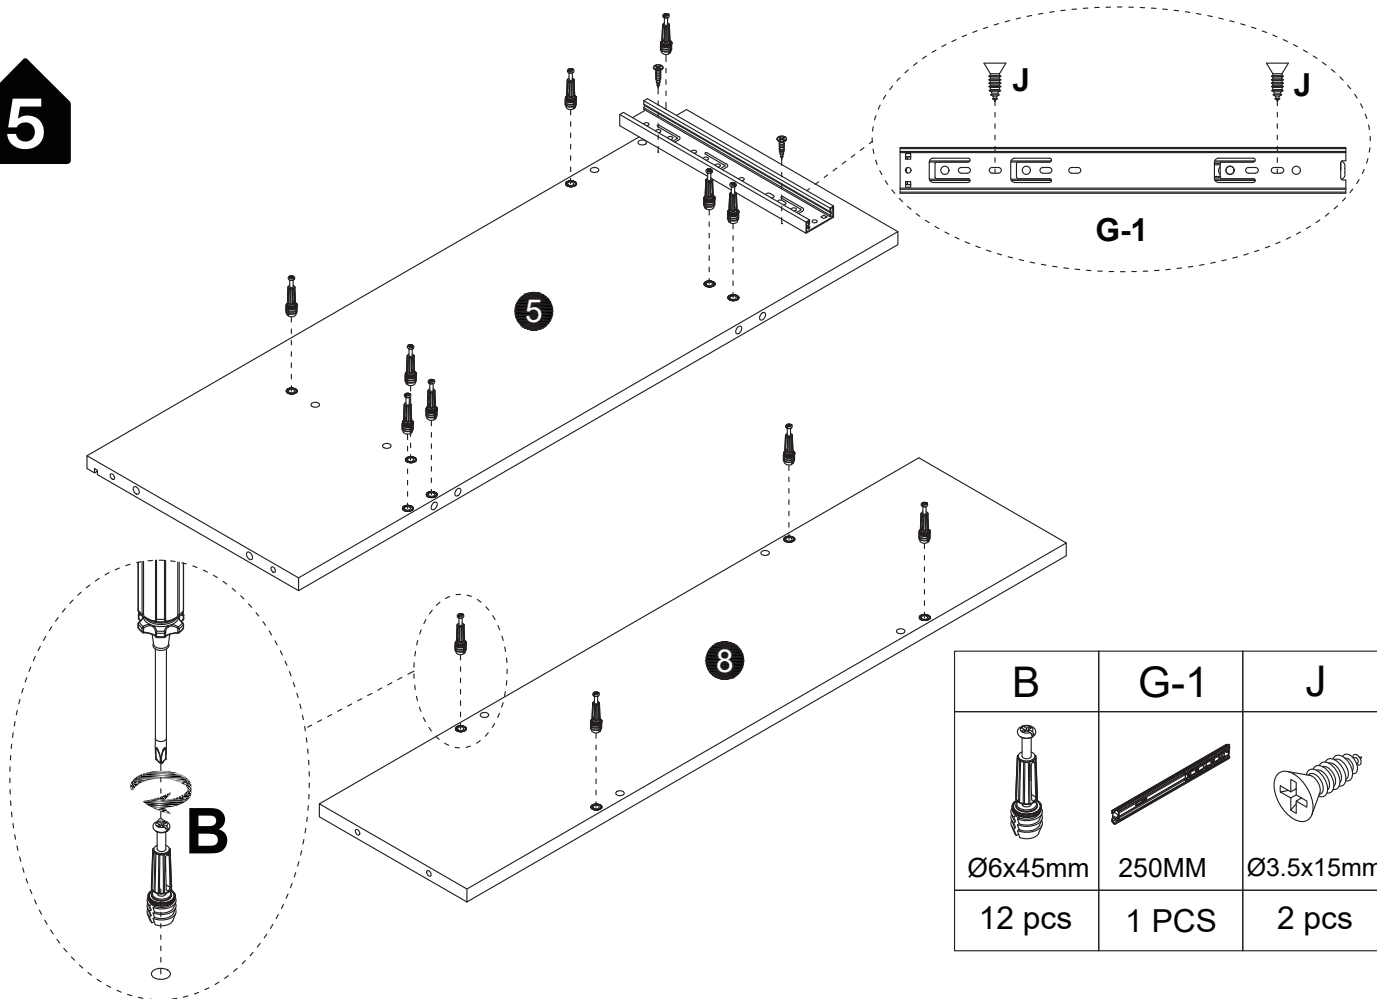


6

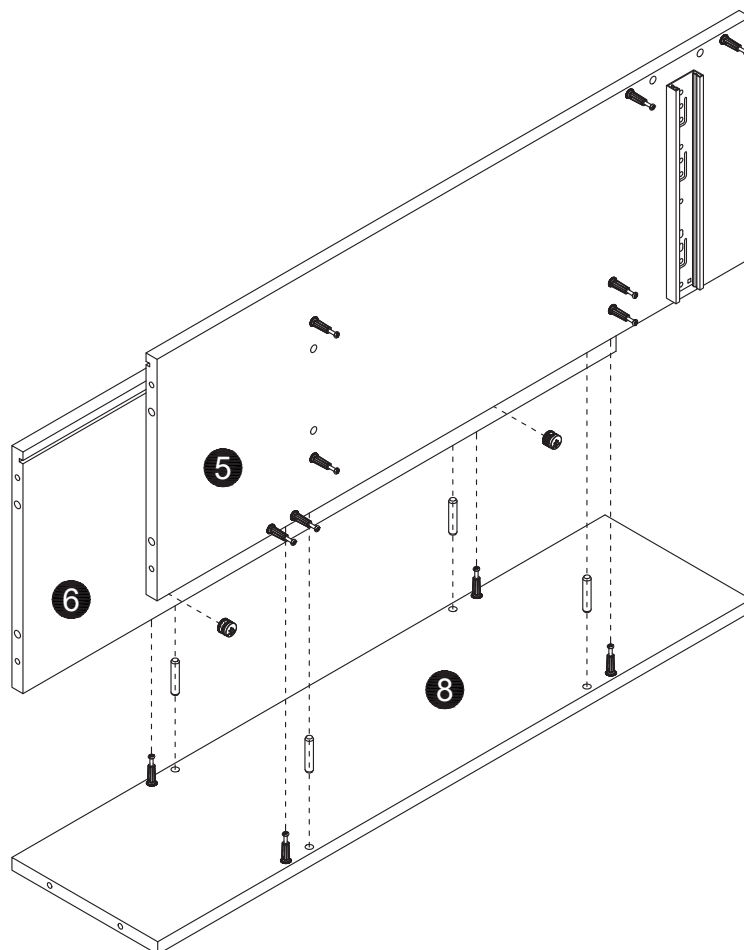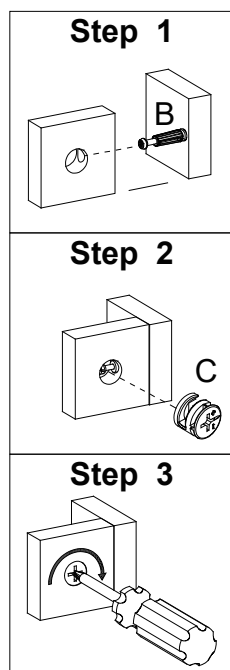


C	D
	
Ø15x12mm	Ø8x40mm
4 pcs	4 pcs



7

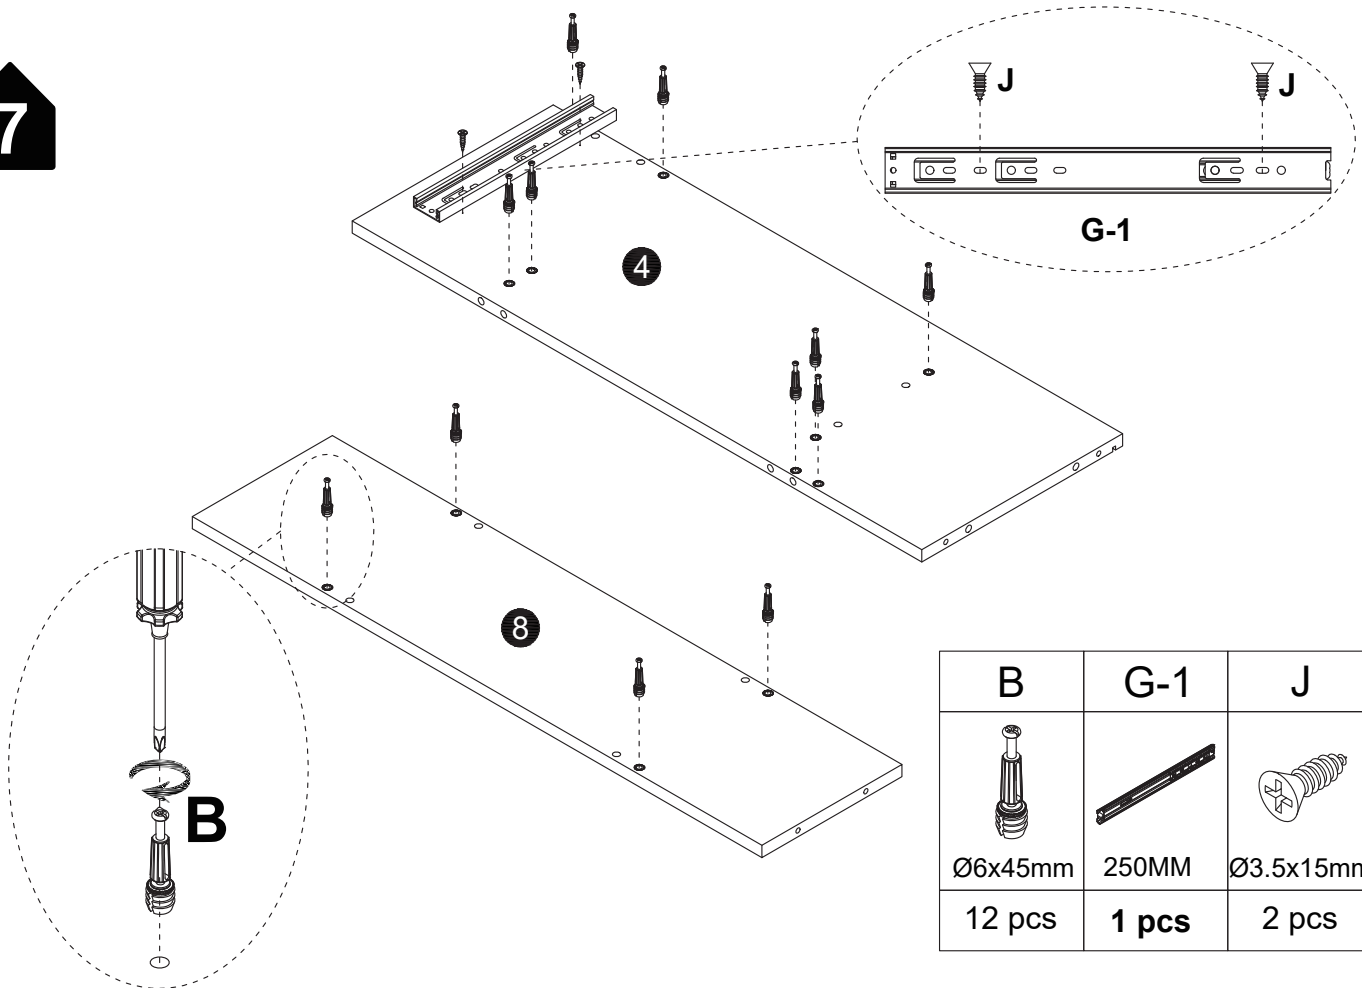


8

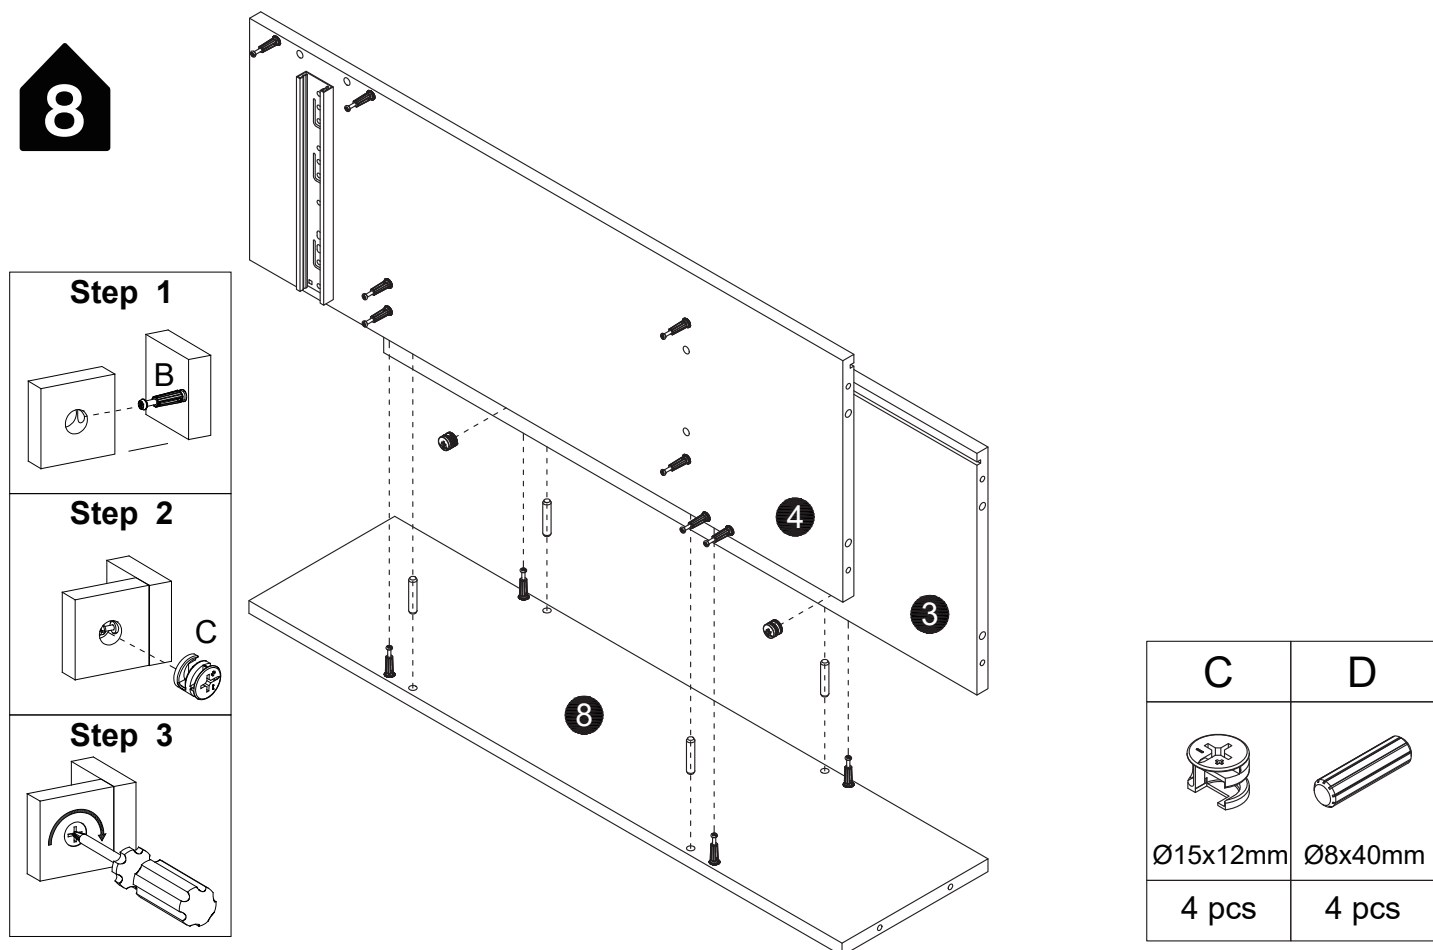


9

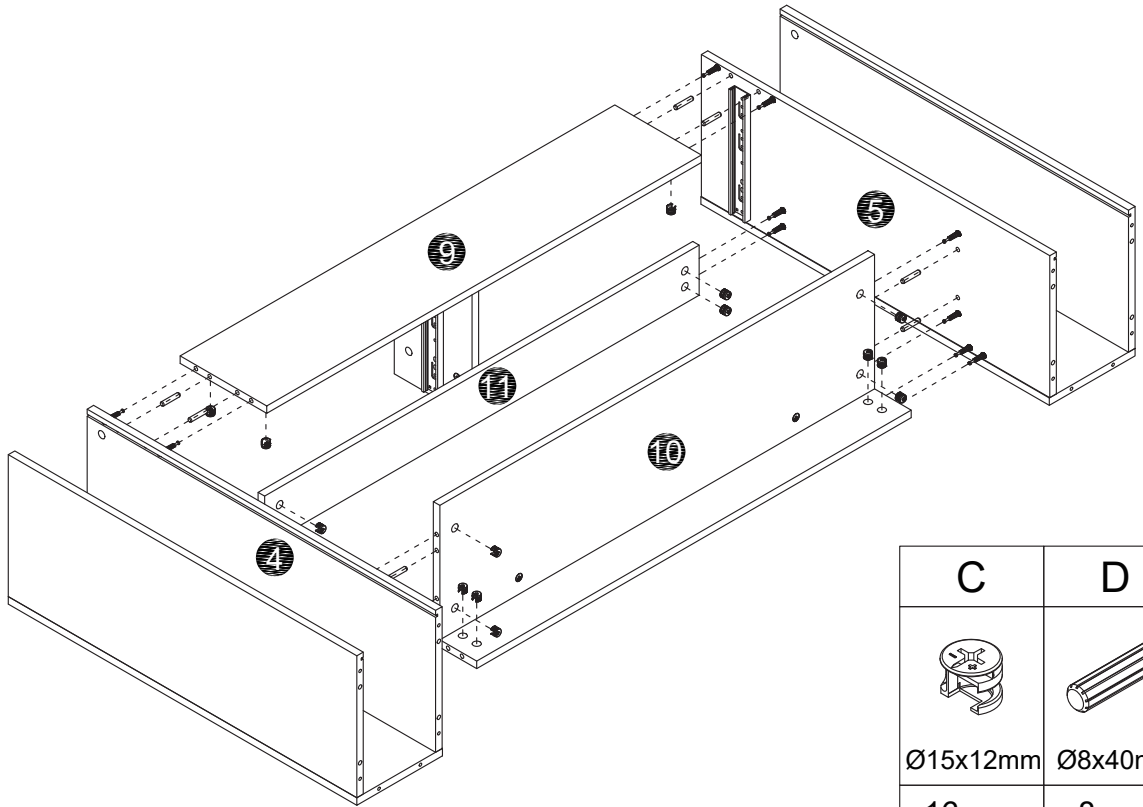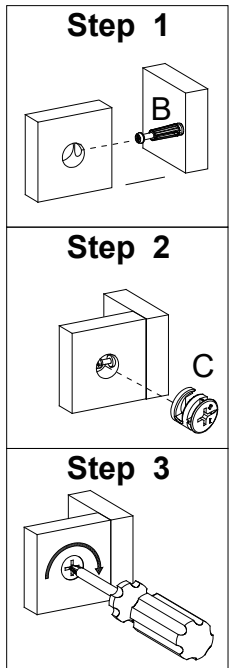

C	D
	
Ø15x12mm	Ø8x40mm
16 pcs	8 pcs

10

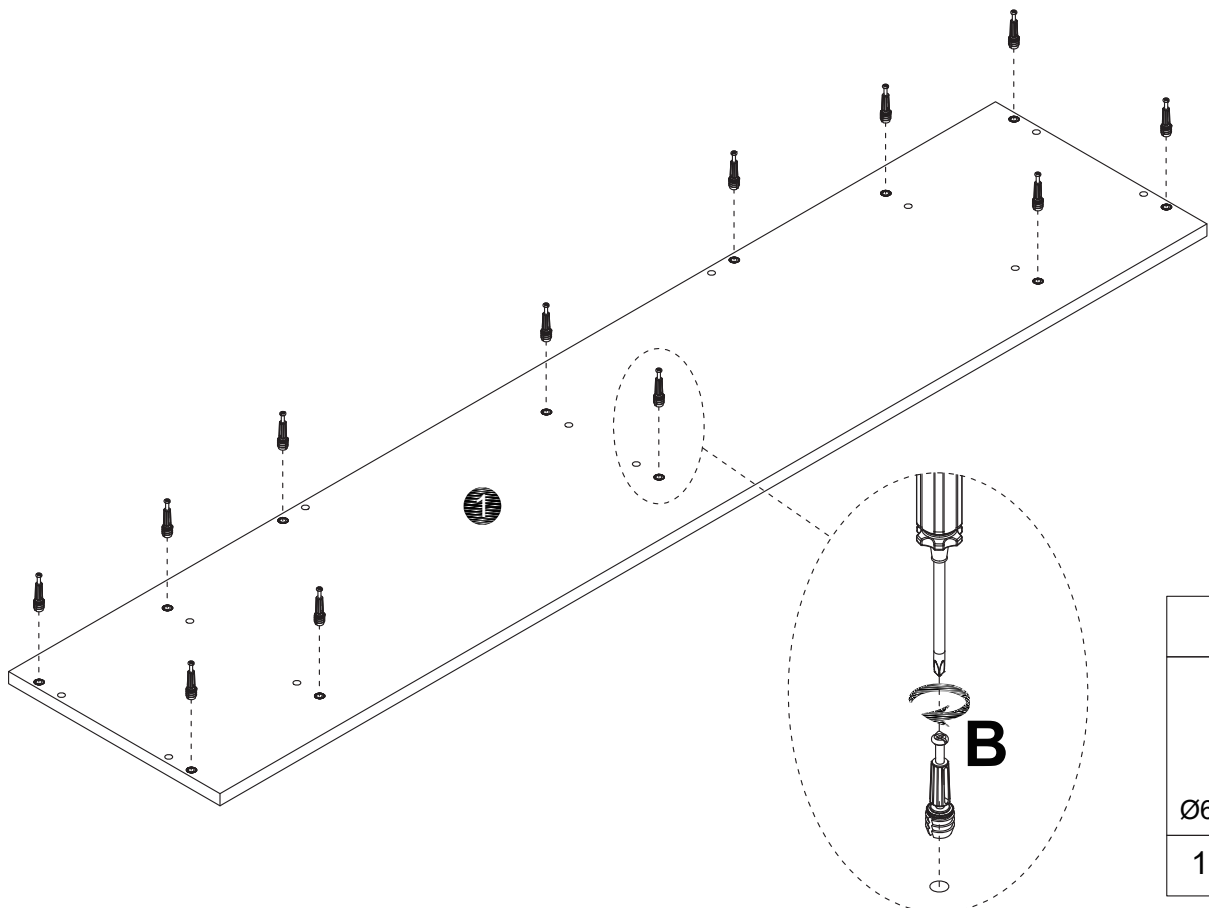


B


Ø6x45mm
12 pcs

11



Step 1

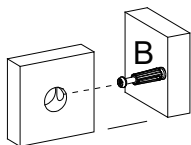


Step 2

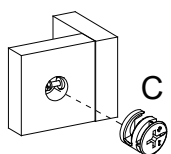


Step 3

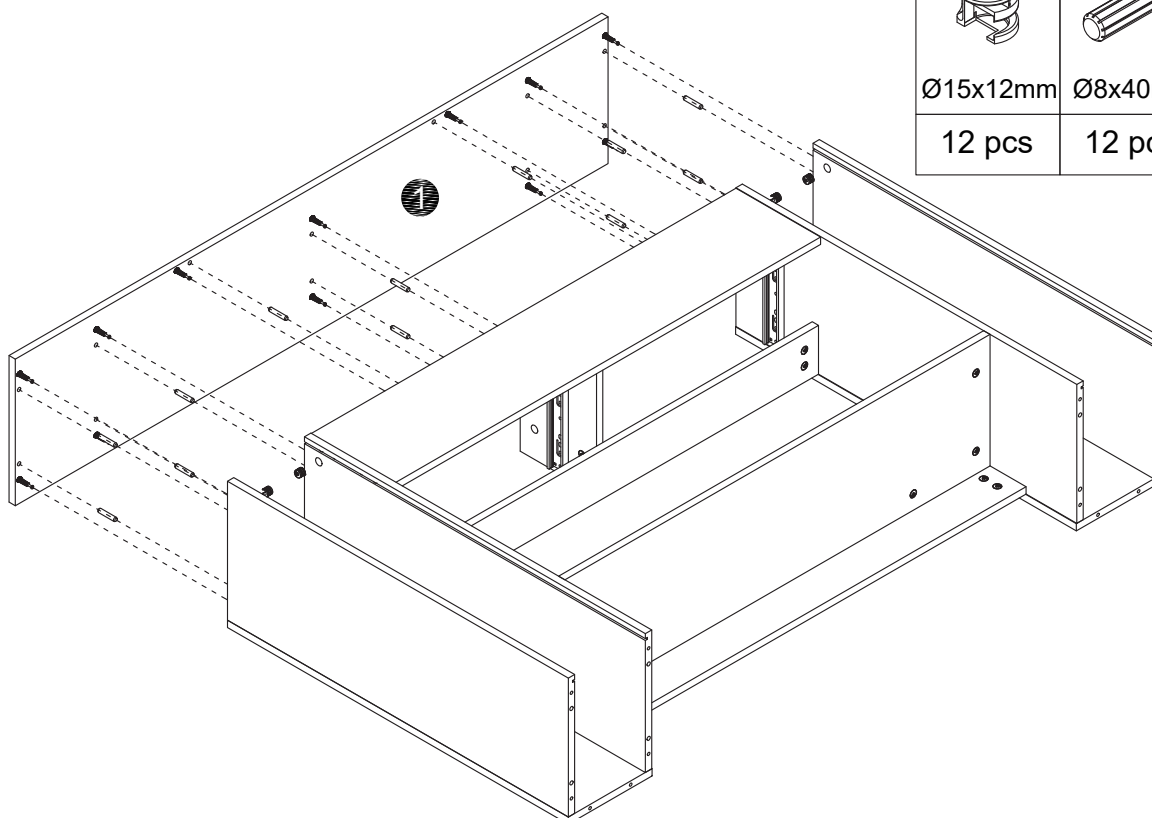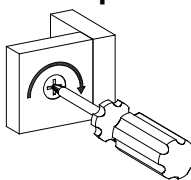


C	D
	
Ø15x12mm	Ø8x40mm
12 pcs	12 pcs


12

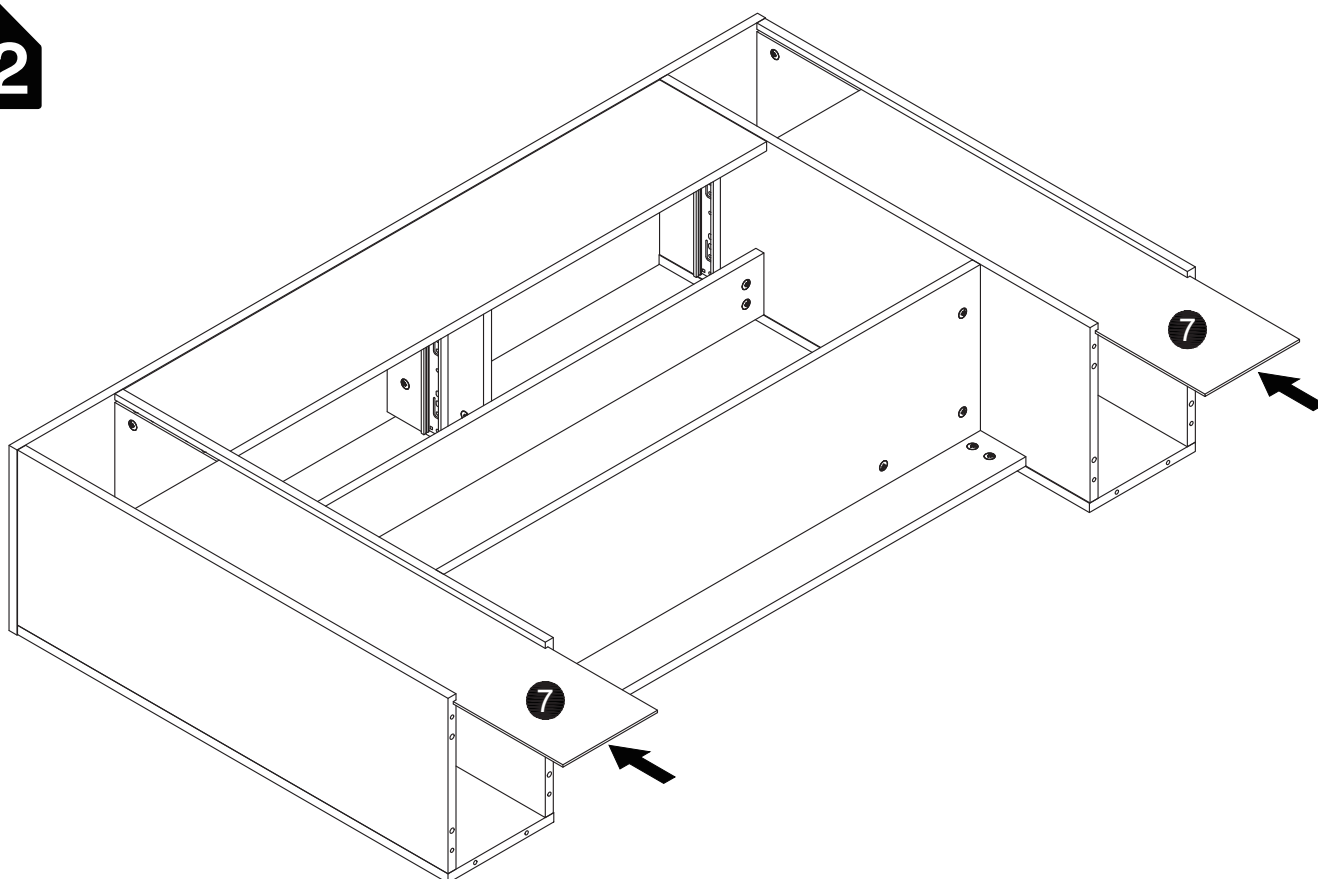


13

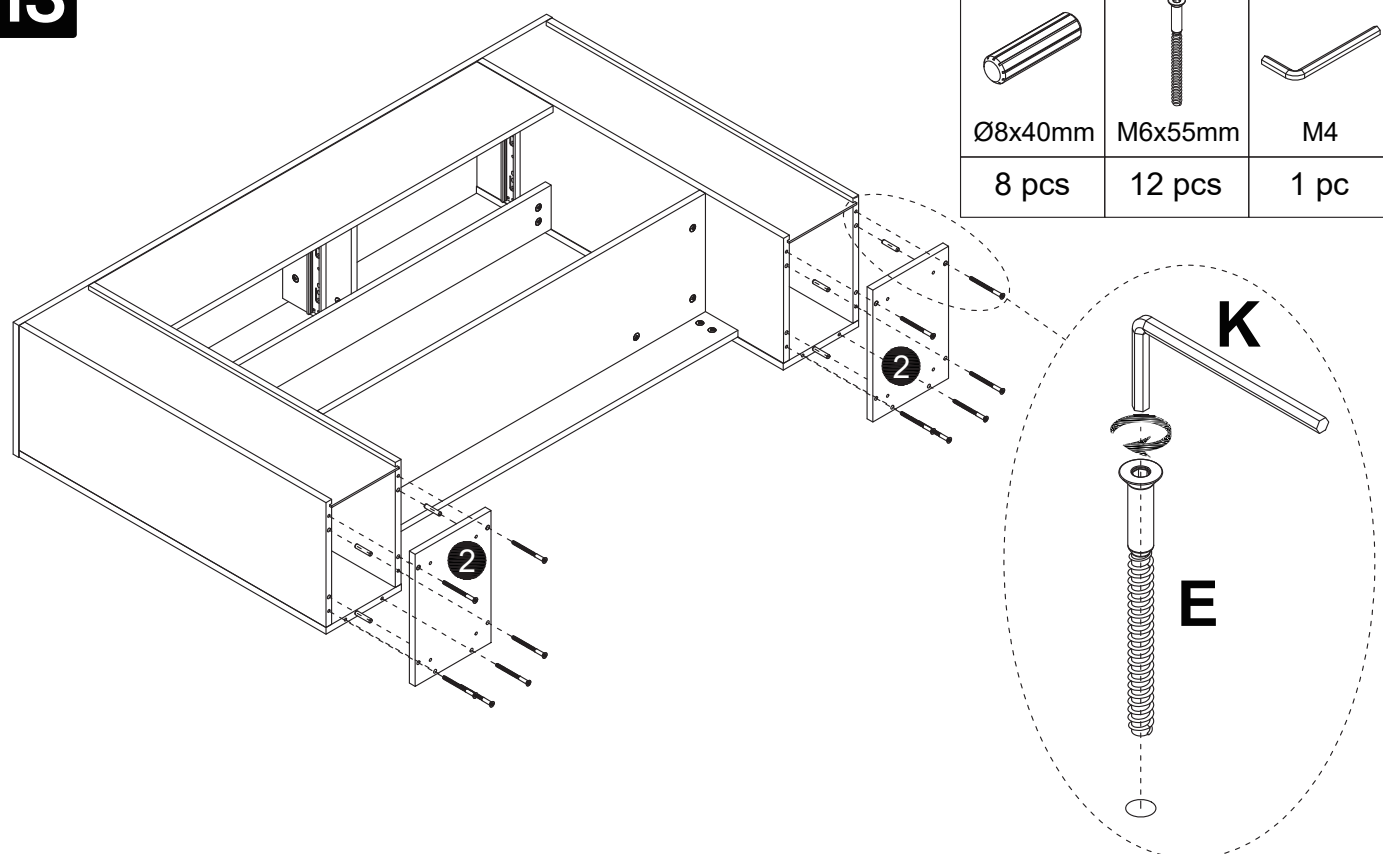

14


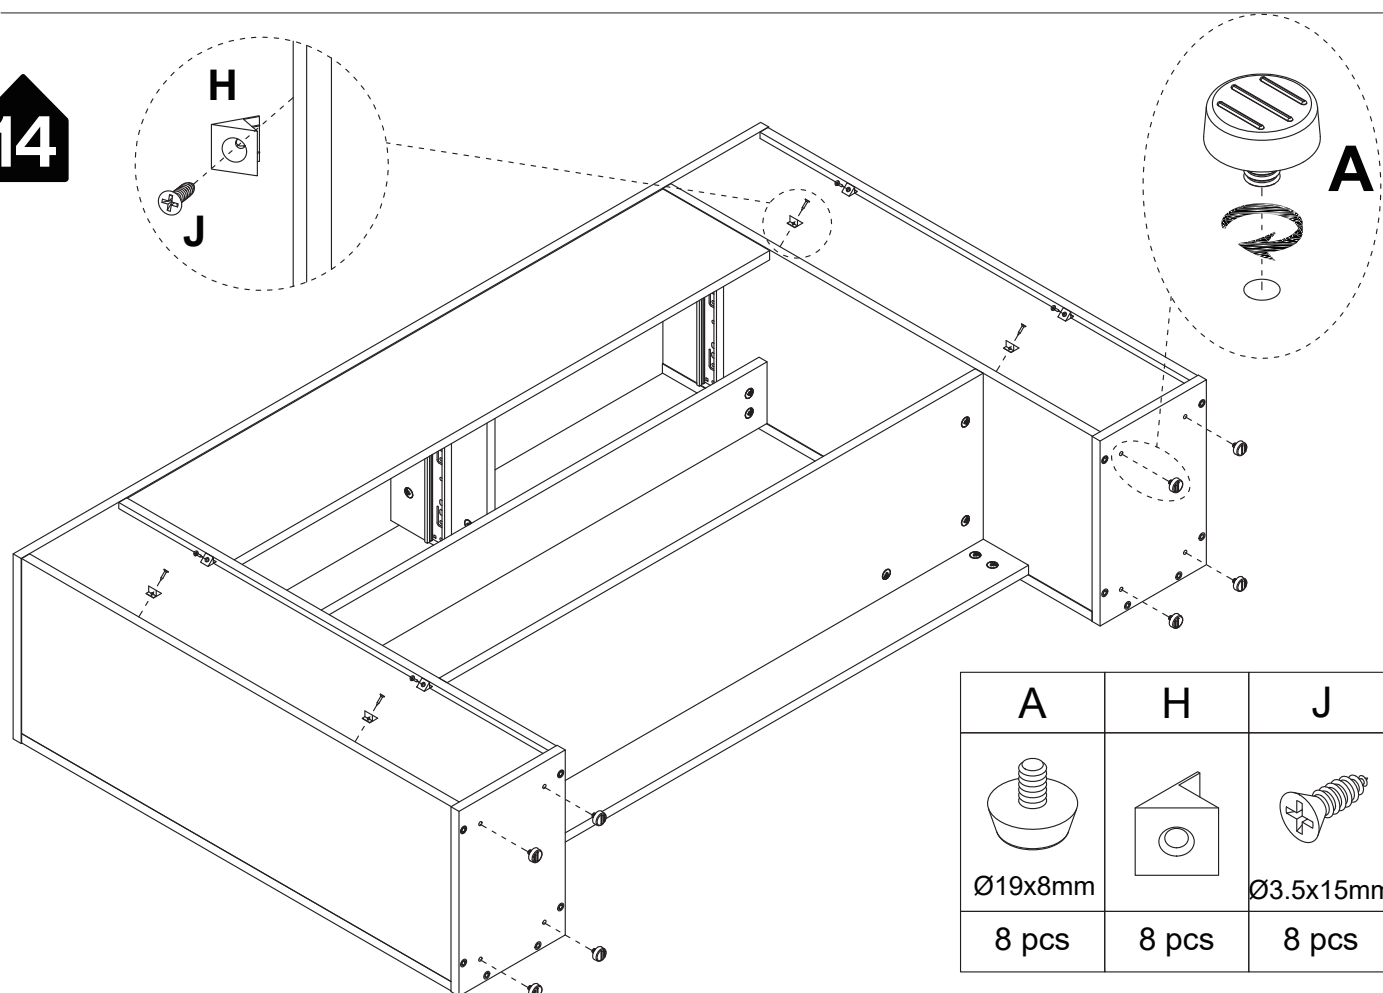


15

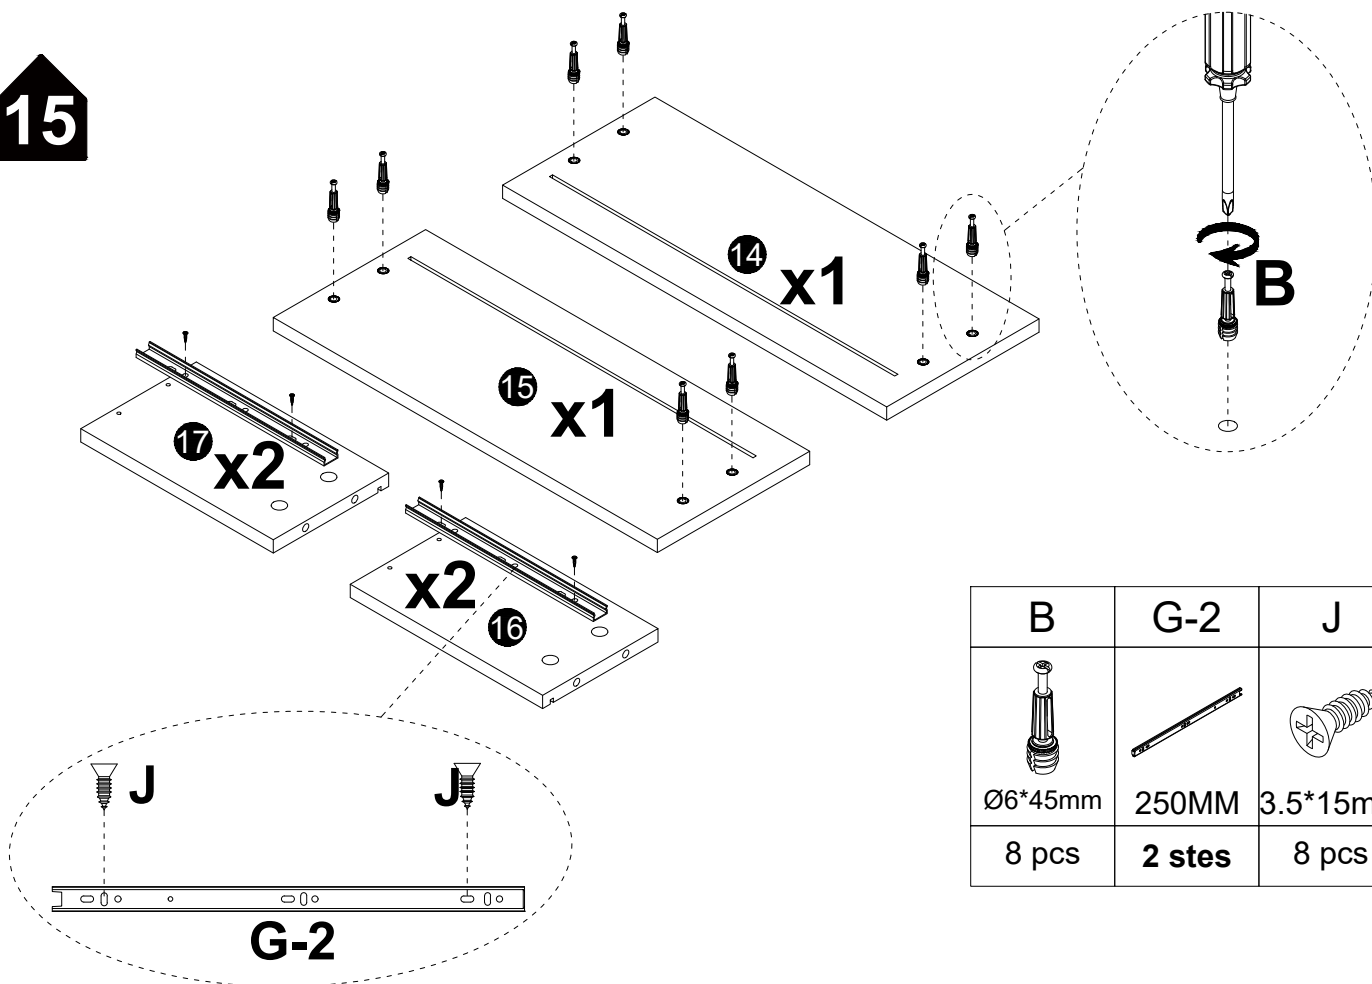

B	G-2	J
		
Ø6*45mm	250MM	3.5*15mm
8 pcs	2 stes	8 pcs


16

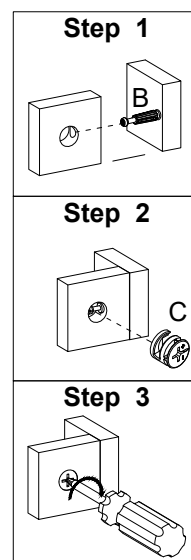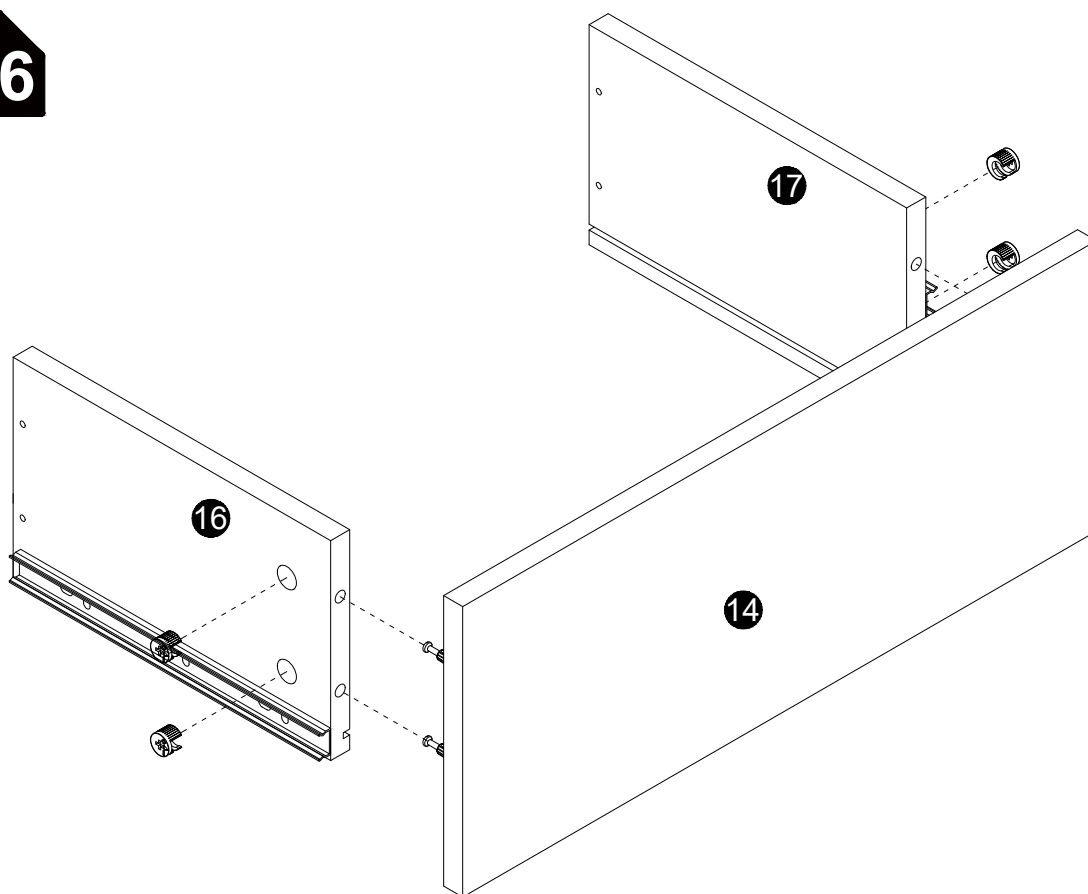


C

Ø15*12mm
4 pcs


17

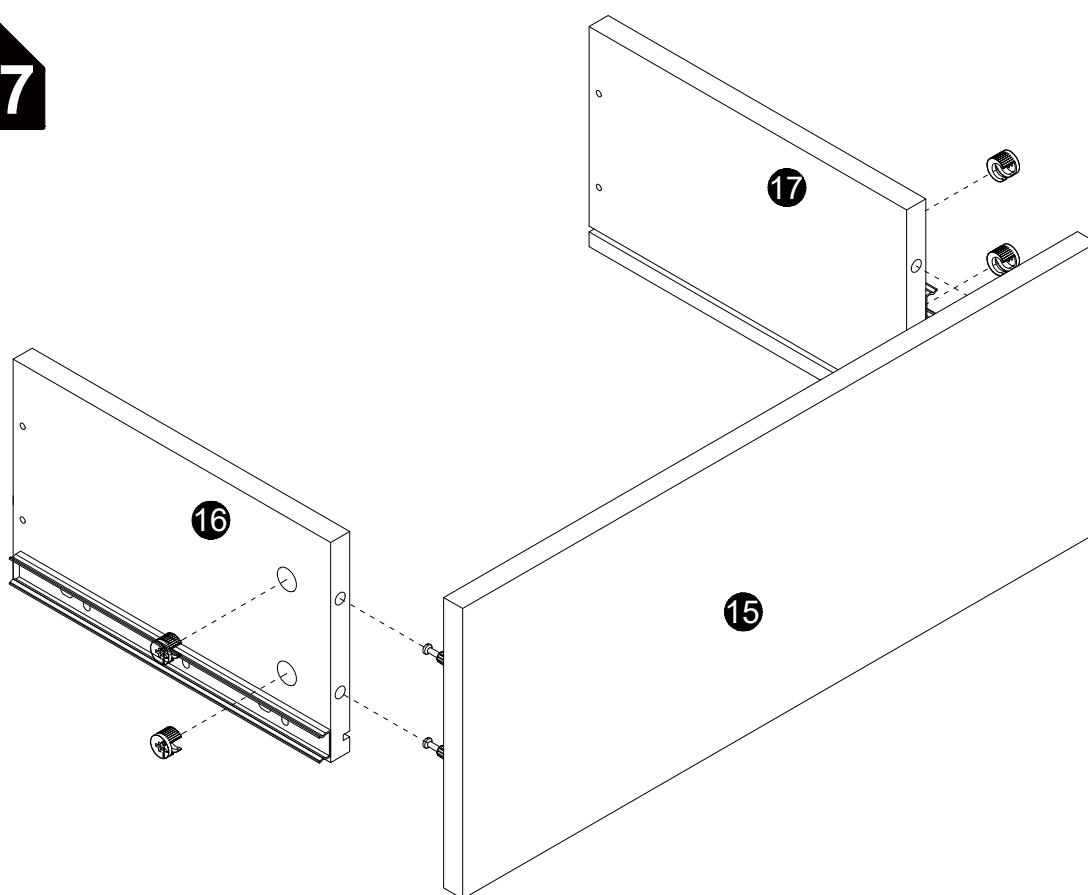


Step 1

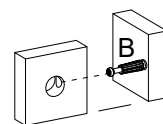

Step 2

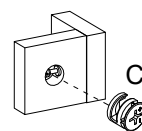

Step 3

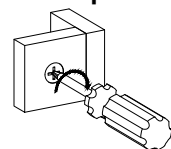


C



Ø15*12mm


4 pcs

18

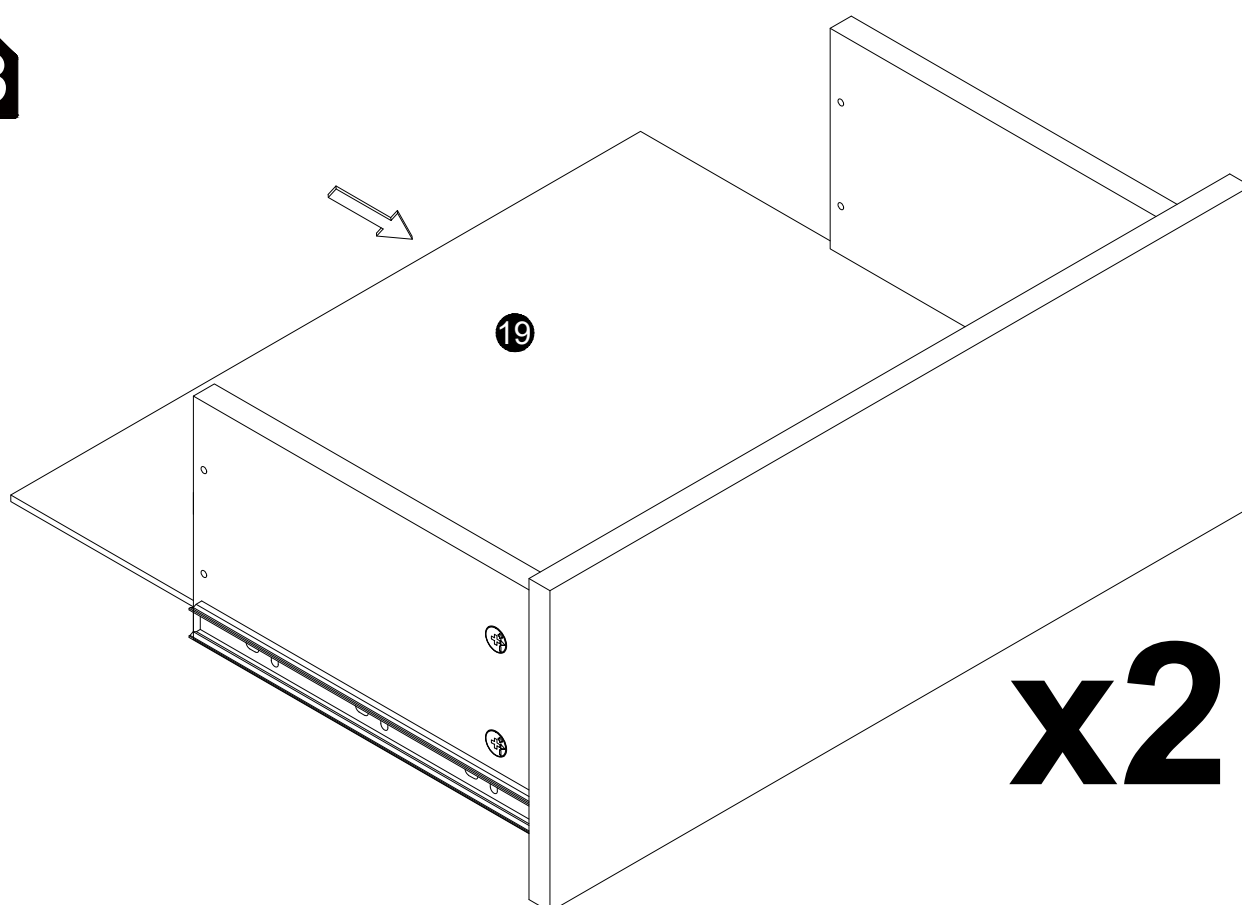


x2


19

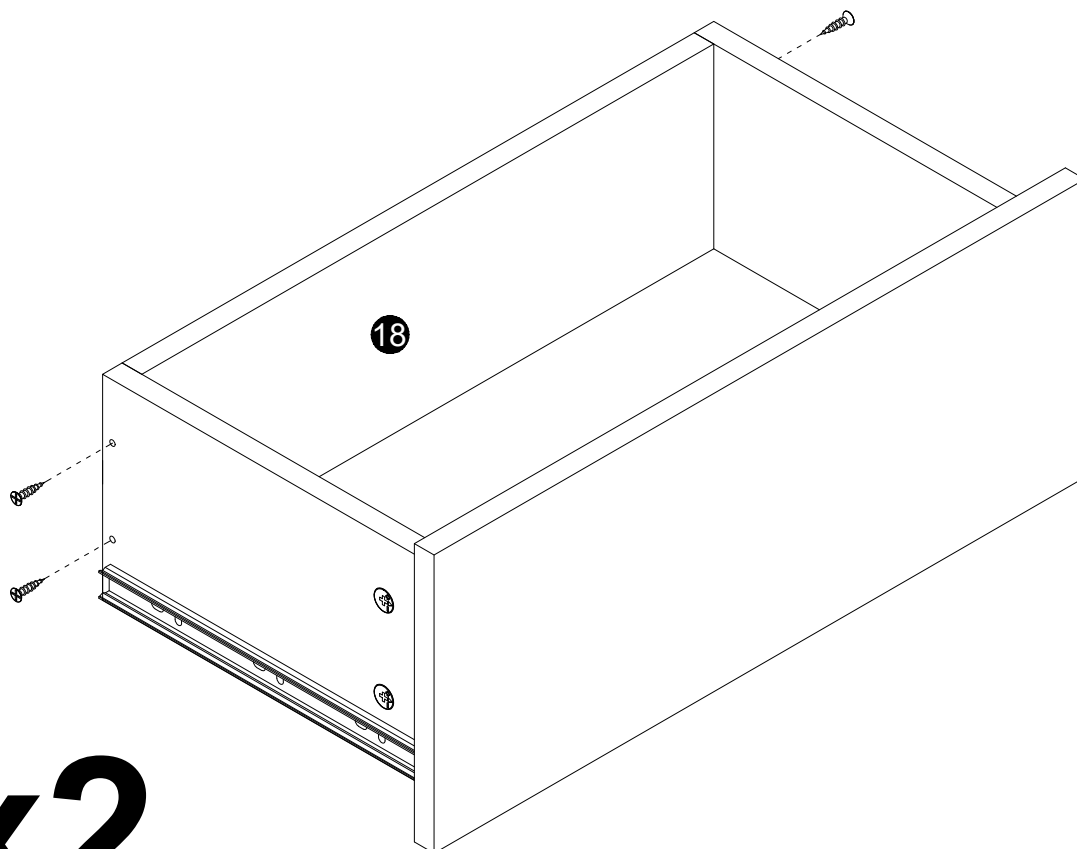


x2

I

4*30mm
8 pcs

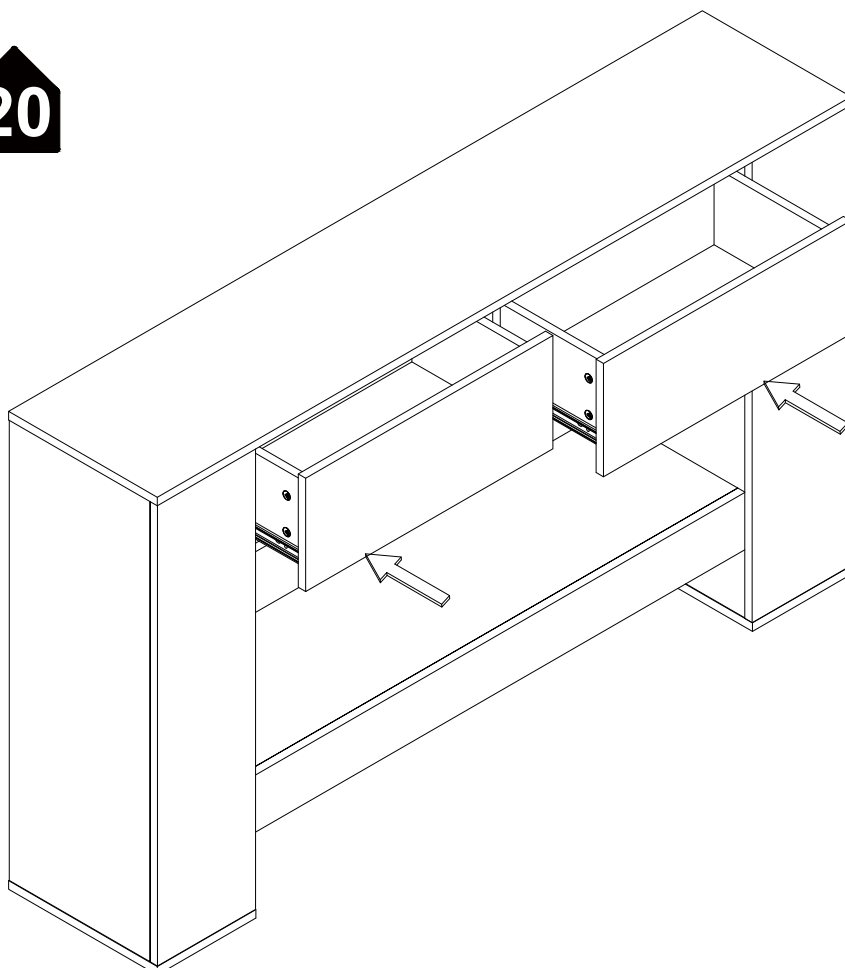
20

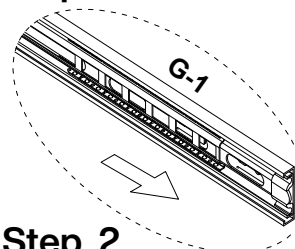


Step 1



Step 2

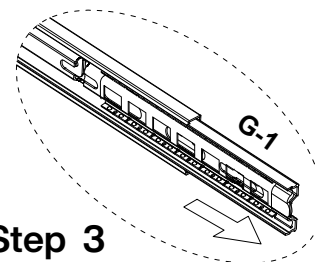


Step 3

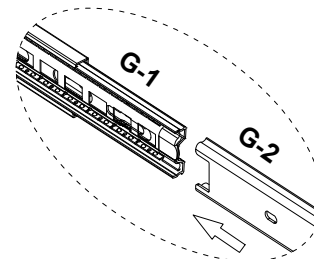


Before installation, slide the inner iron pieces of #E-1 to the outermost side. Then align it with #E-2 and gently push it inward to complete the slide installation.


21

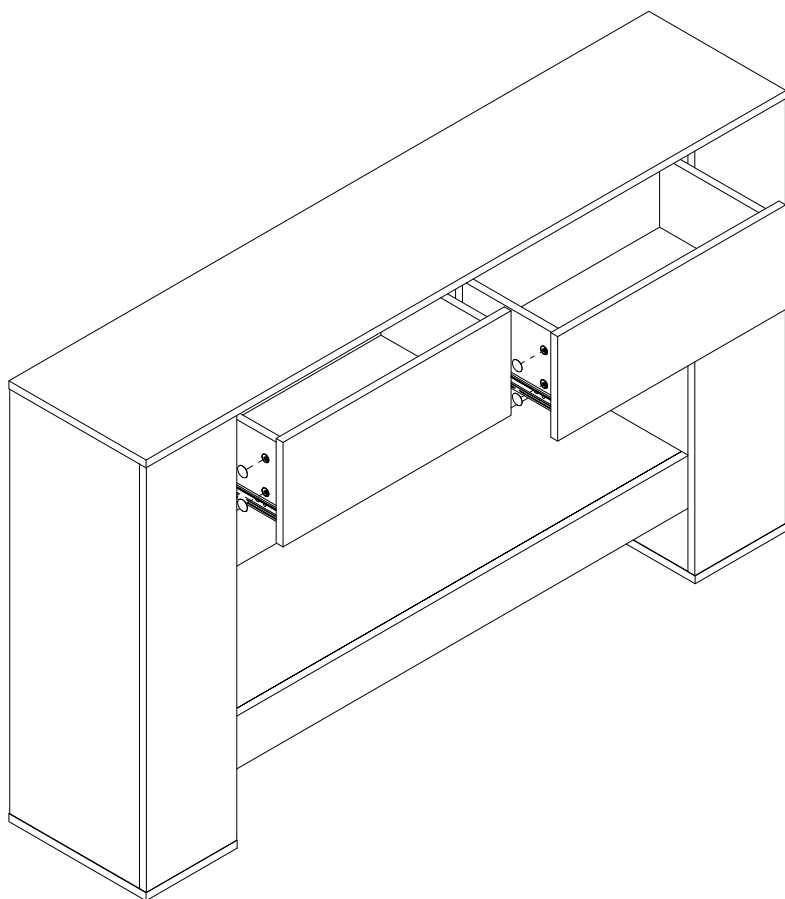

Step 1

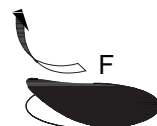

Step 2

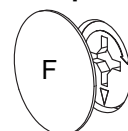


F




Ø21MM

8 pcs


22

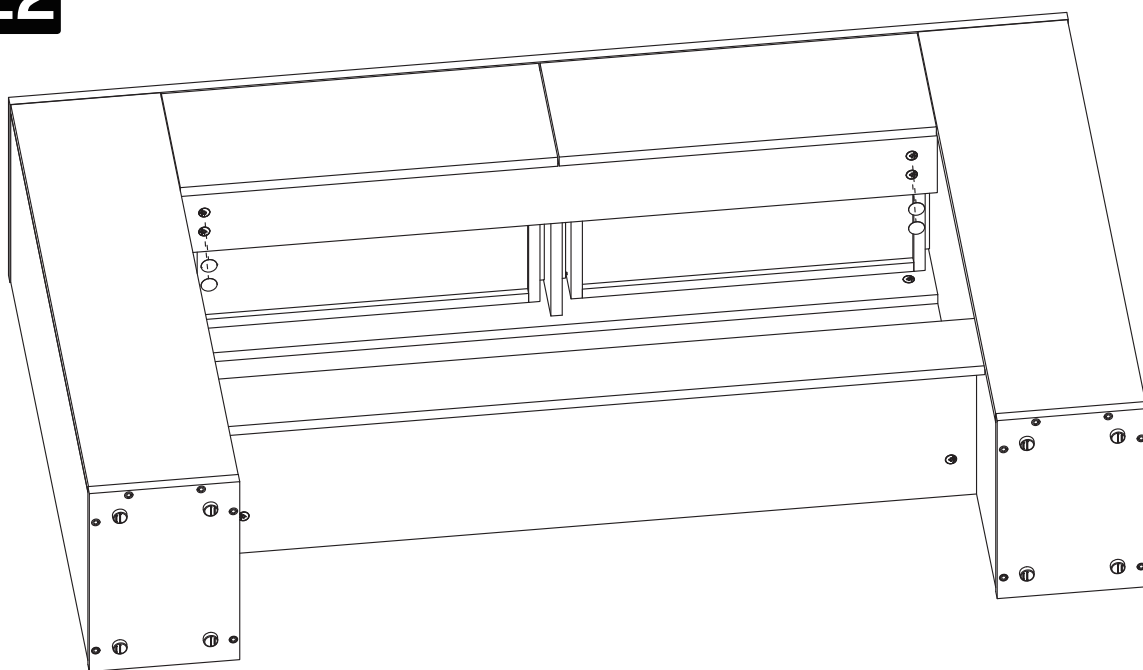

Step 1

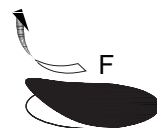

Step 2

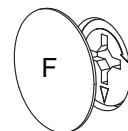

F



Ø21MM


4 pcs

23

L


2 pcs

Step1

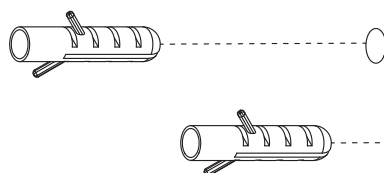


Wall



Step2

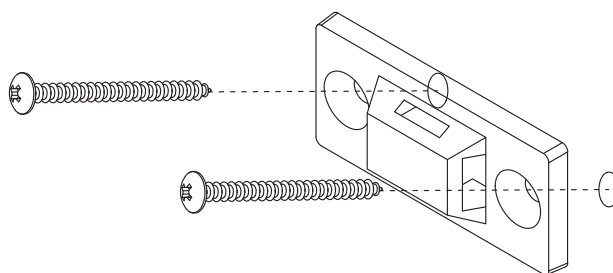

Step3

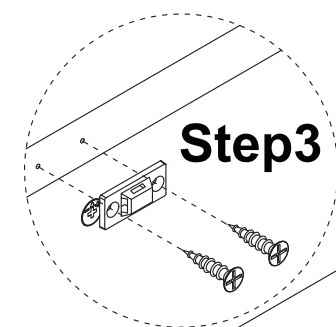

Step4

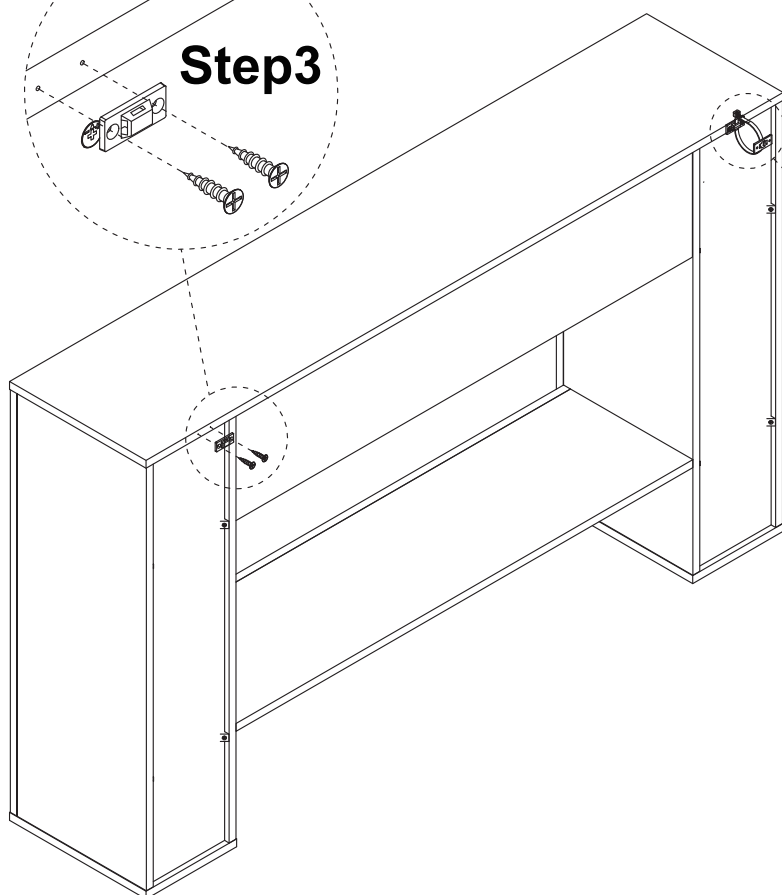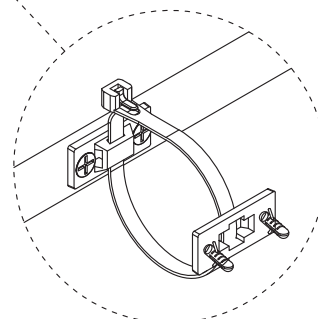

Thank you for your support!

