


Hall Tree

Assembly Instructions - Please keep for future reference

Dimensions

Width-31.5inch
Depth-15.7inch
Height-70.7inch

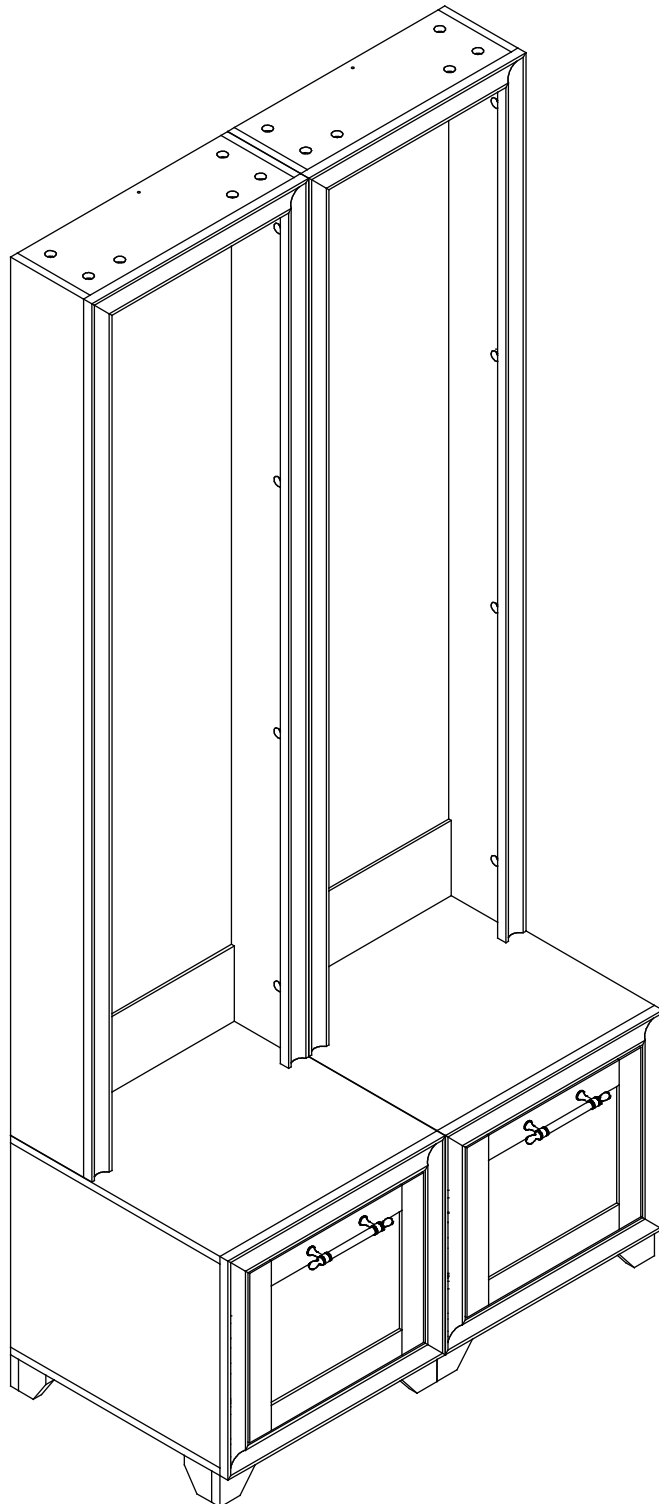

Important - Please read these instructions fully before starting assembly



Safety and Care Advice

Important – Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- During assembly do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



power drill is set on a low torque setting.

- To reduce the likelihood of damaging your product please ensure that your

Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts
- Regularly check and ensure That all bolts and fittings are tightened properly.

WARNING
In order to help prevent overturning – please follow these instructions





To help prevent product toppling over please follow the below steps:-

Use the anti tip strap or wall fixing method provided (if applicable)
Do not allow children to climb or hang on the furniture
Do not open more than one drawer at a time
Do not place heavy items in the top drawers
Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose


Components - Fittings

Please check you have all the panels listed below

Note:The quantitie below are the correctet amount to complete the assembly. In some cases more fittings may be supplied than are required.

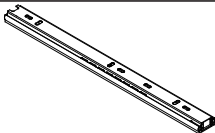A  Cam Bolt x 96+2	B  Dowel x 56+2	C  Cam lock x 96+2	D  4*30mm Screw x 40+2
E  3*12mm Screw x 16+1	F  Slide x 4	G  3*12mm Hook x 4set	H  4*20mm Handle x 2set
I  Anti-tipping Device x 2	J  Perfect fit x 24	K  Allen key x 1	

Tools required

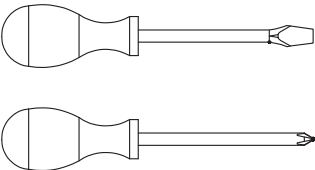


Phillips screwdriver
(medium & large)

Using Camlocks


Step 1

Connect the male camlock as directed in the assembly instructions using a screwdriver.

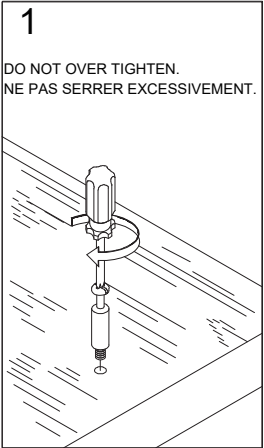

Step 2


Push the male camlock into the entry hole.

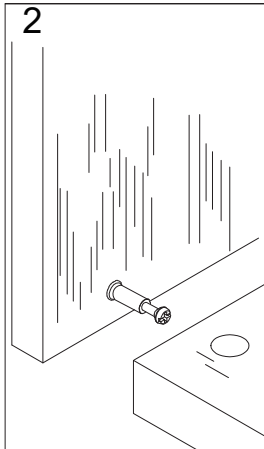

Step 3

Insert the female camlock as shown in the instruction.

Note: ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

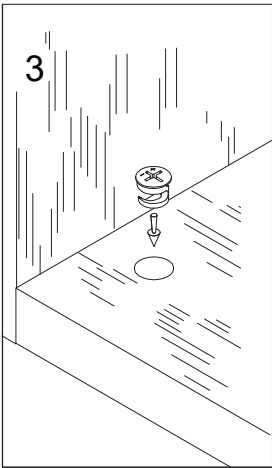


Step 4

Turn the female camlock clockwise with a screwdriver.


You should feel a click when the camlock is locked in place.

The joint is now secure.

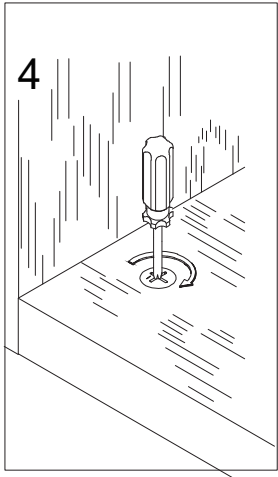

Assembly Instructions

x2

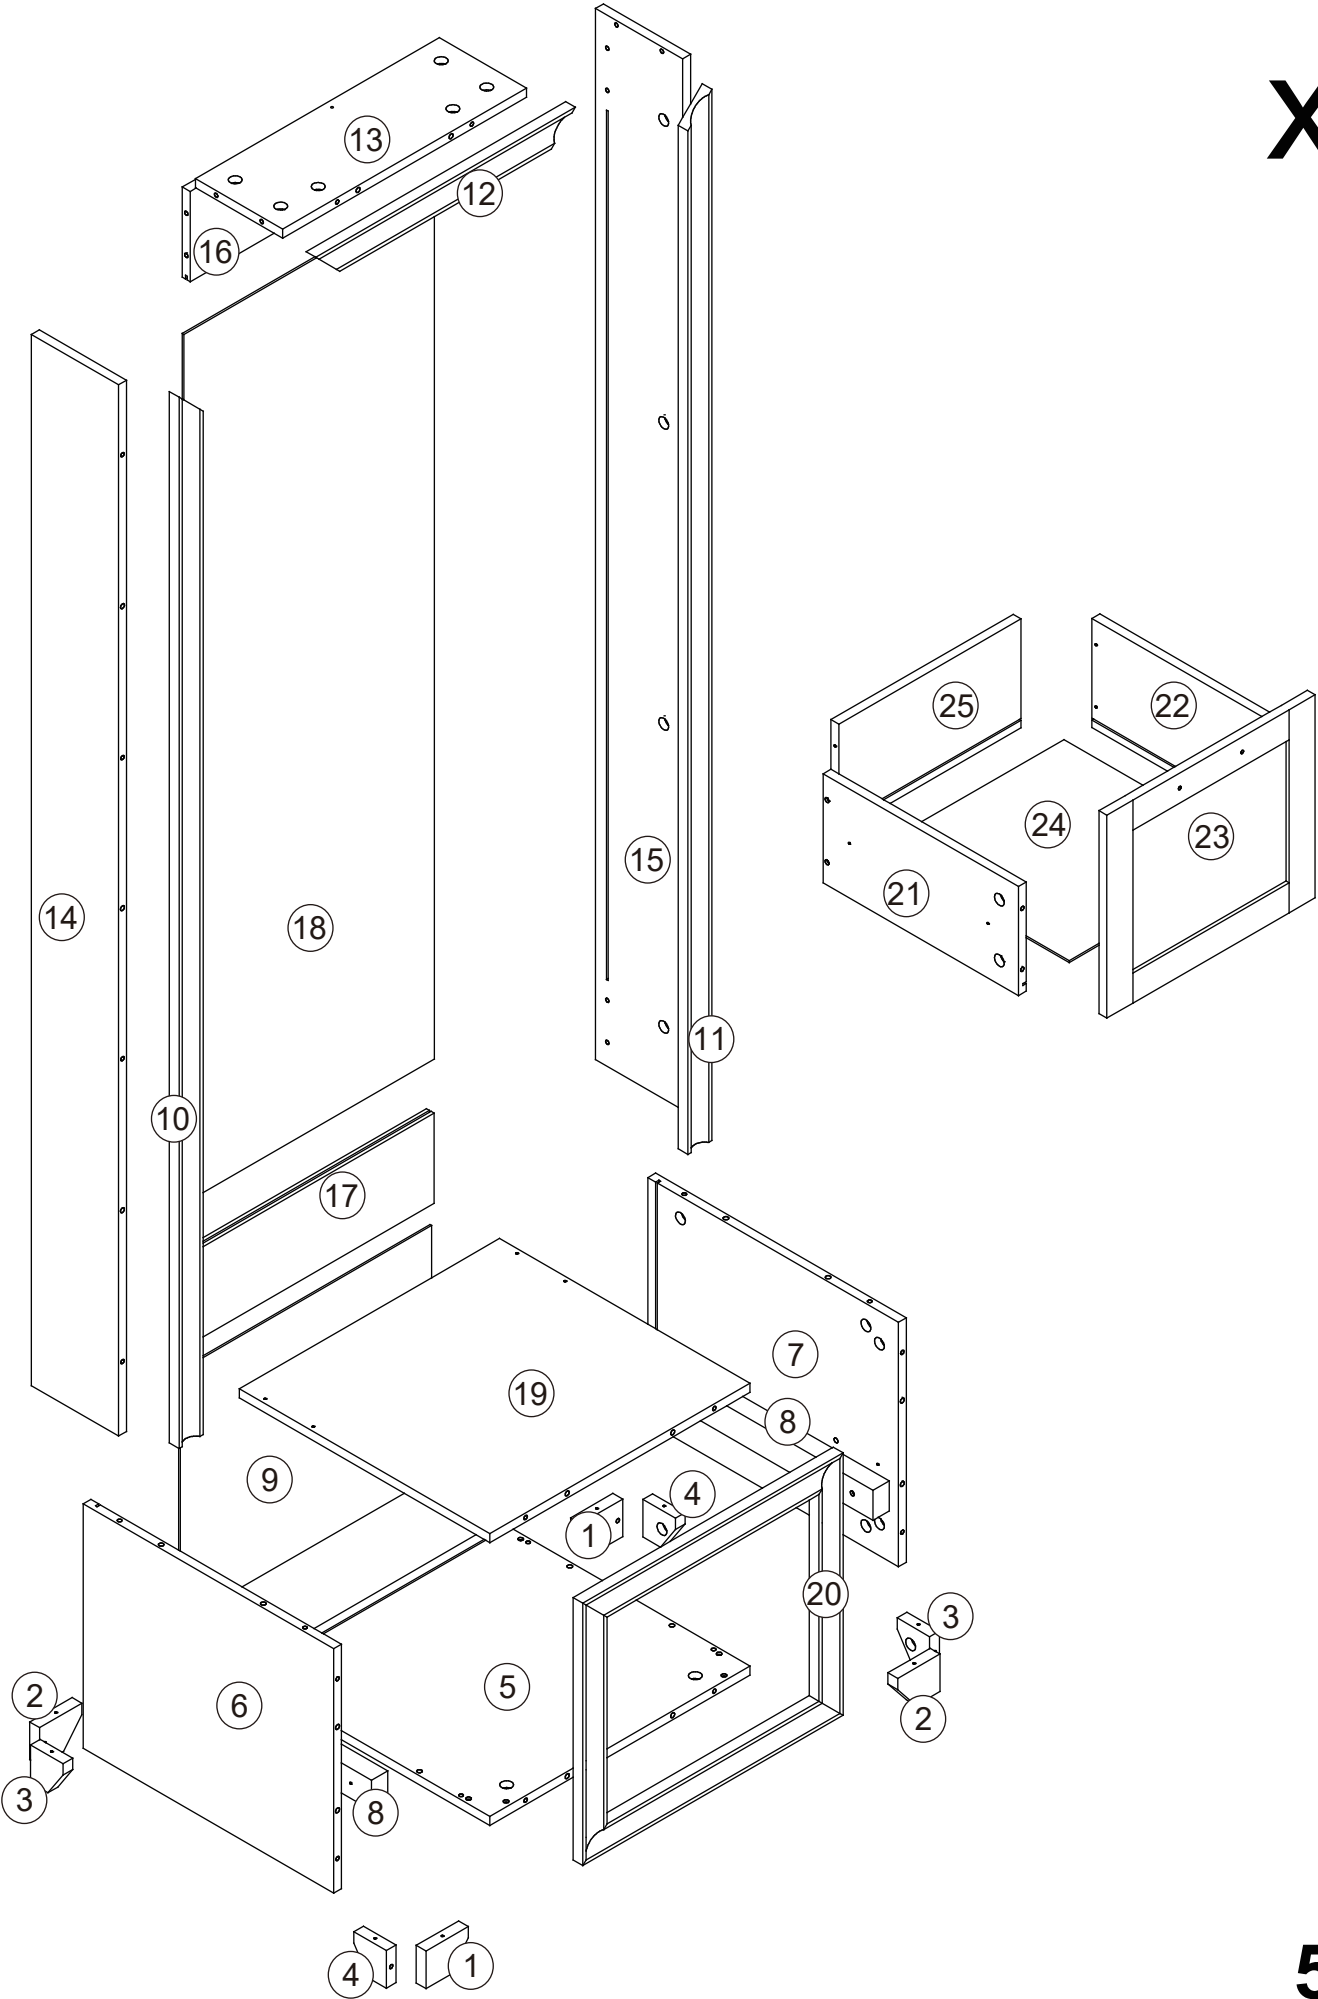

Assembly Instructions

① x4



65 x 50 x 15mm

② x4



65 x 50 x 15mm

③ x4




50 x 50 x 15mm

④ x4




50 x 50 x 15mm

⑤ x2

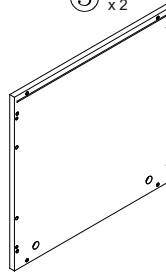


400 x 385 x 12mm

⑥ x2

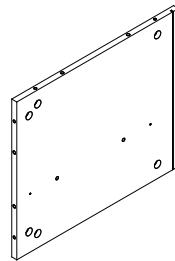

385 x 325 x 12mm

⑦ x2

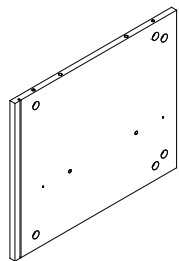


385 x 325 x 12mm

⑧ x4



350 x 40 x 25mm

⑨ x2

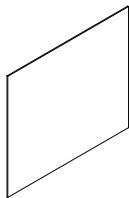

386 x 335 x 2.5mm

⑩ x2



1398 x 37 x 15mm

⑪ x2



1398 x 37 x 15mm

⑫ x2



400 x 37 x 15mm

⑬ x2



375 x 134 x 12mm

⑭ x2



1398 x 134 x 12mm

⑮ x2



1398 x 134 x 12mm

⑯ x2



375 x 120 x 12mm

⑰ x2




375 x 120 x 12mm

⑱ x2




1156 x 385 x 2.5mm

⑲ x2

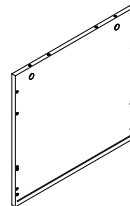


400 x 385 x 12mm

⑳ x2




400 x 350 x 15mm

㉑ x2




300 x 145 x 12mm

㉒ x2




300 x 145 x 12mm

㉓ x2

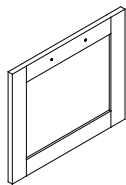


320 x 270 x 12mm

㉔ x2



290 x 298 x 2.5mm

㉕ x2





280 x 145 x 12mm

Assembly Instructions




Step 1

x2

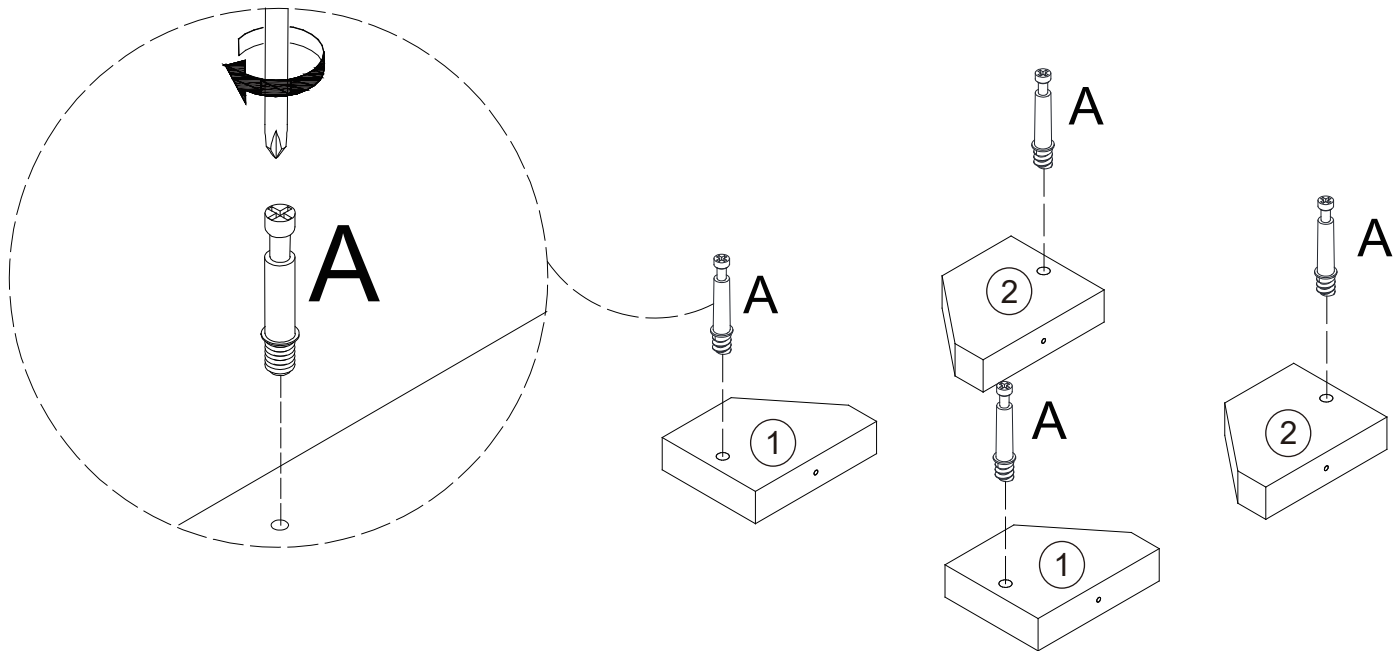

Step 2



x2

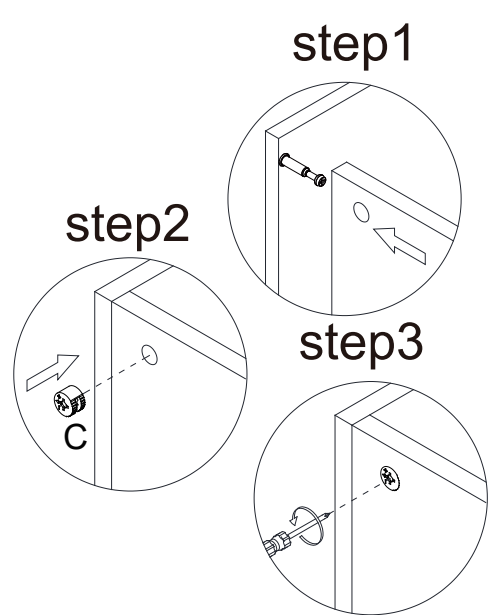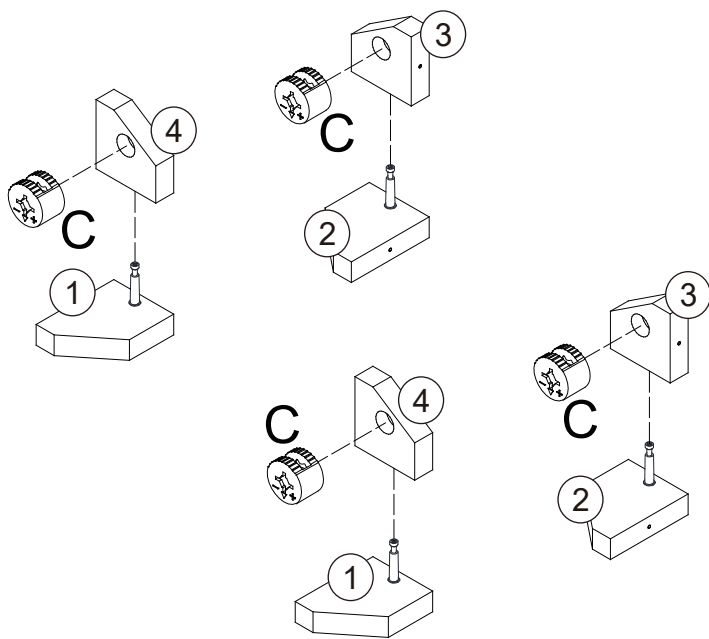

Assembly Instructions



Step 3

x2

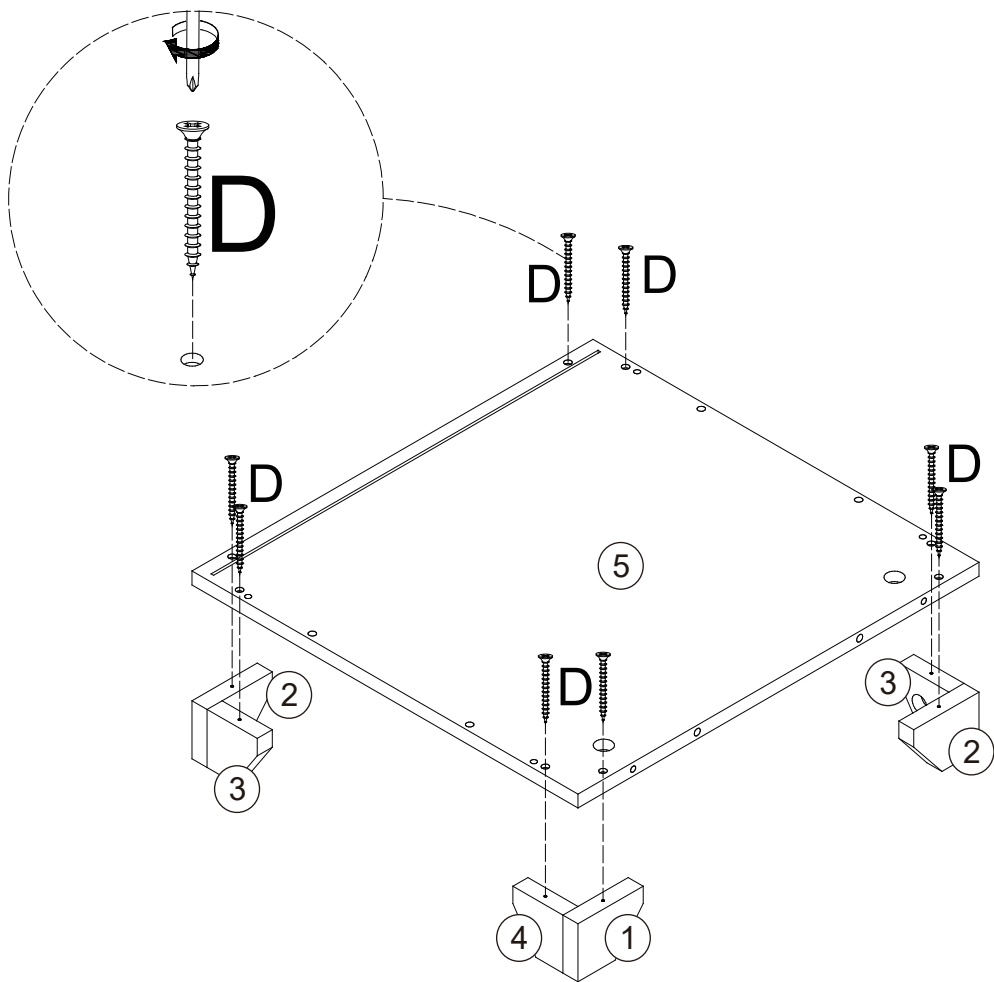

Step 4



x2

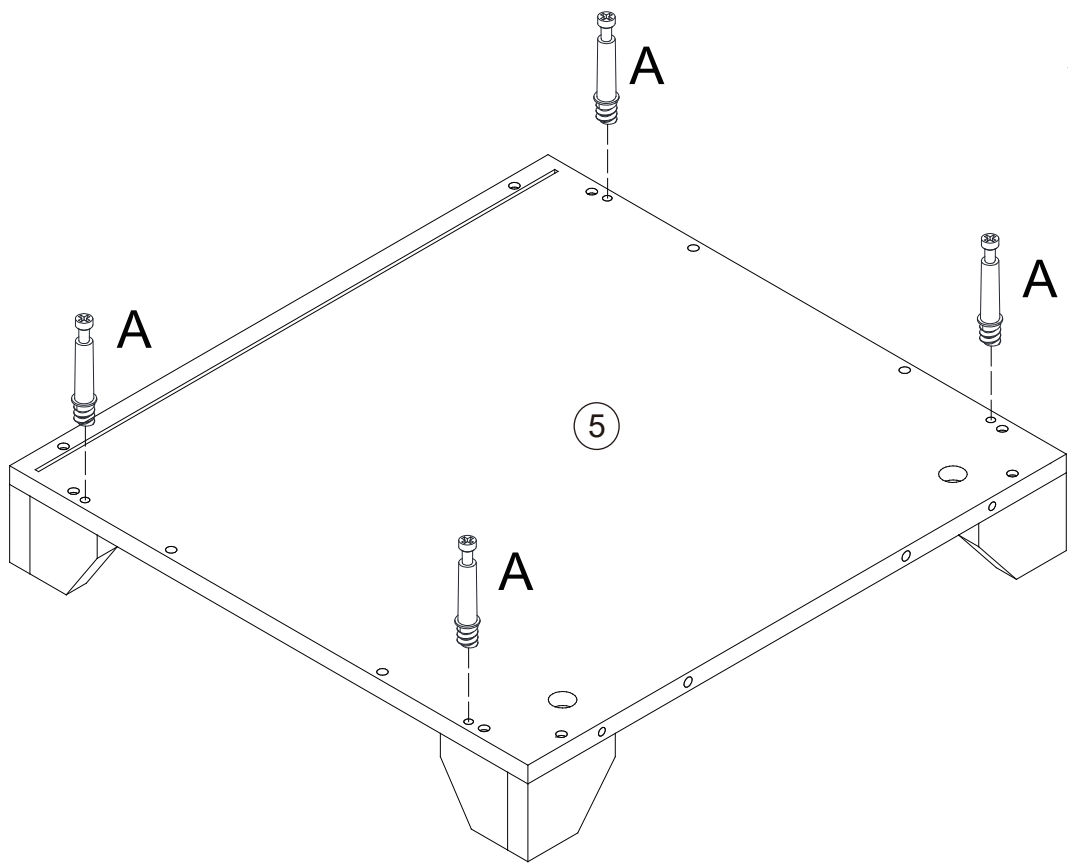

Assembly Instructions


Step 5

x2

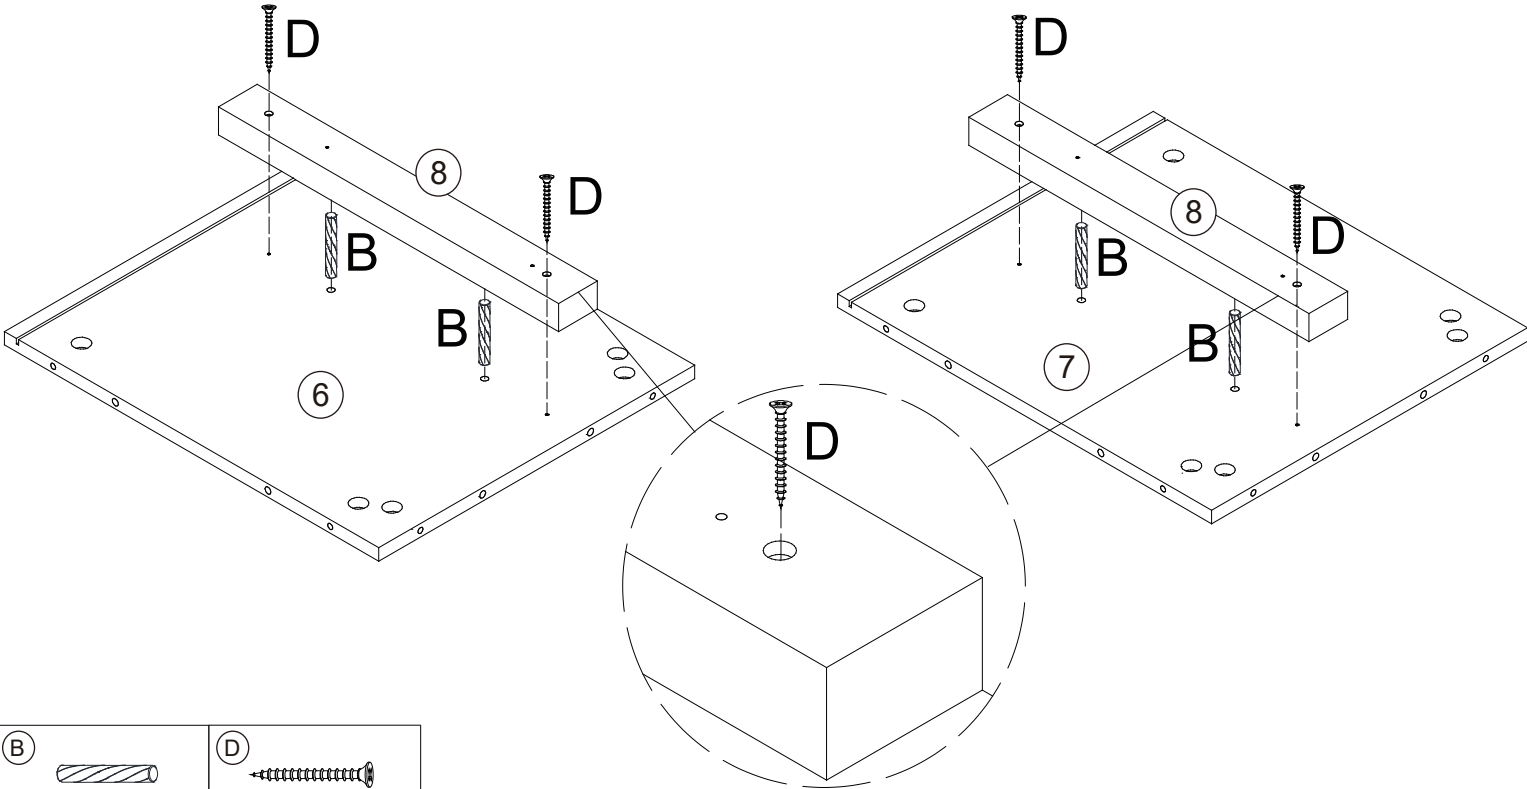

Step 6



x4

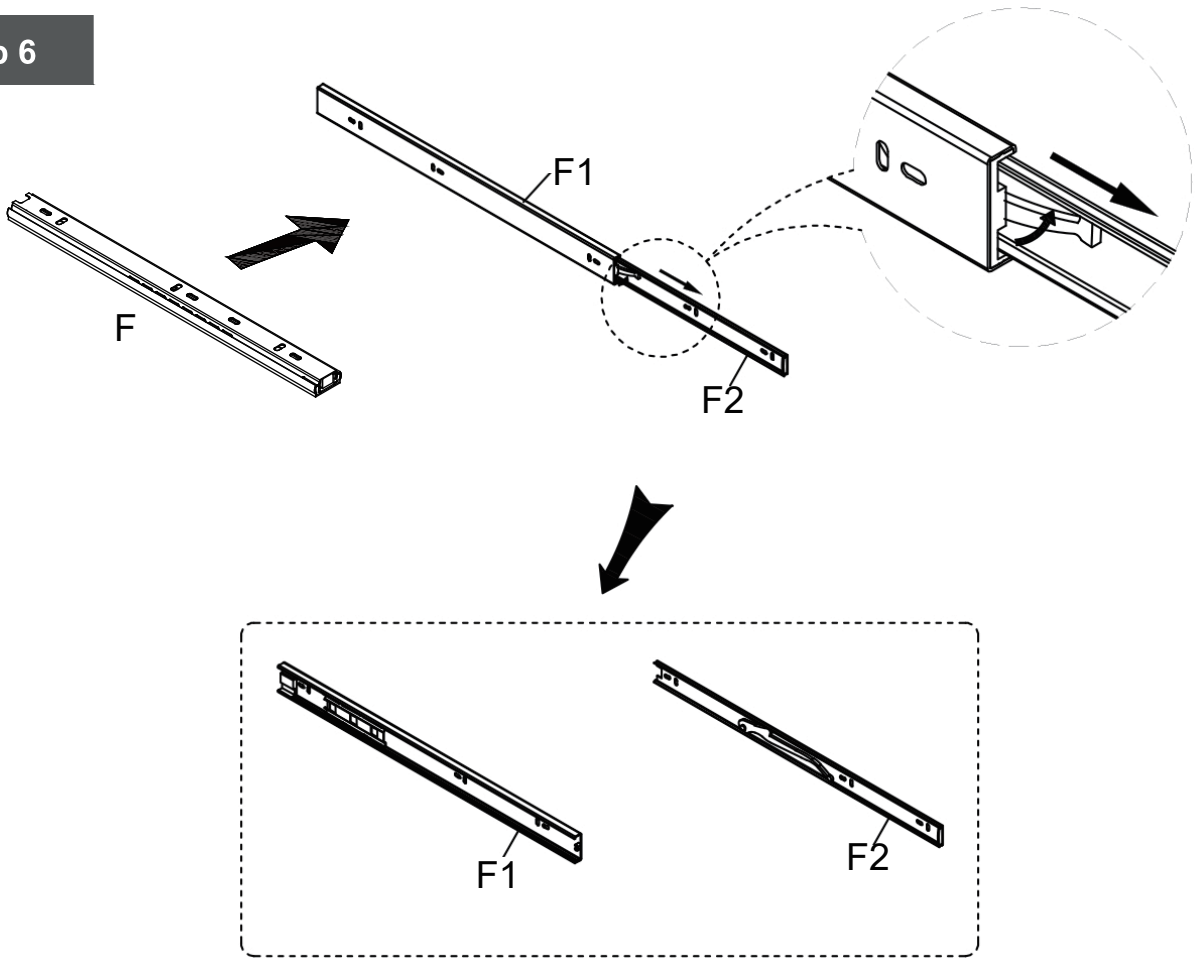

Assembly Instructions



Step 7

x2

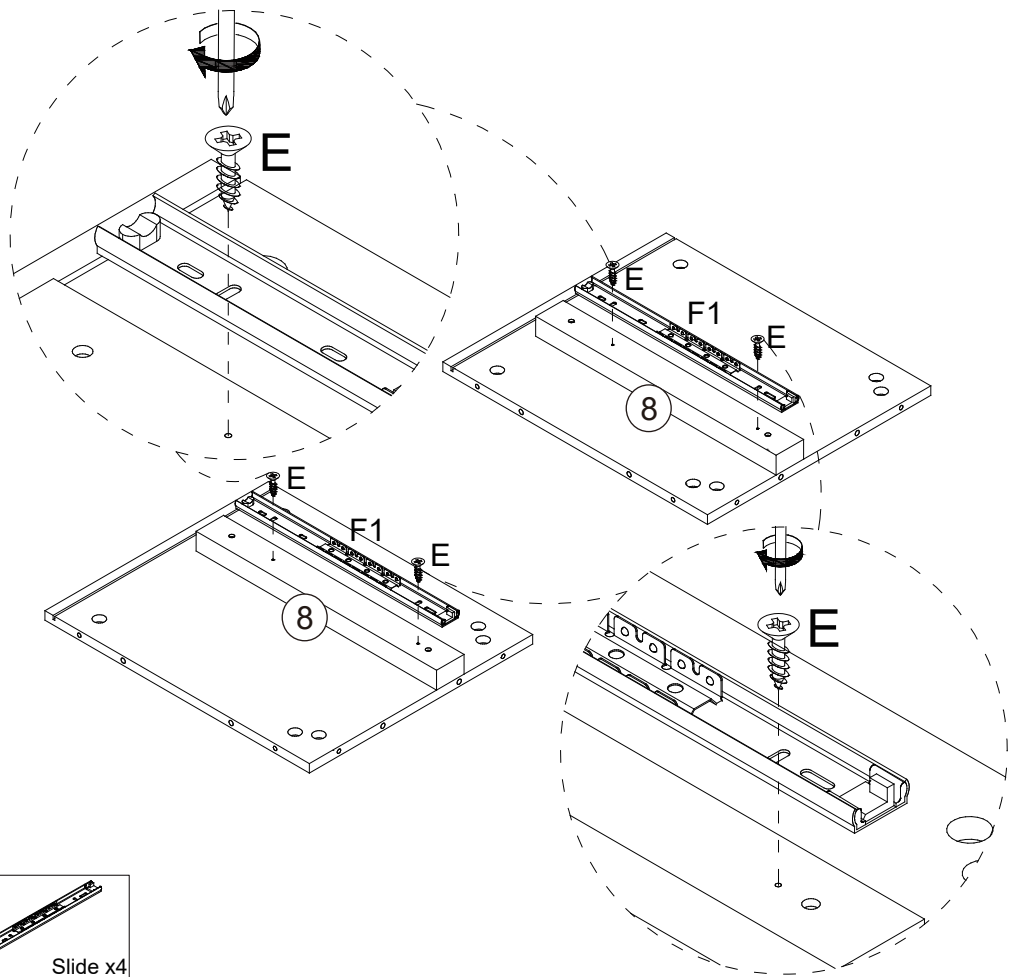


Step 8


x2

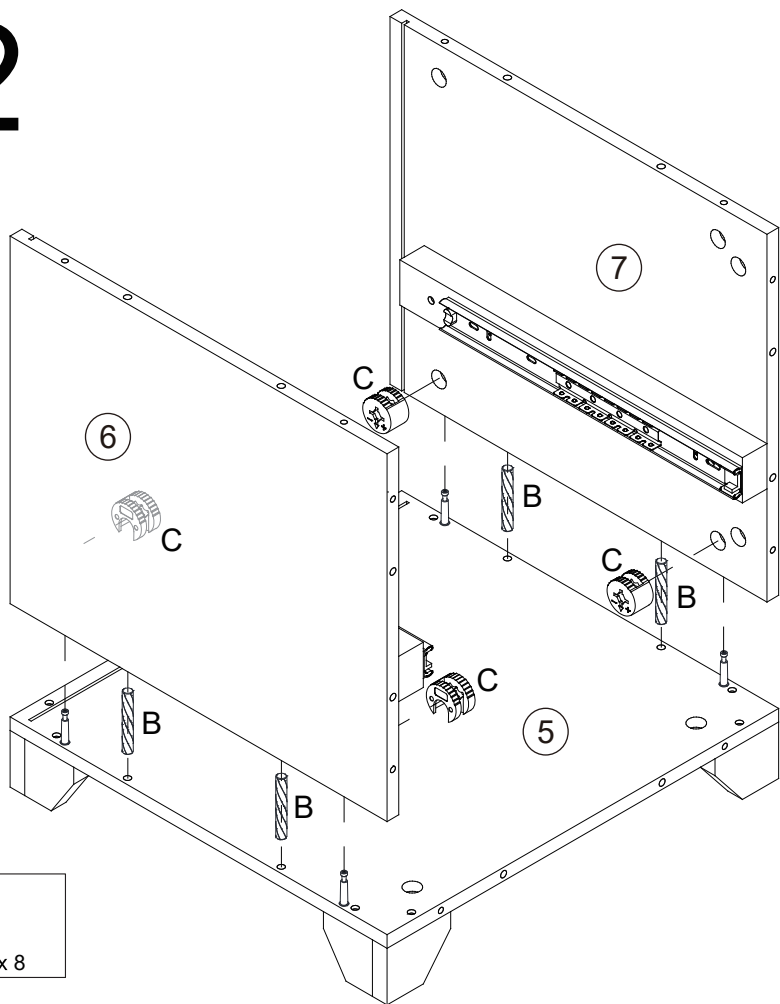


step1

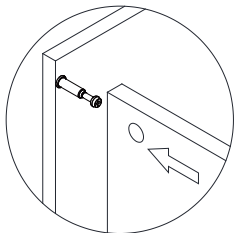

step2

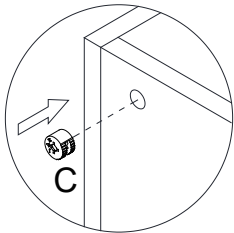

step3

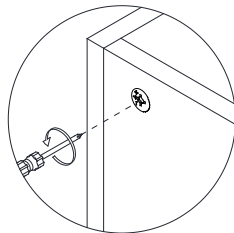


10

Assembly Instructions



Step 9

x2

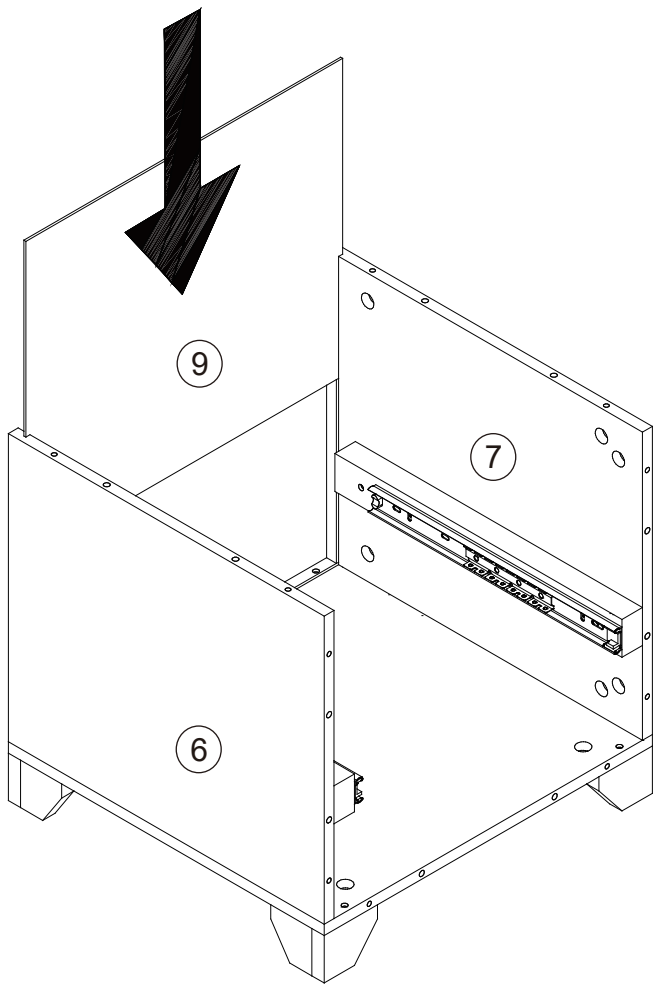

Step 10

x2

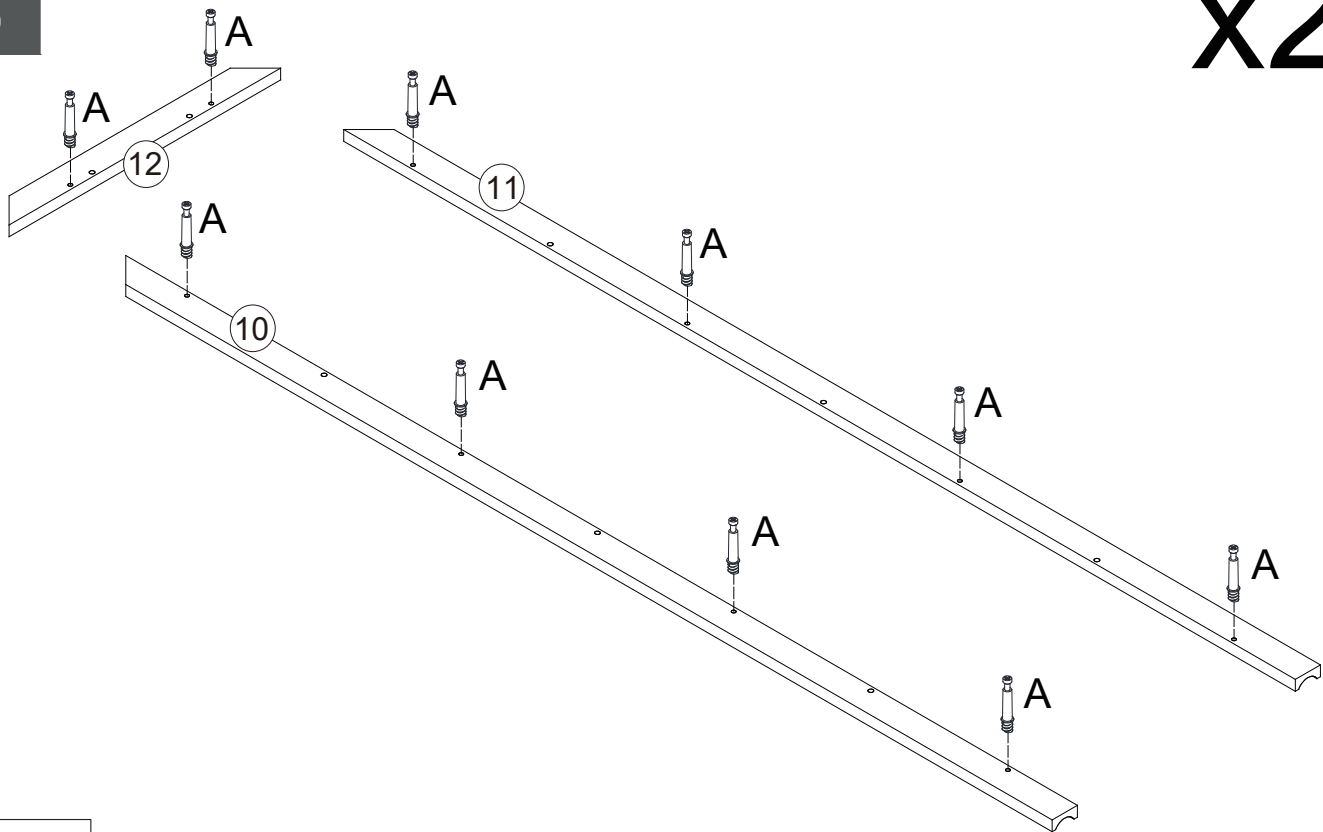


11

Assembly Instructions

Step 11


x2

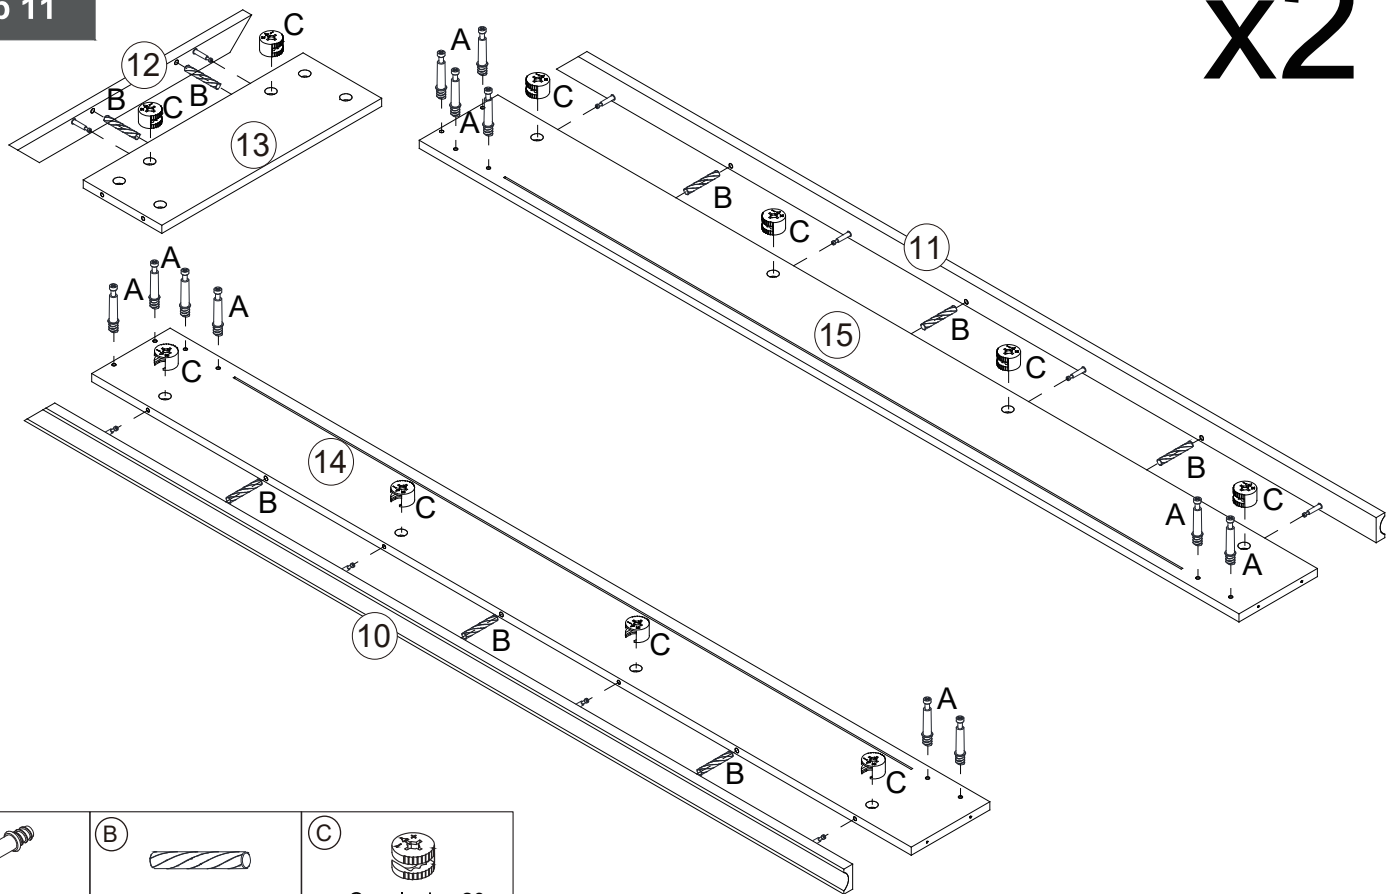

(A) 	(B) 	(C) 
Cam Bolt x 24	Dowel x 16	Cam lock x 20

Step 12

x2

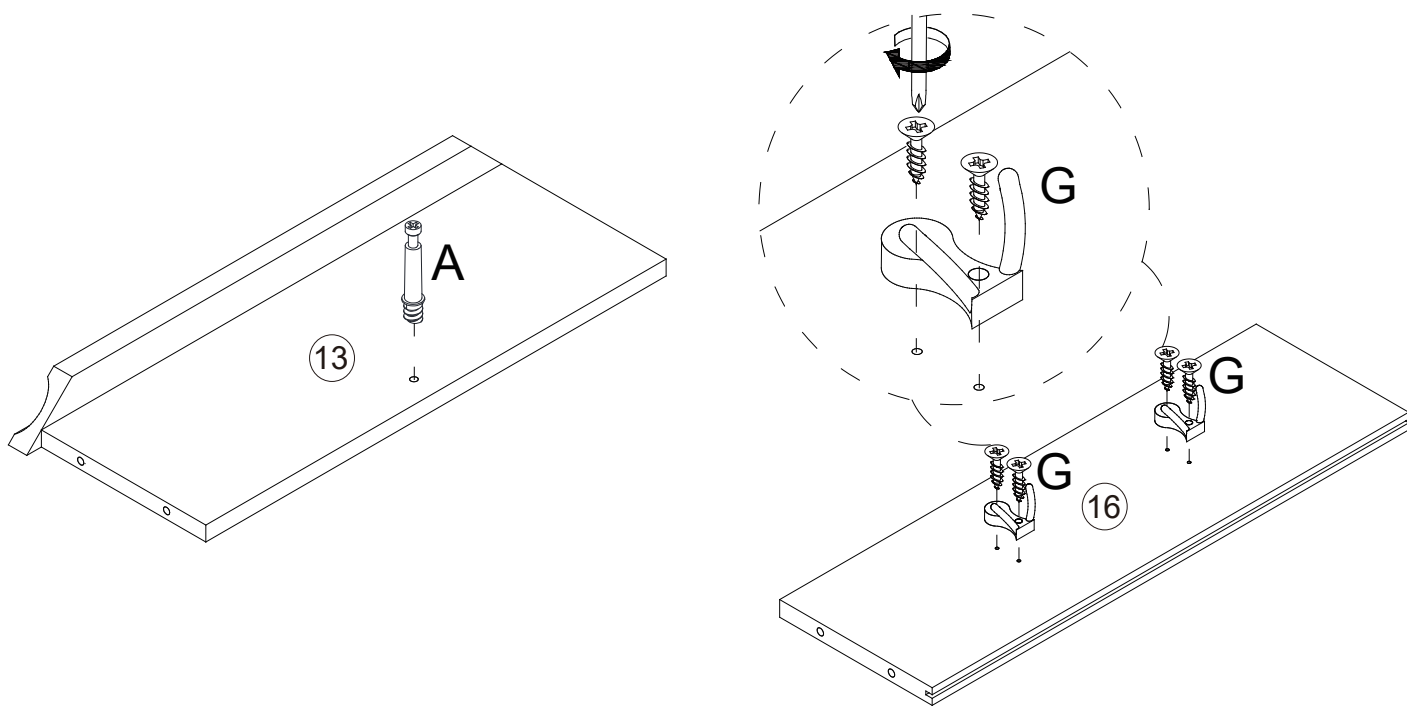


(A) 	(G) 
Cam Bolt x 24	3*12mm Hook x4set

12


Assembly Instructions

Step 13


x2

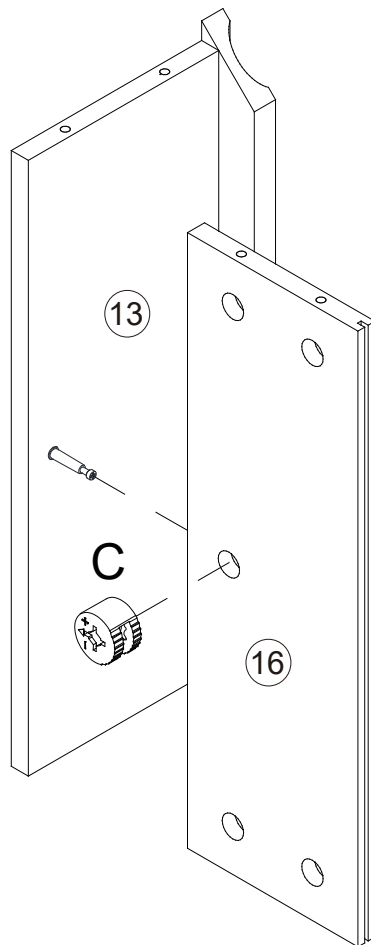


step1

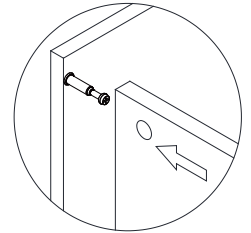

step2

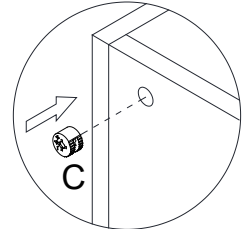


step3


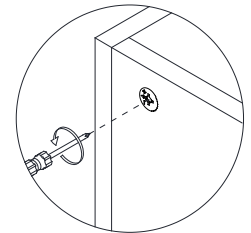


Step 14

x2


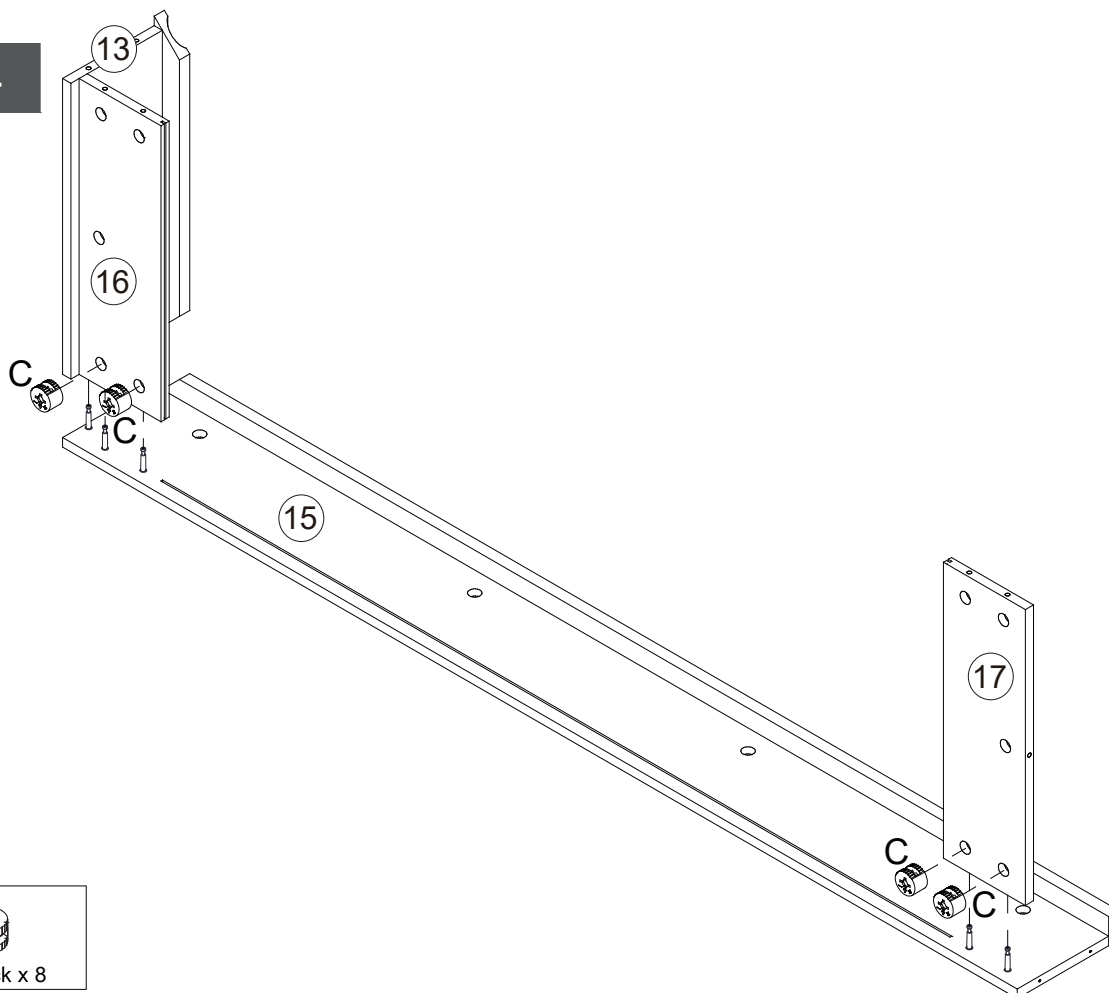


Assembly Instructions

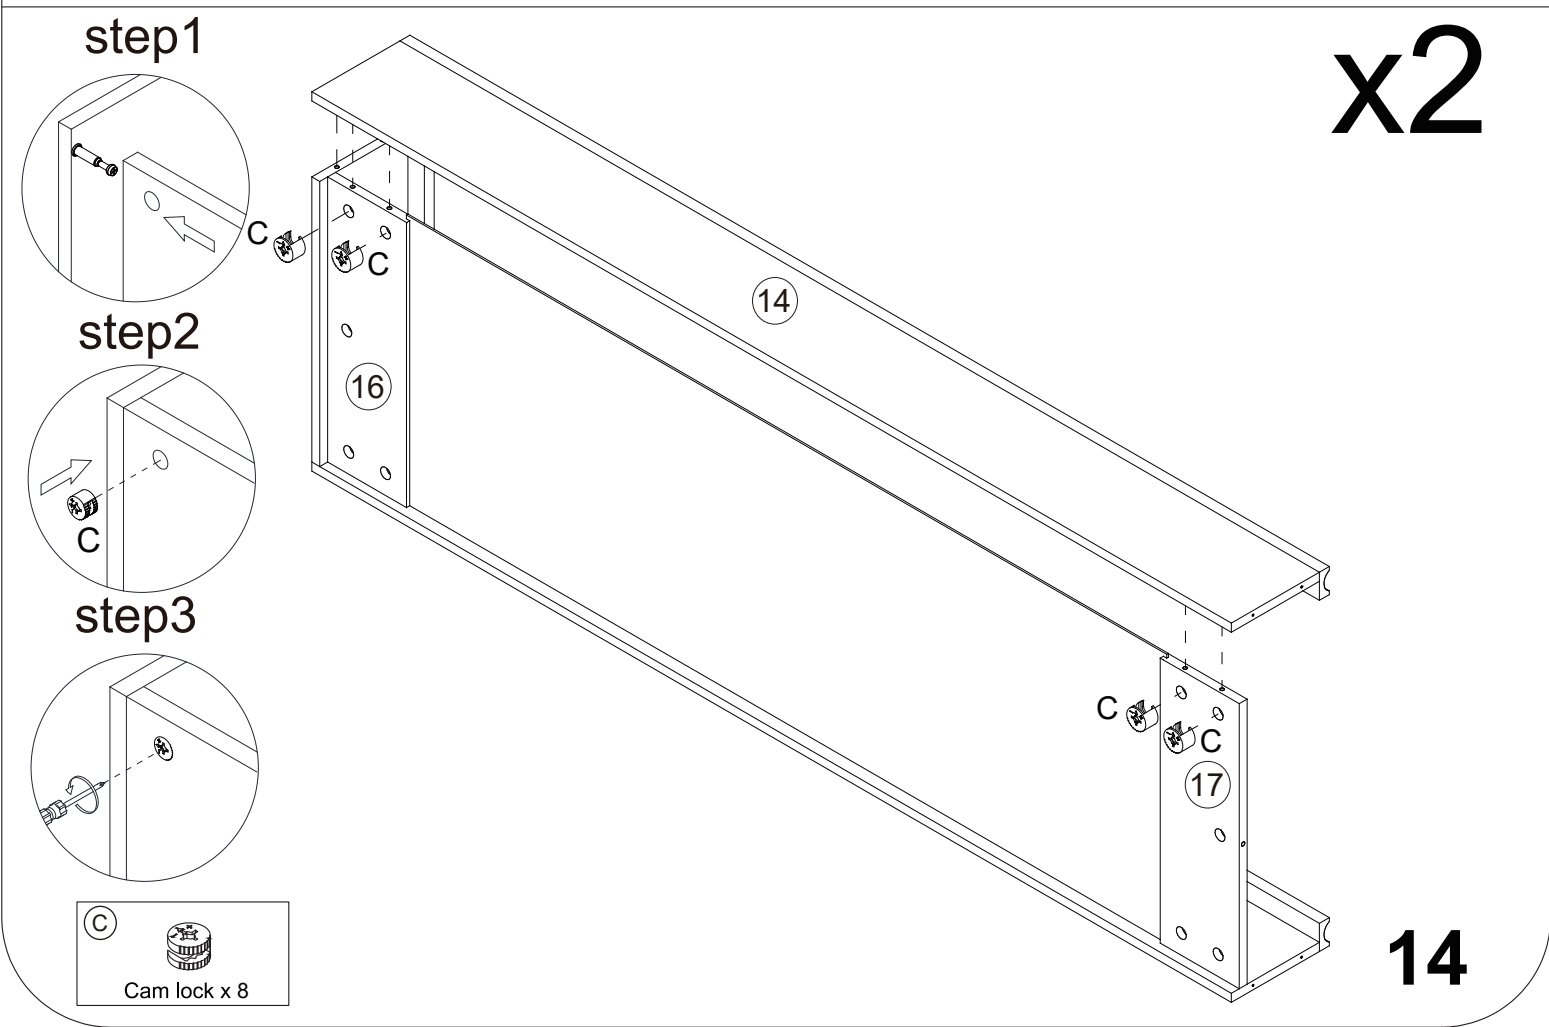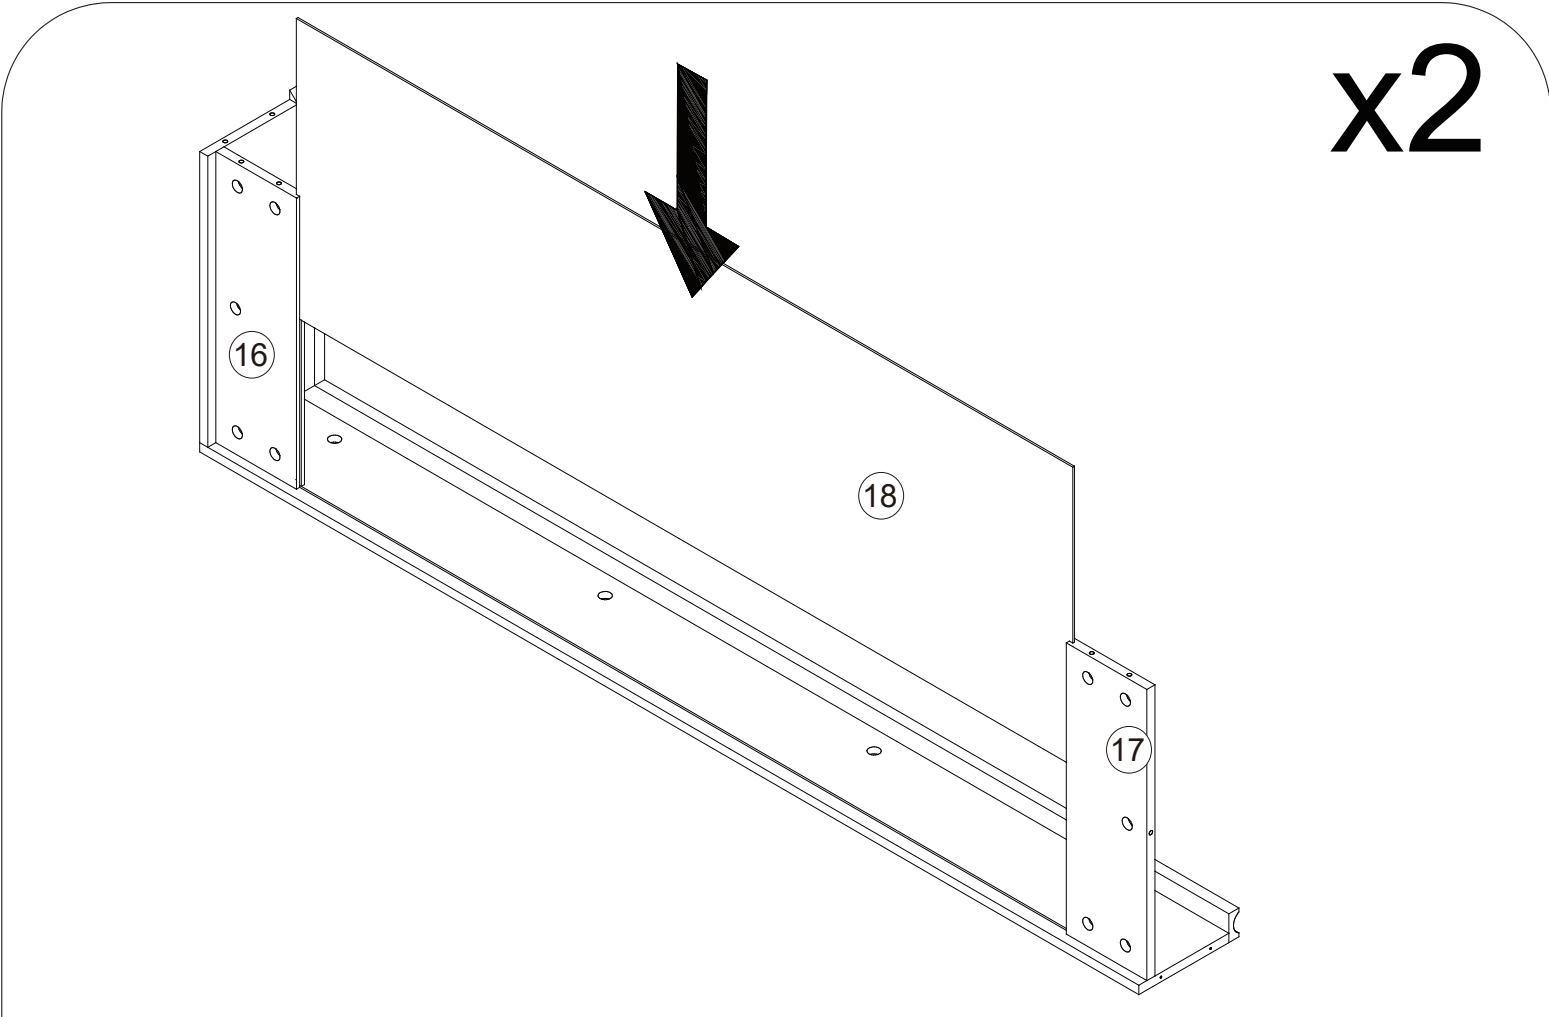


Assembly Instructions



Step 15

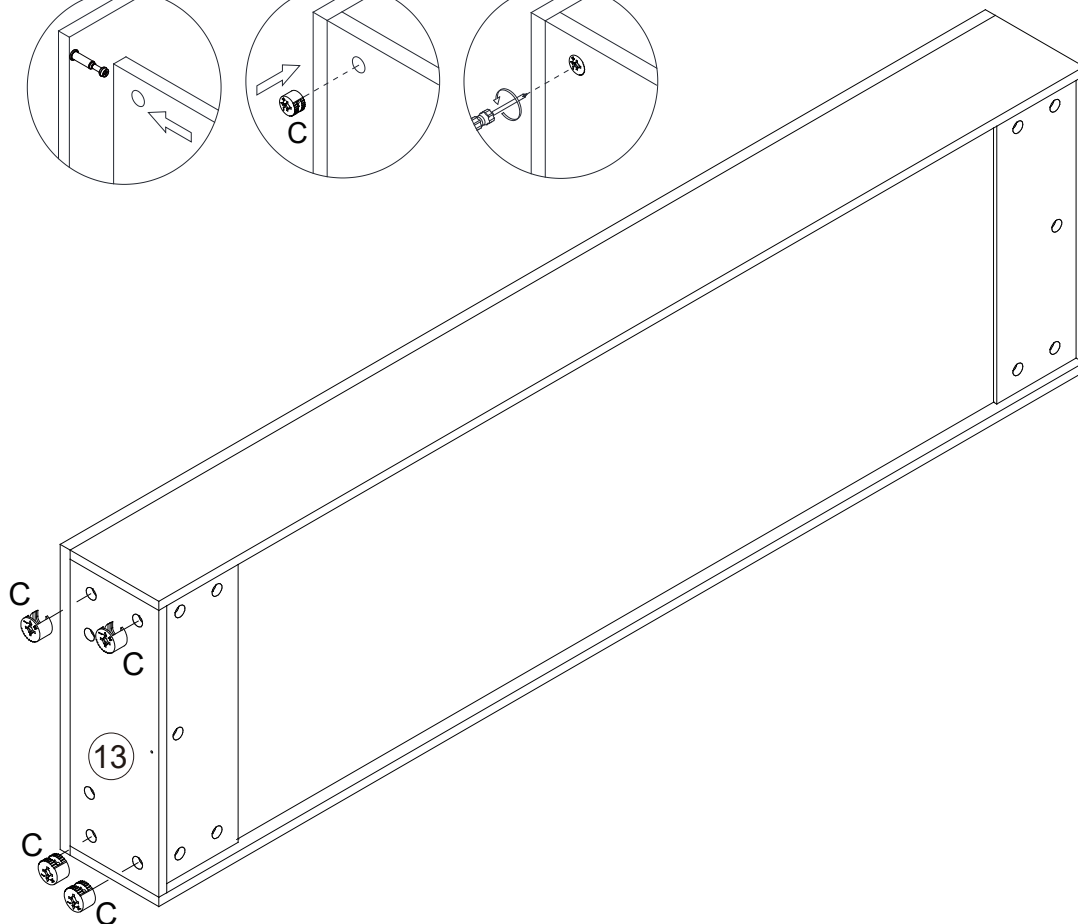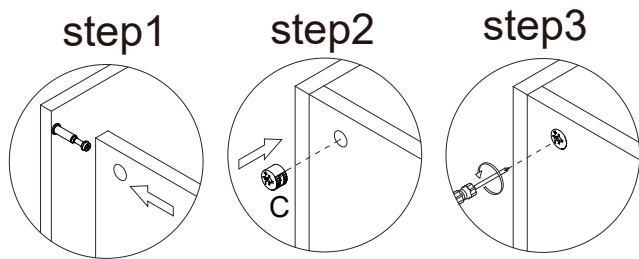

Step 16

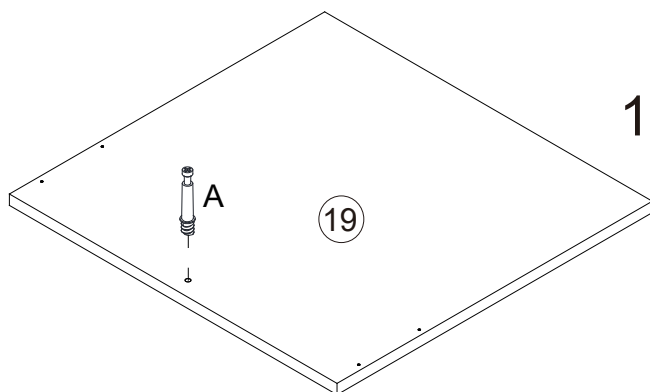

180°


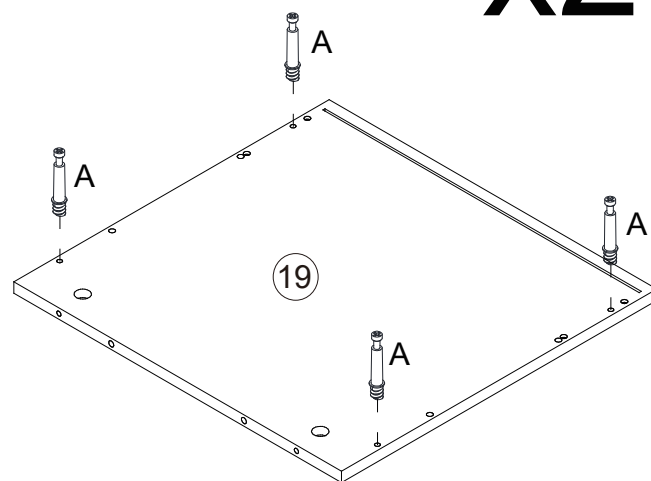


x2

Assembly Instructions



Step 17

x2

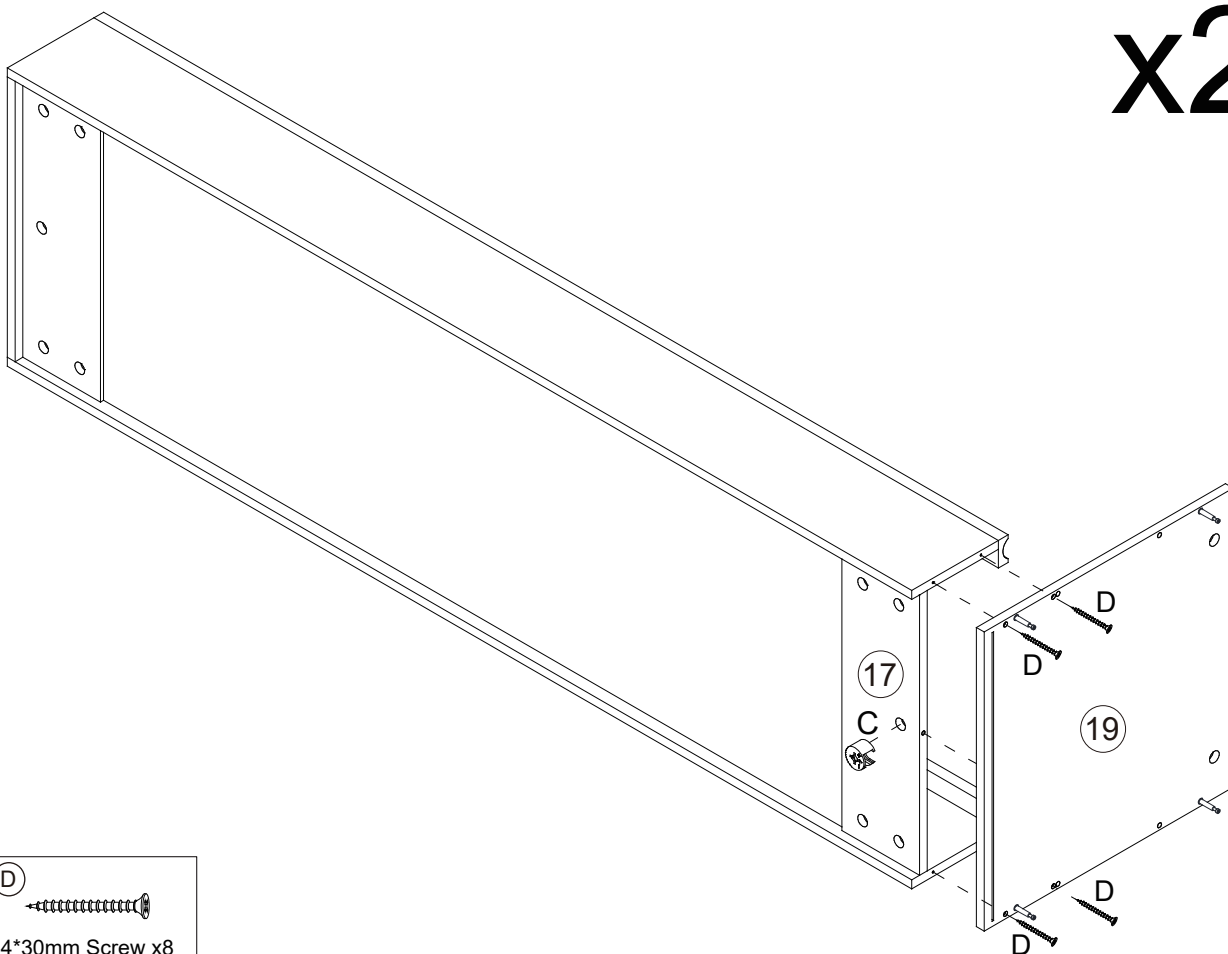

Step 18



x2

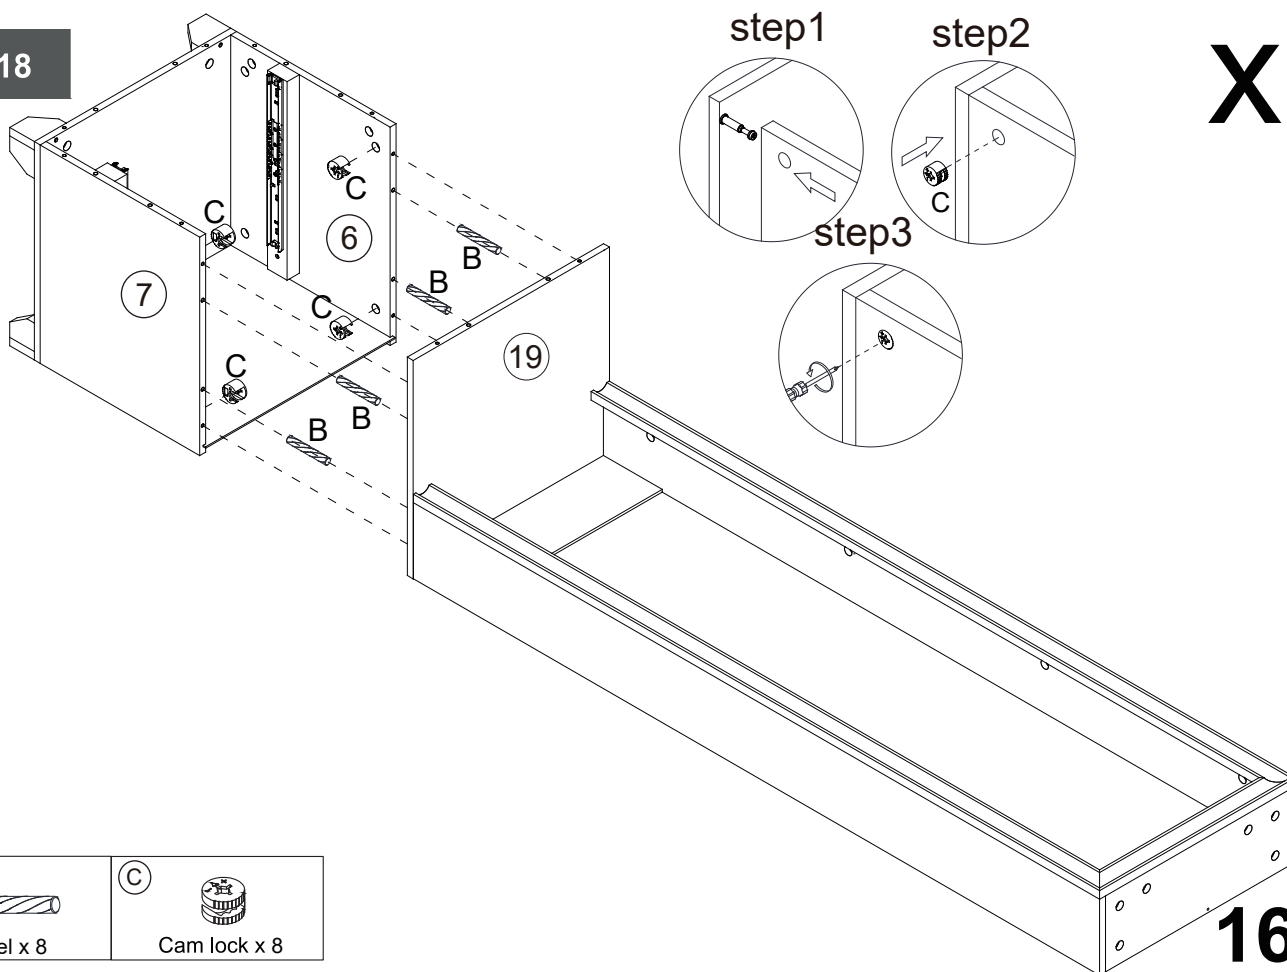




16

Assembly Instructions

Step 19

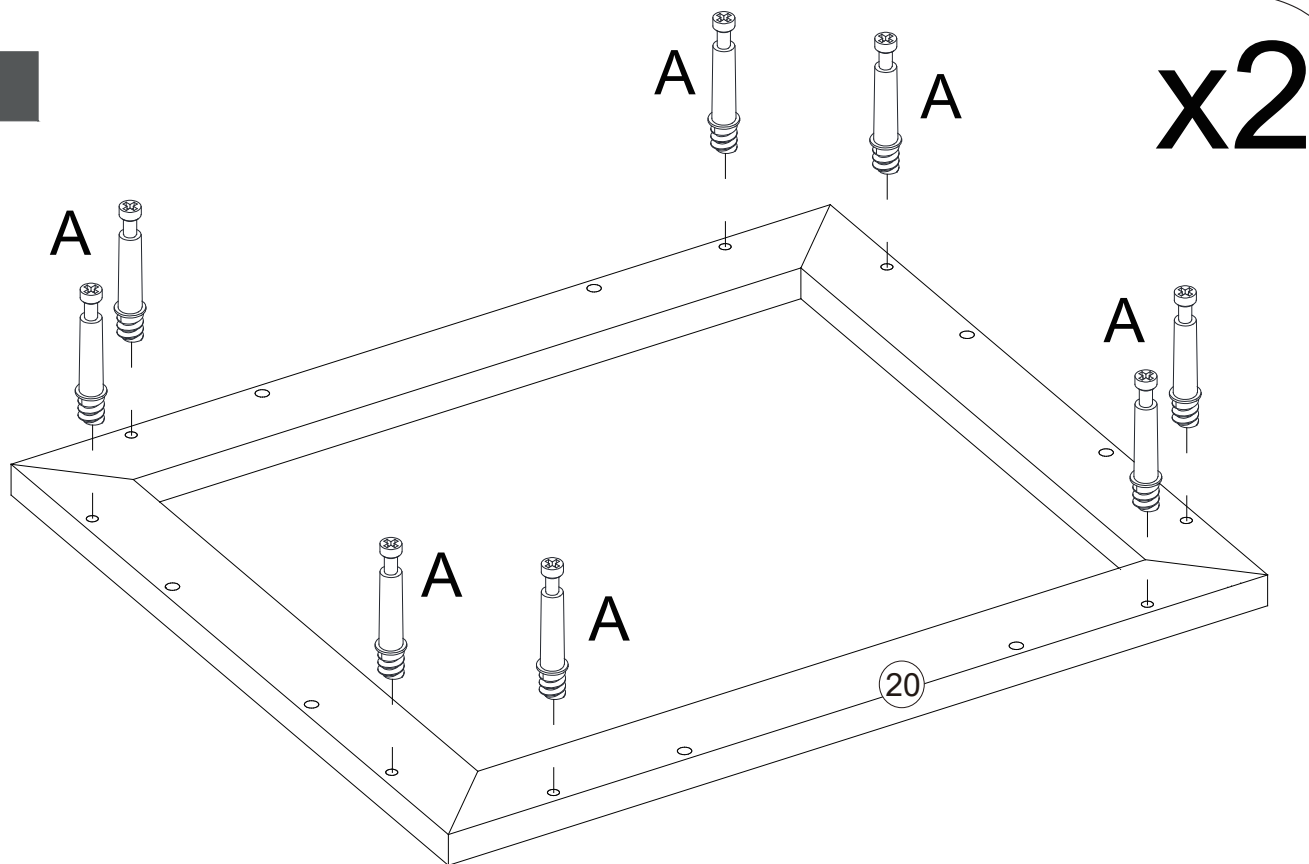




Step 20

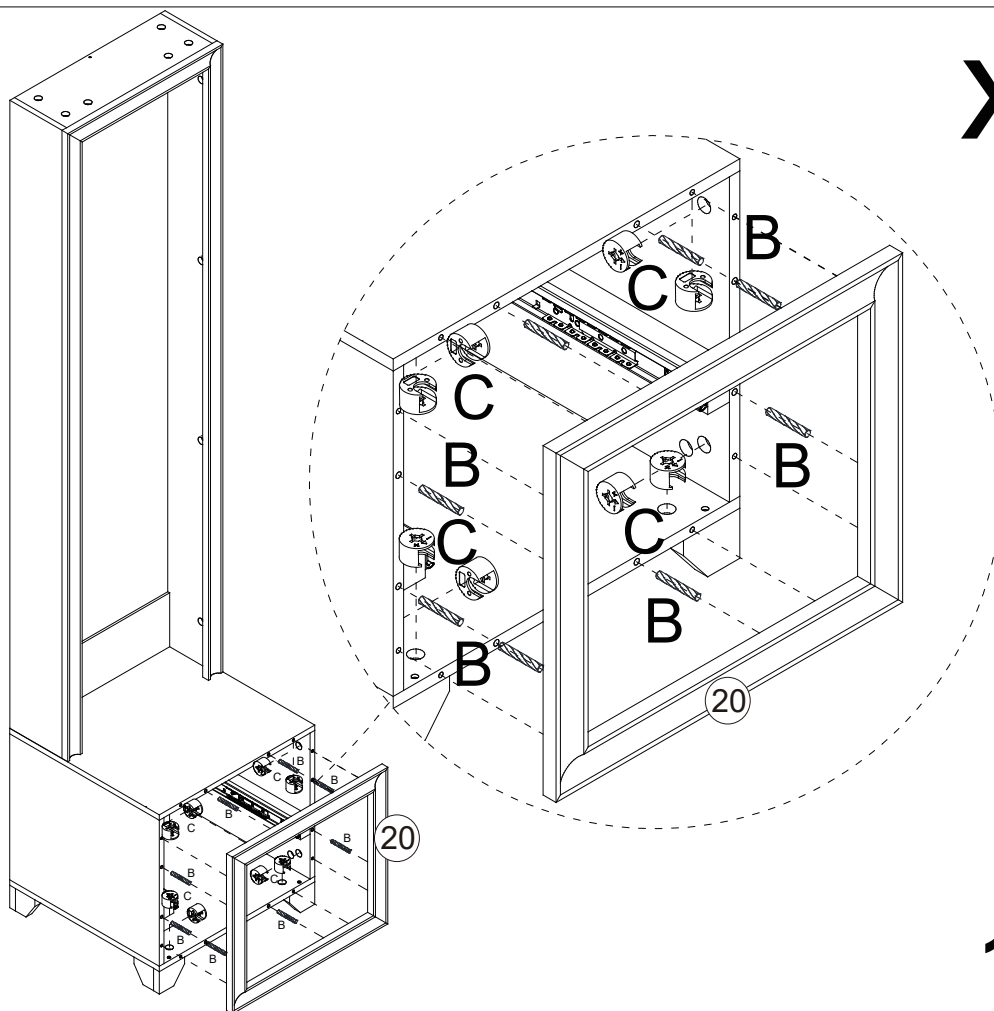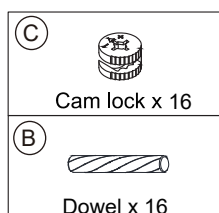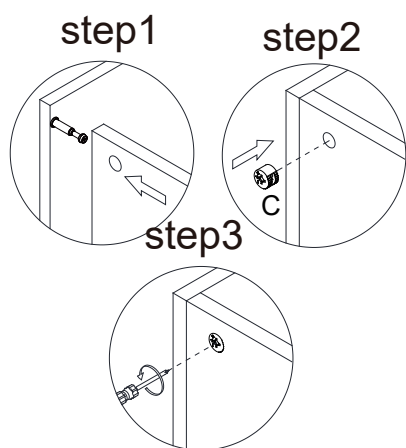

Assembly Instructions



Step 21

x2

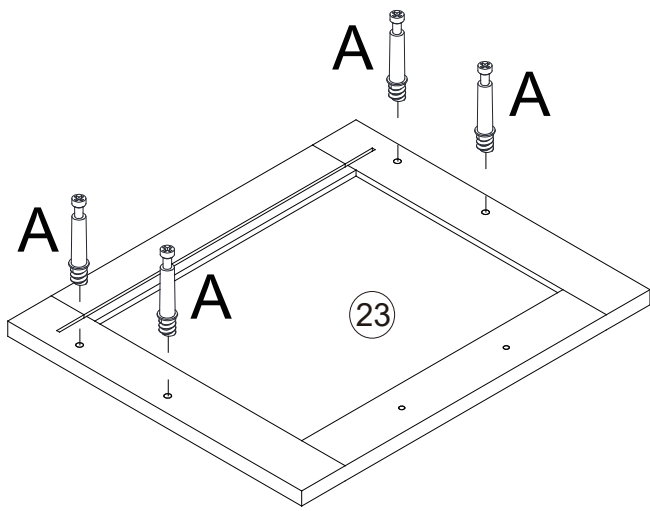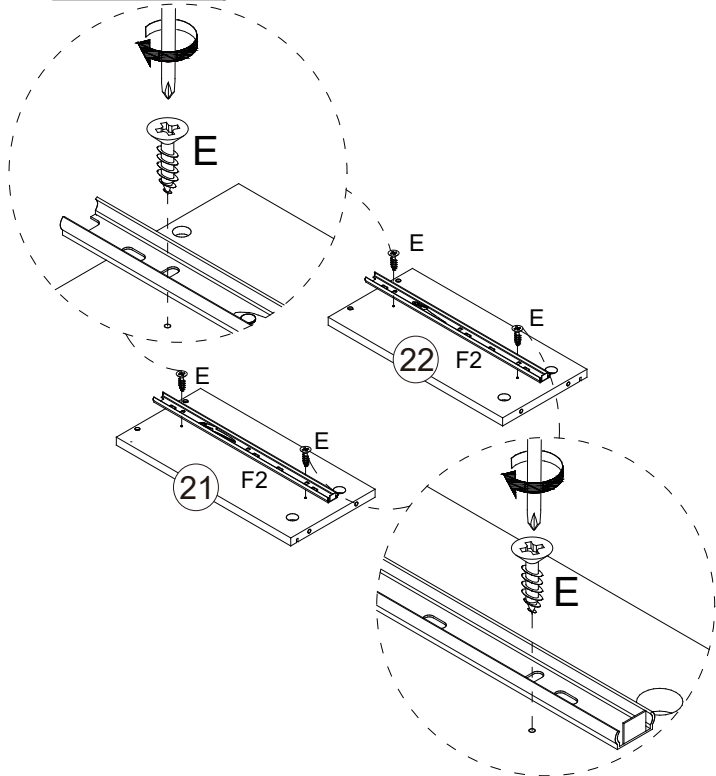

Step 22




x2

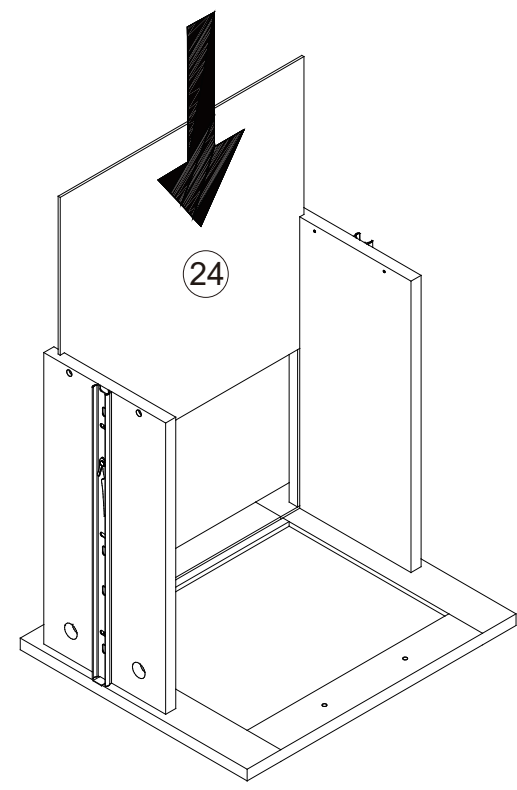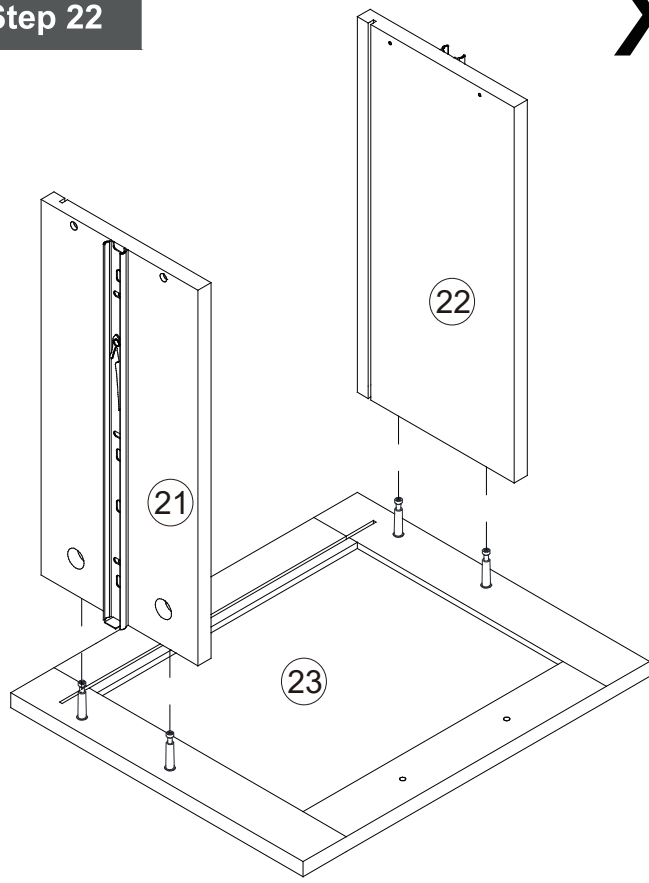

Assembly Instructions



Step 23

x2

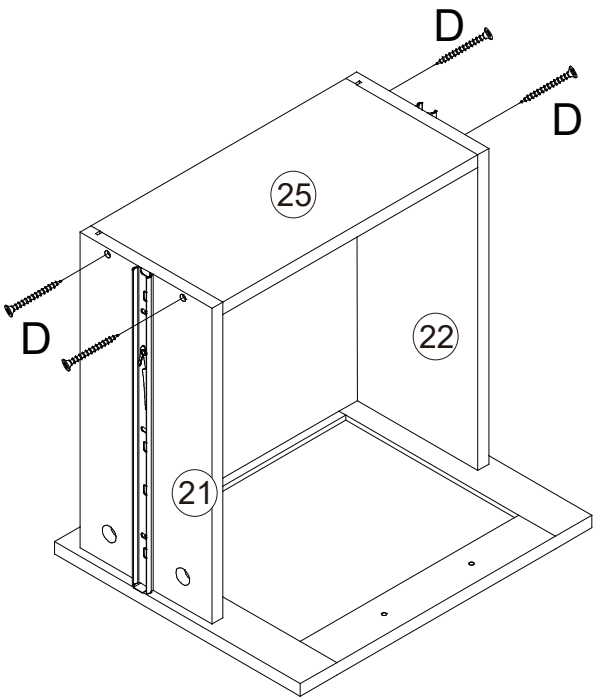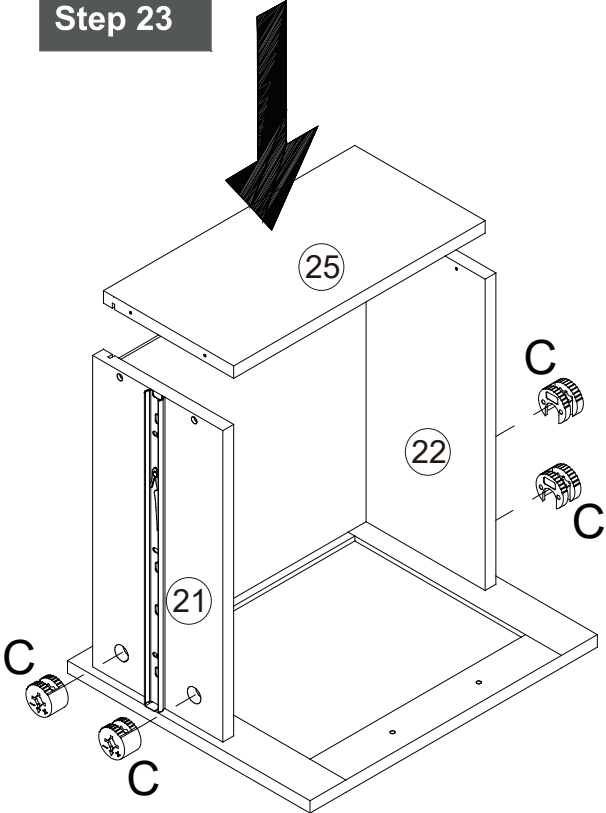




Step 24

x2

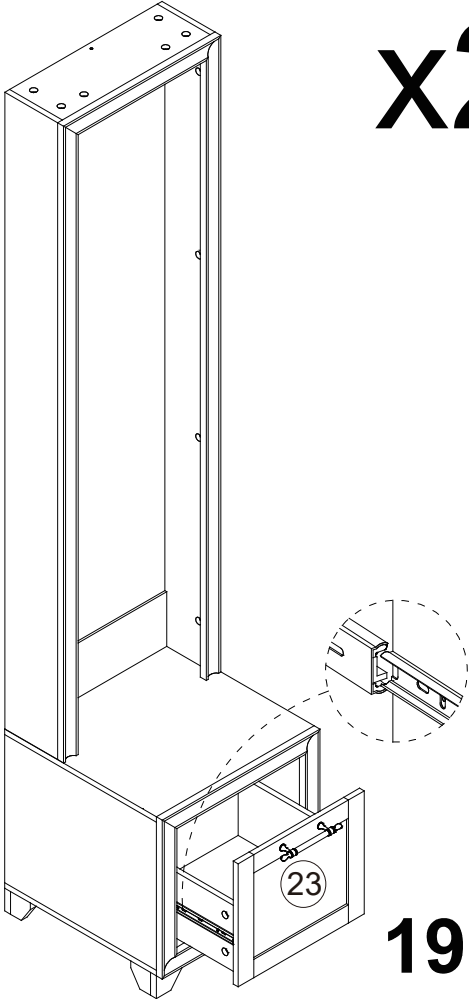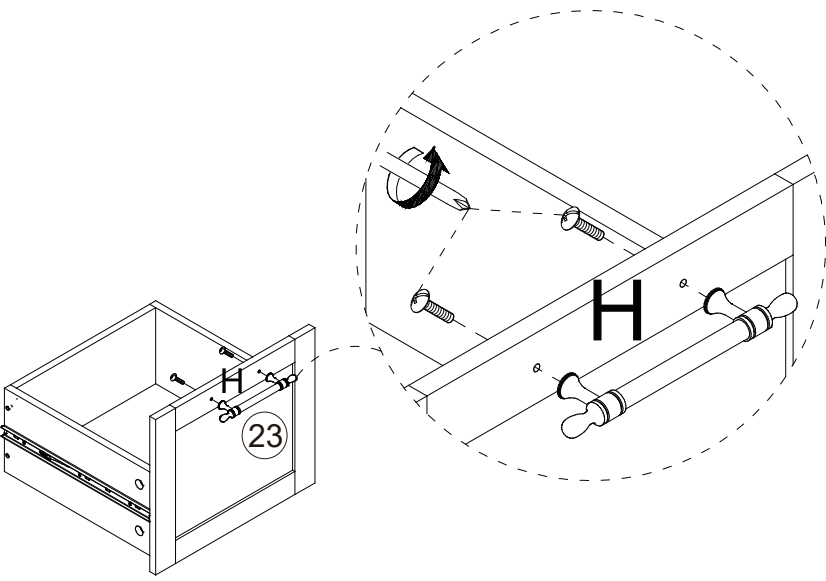

Assembly Instructions


Step 25

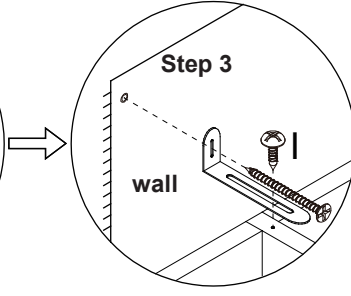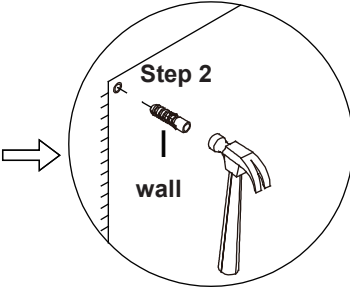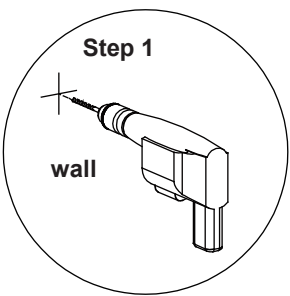

WALL



In order to make the product more beautiful, you can paste part#J on the exposed holes.

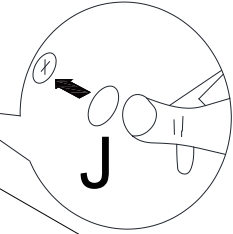

- | | |
|---|--|
|  <p>Anti-tipping Device x2</p> |  <p>Perfect fit x24</p> |
|---|--|

Assembly Instructions

Step 26

