

ProVantage Glass Block Installation System

- Mortar Free Method, Install With Glass Block Silicone
- Finish Joints Using Silicone or Grout
- Components Include: Horizontal Spacer, Vertical Spacer, Silicone, Framing Anchor or Perimeter Channel

A Horizontal Spacer
Model #: PVHORSP




B Vertical Spacer
Model #: PVVERSP



C Redi2Bond Silicone
Model #: R2BSIL



D OR E

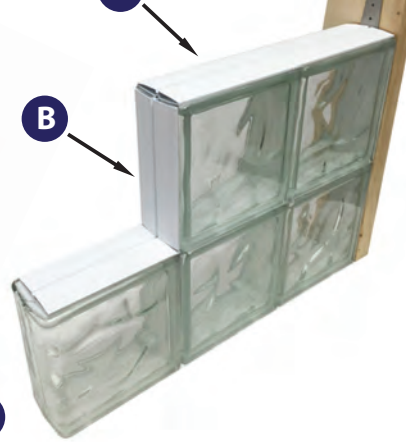

D Perimeter Channel
Model #: VPC4



E Framing Anchor
Model #: PVANCP



Traditional Mortar Glass Block Installation System

- Install With Mortar For a Classic "Grid Look"
- Components Include: Mortar Spacers, Panel Reinforcing, Expansion Strips, Panel Anchors or Perimeter Channel

A Mortar Spacers
Model #: SPACERSREG
or SPACERGBU



B Panel Reinforcing
Model #: SSREINFORCE



C Expansion Foam
Model #: FOAMEXP3



D Perimeter Channel
Model #: VPC4



E Panel Anchors
Model #: SSANCHOR

