

installation instructions:

Thermoformed PVC Ceiling Medallions

SAFETY INSTRUCTIONS

- Make sure to use the correct tools recommended.
- Wear proper protective gear.
- Follow fixture, power tools, paint manufacturers' instructions, and users manuals.
- Use common sense and follow good construction practices.

TOOL & MATERIAL CHECKLIST

- ☐ Power Grab Adhesive
- ☐ Sand Paper
- ☐ Cloth


SPECIAL INSTRUCTIONS AND NOTES

- Thoroughly read through the installation instructions to familiarize yourself with the process before you begin installation.
- Before installing, acclimate the product in the room where you will be installing them.
- It is recommended that you finish the medallion.

STEP BY STEP INSTRUCTIONS

- It is recommended that you prepare the installation surface with sandpaper by removing excessive bumps and/or texture. Wipe clean and apply primer to ensure proper adhesion.
 - Apply adhesive to the back of the ceiling medallion on the outside of the groove. (Follow adhesive manufacturer's instructions for proper application)
 - Push the medallion in place firmly and you are done.
- Note: Once installed, you can leave the medallion with its white factory finish, or prime and paint any desired color.

EXAMPLE INSTALLATION DIAGRAMS

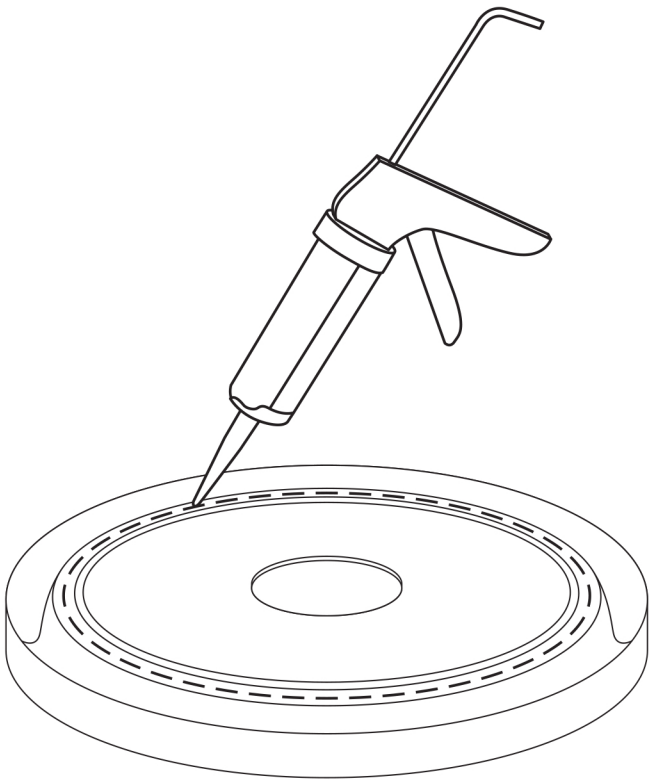

We Can Help. Call (866) 607-0453



Industry leading manufacturer of urethane, PVC, wood, rustic, and metal millwork

www.ekenamillwork.com