

# ARIEL

Instruction Manual

## **Wall-Mounted**



The installation process takes approximately 30 minutes.



A minimum of 2 people is required to properly install the product.




**Improper installation can result in personal injury and property damage.**

For safe mounting, it is essential to use wall anchors appropriate to your wall type (i.e. plaster, drywall, concrete...).

**Mount to wood studs.**

## HARDWARE KIT INCLUDES

(A)



Wood hanger

(B)



M6 screw

## ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)



Pencil



Drill




Phillips  
Screwdriver



Tape  
Measure



Stud  
Finder




Level


## STEP 1: LOCATE THE STUB & PRE-DRILL THE HANGER.

Using the stud finder and marker, locate and mark the studs behind the drywall.

For a brick/concrete wall, simply mark the areas where you want to mount the cabinet.

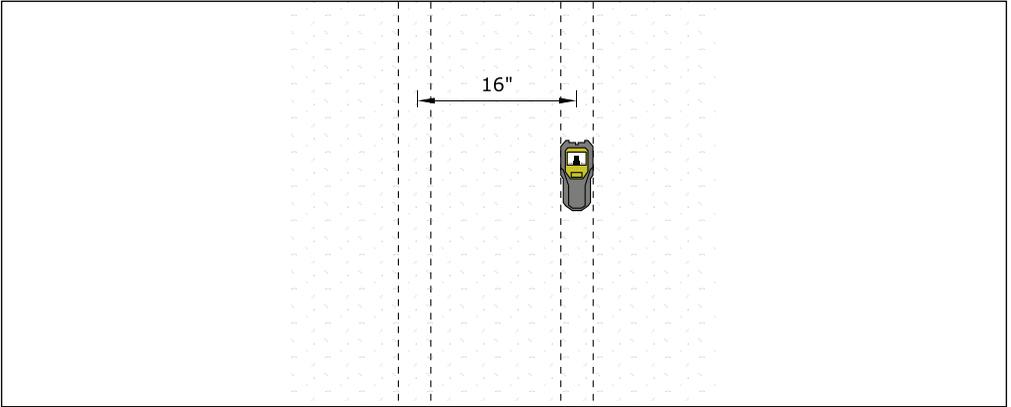

Locate, mark and drill pilot holes on the hangers (A) aligned with the studs.

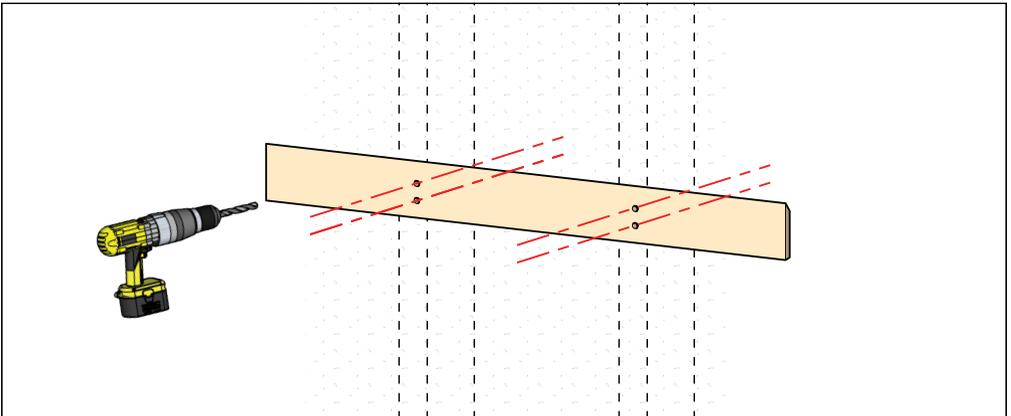


**Important:** The spacing of two studs varies based on your wall structure. If the studs do not align with your cabinet, you can install wood blocking between them.


## STEP 2: LOCATE & SECURE THE HANGER INTO THE WALL.

Using tape measure to locate and mark the position of the hanger.


\* This height is recommended for floating vanity, but you can adjust it to fit your needs.

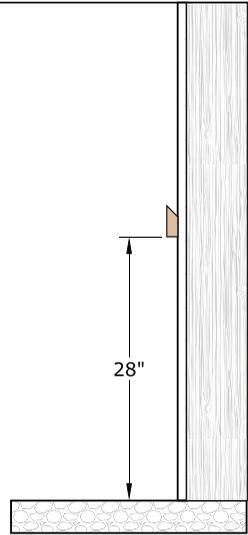


Secure the hangers to the wall & studs with the M6 screws.

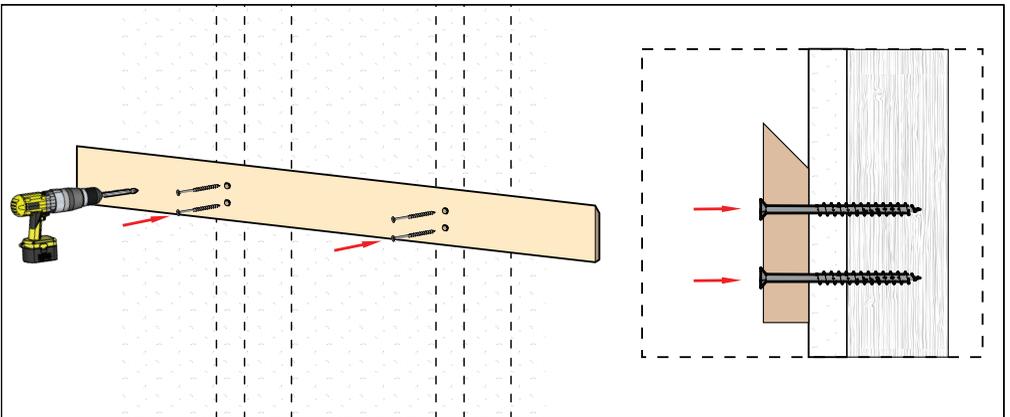


STEP 3: MOUNT THE CABINET TO THE HANGERS.

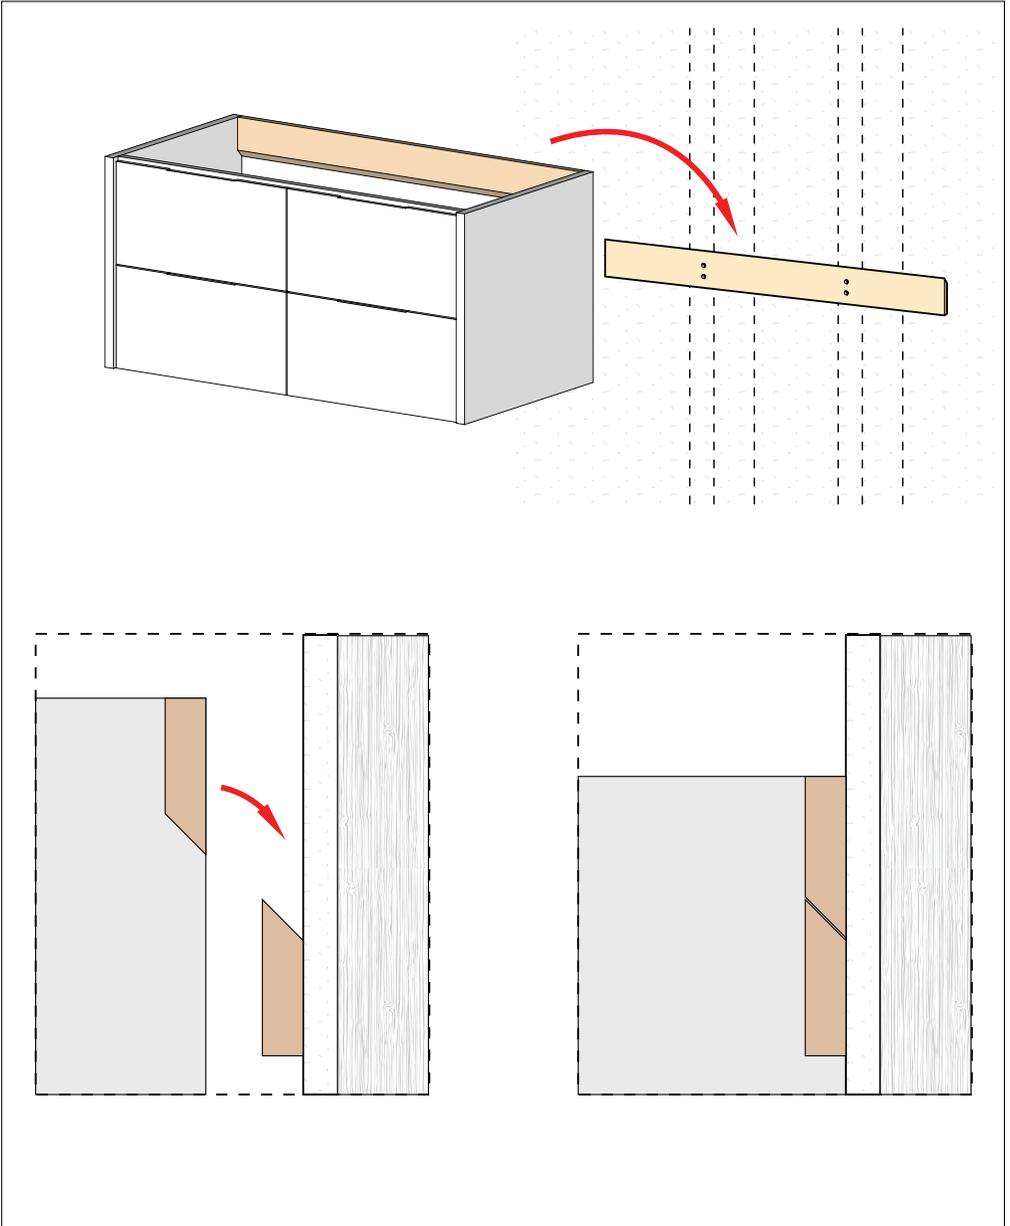

STEP 4: SECURE THE CABINET WITH THE M6 SCREWS.

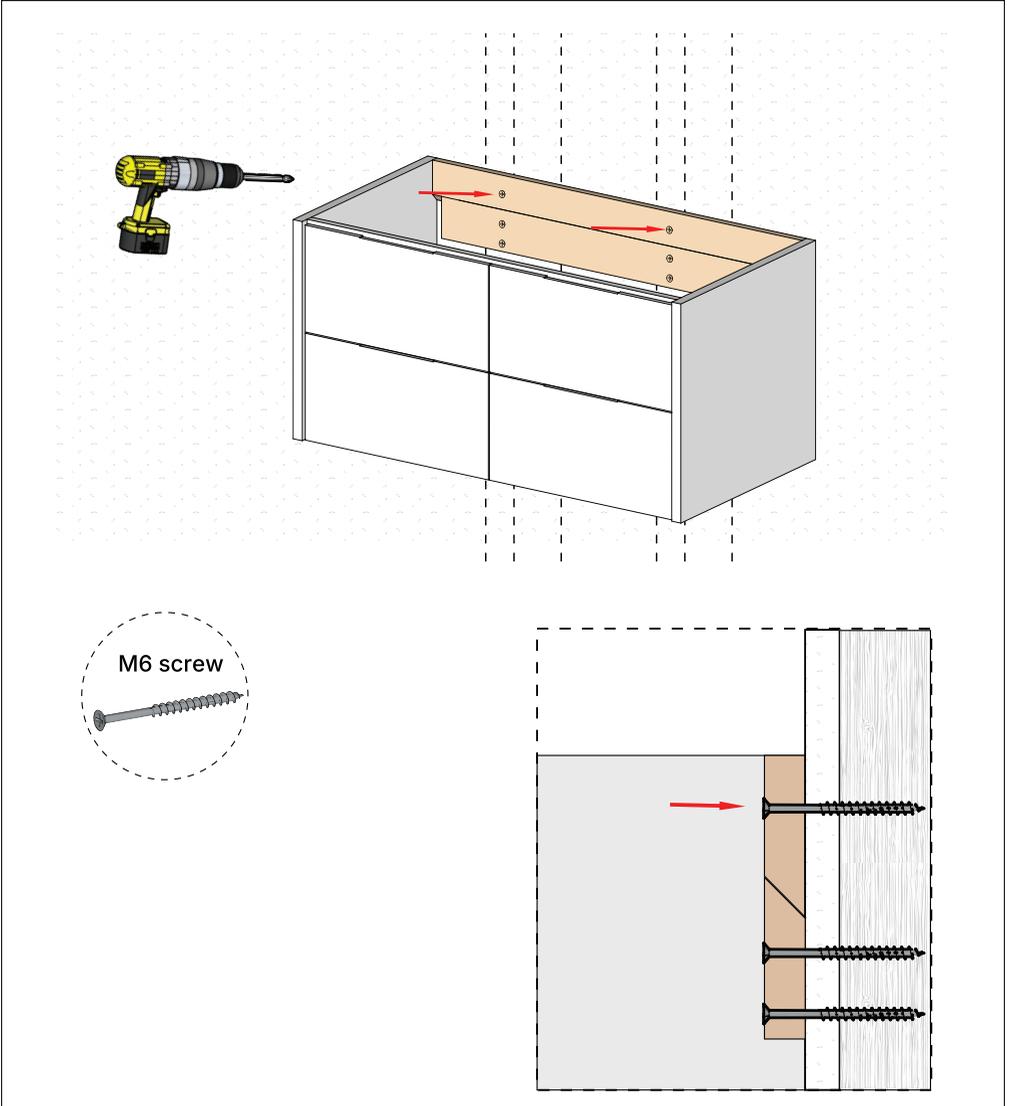

**\*This product is available in many different sizes.  
Please attach it to as many studs as possible to keep the cabinet secure.**

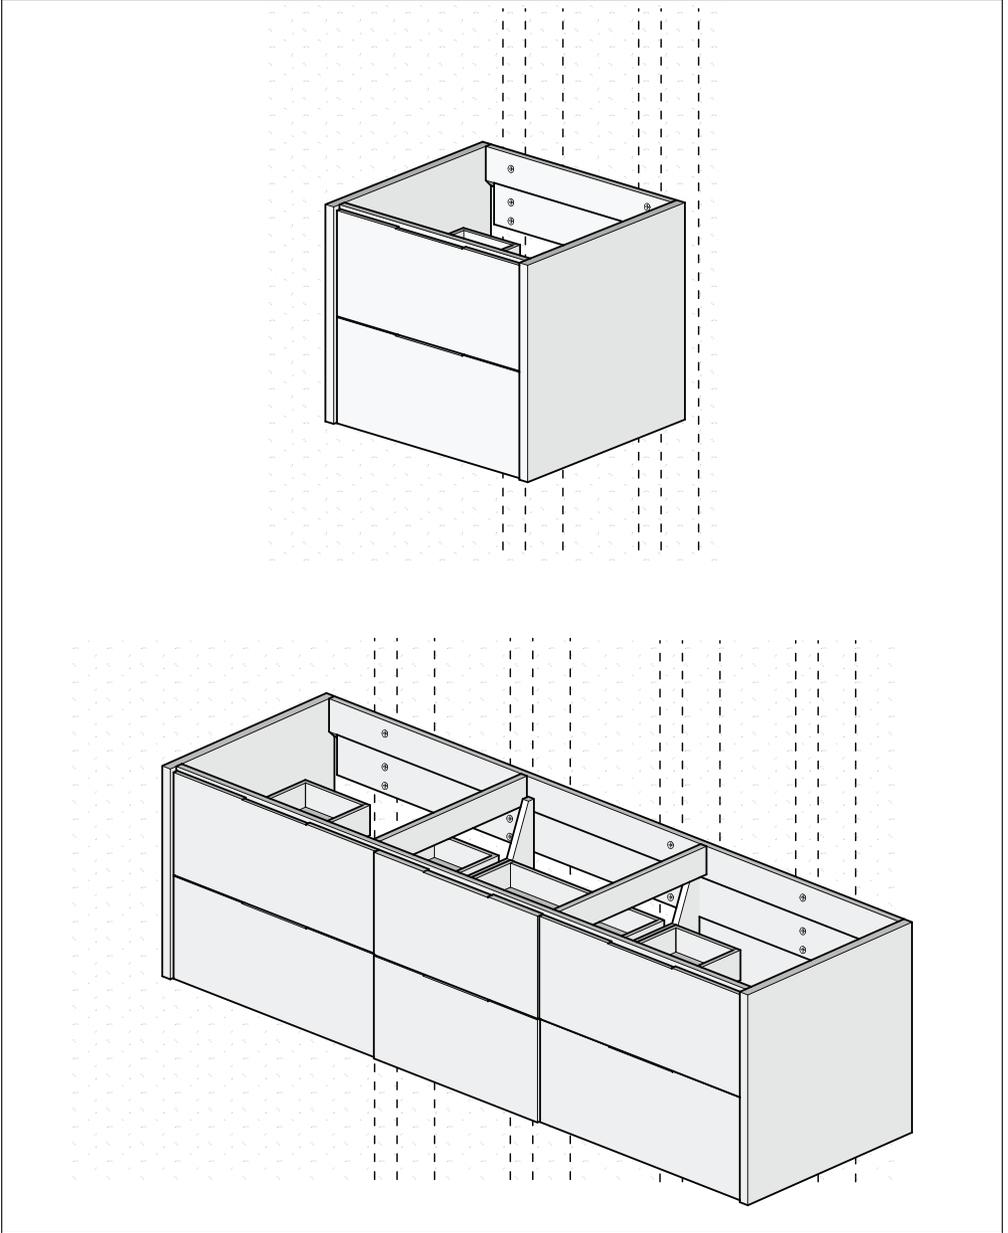



MORE INFORMATION



800-827-5950



customerservice@arielbath.com



ariel\_bath



www.arielbath.com