

(MH-BS-g10BK,GR)



ASSEMBLY INSTRUCTIONS

Do not throw away the packaging material until the assembly is complete. To protect finish, assemble this item on a soft surface such as a cardboard or a carpet.

While assembling the product, first tighten the screws up to 50%. Once all parts are in place, only then fully tighten the screws!

CARE INSTRUCTIONS


Wipe only with a soft & dry cloth.

To protect finish, avoid the use of abrasive cleaners. Any liquid spilled on the furniture should be cleaned up immediately with a damp cloth.

PRODUCT PARTS



A
WOODEN TOP

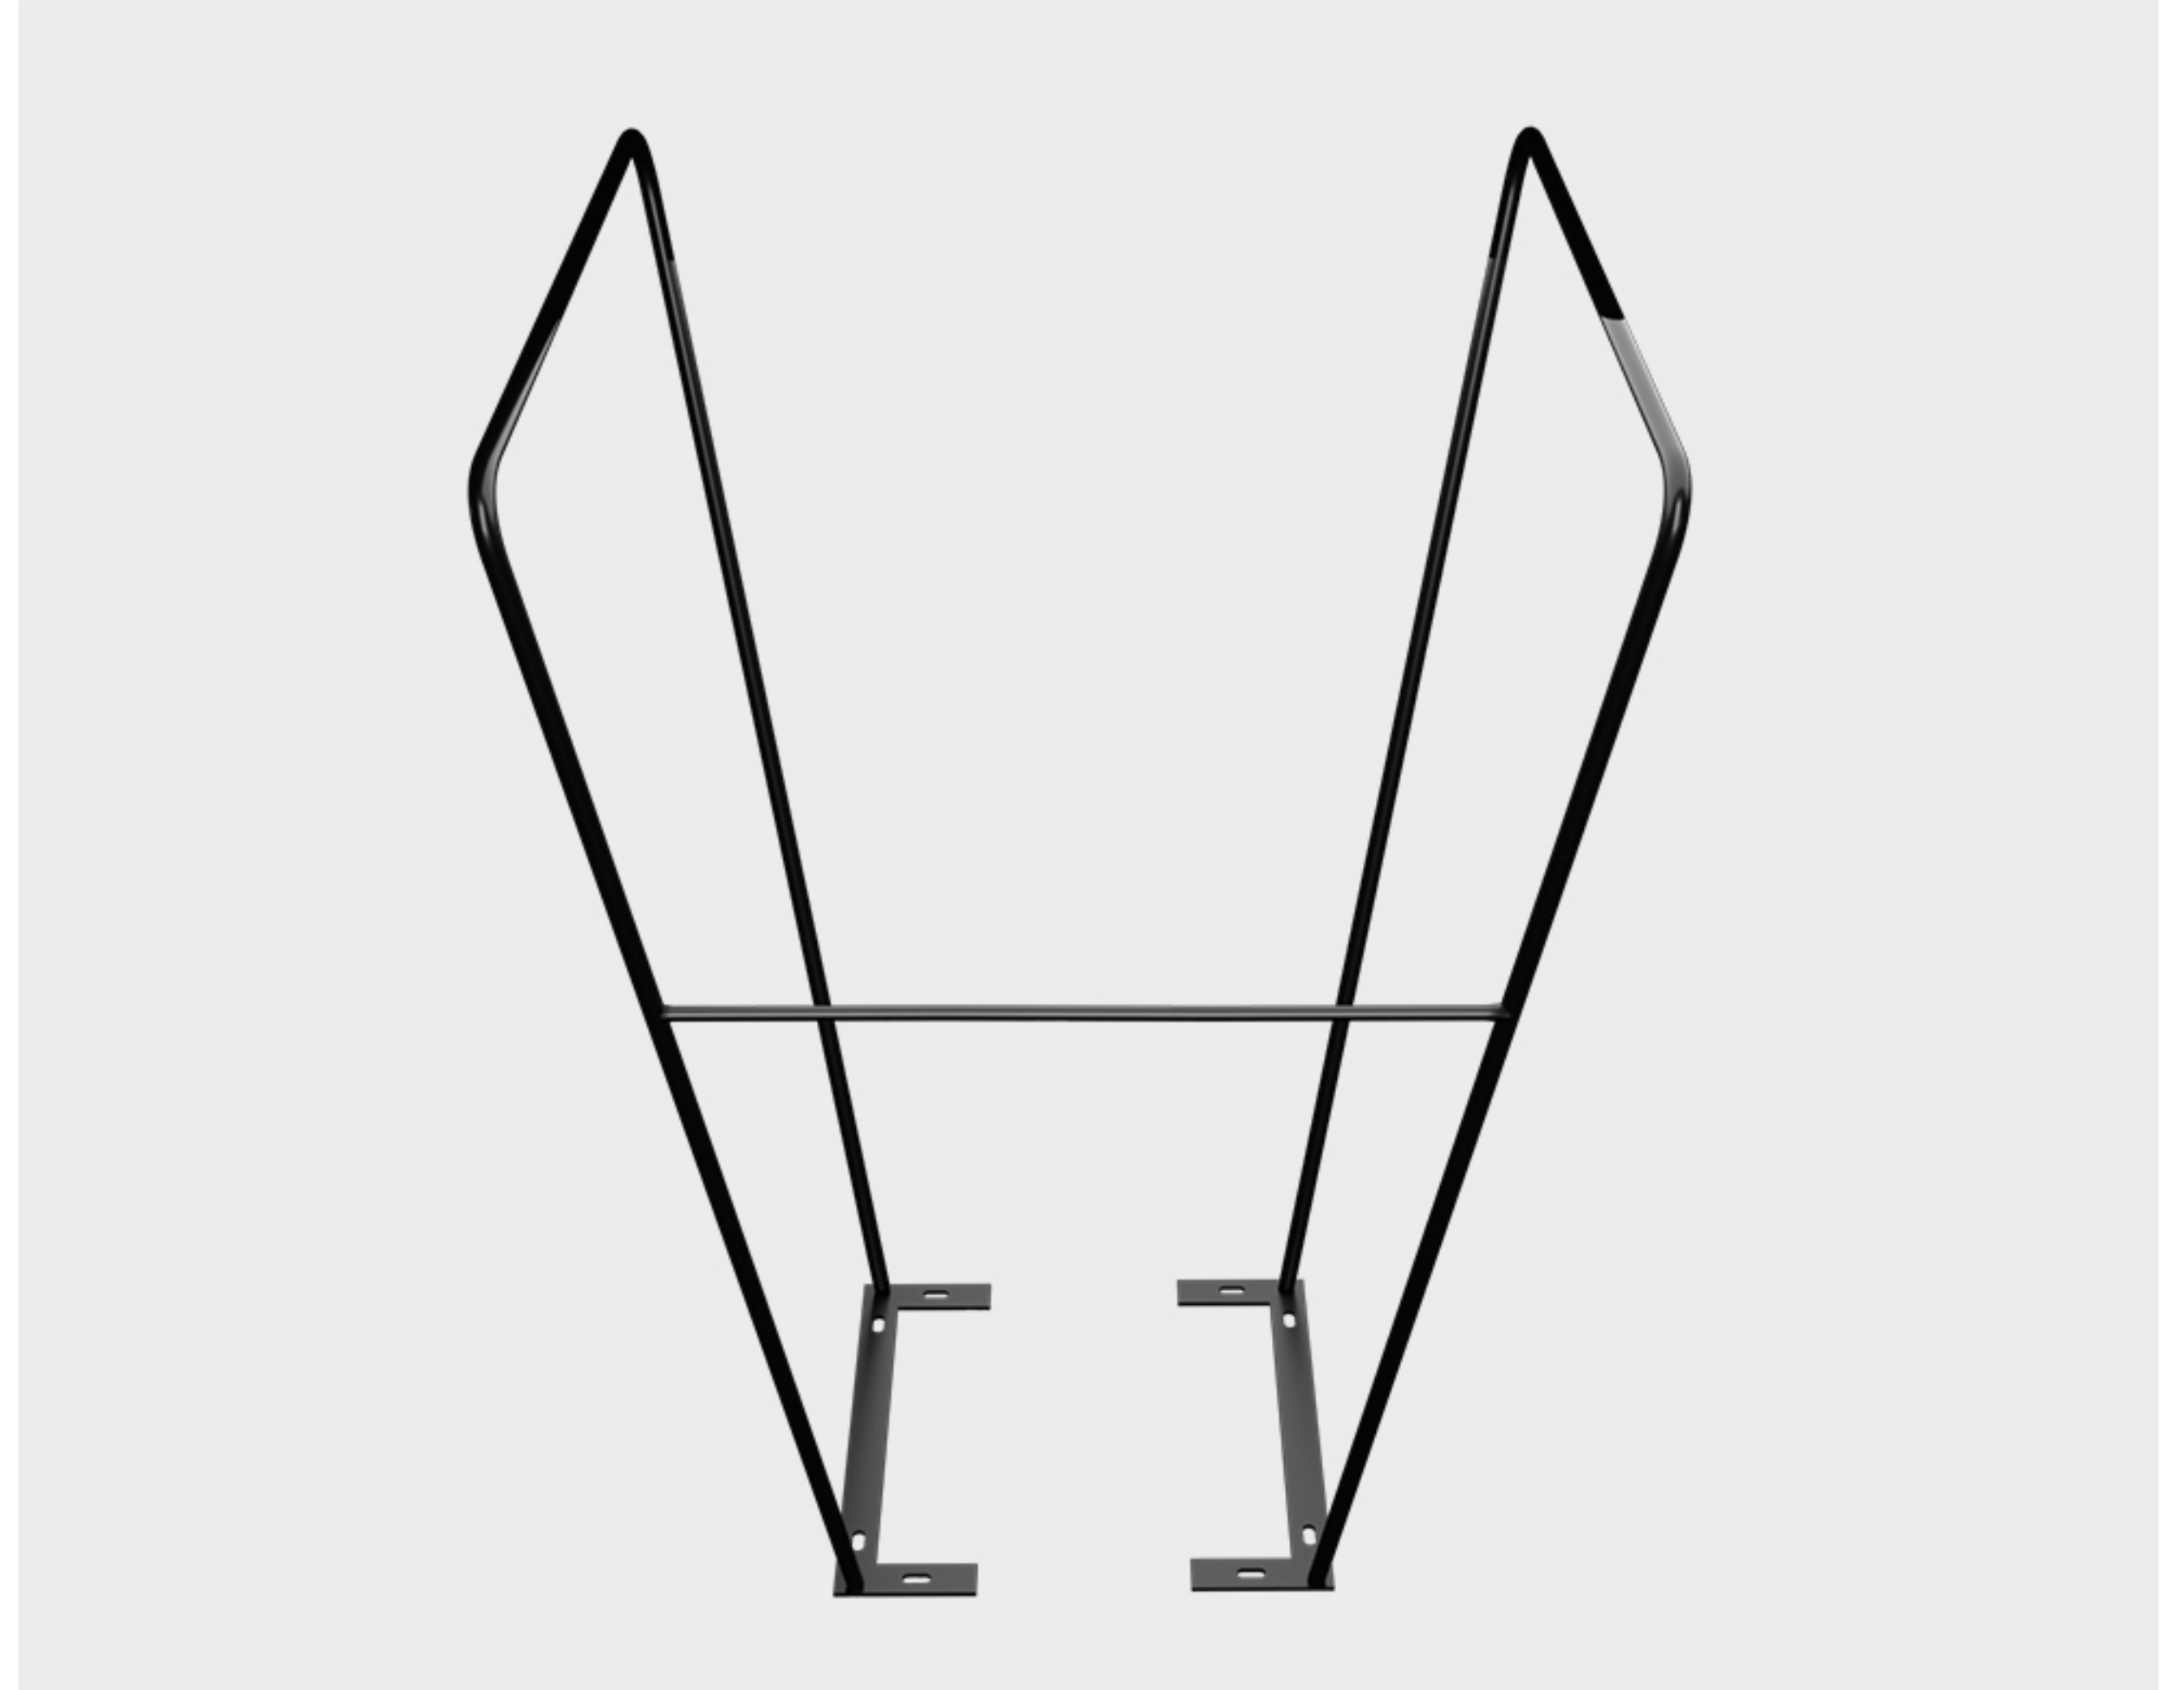


C
METAL LEGS




B
FOOTREST

HARDWARE PROVIDED

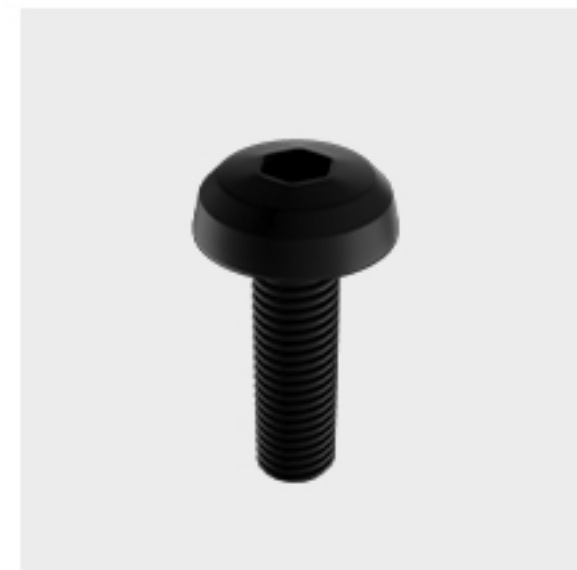


D
ALLEN BOLT
10X

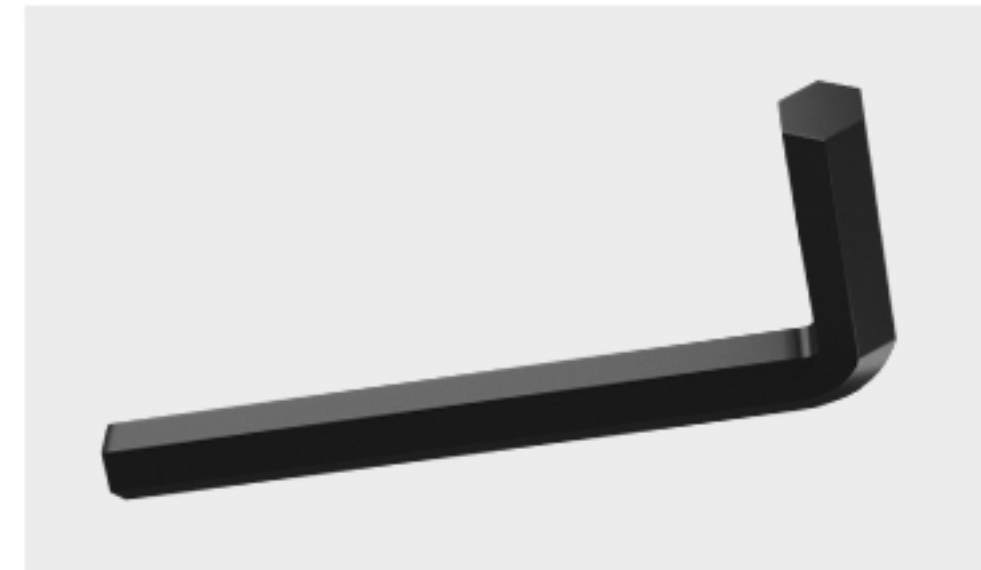


E
ALLEN KEY
1X

STEP 1

Turn the Wooden Top (A) of the stool upside down.
Put the metal legs (C) of the stool on top of it.

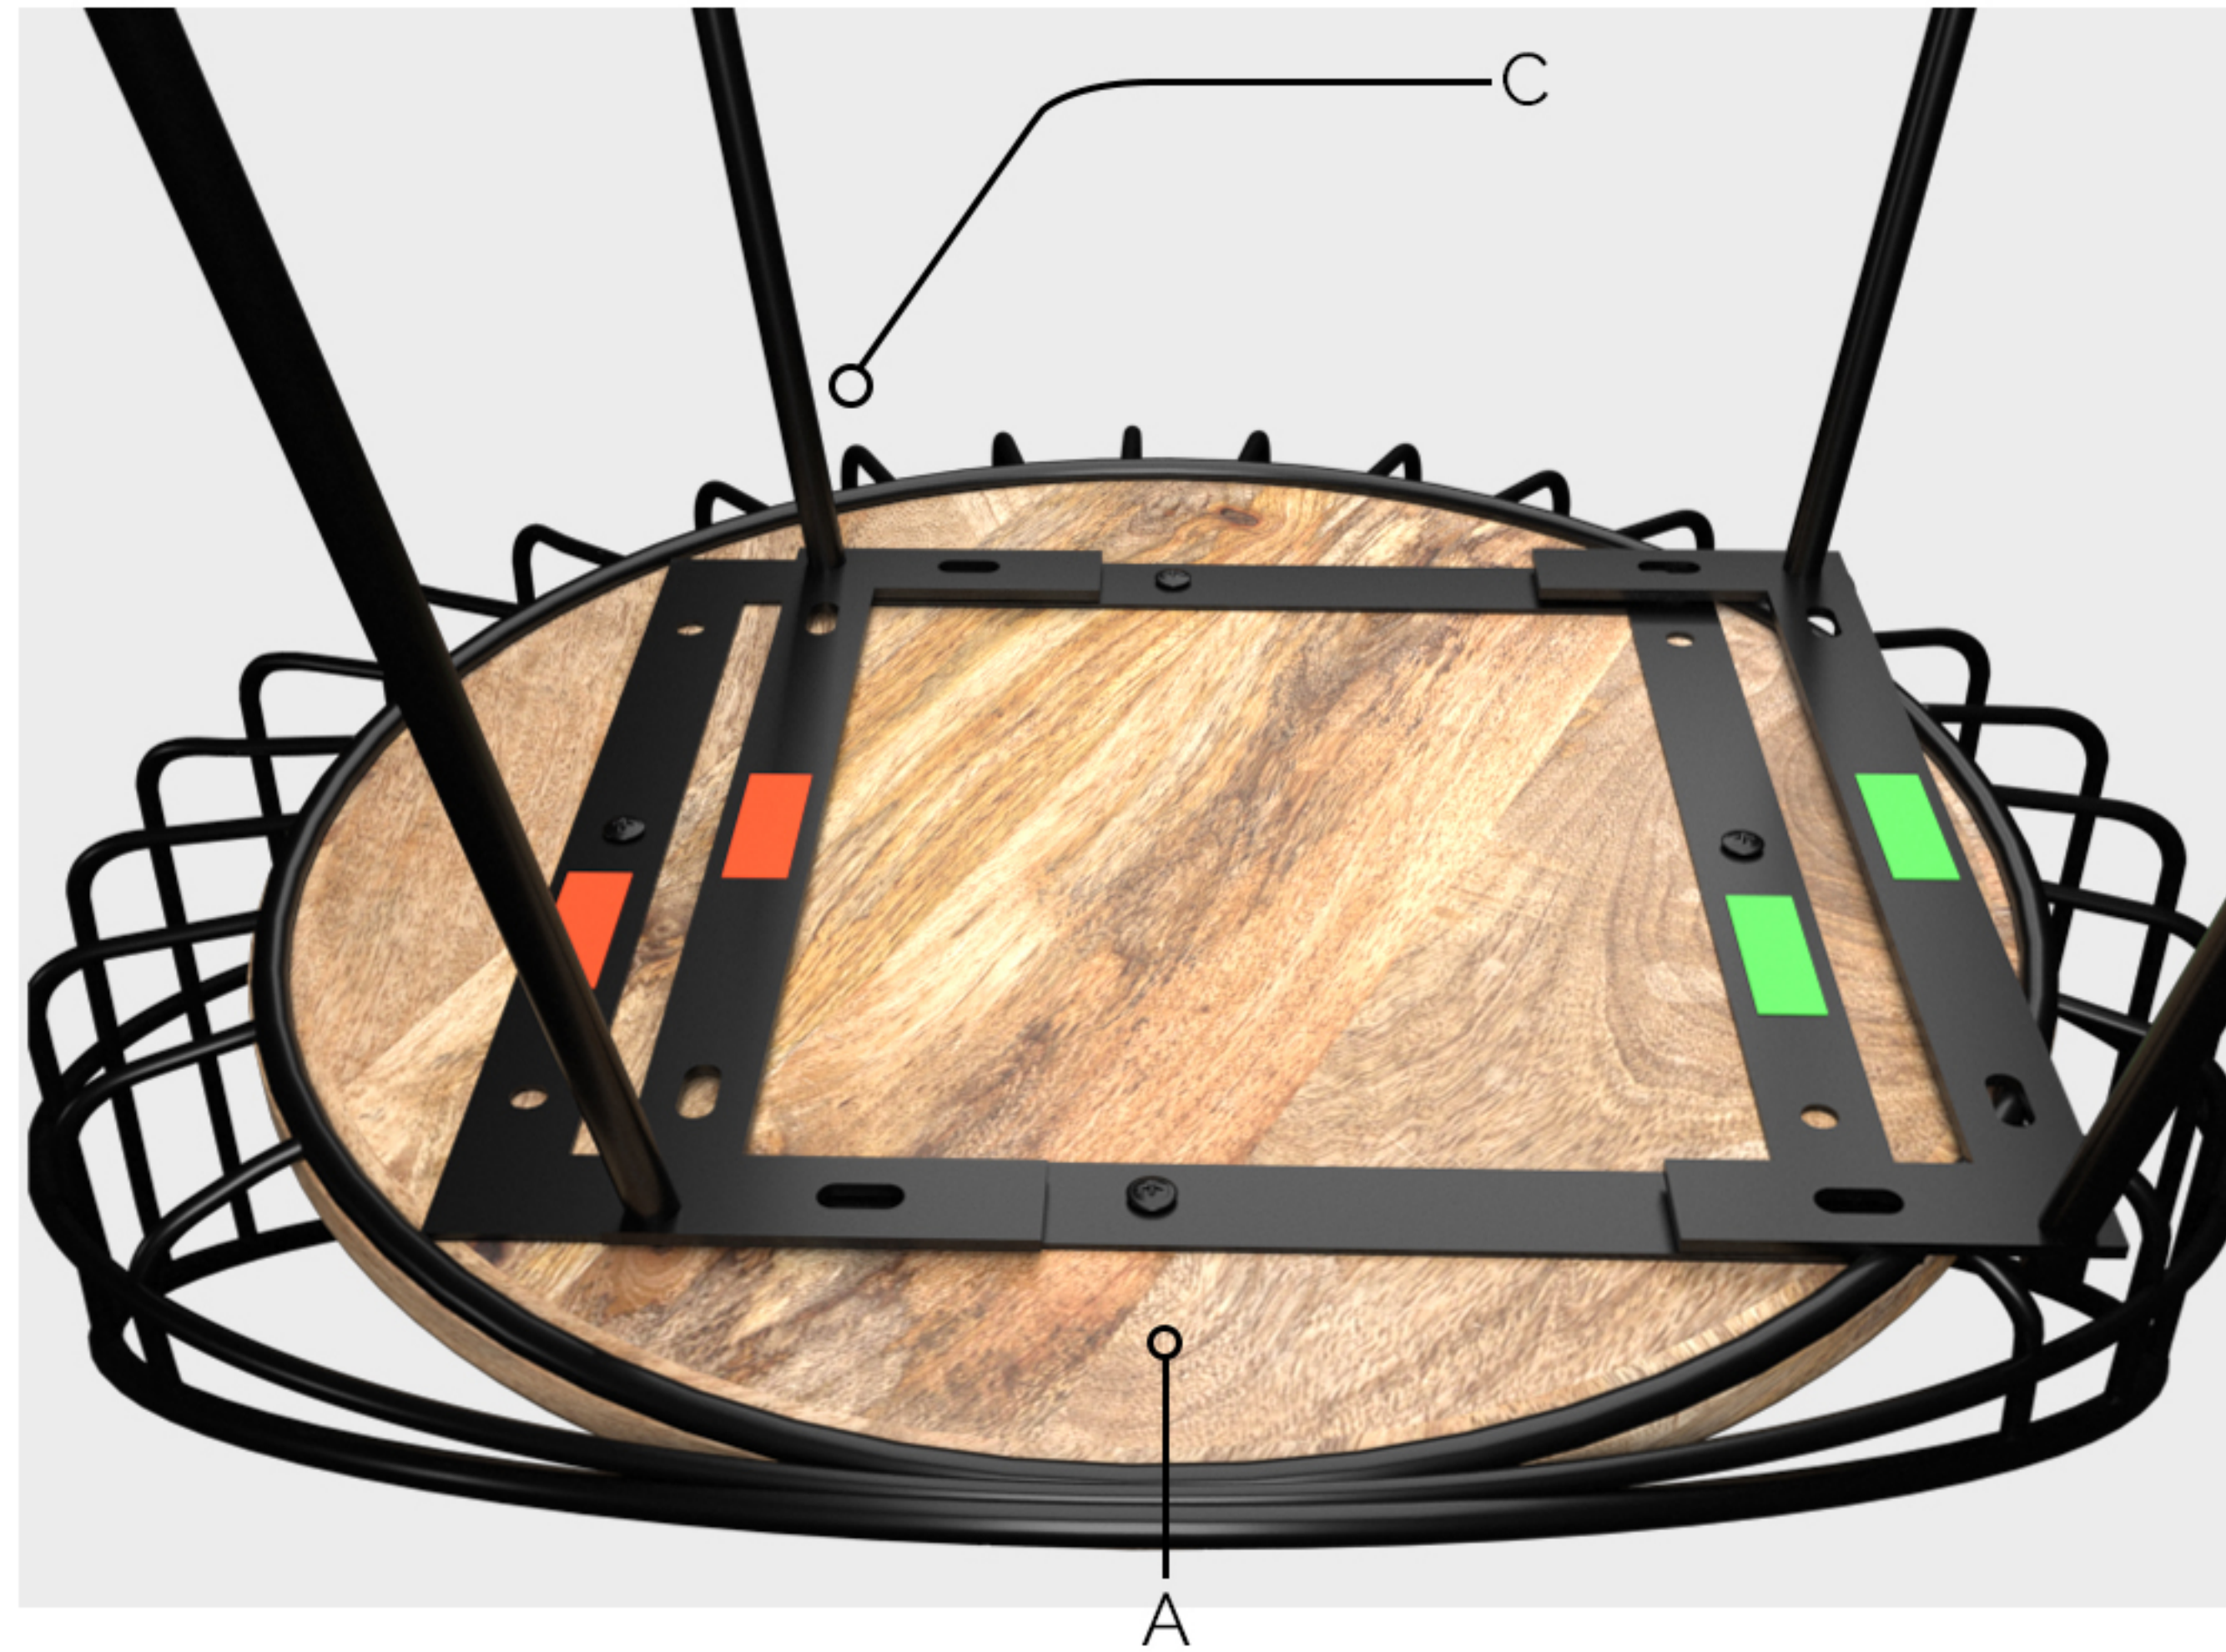


STEP 2

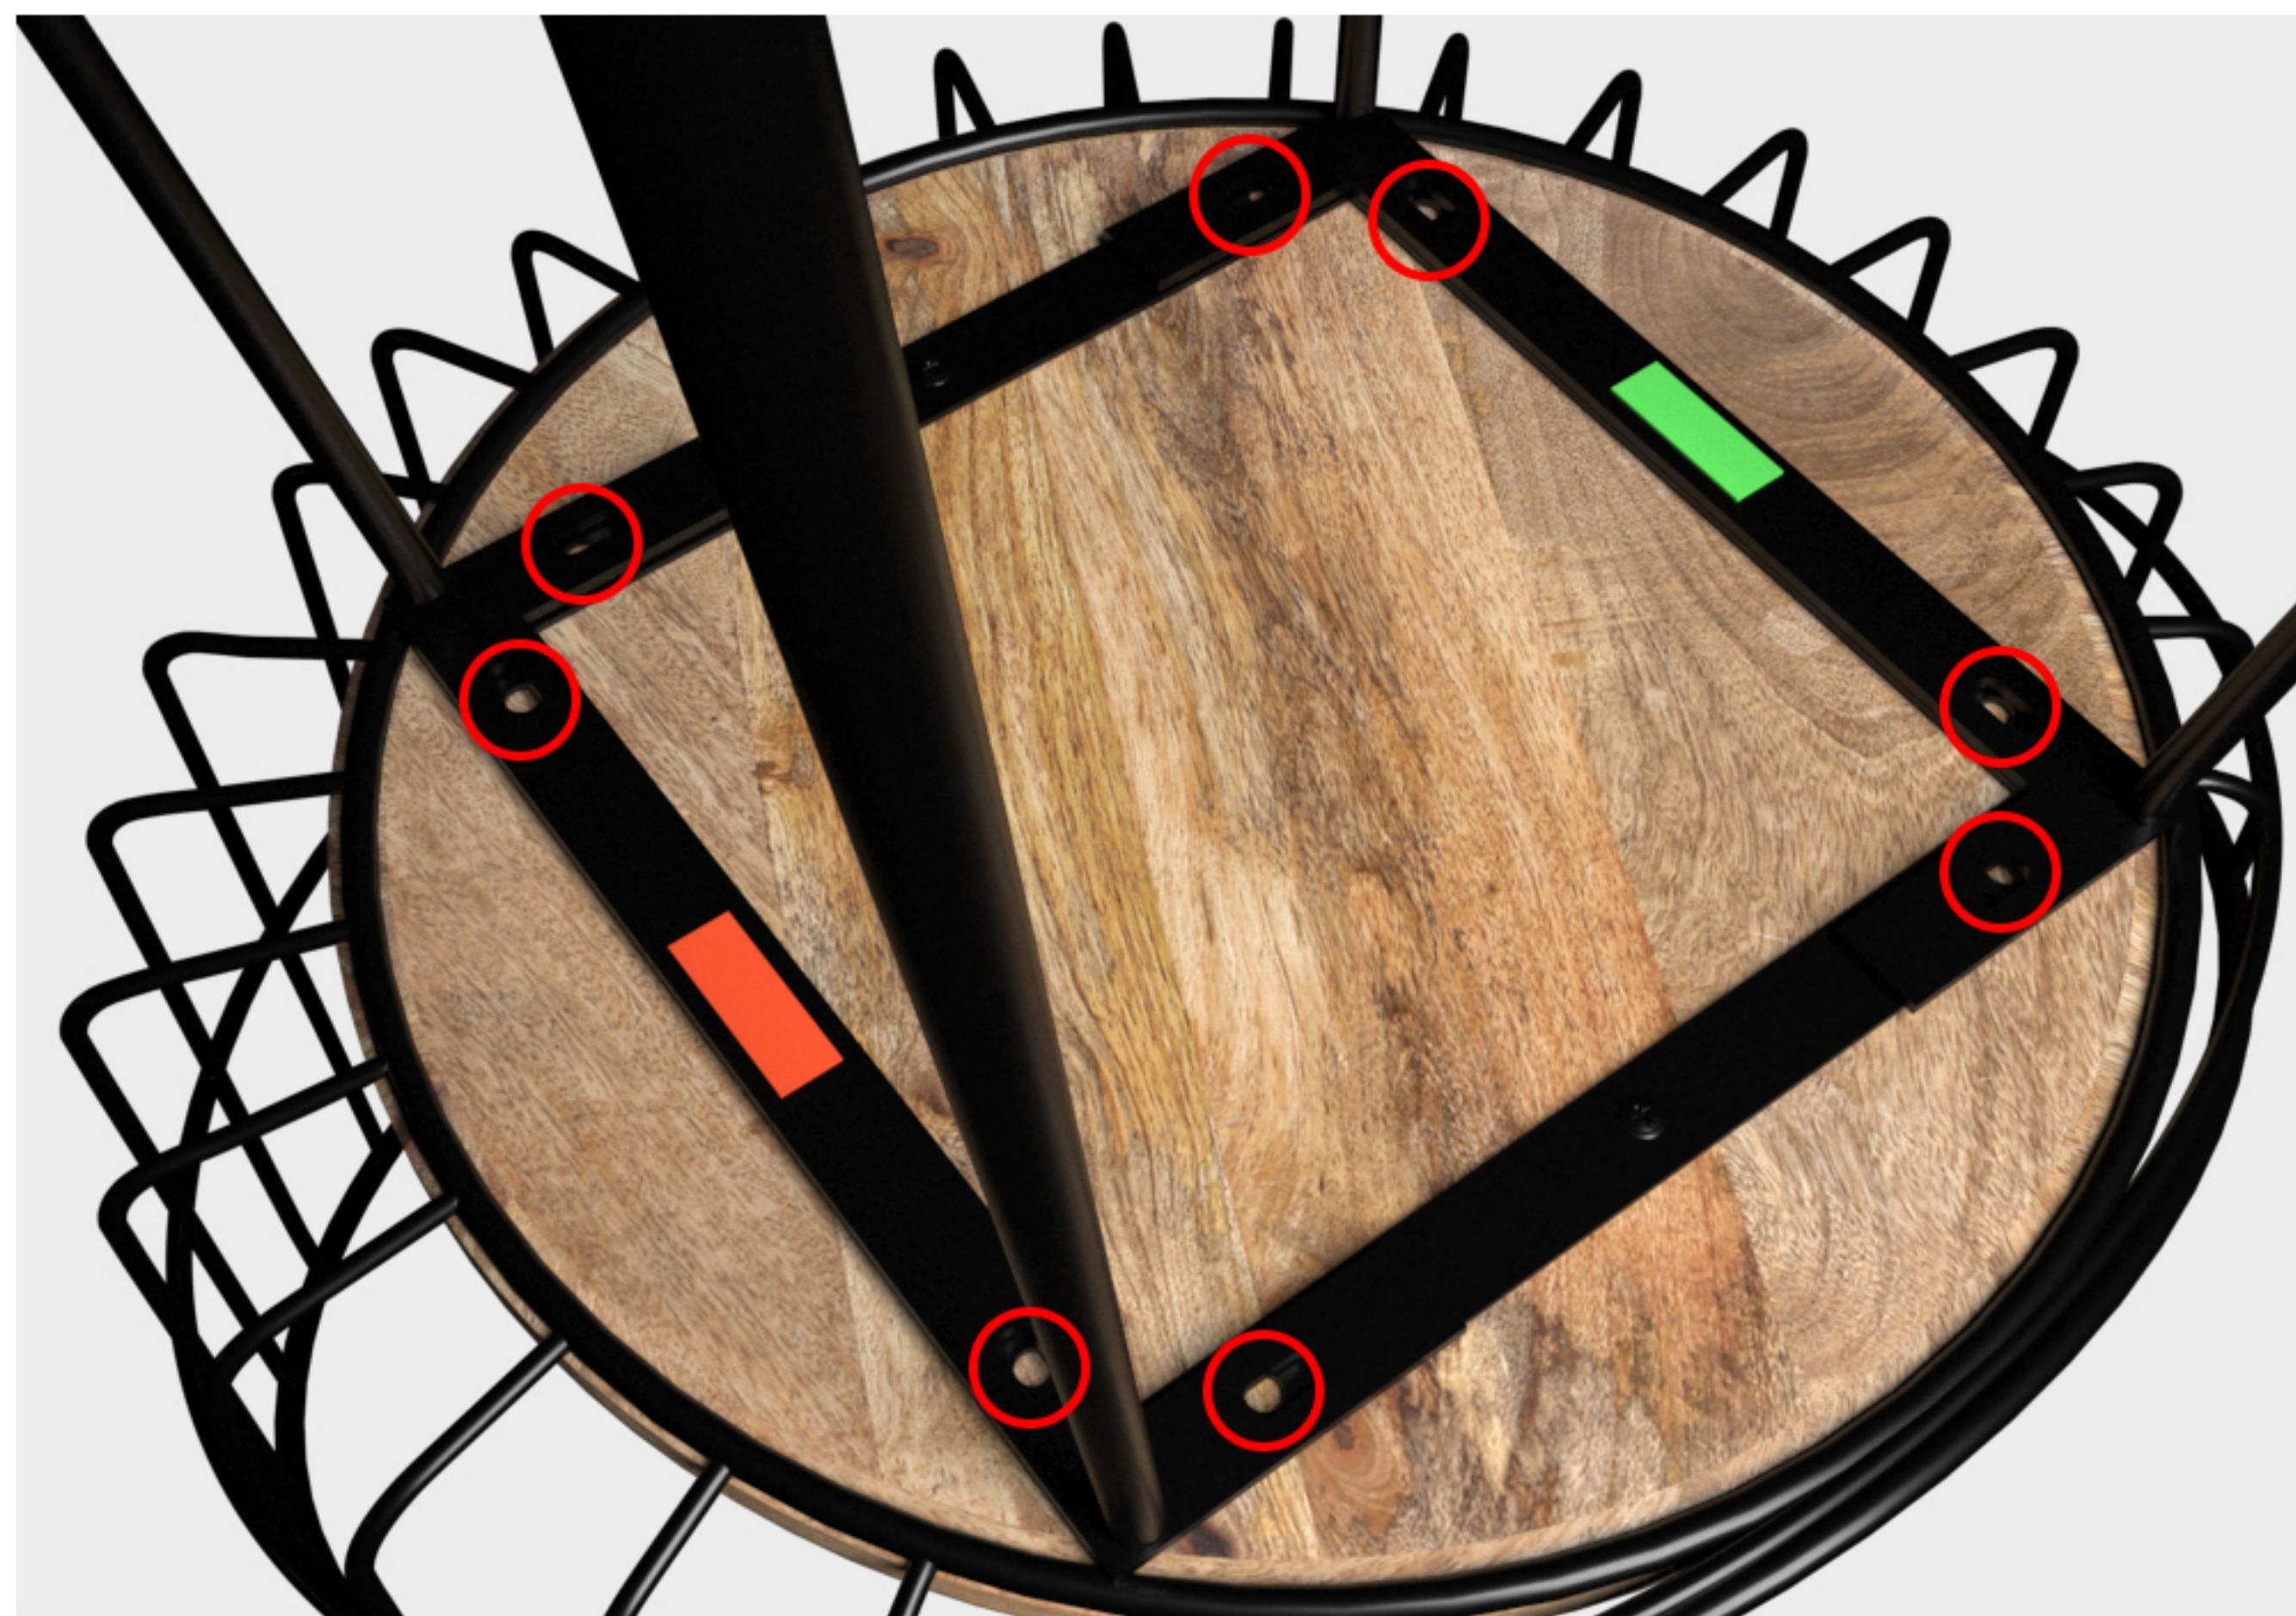

See the highlighted red circles to know where to tighten Allen Bolts (D).


STEP 3

Place the Allen Bolts (D) on the highlighted parts as shown in Step 2 and using an Allen Key (E), tighten them.

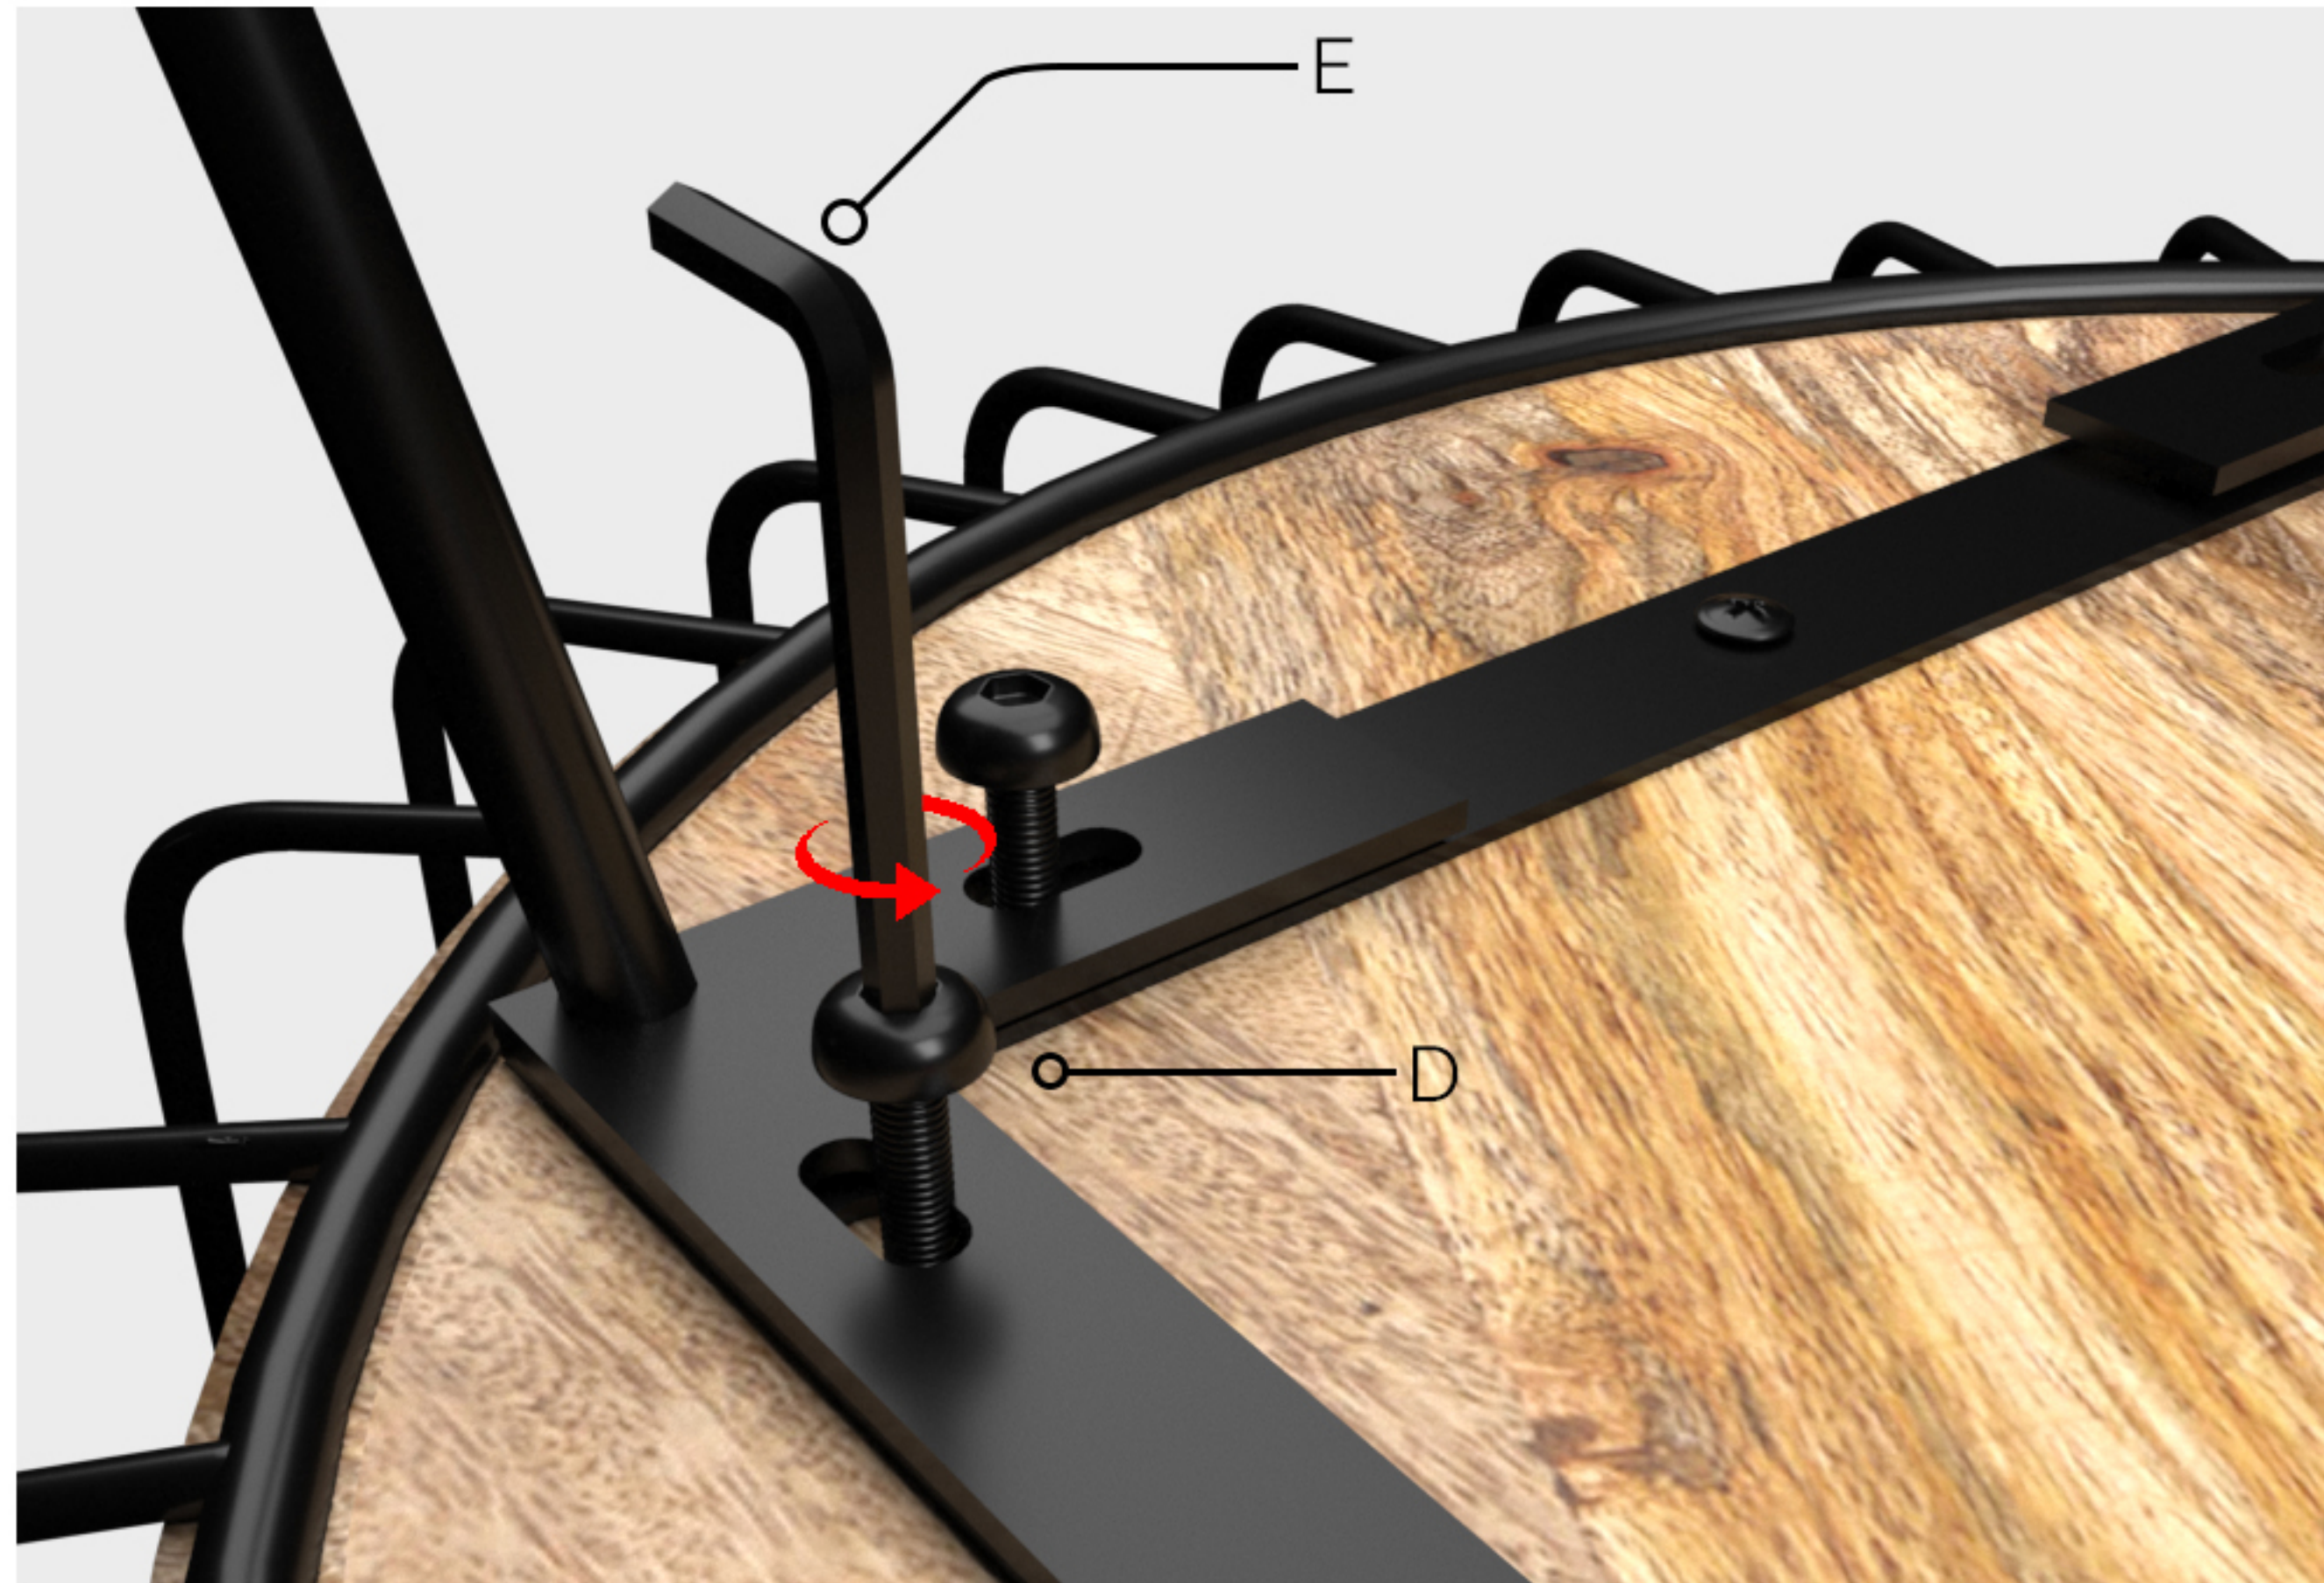


STEP 4

Insert Footrest (B) inside the slots in the metal base as shown in the image below.

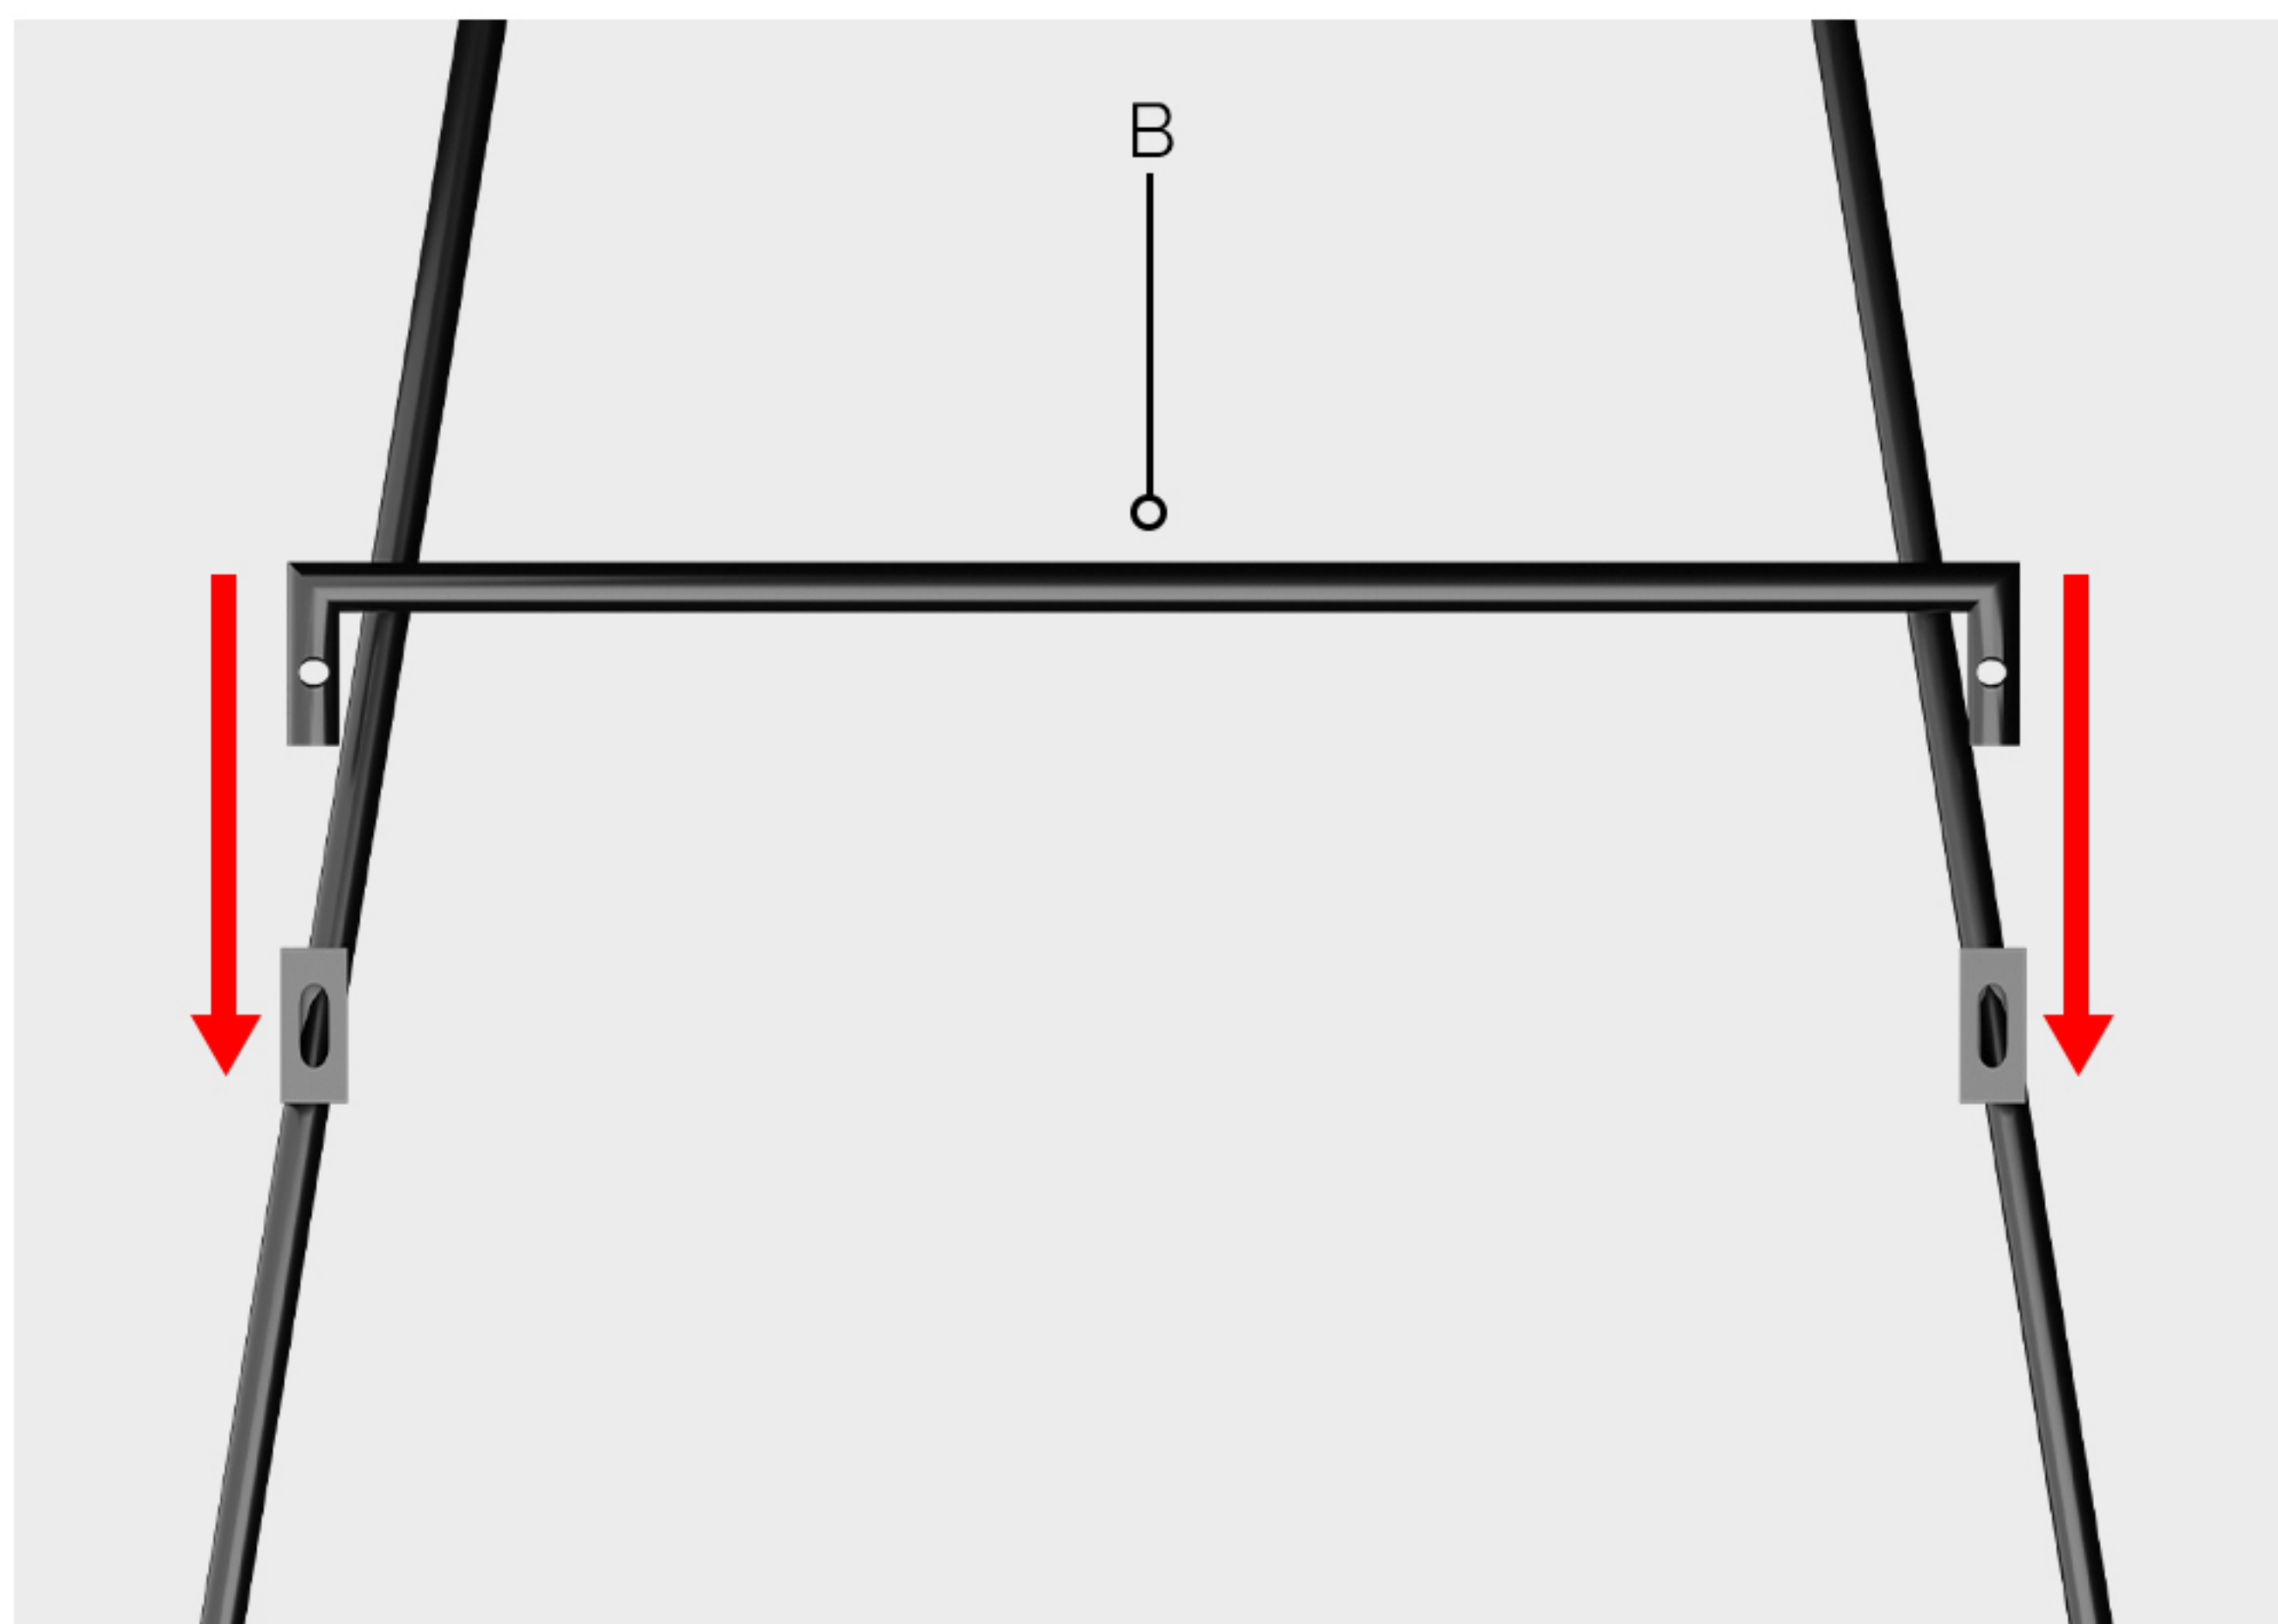

STEP 5

Place the Allen Bolts (D) using the image below as reference and tighten them using Allen Key (E).

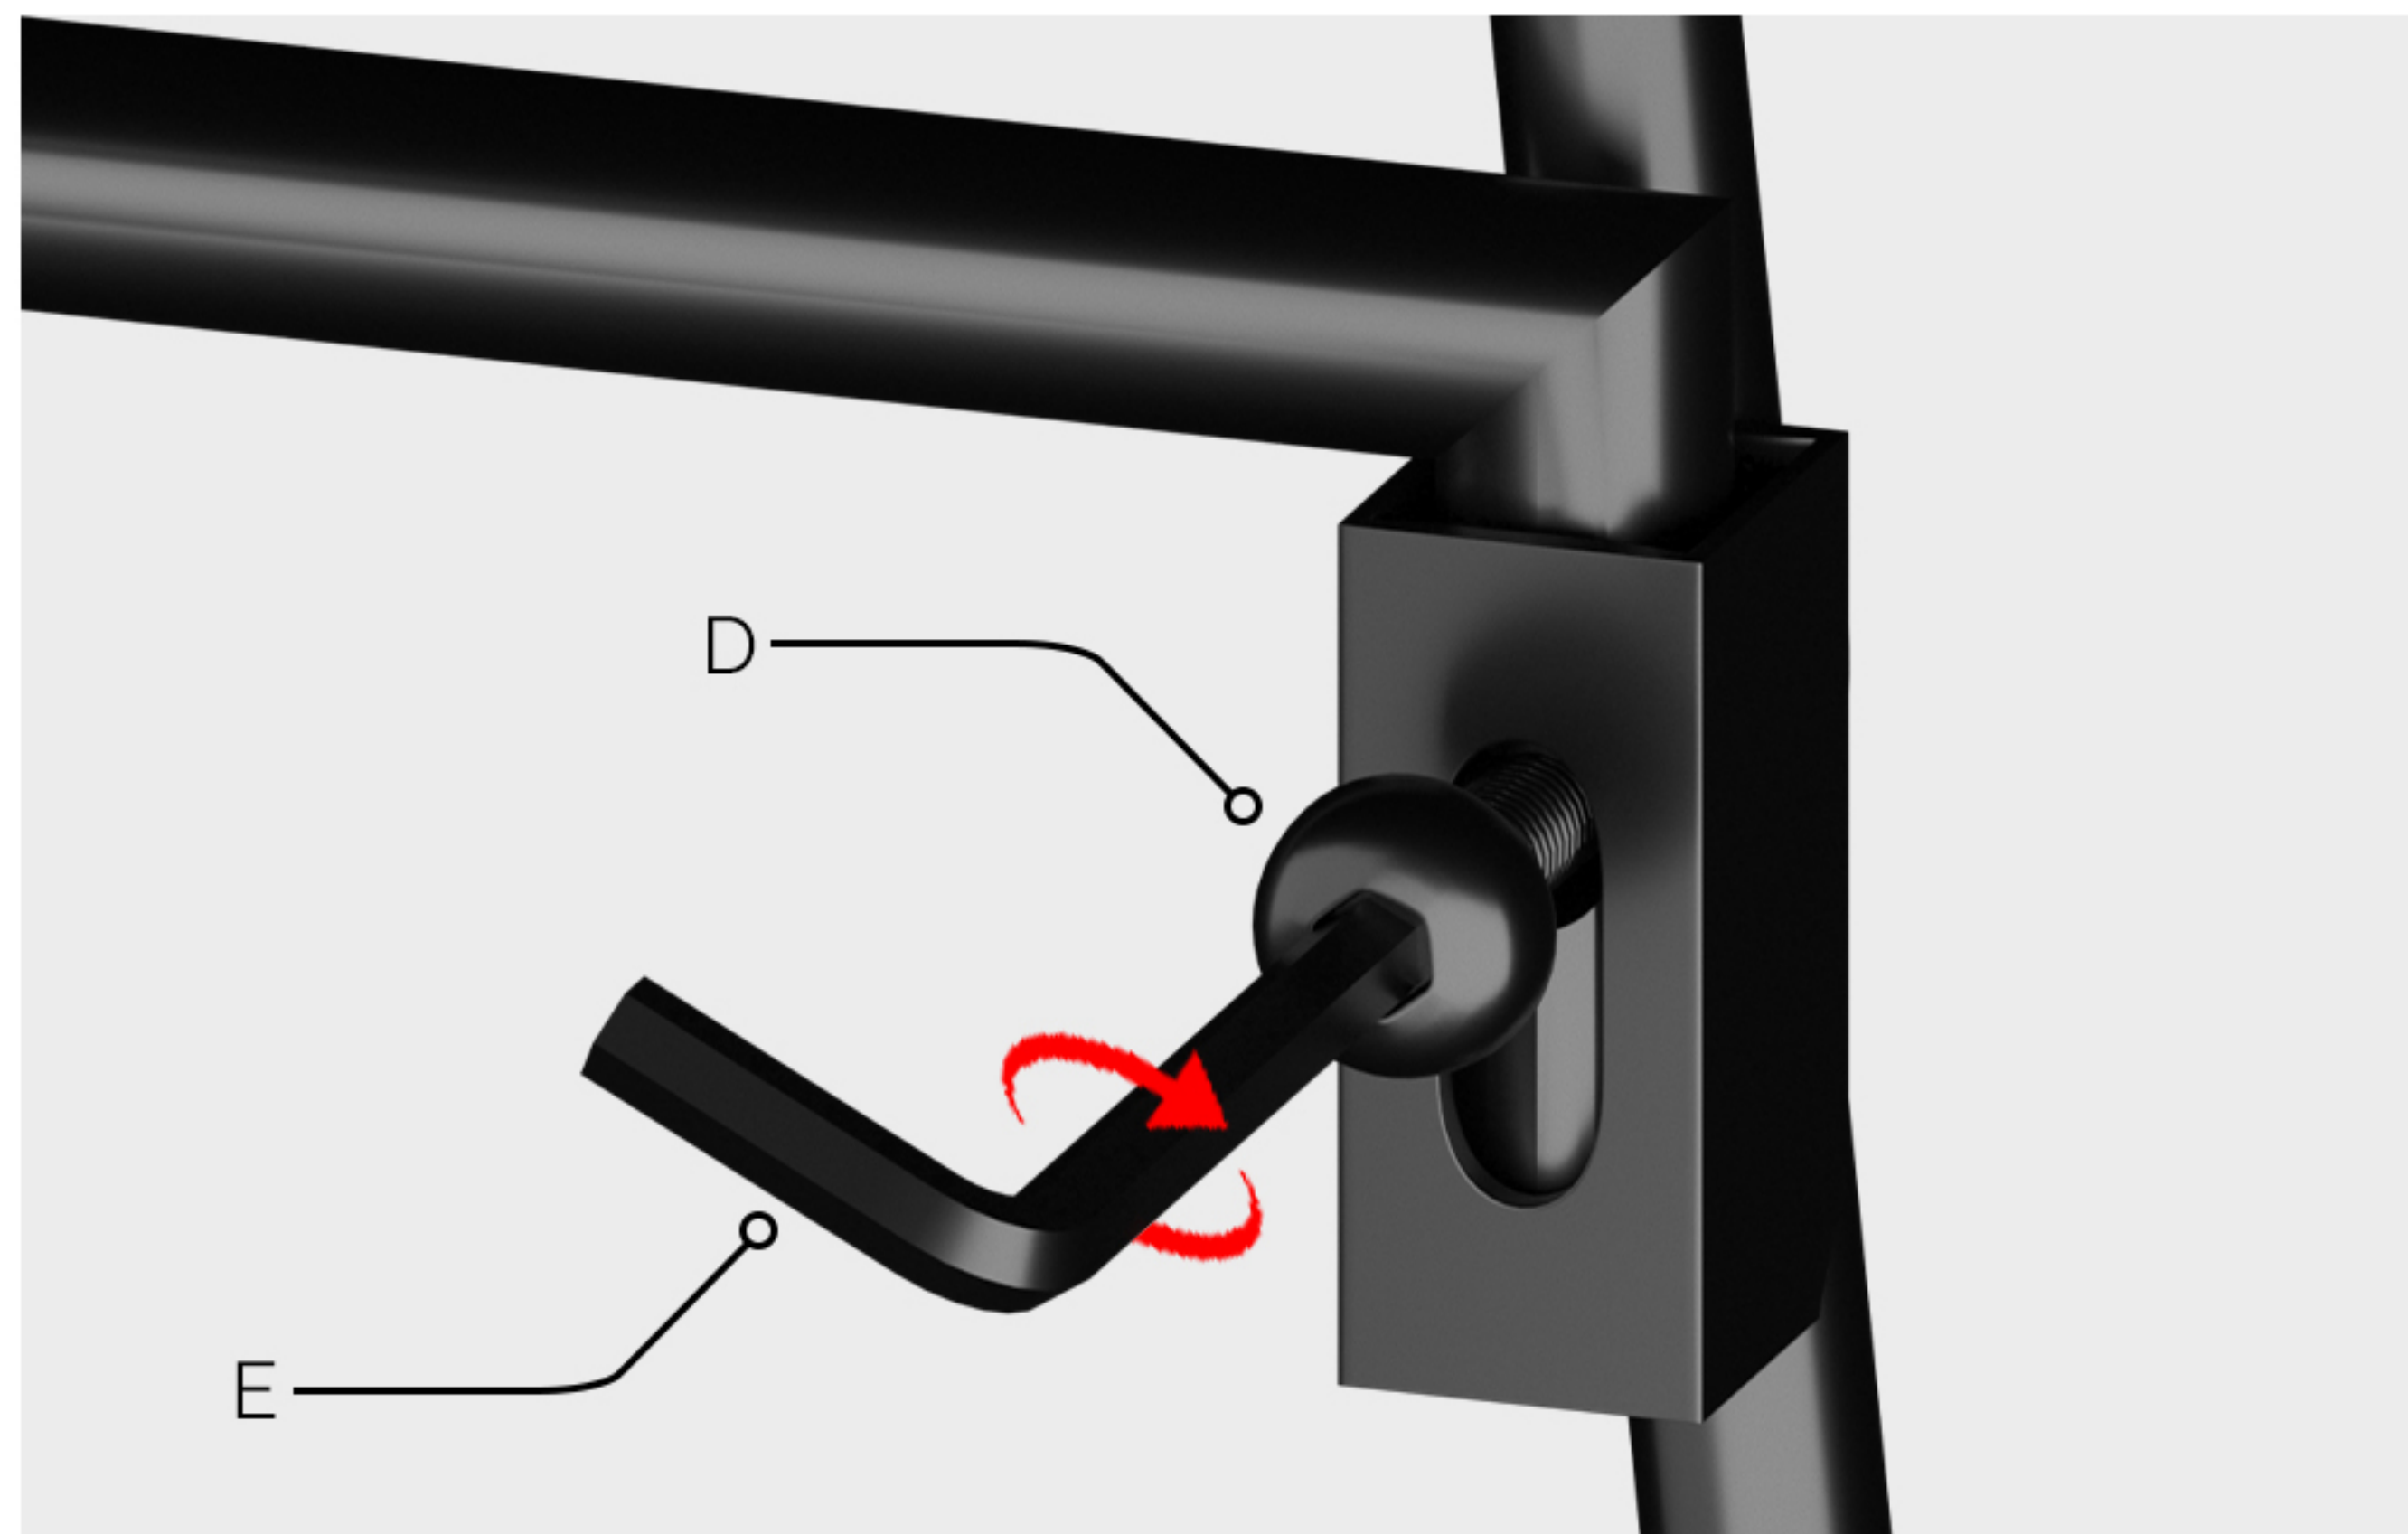

Your assembly is now complete!