
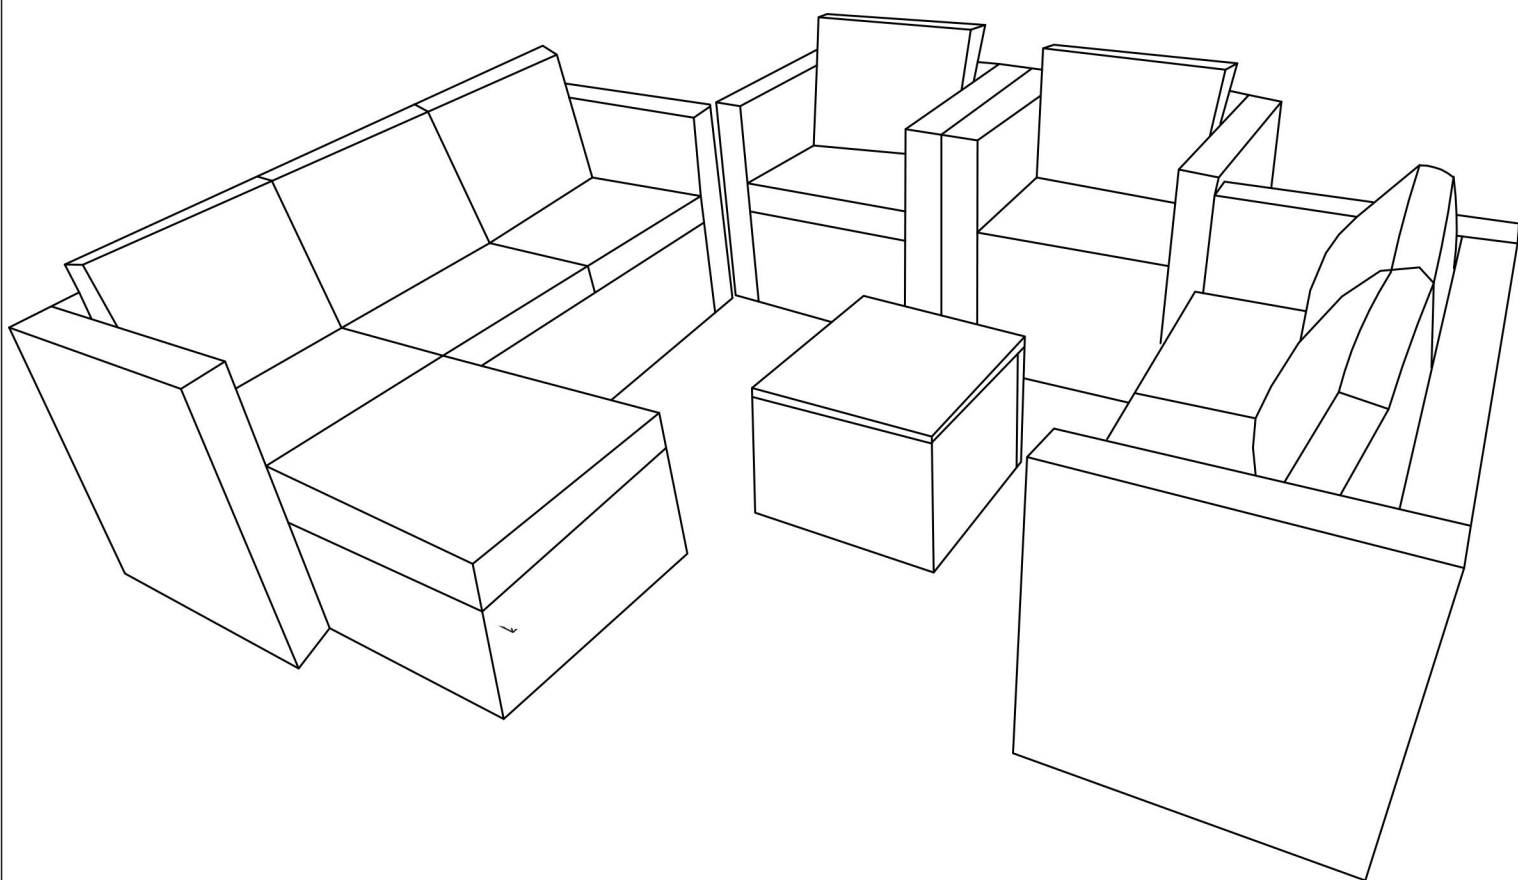
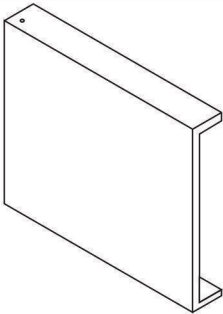
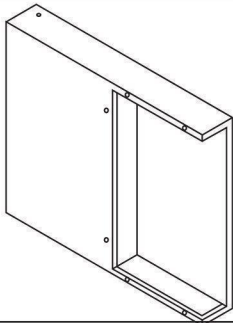
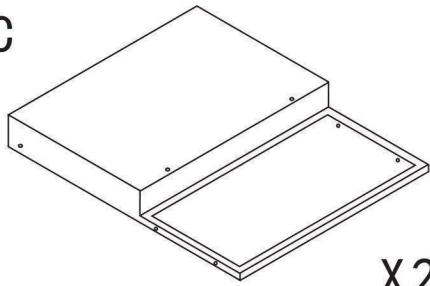
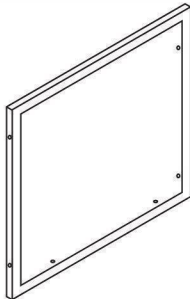
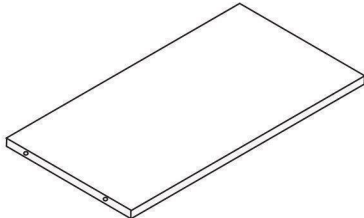
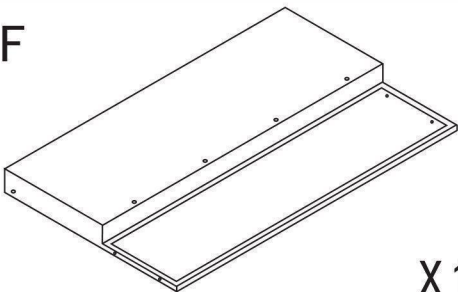
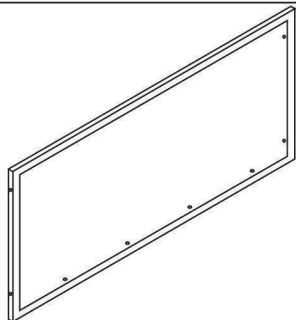
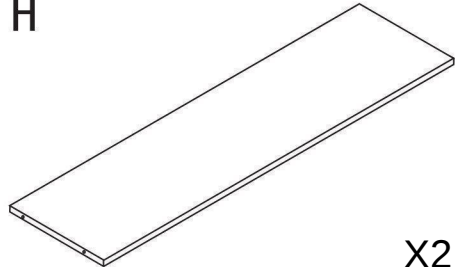

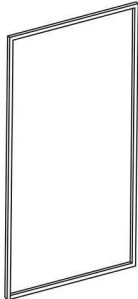
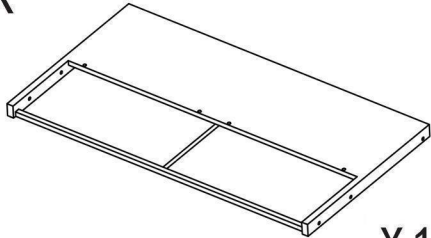
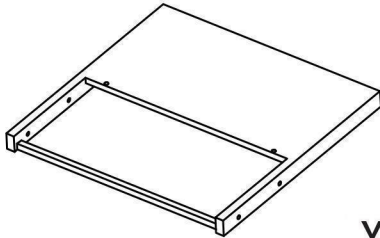
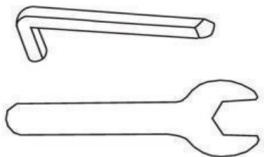


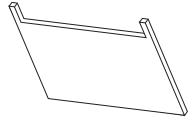
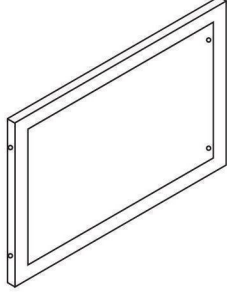






NOTE:DO NOT TIGHTEN BEFORE FIXING ALL BOLTS

A		X4	B		X4	C		X2
D		X2	E		X2	F		X1
G		X2	H		X2	I		X1
J		X1	K		X1	L		X1
		X1	N		X1	O		X2
Y		X1	Q		X2	R		X2
 M 6X35 #1 X44		 M 6X55 #2 X38		 M 6X95 #3 X8		 #4 X38		 M6*15 #5 X4


1

#1*4
#2*4
#3*2
#4*4

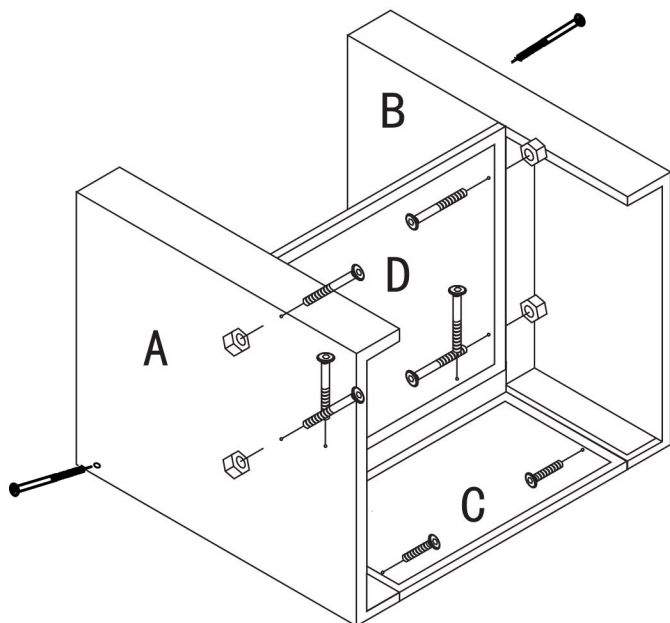


2

#2*4
#4*4

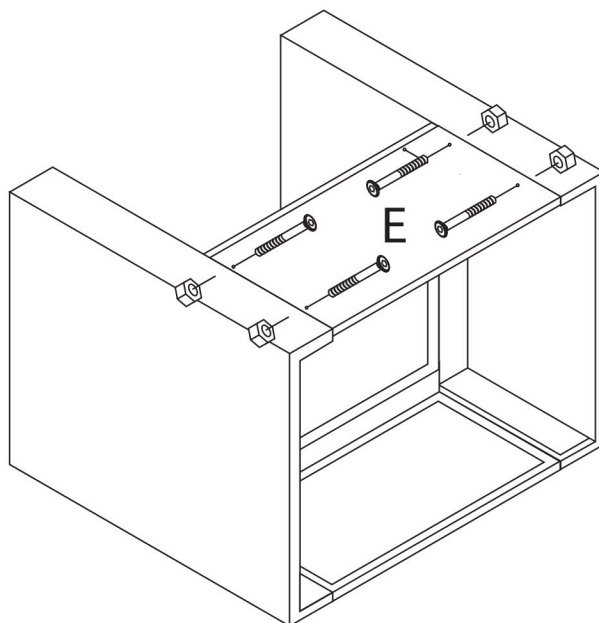


3

#1*6
#2*4
#3*2
#4*4

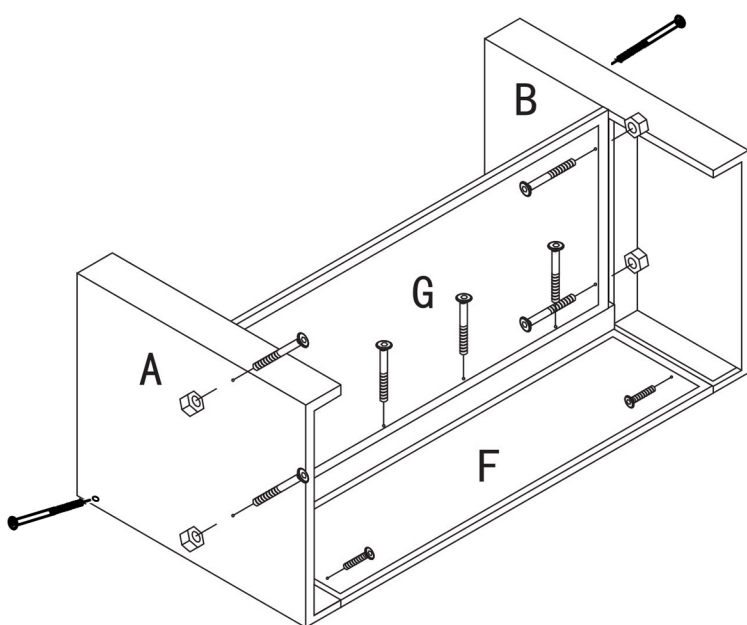


4

#1*4
#2*4
#4*4

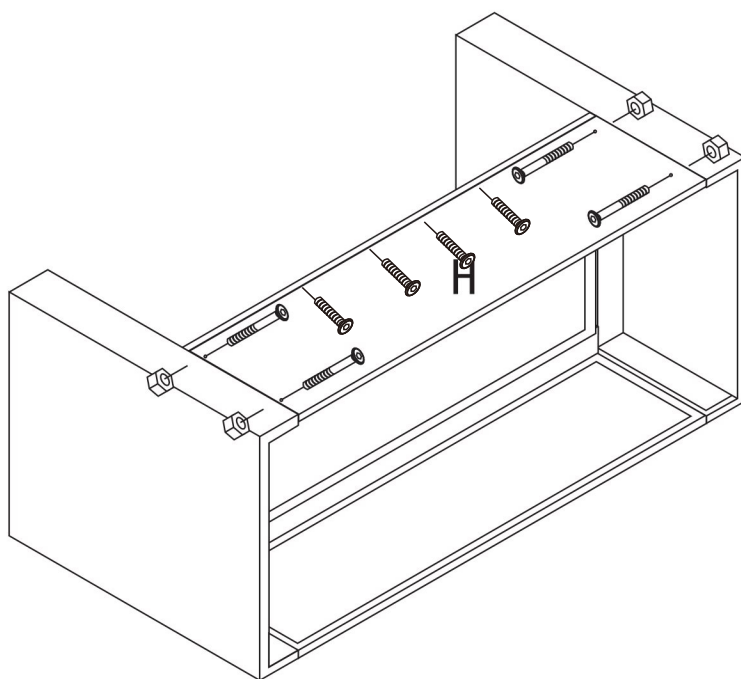


5

#1*2
#2*2
#3*2
#4*2

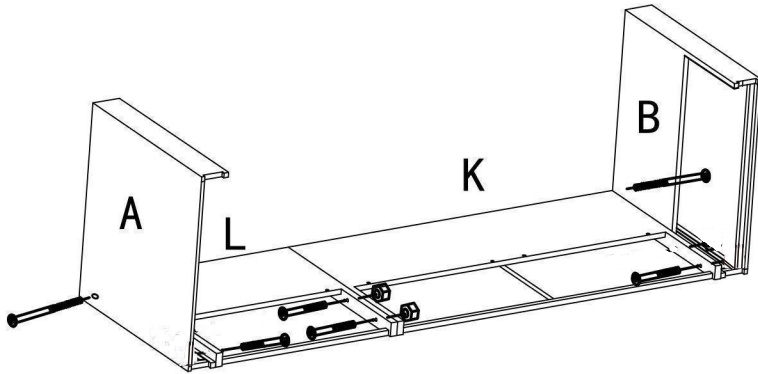


6

#1*6
#2*6
#4*6

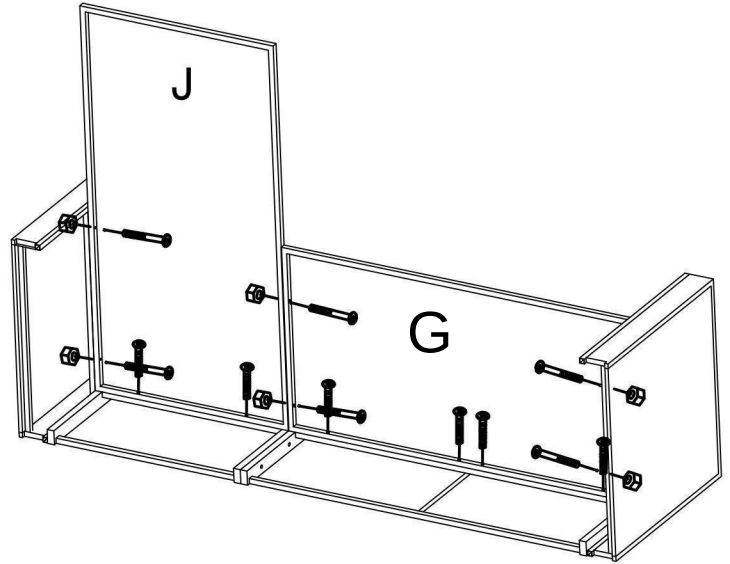

7

#1*6
#2*2
#4*2

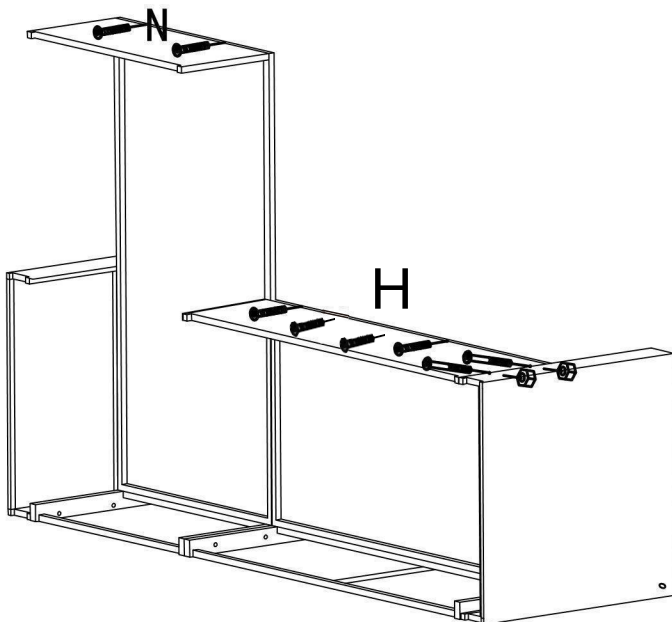

8

#1*4
#2*4
#4*4

