

E-Z DISHWASHER BRACKET



INSTALLATION BEFORE PLACEMENT OF COUNTER TOP



STEP 1:

Place the E-Z DISHWASHER BRACKET across the dishwasher opening on top of the cabinets with the raised panels facing up and the tabs flush to the cabinet facing. Secure the bracket with (4) #6X1/2" wood screws (provided). These are the same size screws used to anchor hinges to delicate cabinet doors.



STEP 2:

Apply silicone or rubberized adhesive caulk to the three raised panels on the bracket as shown – the bracket design will conceal any caulk squeeze out. This provides shock absorption to withstand the daily use of the dishwasher door.



STEP 3:

The counter top can now be installed on top of the bracket. To install the dishwasher, attach the dishwasher straps to the E-Z DISHWASHER BRACKET using one of the many attachment holes. This will result in a secure and professional finished installation.



Order today at www.chemical-concepts.com, or call us at 800-220-1966 to speak with our adhesive experts!



**Chemical
Concepts**
Our customers stick with us.

chemical-concepts.com
410 Pike Road
Huntingdon Valley, PA 19006
800.220.1966

E-Z DISHWASHER BRACKET




INSTALLATION AFTER PLACEMENT OF COUNTER TOP



STEP 1:

For new or remodel installations where the counter top has already been placed, bend the end tabs of the E-Z DISHWASHER BRACKET into a 90 degree angle as shown, with the raised panels facing up.

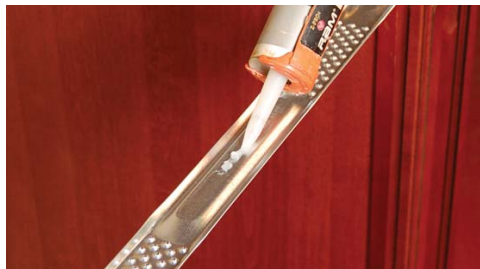

STEP 2:

Apply silicone or rubberized adhesive caulk to the three raised panels on the bracket as shown. This provides shock absorption to withstand the daily use of the dishwasher door.



STEP 3:

Put the bracket into place under the counter top with the tabs flush to the cabinet facing. Press bracket up against the counter top – the bracket design will conceal any caulk squeeze out.



STEP 4:

Attach bracket to the cabinet sides with (4) #6X1/2" wood screws (provided). Caulk edges to provide a finished seal.



STEP 5:

Attach the dishwasher straps to the E-Z DISHWASHER BRACKET using one of the many attachment holes. This will result in a secure and professional finished installation.

Order today at www.chemical-concepts.com, or call us at 800-220-1966 to speak with our adhesive experts!

 **Chemical Concepts**
Our customers stick with us. www.chemical-concepts.com
410 Pike Road
Huntingdon Valley, PA 19006
800.220.1966

E-Z DISHWASHER BRACKET



INSTALLATION WITH LAMINATE COUNTER TOP



STEP 1:

For new or remodel installations where the counter top has already been placed, bend the end tabs of the E-Z DISHWASHER BRACKET into a 90 degree angle as shown, with the raised panels facing up.



STEP 2:

Apply silicone or rubberized adhesive caulk to the three raised panels on the bracket as shown. This provides shock absorption to withstand the daily use of the dishwasher door.



STEP 3:

Put the bracket into place under the counter top with the tabs flush to the cabinet facing. Press bracket up against the counter top – the bracket design will conceal any caulk squeeze out.



STEP 4:

Attach bracket to the cabinet sides with (4) #6X1/2" wood screws (provided). Caulk edges to provide a finished seal.



STEP 5:

Attach the dishwasher straps to the E-Z DISHWASHER BRACKET using one of the many attachment holes. This will result in a secure and professional finished installation.

Order today at www.chemical-concepts.com, or call us at 800-220-1966 to speak with our adhesive experts!

 **Chemical Concepts**
Our customers stick with us. [chemical-concepts.com](http://www.chemical-concepts.com)
410 Pike Road
Huntingdon Valley, PA 19006
800.220.1966