


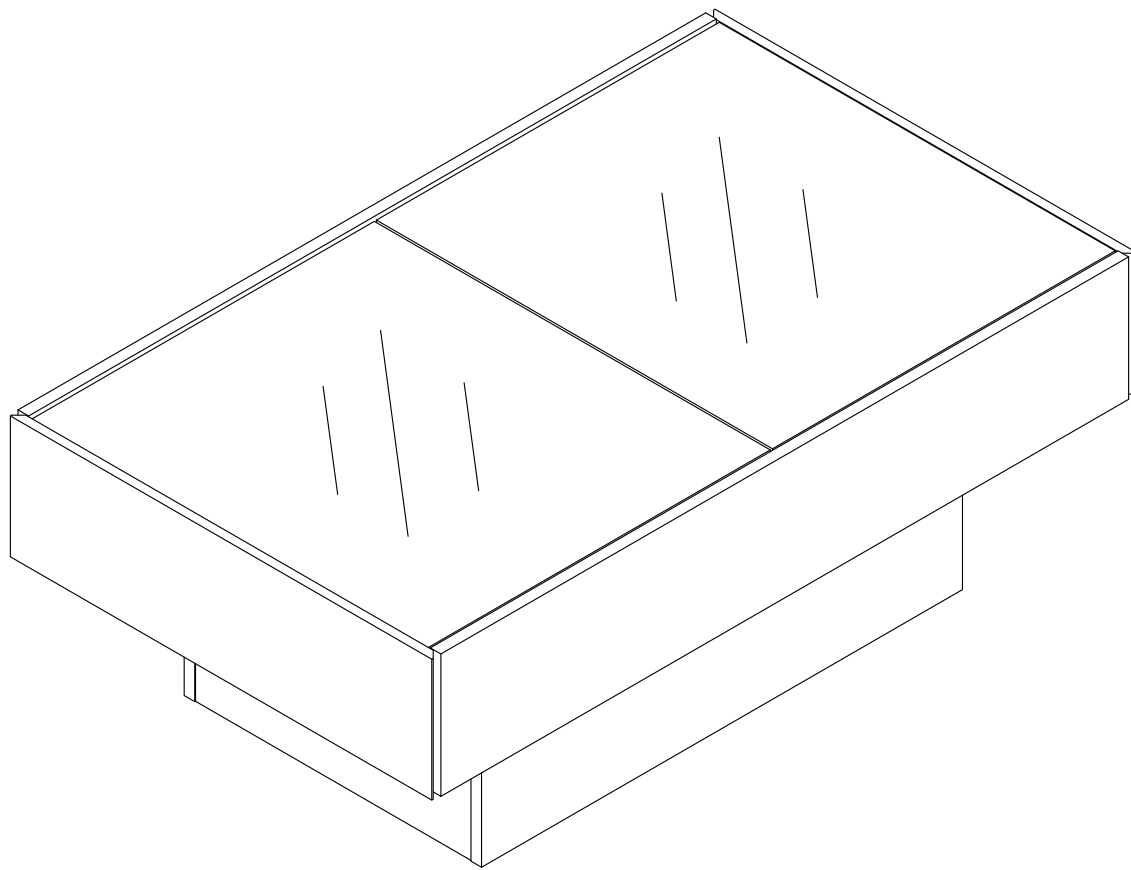
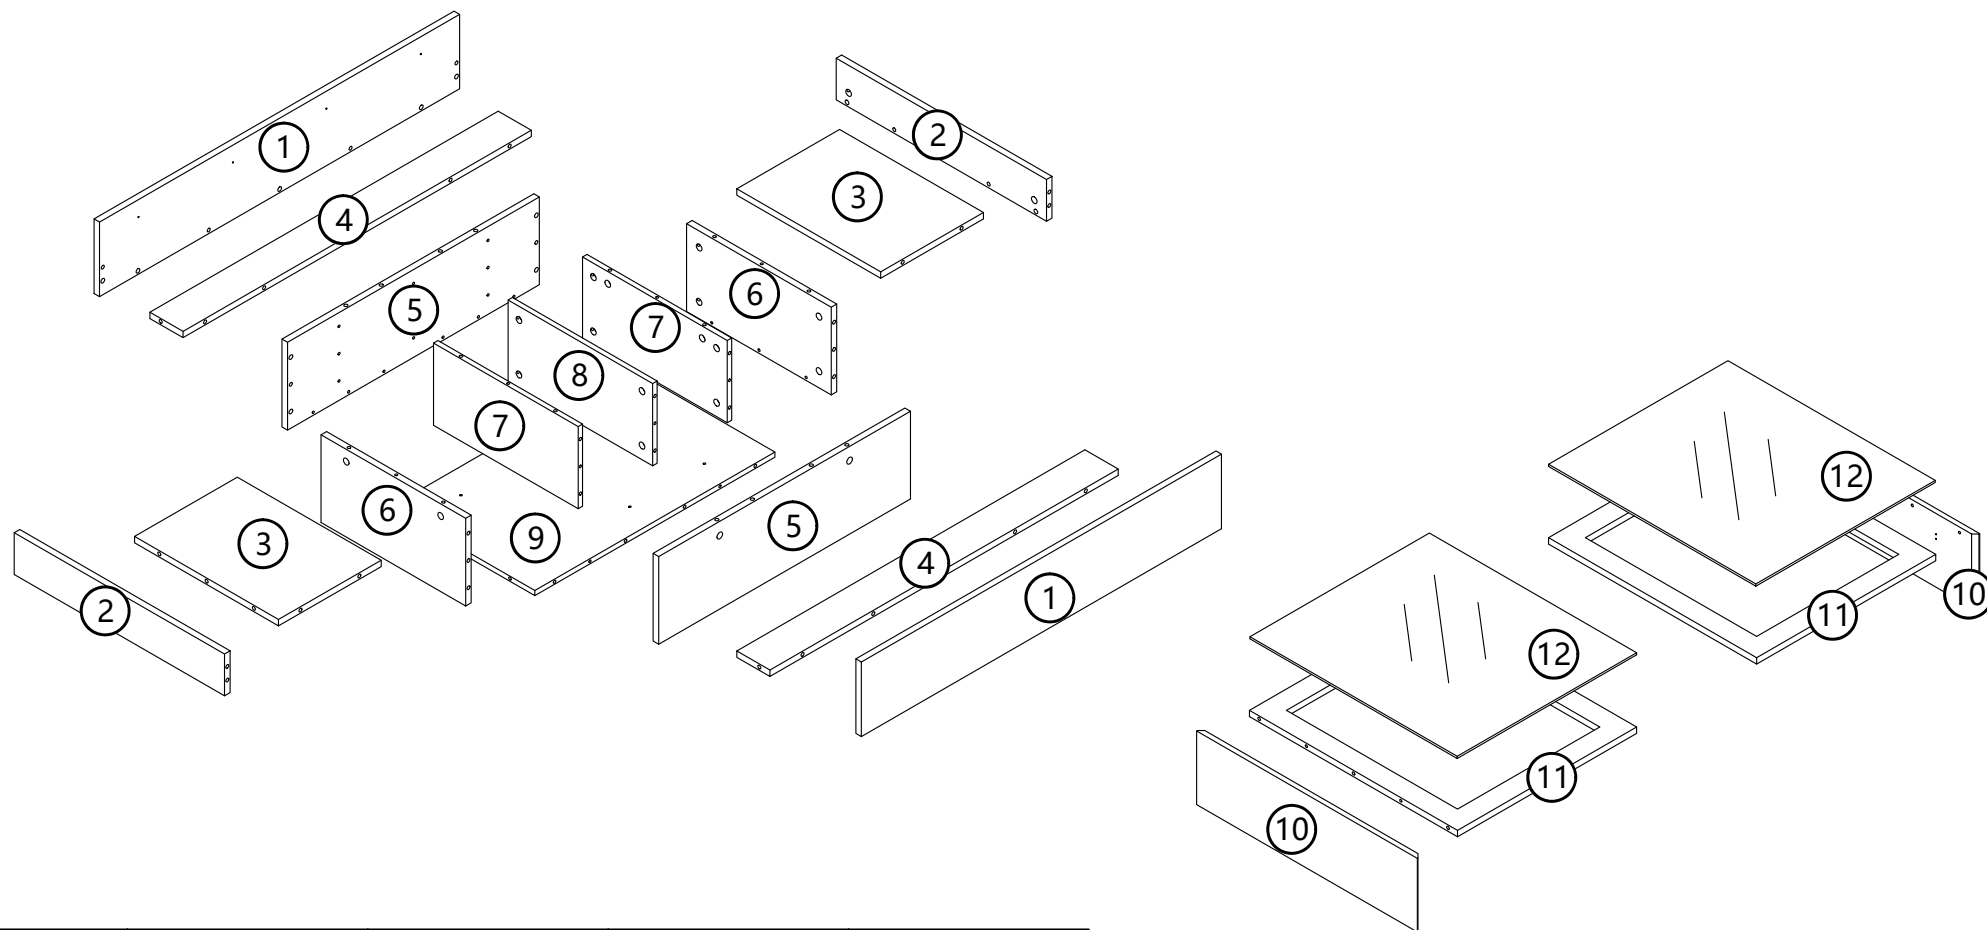


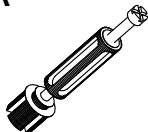





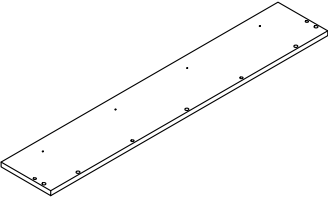
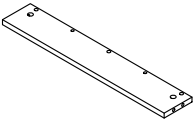
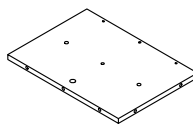
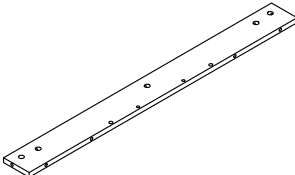
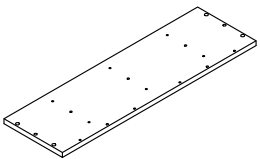



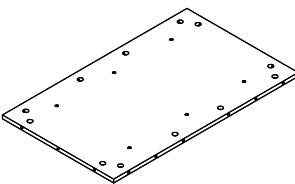
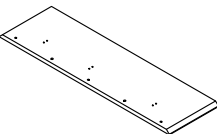
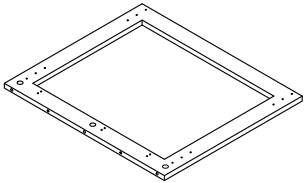


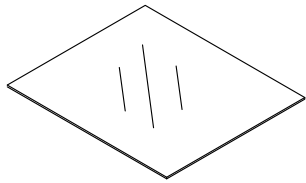






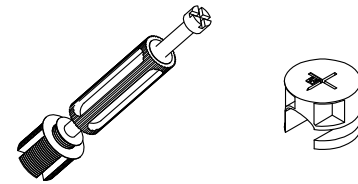


J  15*9.5 34PCS	K  6*30 18PCS	L  1PC	M  6PCS	N  16PCS				
A  32PCS	B  15*11.5 32PCS	C  8*40 30PCS	D  5*40 6PCS	E  3.5*14 44PCS	F  2PCS	G  3.5*12 12PCS	H  28PCS	I  6*35 34PCS


1  976*175(mm) 38.43*6.89(inch) 2PCS	2  570*98(mm) 22.44*3.86(inch) 2PCS	3  278.5*390(mm) 10.96*15.35(inch) 2PCS	4  944*90(mm) 37.17*3.54(inch) 2PCS	5  682.5*206 (mm) 26.87*8.11 (inch) 2PCS
6  392*206(mm) 15.43*8.11(inch) 2PCS	7  193*392(mm) 7.6*15.43(inch) 2PCS	8  193*392(mm) 7.6*15.43(inch) 1PC	9  650.5*392(mm) 25.61*15.43(inch) 1PC	10  598*173(mm) 23.54*6.81(inch) 2PCS
11  485.5*566(mm) 19.11*22.28(inch) 2PCS	12  562*486.5(mm) 22.13*19.15(inch) 2PCS			

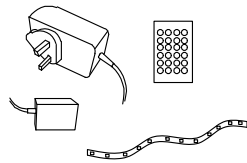

1

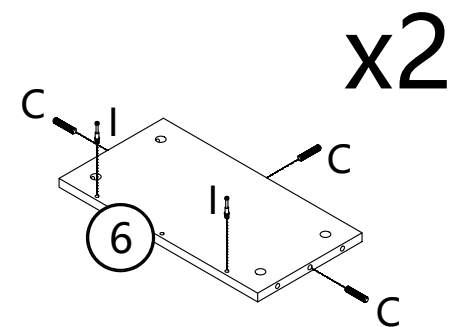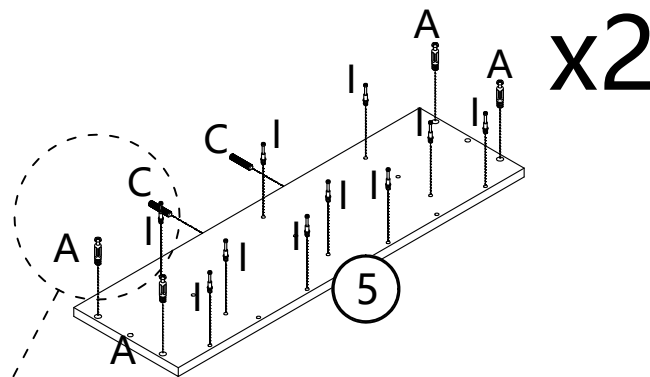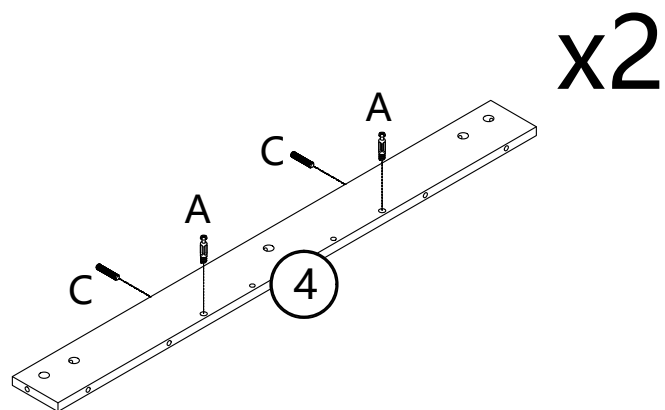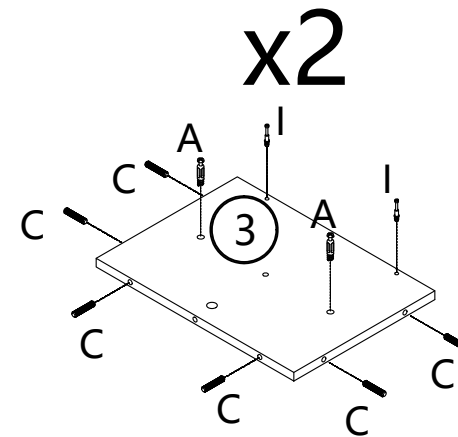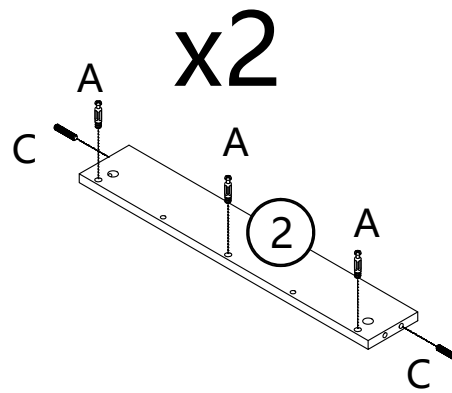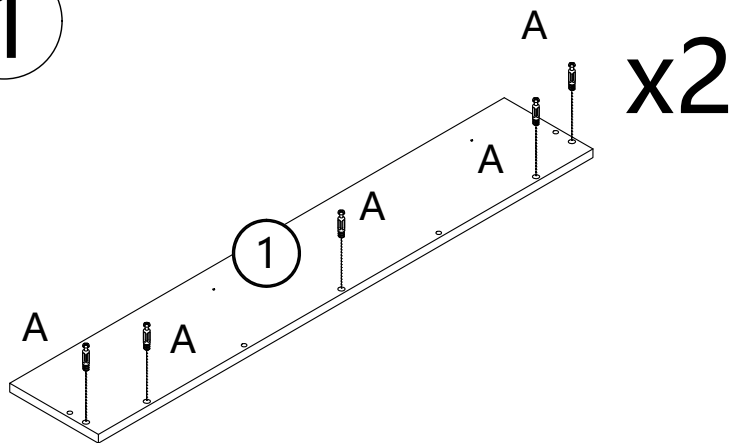

	I*28
	C*30
	A*32






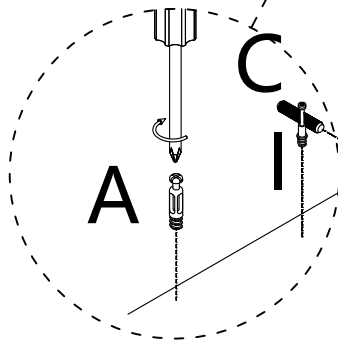


put A on board 1 2 3 4 5

put C on board 2 3 4 5 6

put I on board 3 5 6

2

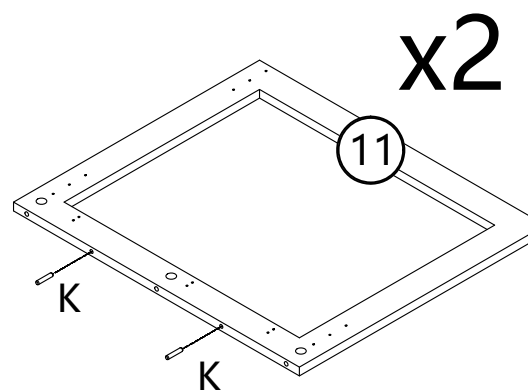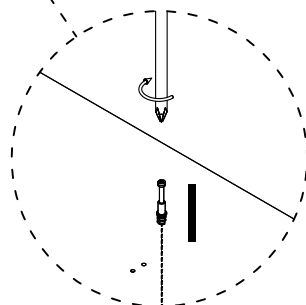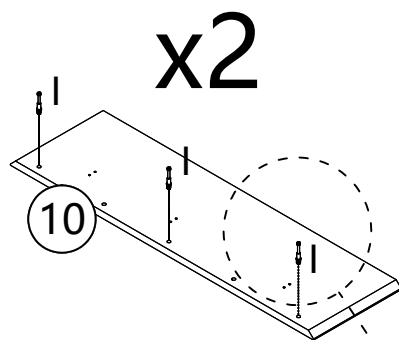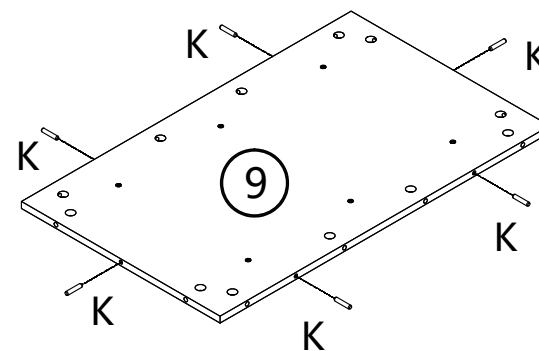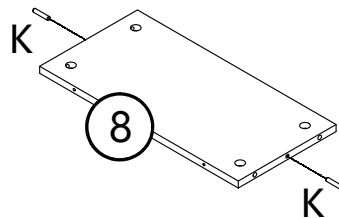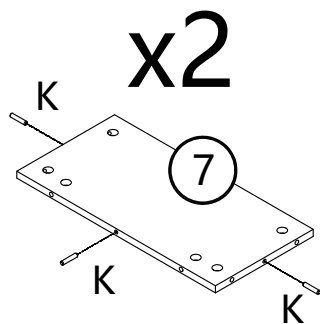

put K on board (7) (8) (9) (11)

put I on board (10)






I*6



K*18

3

Make sure the arrow on the screw align to the hole on the side.

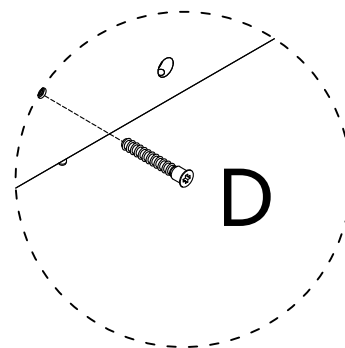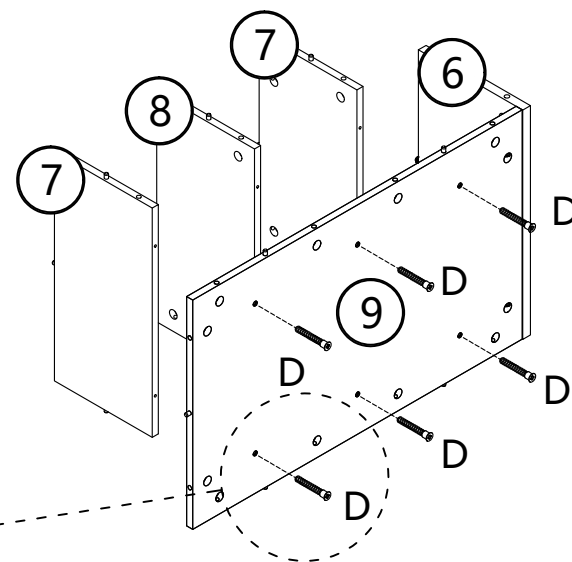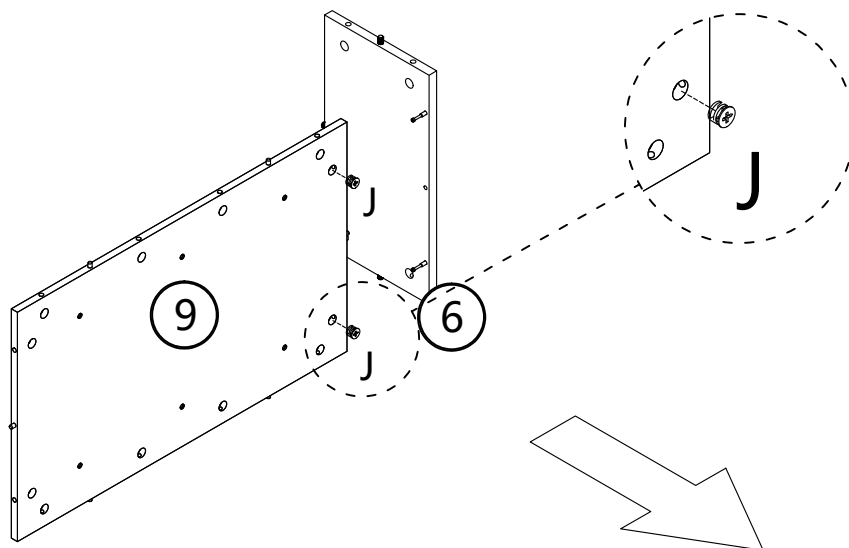

put D on board (9)

put J on board (9)




D*6





J*2

4

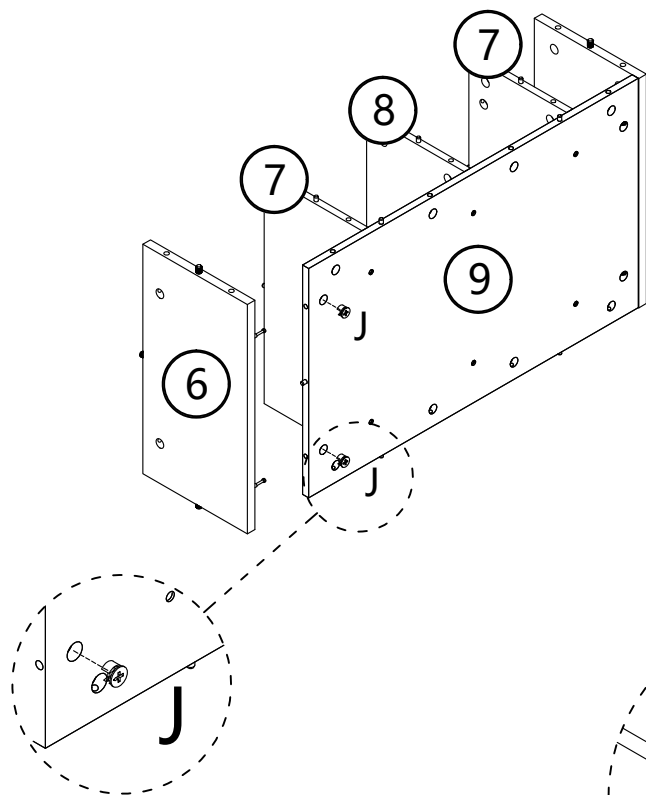

Make sure the arrow on the screw align to the hole on the side.

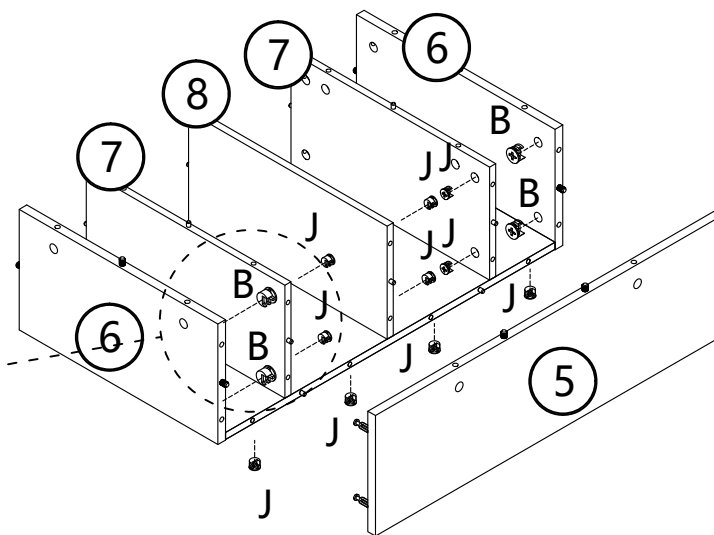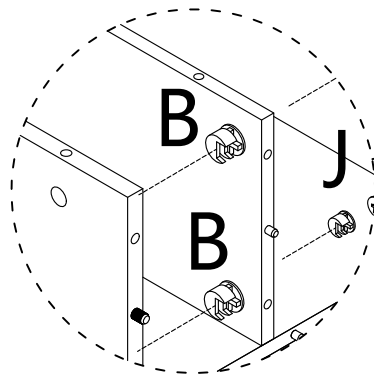

put B on board ⑥

put J on board ⑦ ⑧ ⑨




B*4




J*12

5

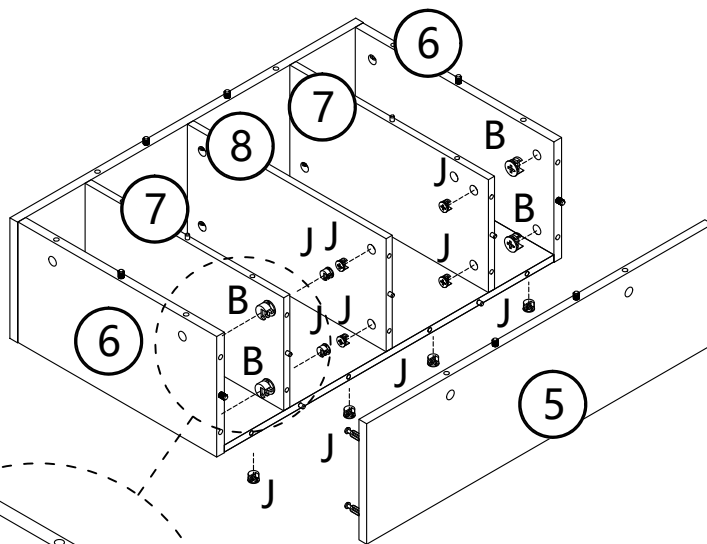


put B on board 6

put J on board 7 8 9

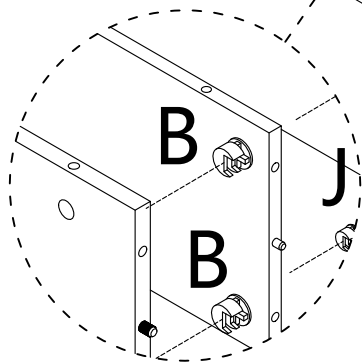

Make sure the arrow on the screw align to the hole on the side.

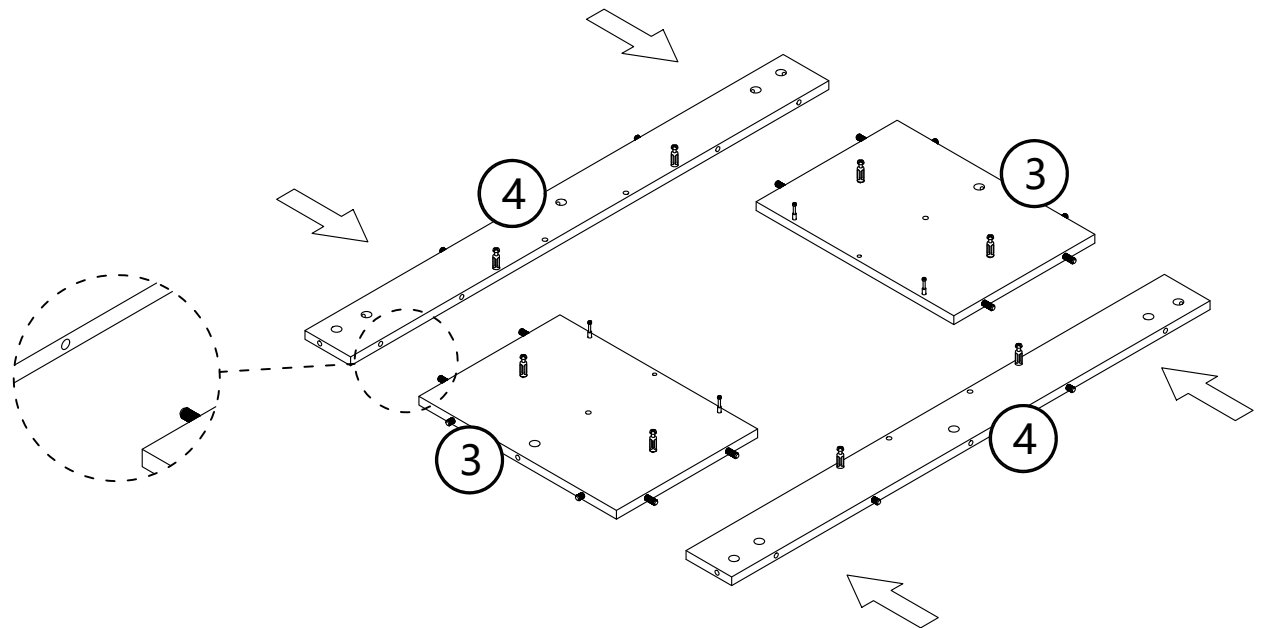


B*4






J*10

6

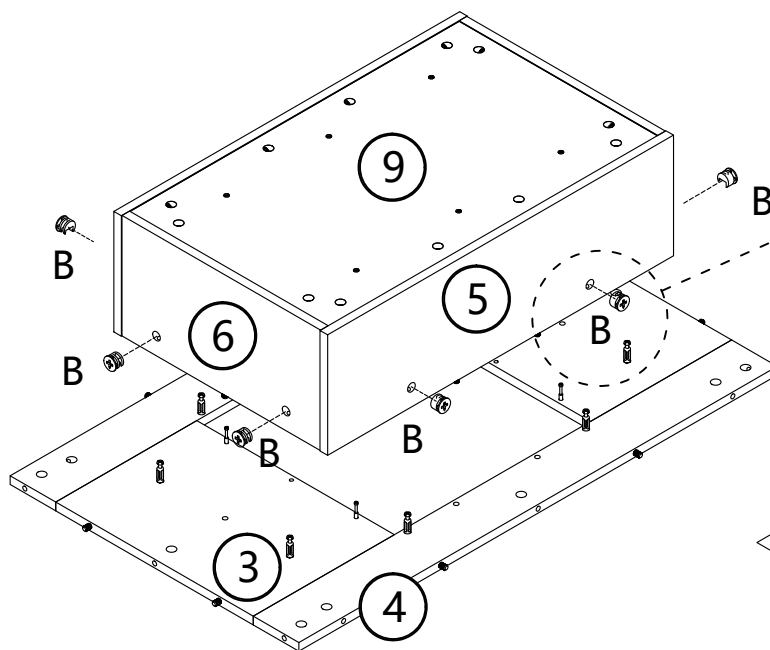

put B on board (5) (6)

put J on board (7)

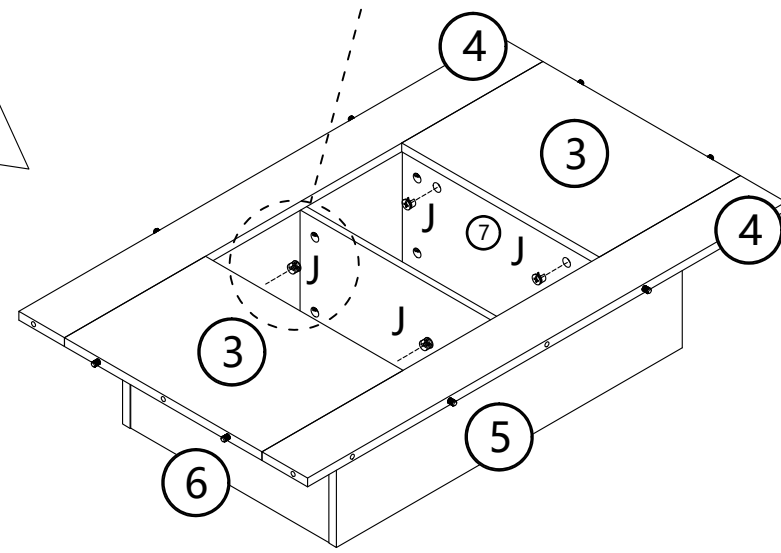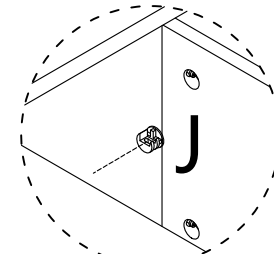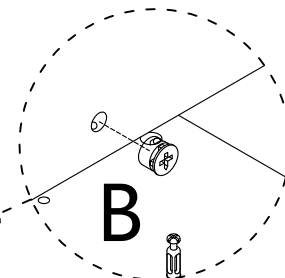

Make sure the arrow on the screw align to the hole on the side.




B*8





J*4

7

put B on board (3) (4)

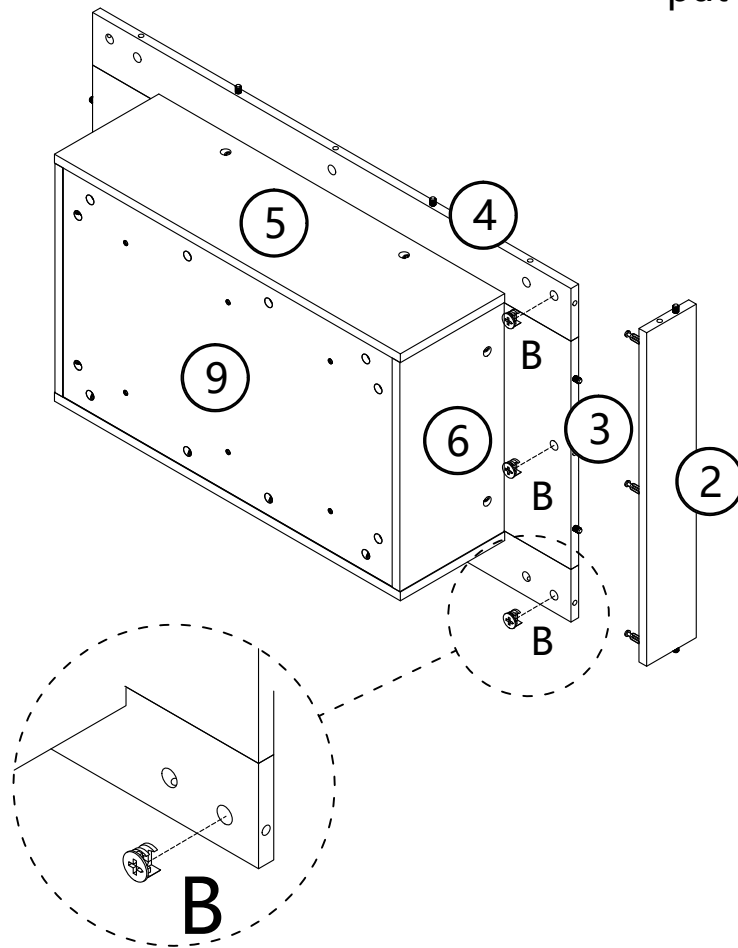


Make sure the arrow on the screw align to the hole on the side.

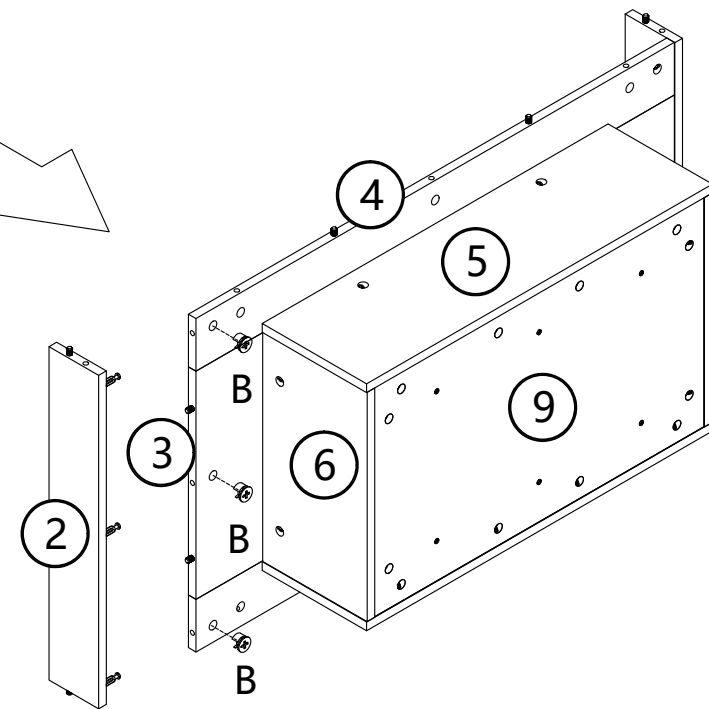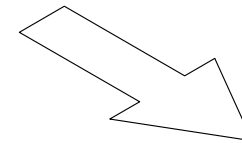

B*6

8

put B on board (2) (4)

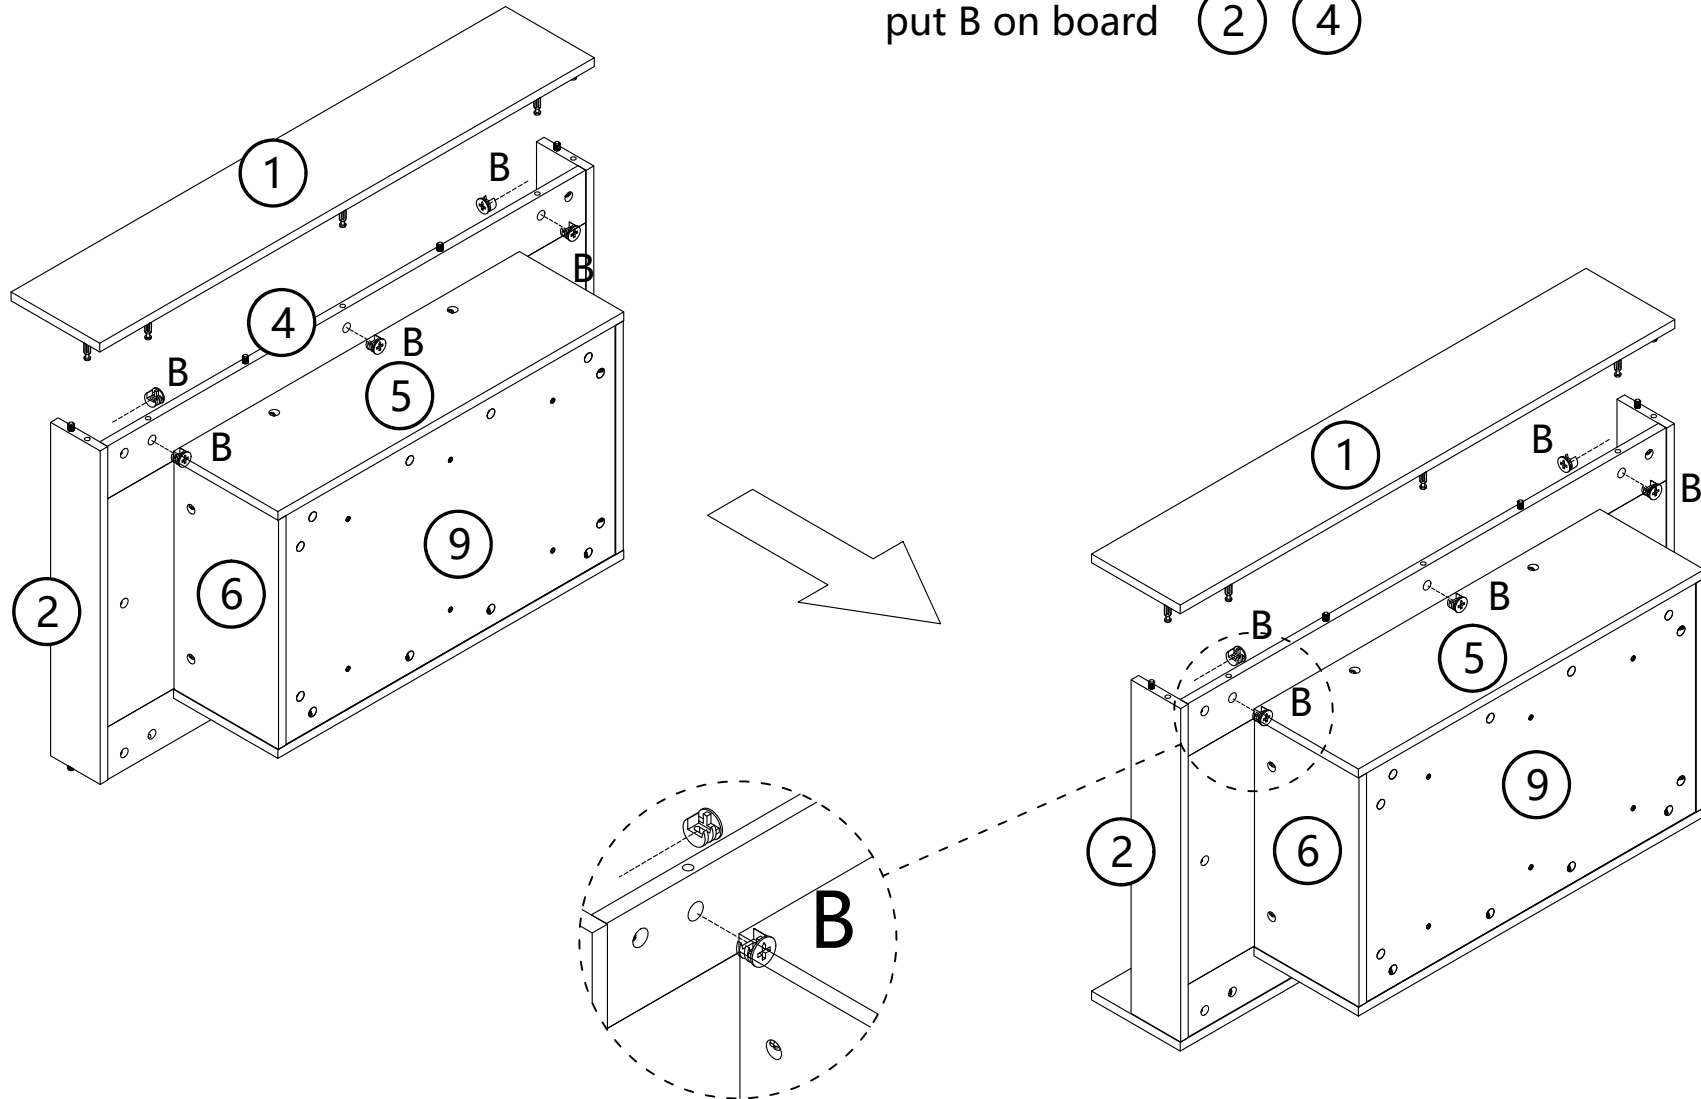

Make sure the arrow on the screw align to the hole on the side.






B*10

9

put J on board 11

Make sure the arrow on the screw align to the hole on the side.

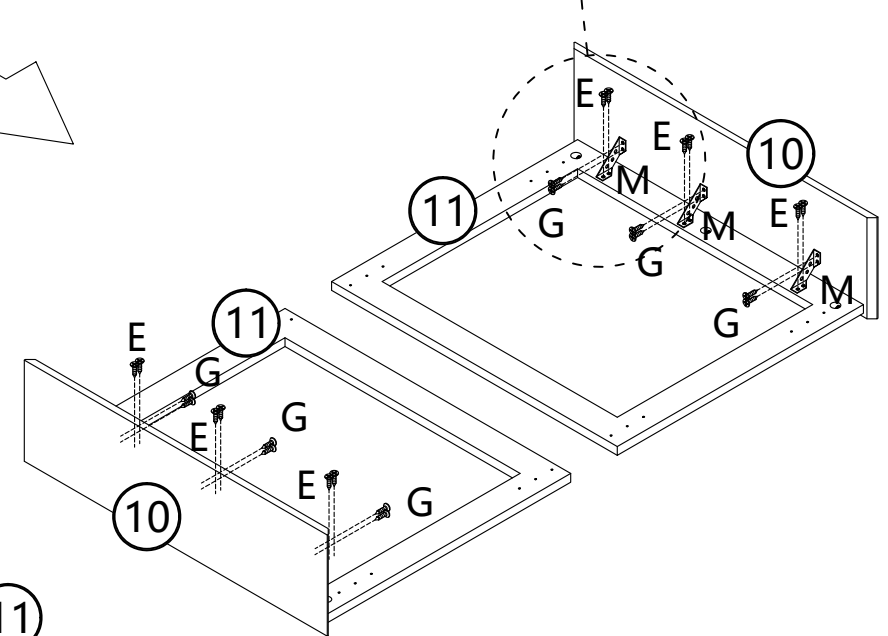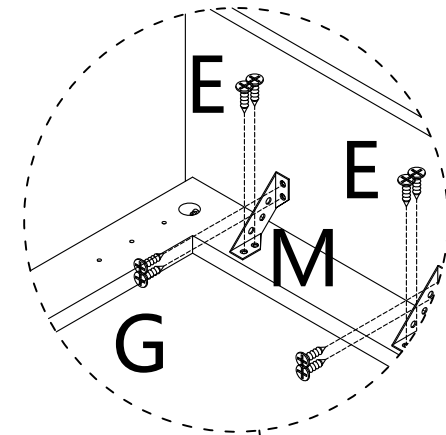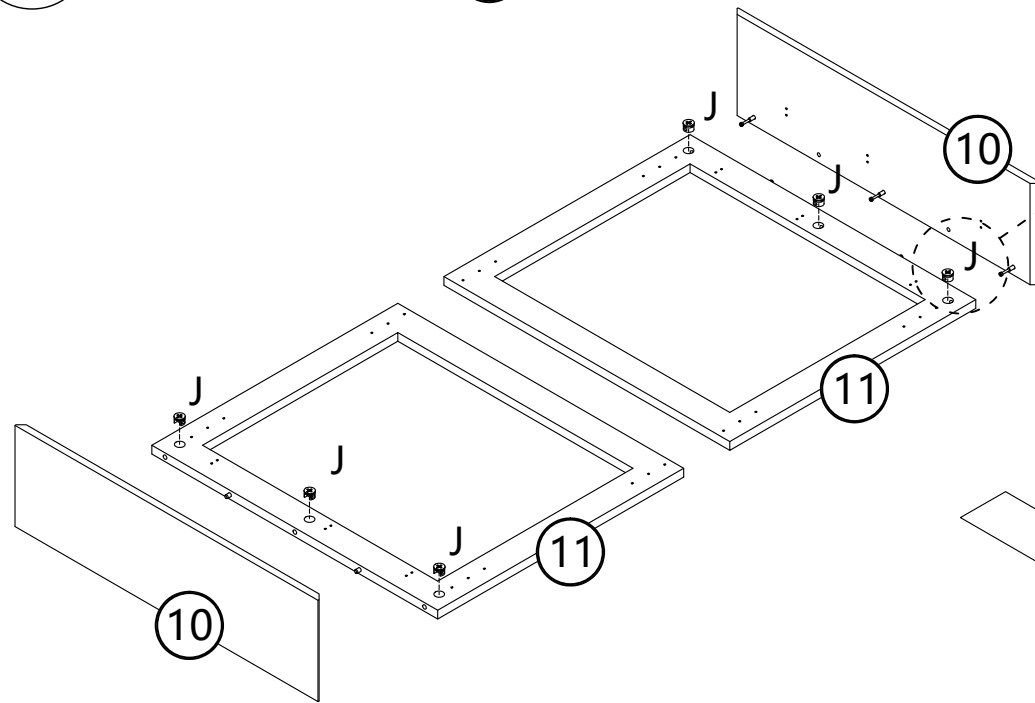


	M*6
	E*12
	G*12
	J*6

put M on board 10 11

put E on board 11

put G on board 10




10

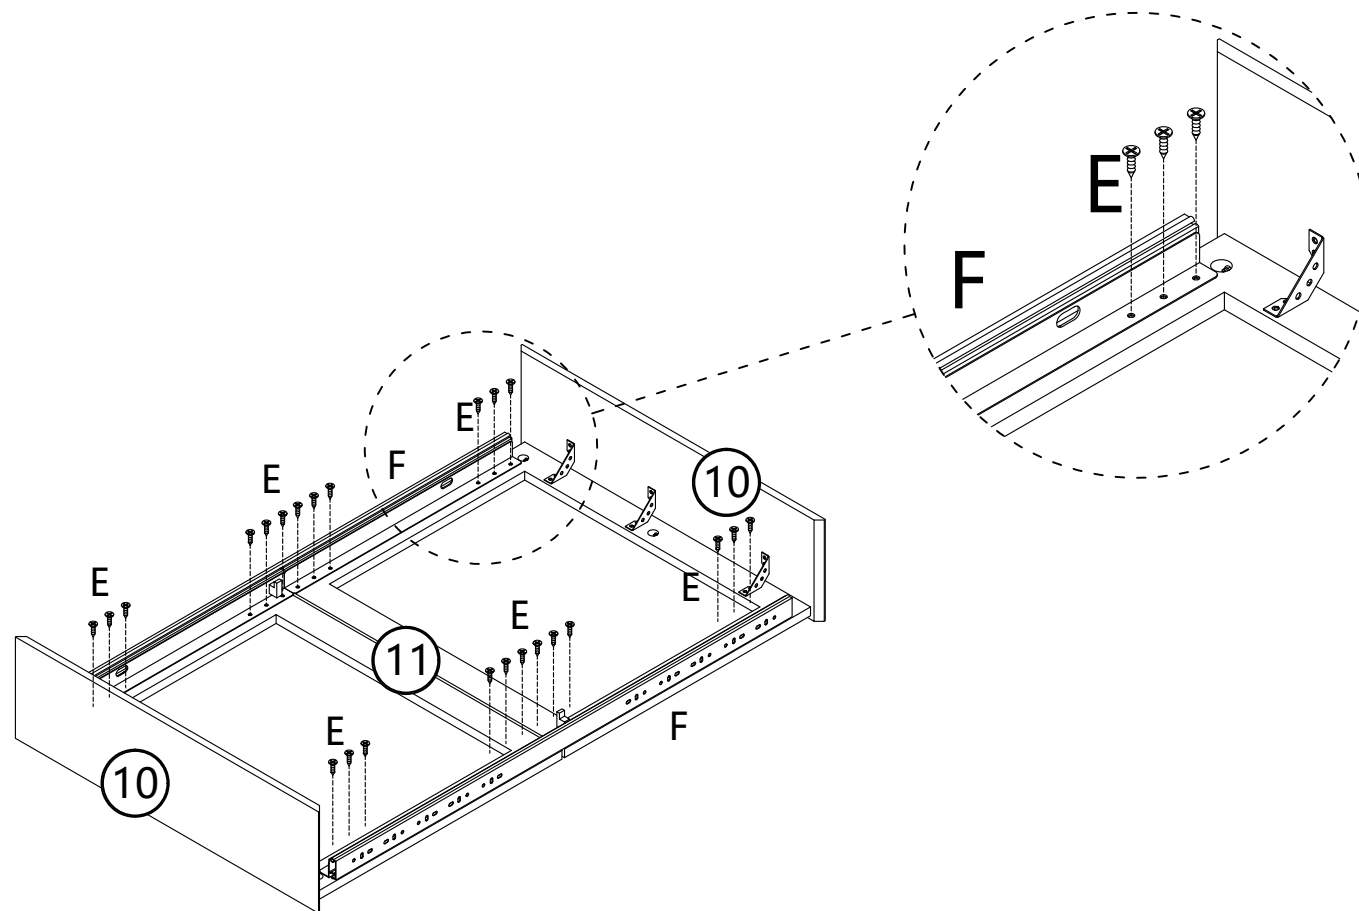

	E*24
	F*2

put E、 F on board (11)

11

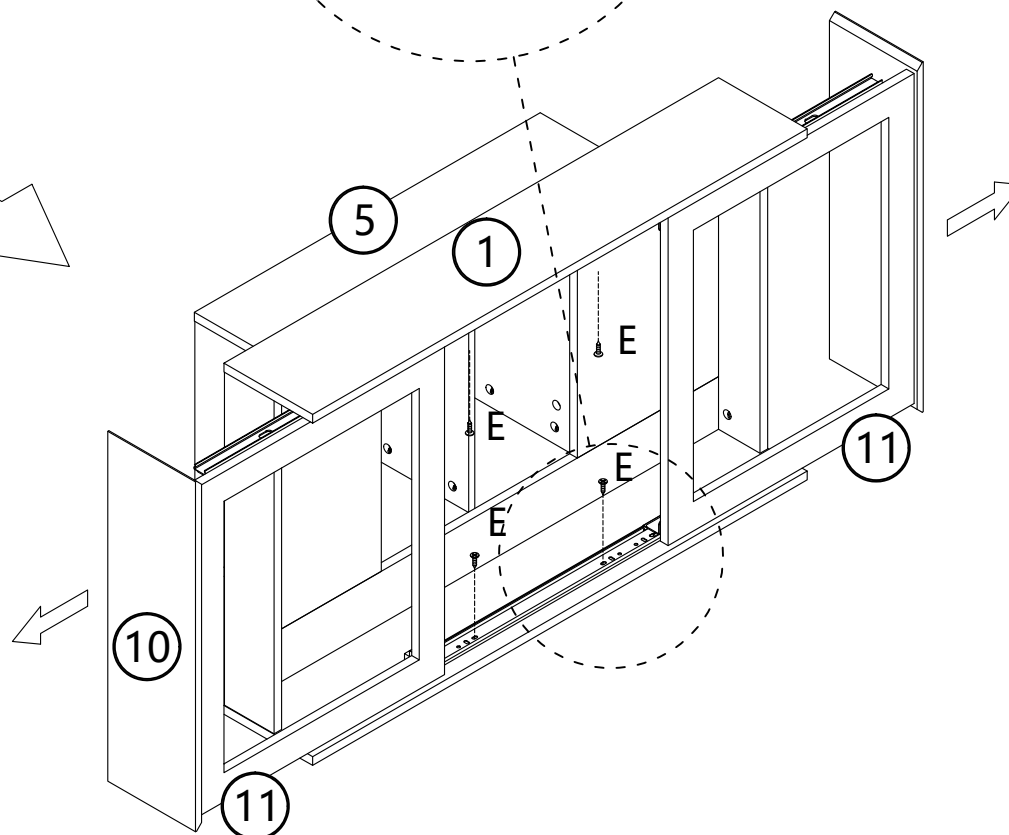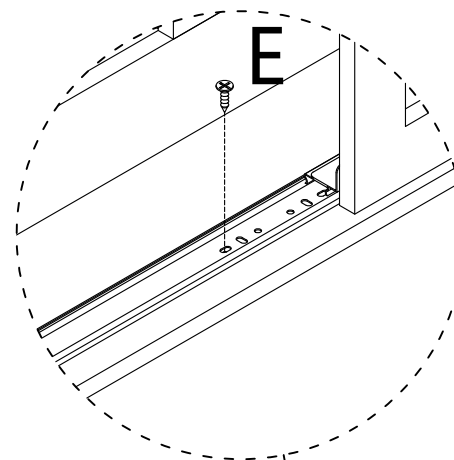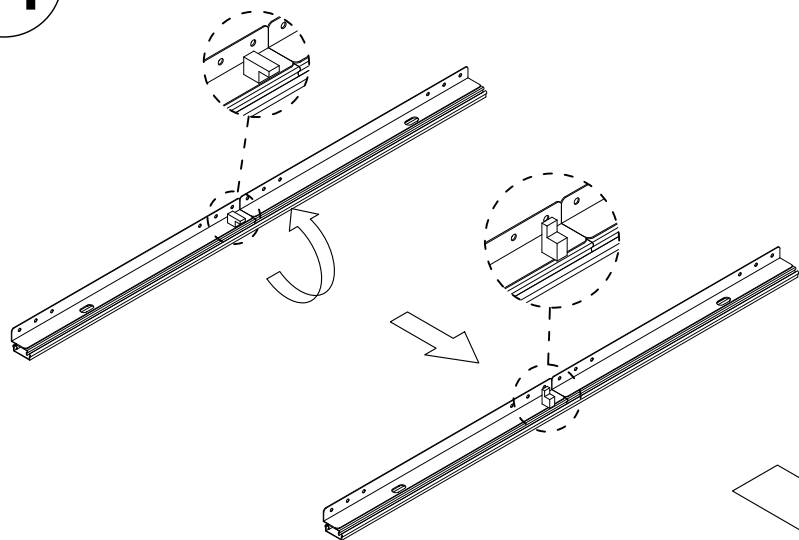



put E on board ①



E*4




12

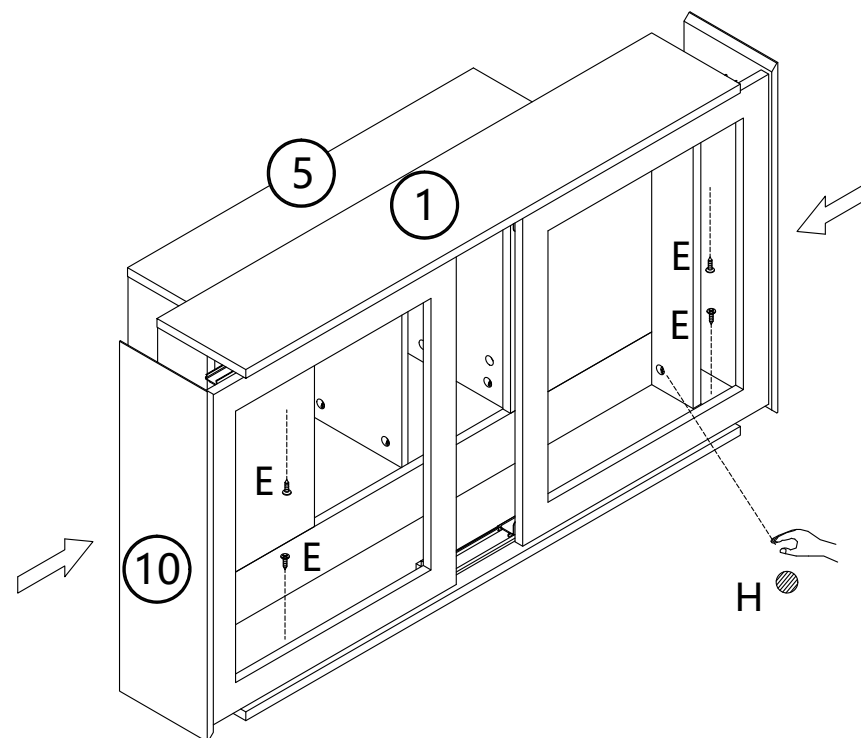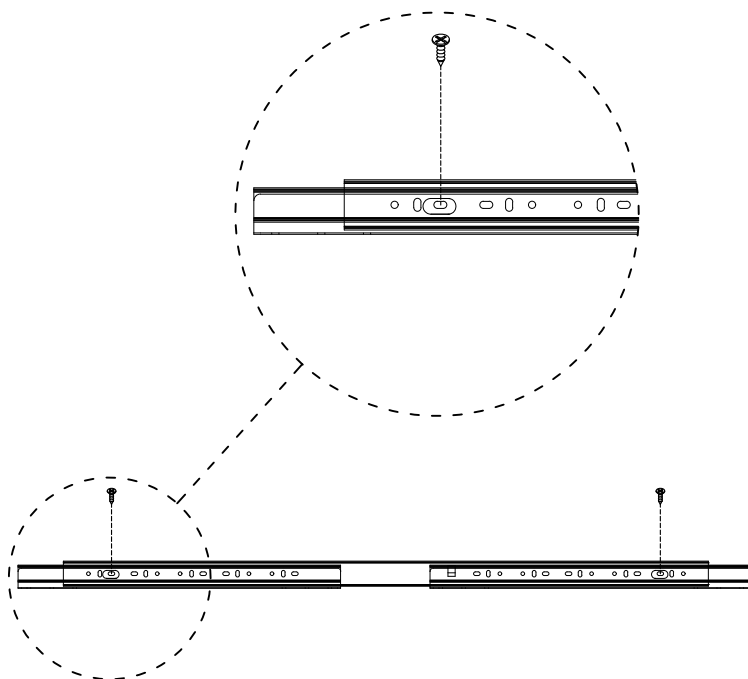


put E on board ①

	H*28
	E*4

13



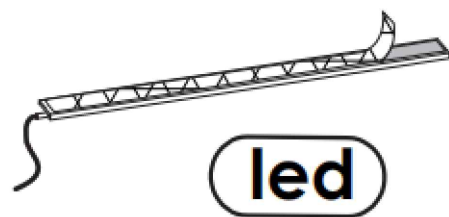


The following
installation LED
lights

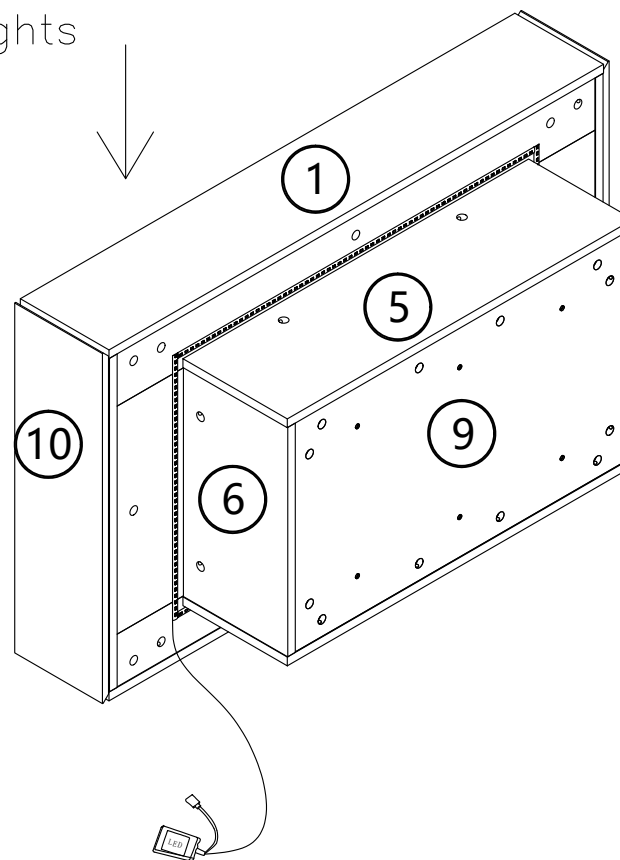

L*1

14

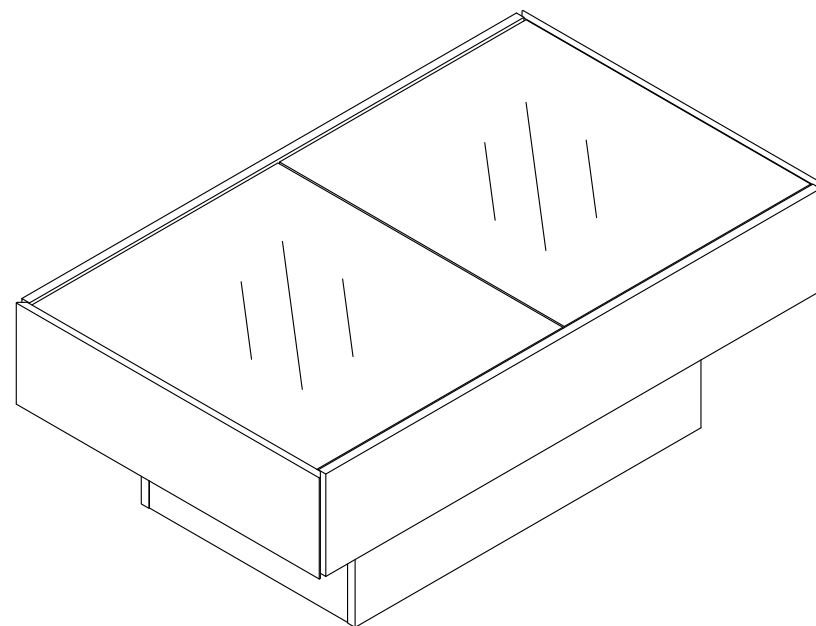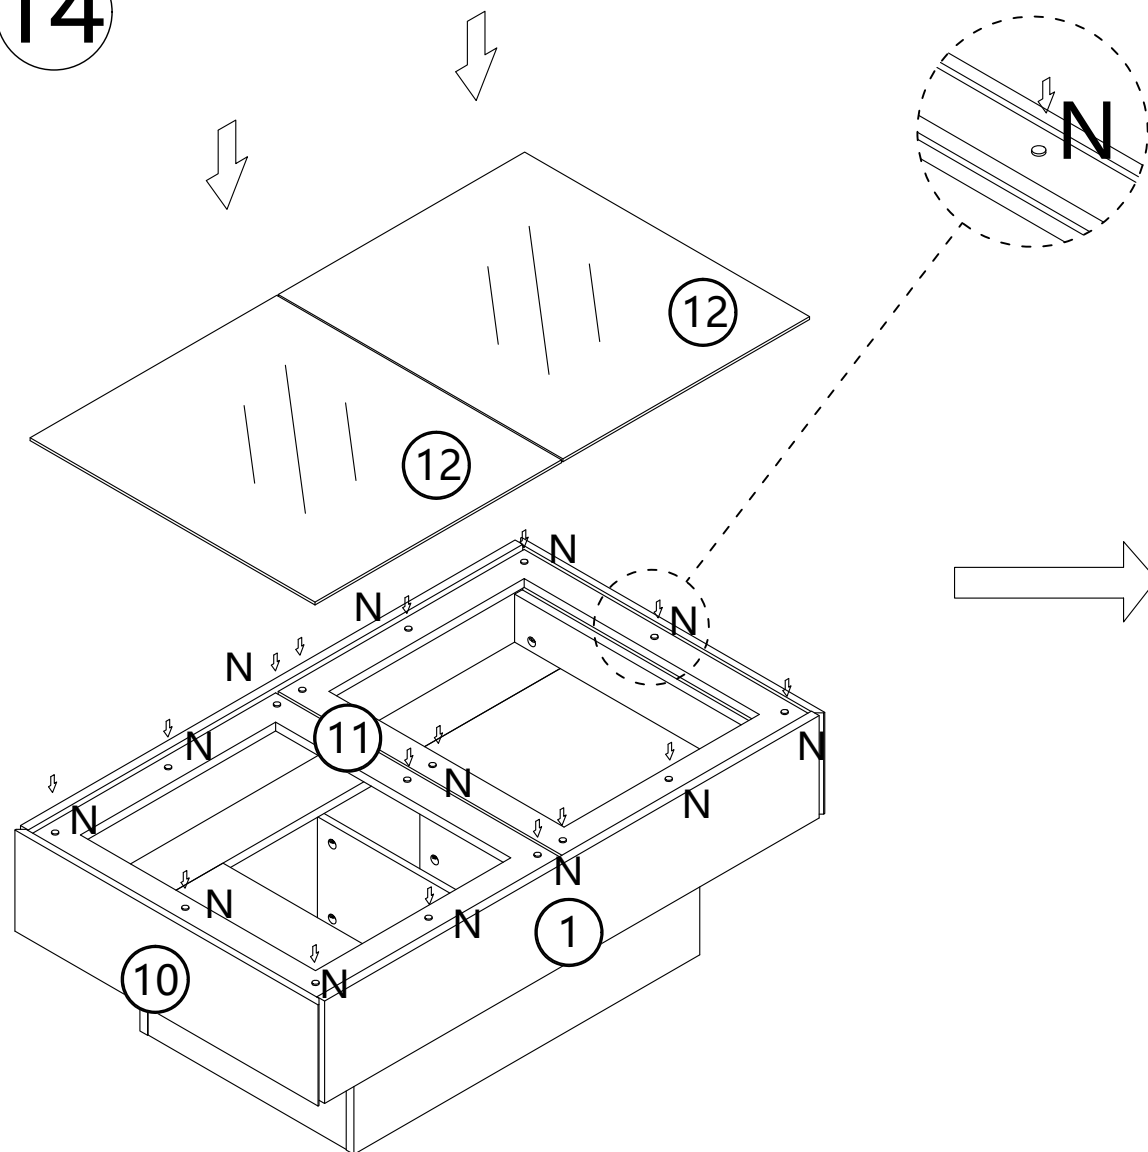

put N on board 11

END



N*16