



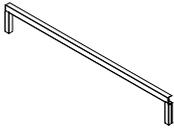




PARTS LIST

Name		Part	Qty.	Spare	Name		Part	Qty.	Spare
A	Left Back Panel		1		K	Left Door		1	
B	Right Back Panel		1		L	1-3/16" Wall		2	
C	Left Side		1		M	Wall Anchor		2	
D	Right Side		1		N	13/32" Screw		25	2
E	Kick Plate		1		O	Shelf Support		16	
F	Bottom Panel		1		P	Handle		2	
G	Top Rail		1		Q	Plastic Rob			2
H	Top Panel		1		R	Plastic Foot Nail		4	
I	Shelves		4		S	Door Pivot Pin		2	
J	Right Door		1		T	Shim		4	
V	Install self working wire for Plastic foot nails		16	1	U	Touch the Doormat		2	

SIZE COMPARISON CHART


L	1-3/16" Wall Anchor Screw	
N	13/32" Screw	

 **CAUTION**


An assistant is required.

Step1

(N)  x4

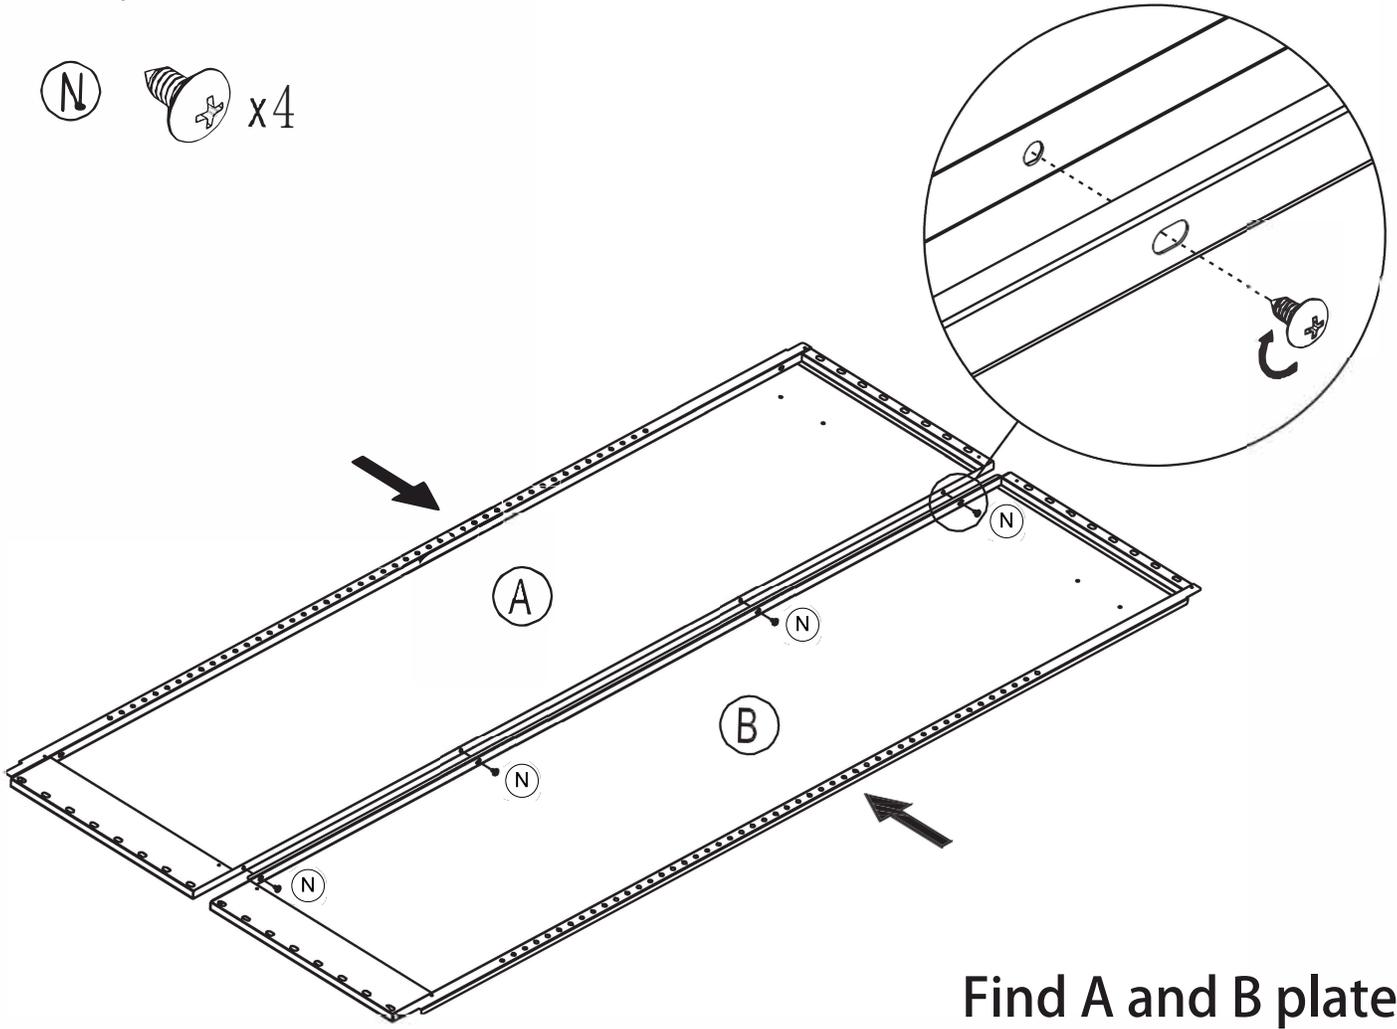

Find A and B plate,
then connect A with
B by screws(N).

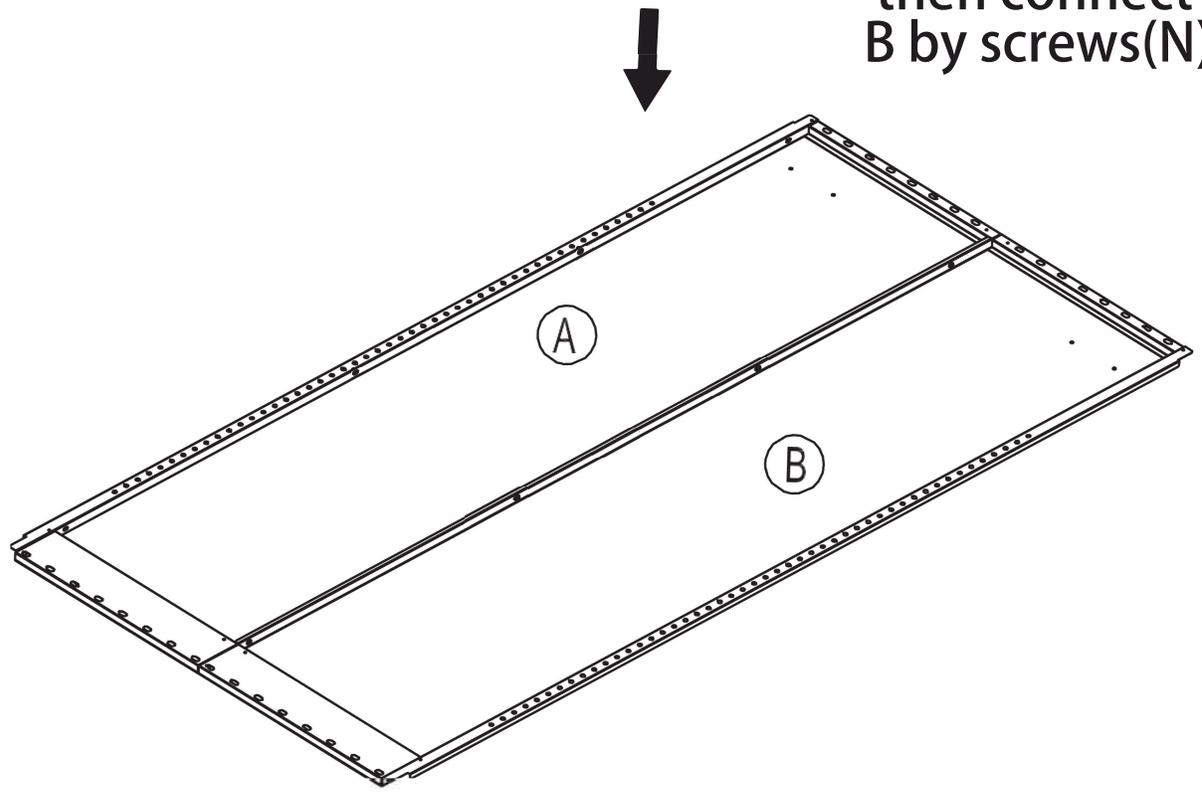



Step2

Fasten plate A with plate C, B with D. There are holes on the plate frame, just use screws(N) to link up.

(N)




x 8

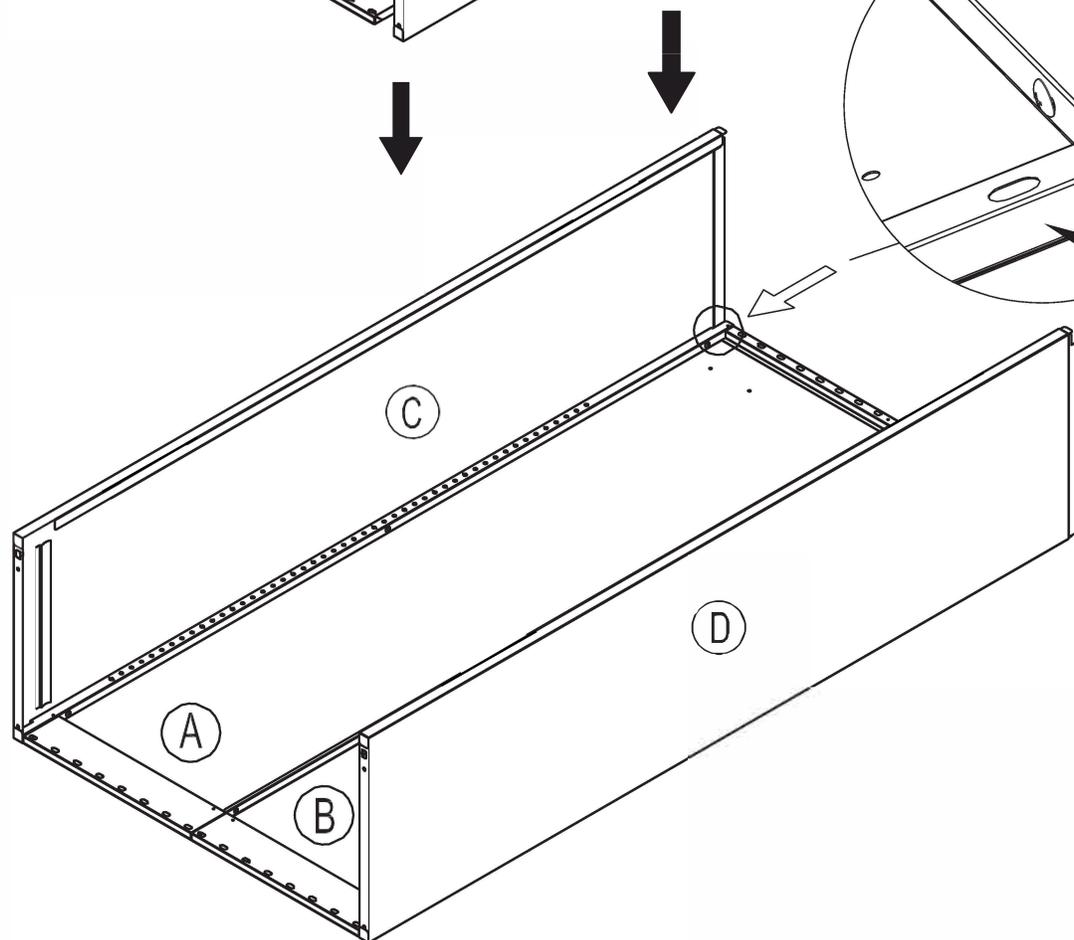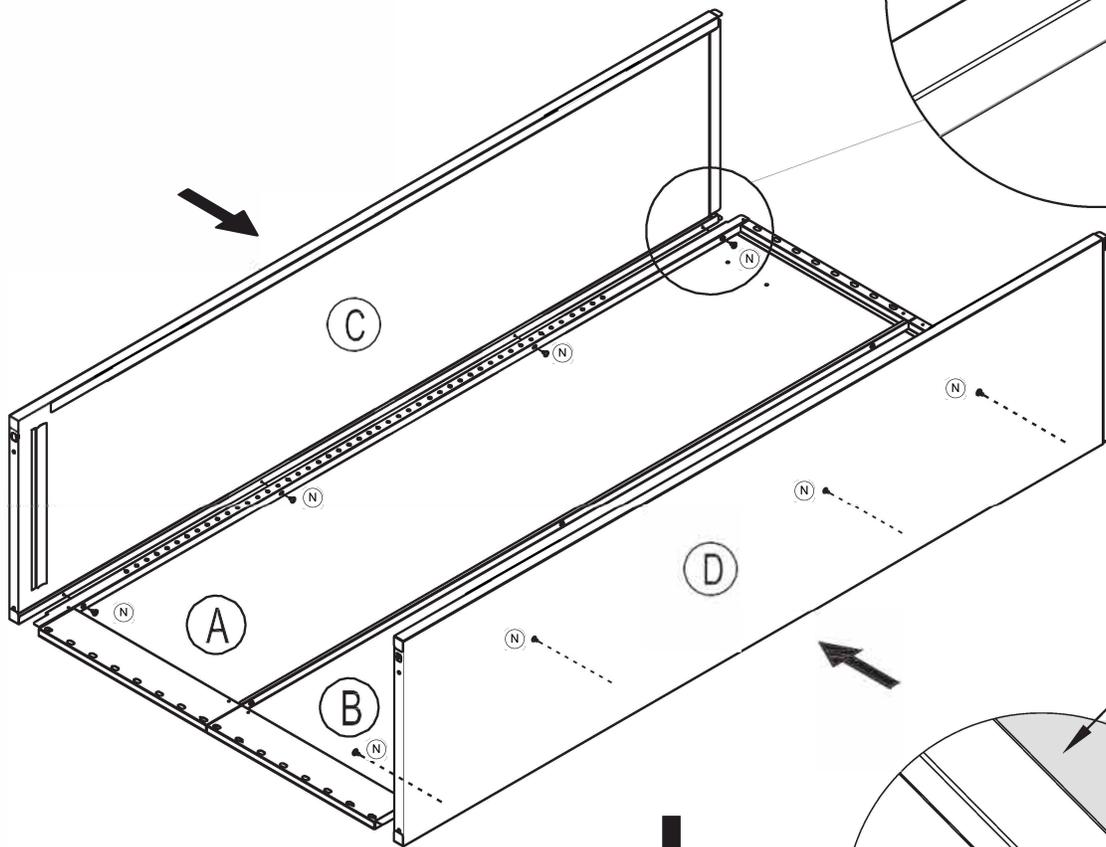


Step3

Install the kick plate(E) at the bottom of cabinet, and then push up E, next, use screws(N) to fasten.




(N)  X 4

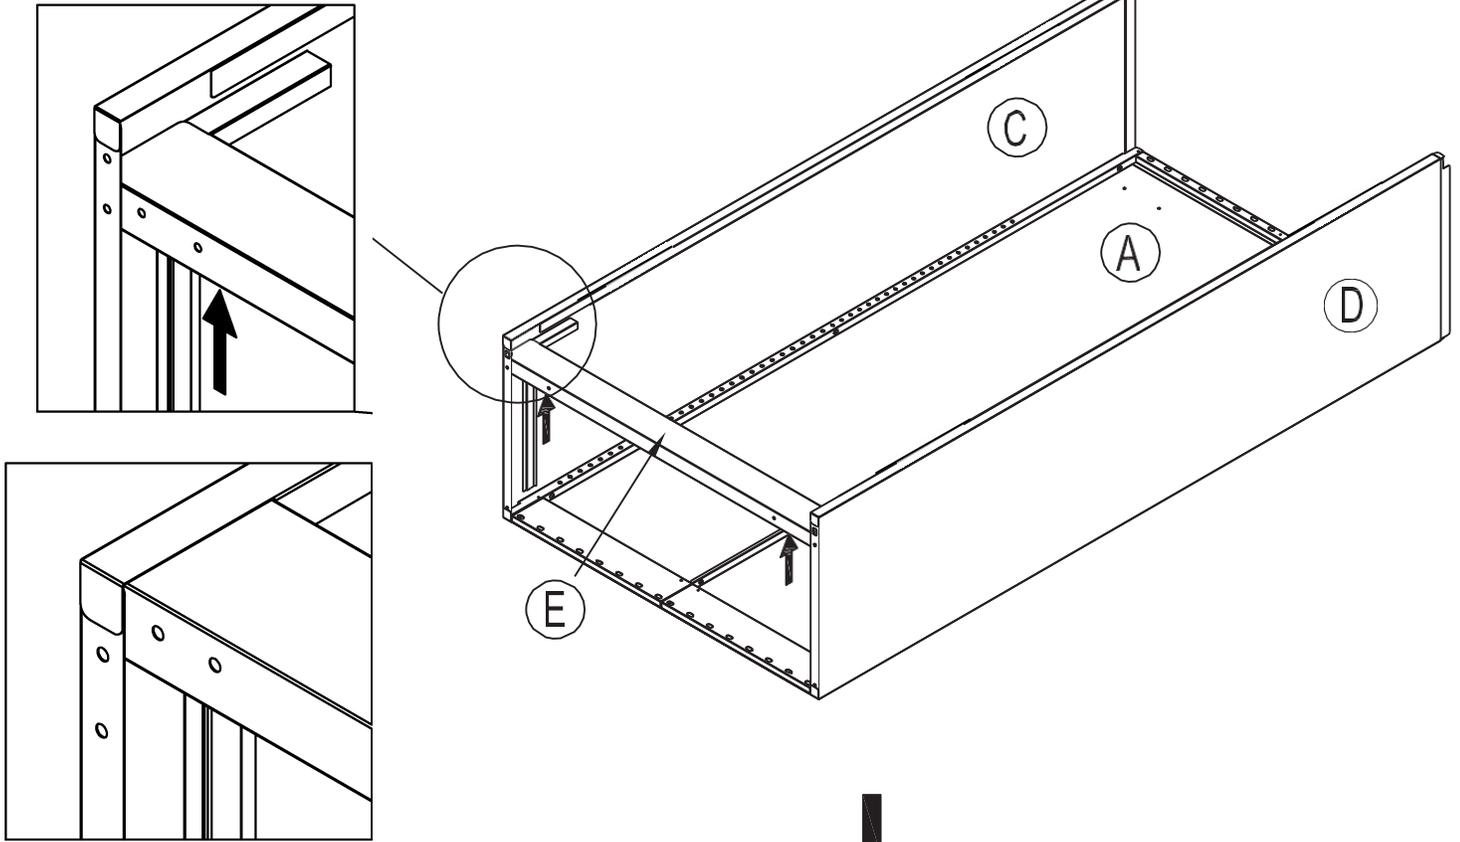

Push the top rail (G) into the front frame's space.

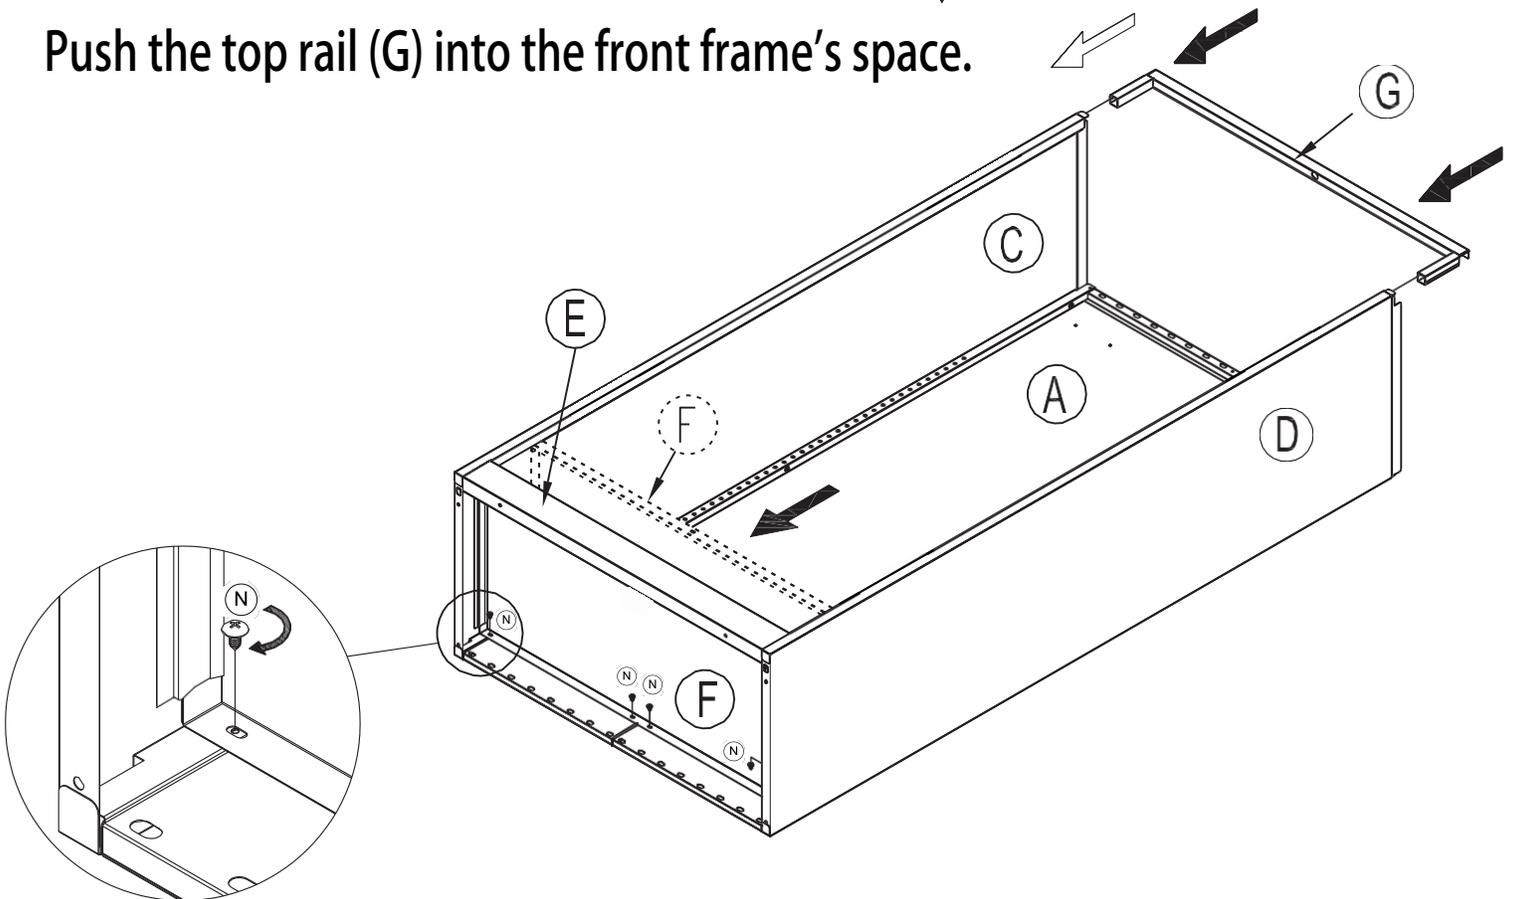


Step 4

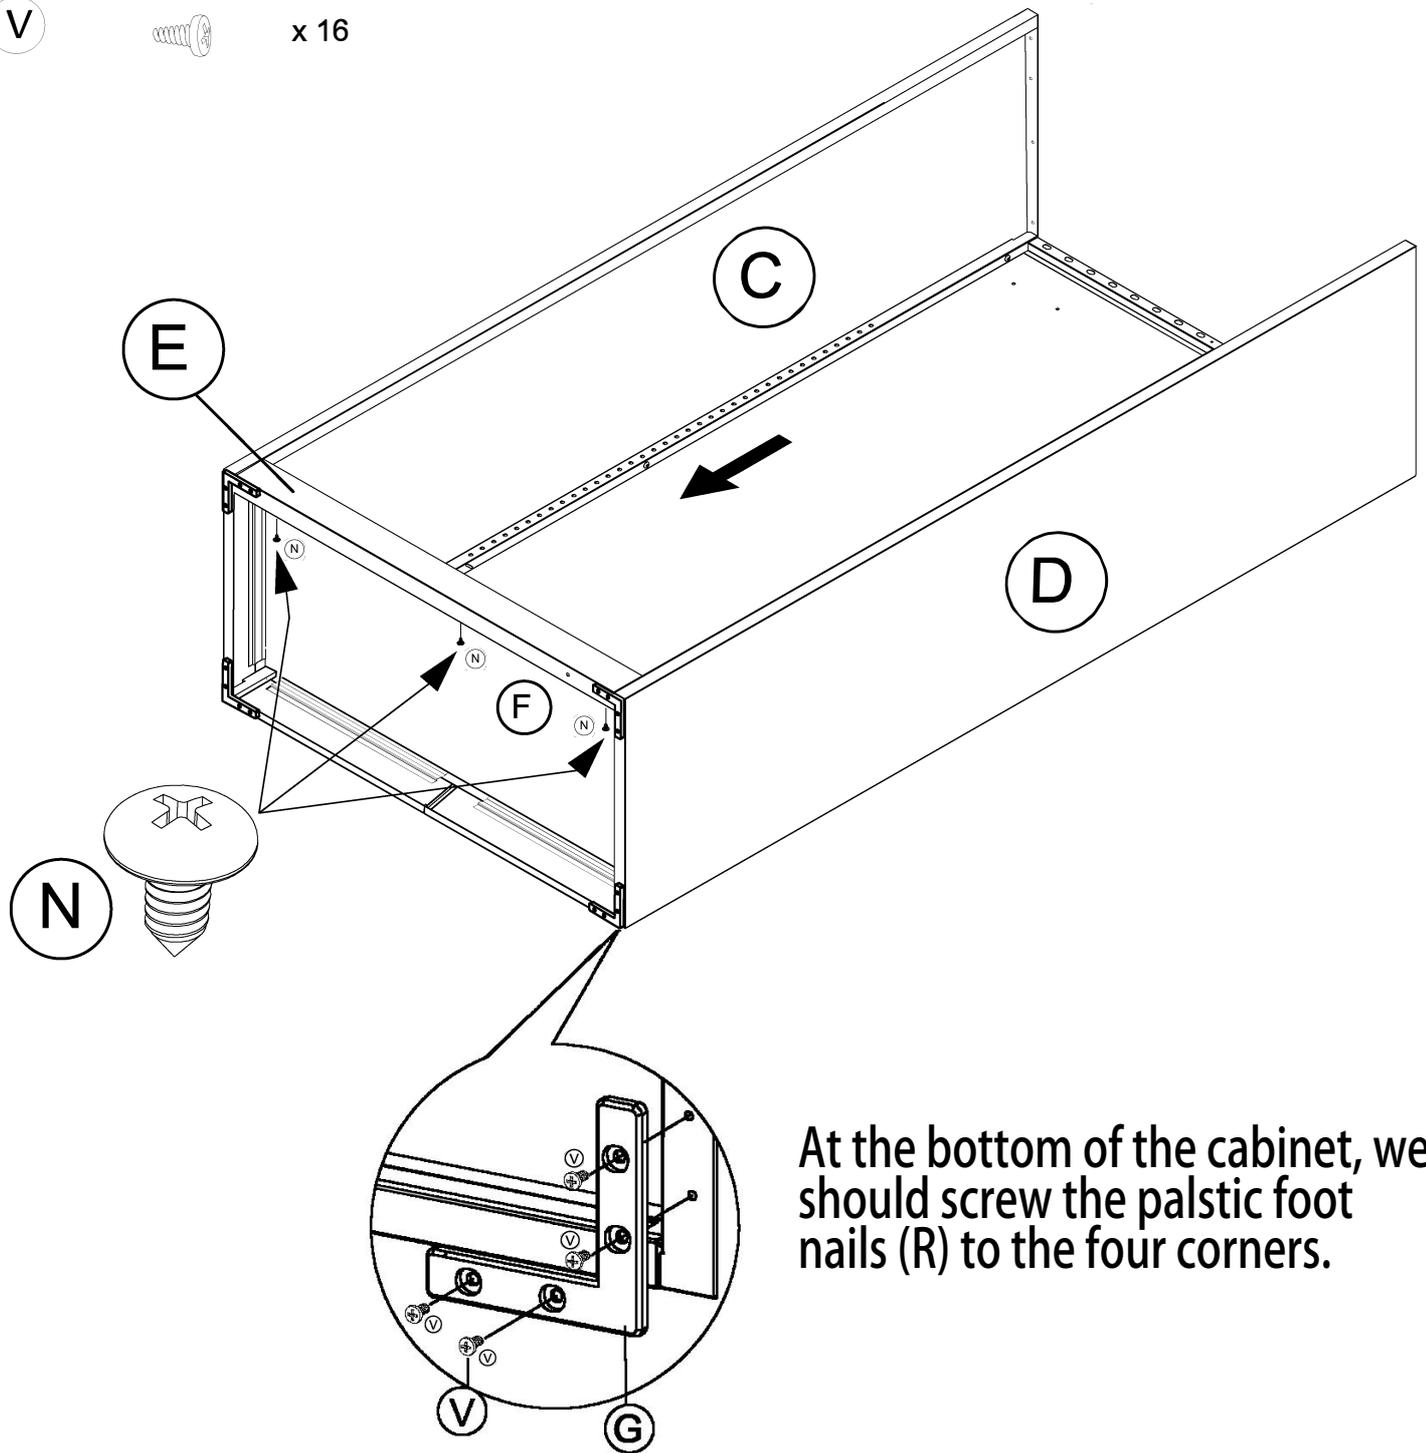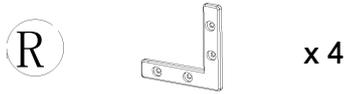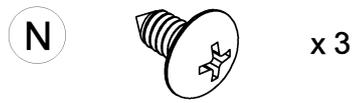

At the bottom of the cabinet, we should screw the plastic foot nails (R) to the four corners.


Step 5

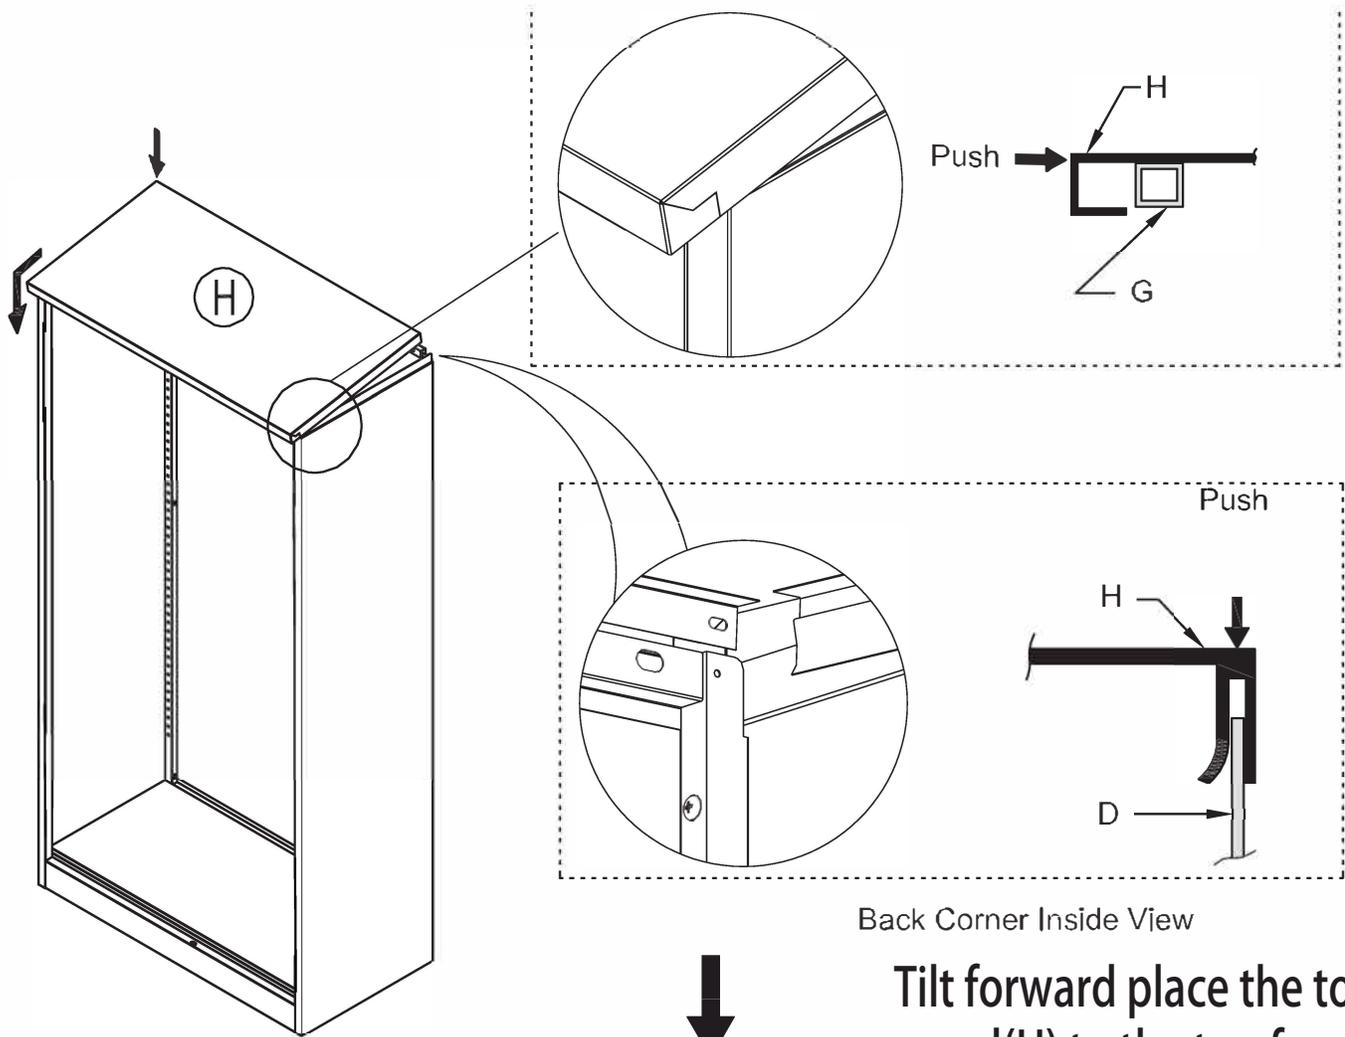

1

2

Back Corner Inside View

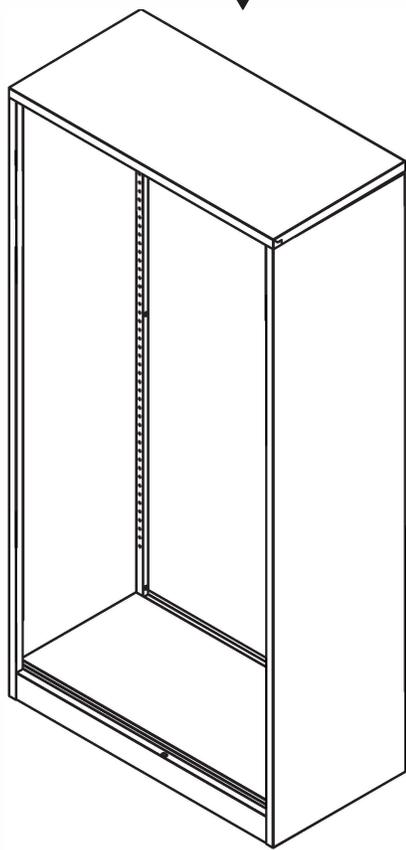




Tilt forward place the top panel(H) to the top frame, then push the plate H,at the same time, make sure the Plate D can exactly stuck in the sandwich of Plate H.

Plate H:two holes in the middle is the front.

Step 6



x6



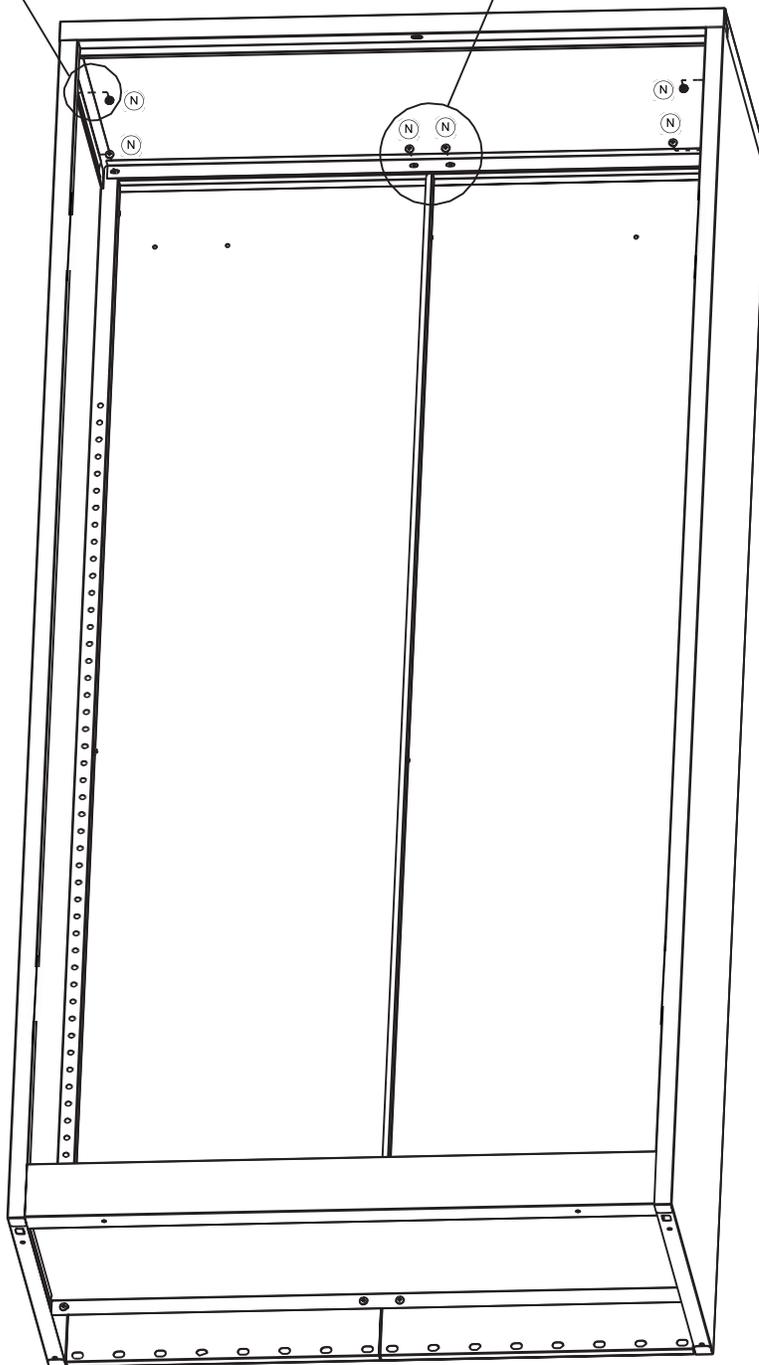
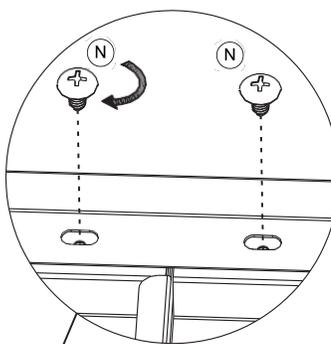
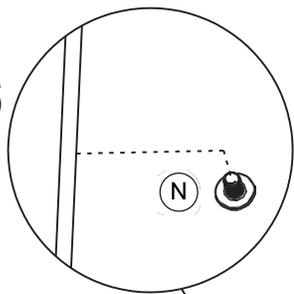


Use screws(N) to fasten the the top plate with the rear and side plates.


Step 7

① x16

Install the shelf support(L) on the door frame, there are many holes on the inner door frame.

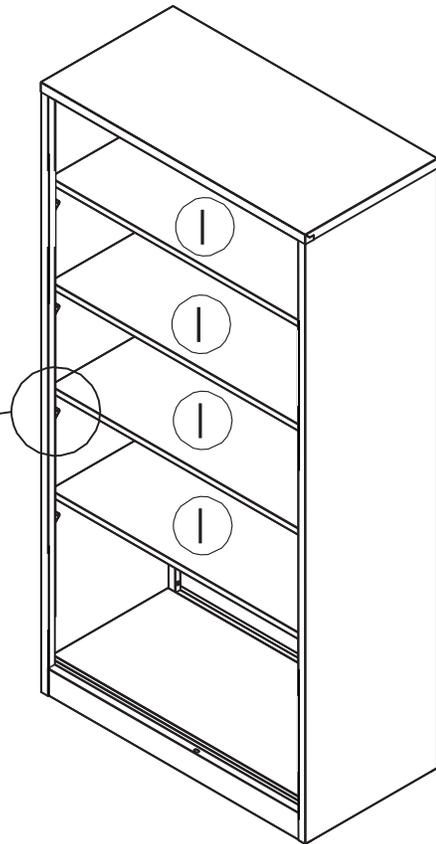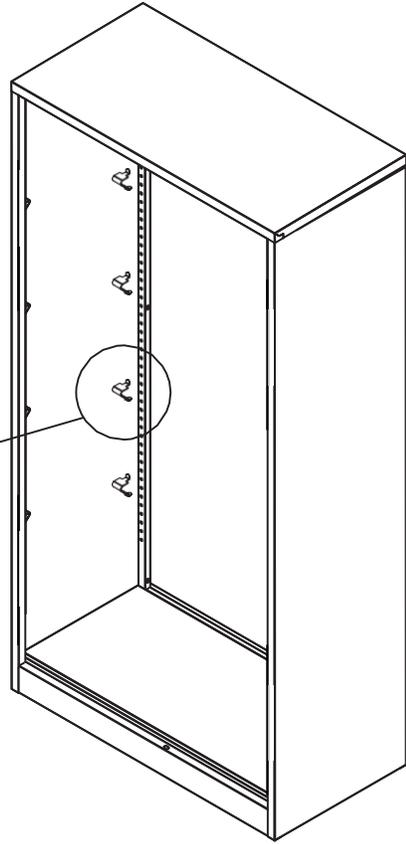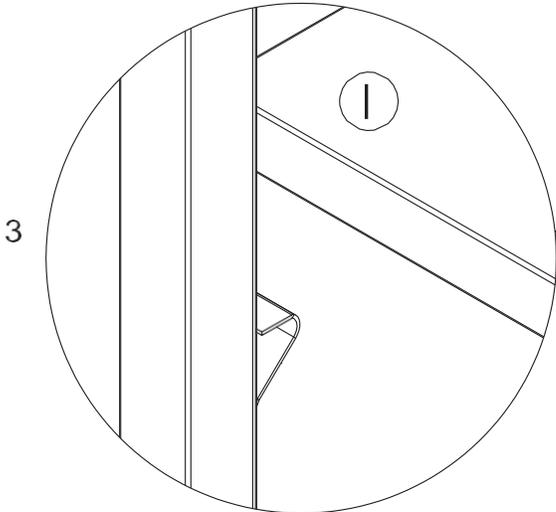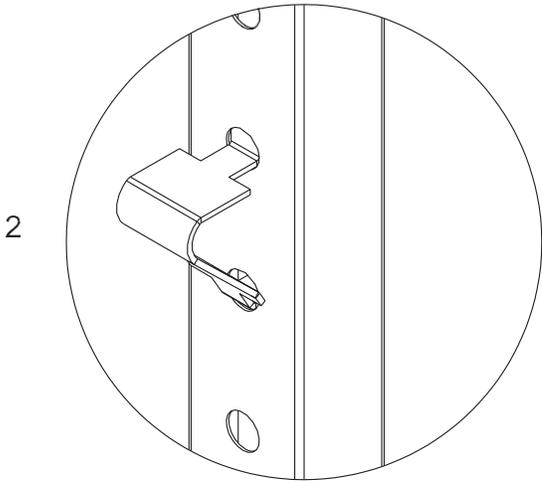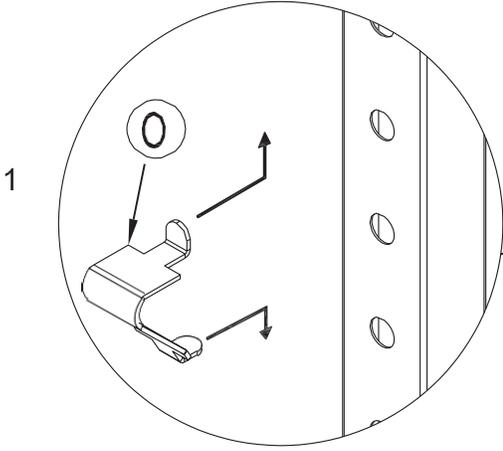

Step 8

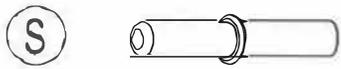

x 2




x 2



x 2

Put the shim (T) over the door pivot pin(S), then install the two into the holes of the left bottom. Next, put the door. Finally, Pull the top spring shaft and insert it into the front door frame's hole.


install part U into the holes of the door top holes.

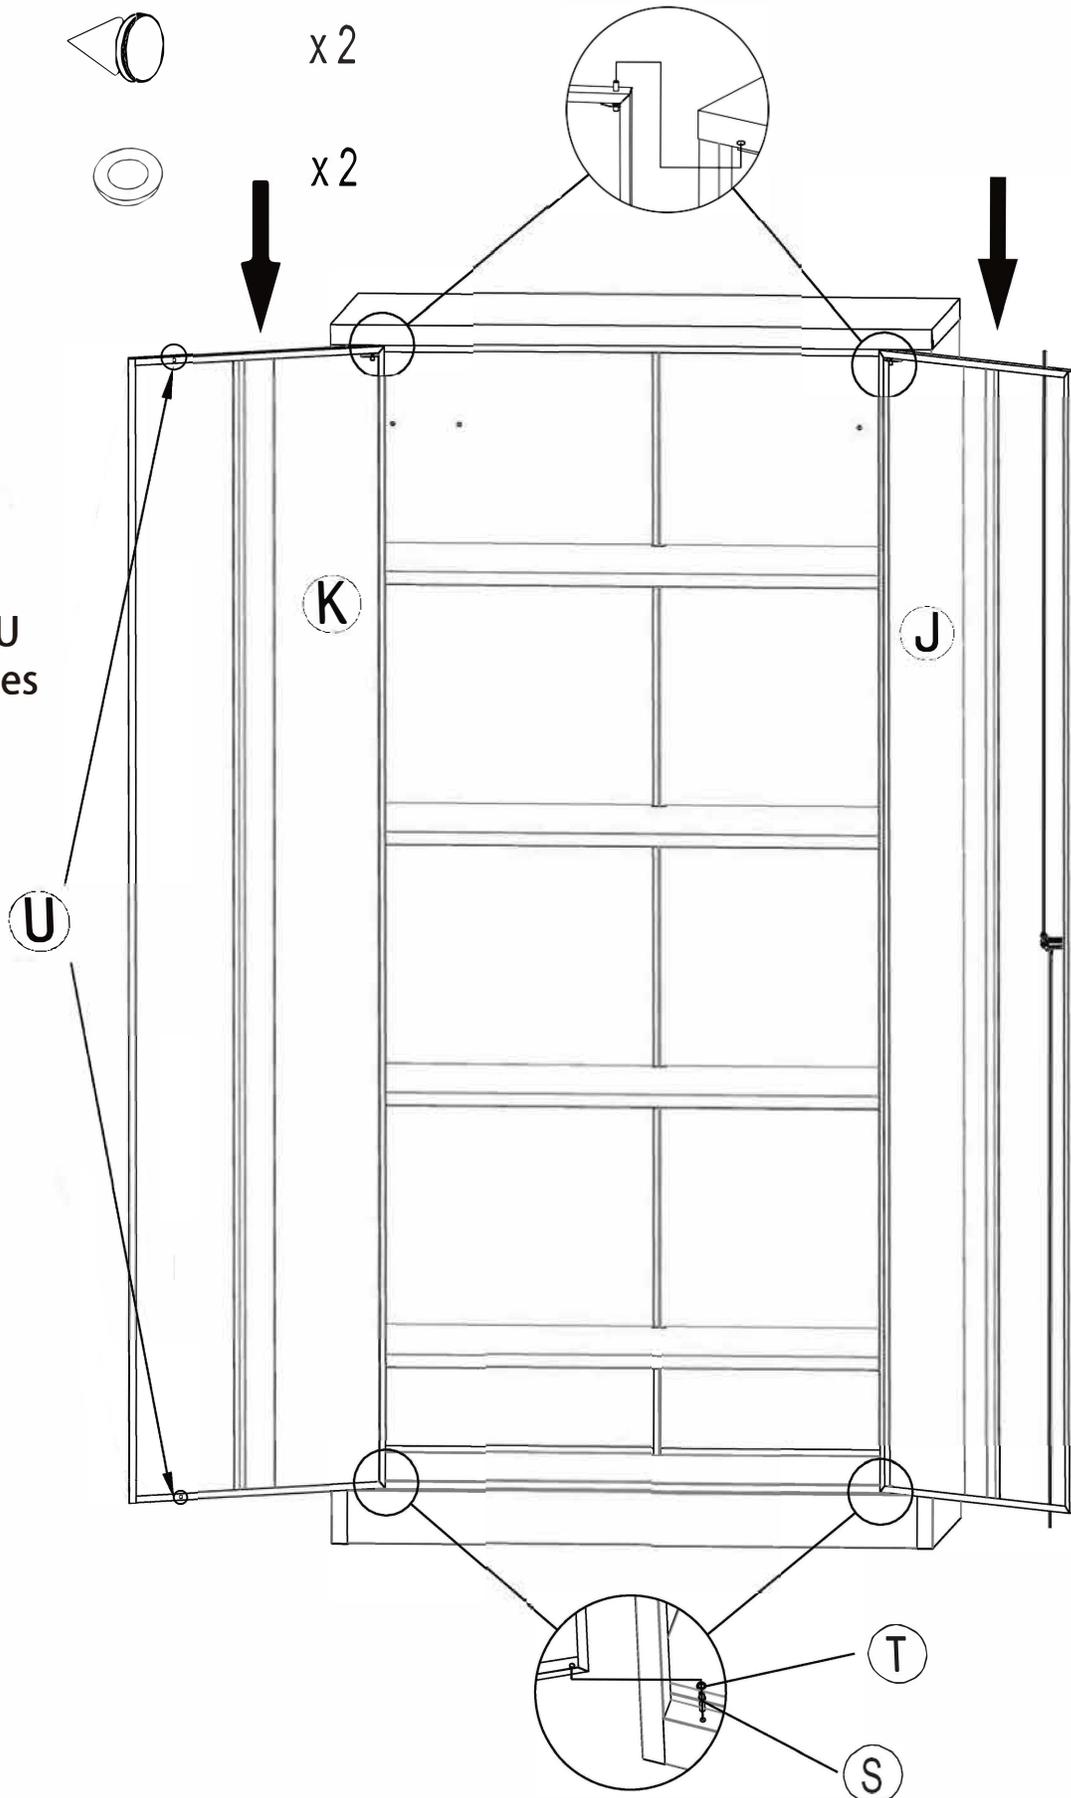






Step 9

Install the handle (P) by using the matched screws.




P

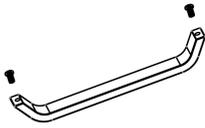

x2

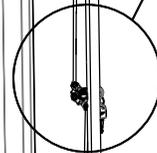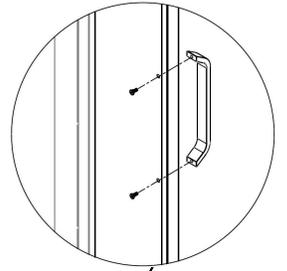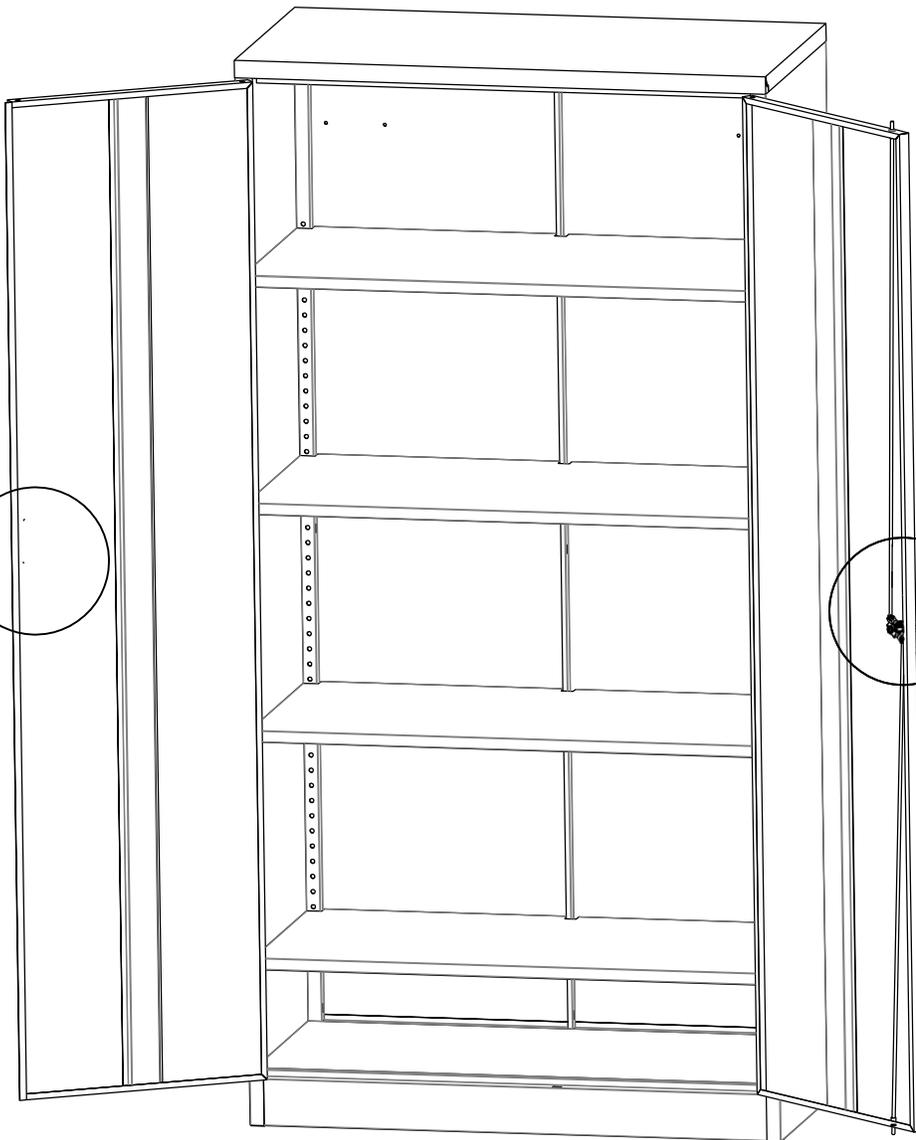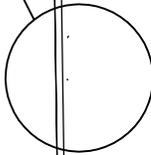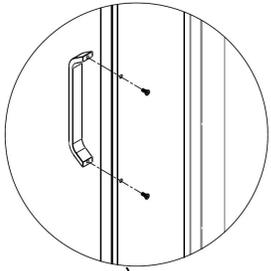

Step 10

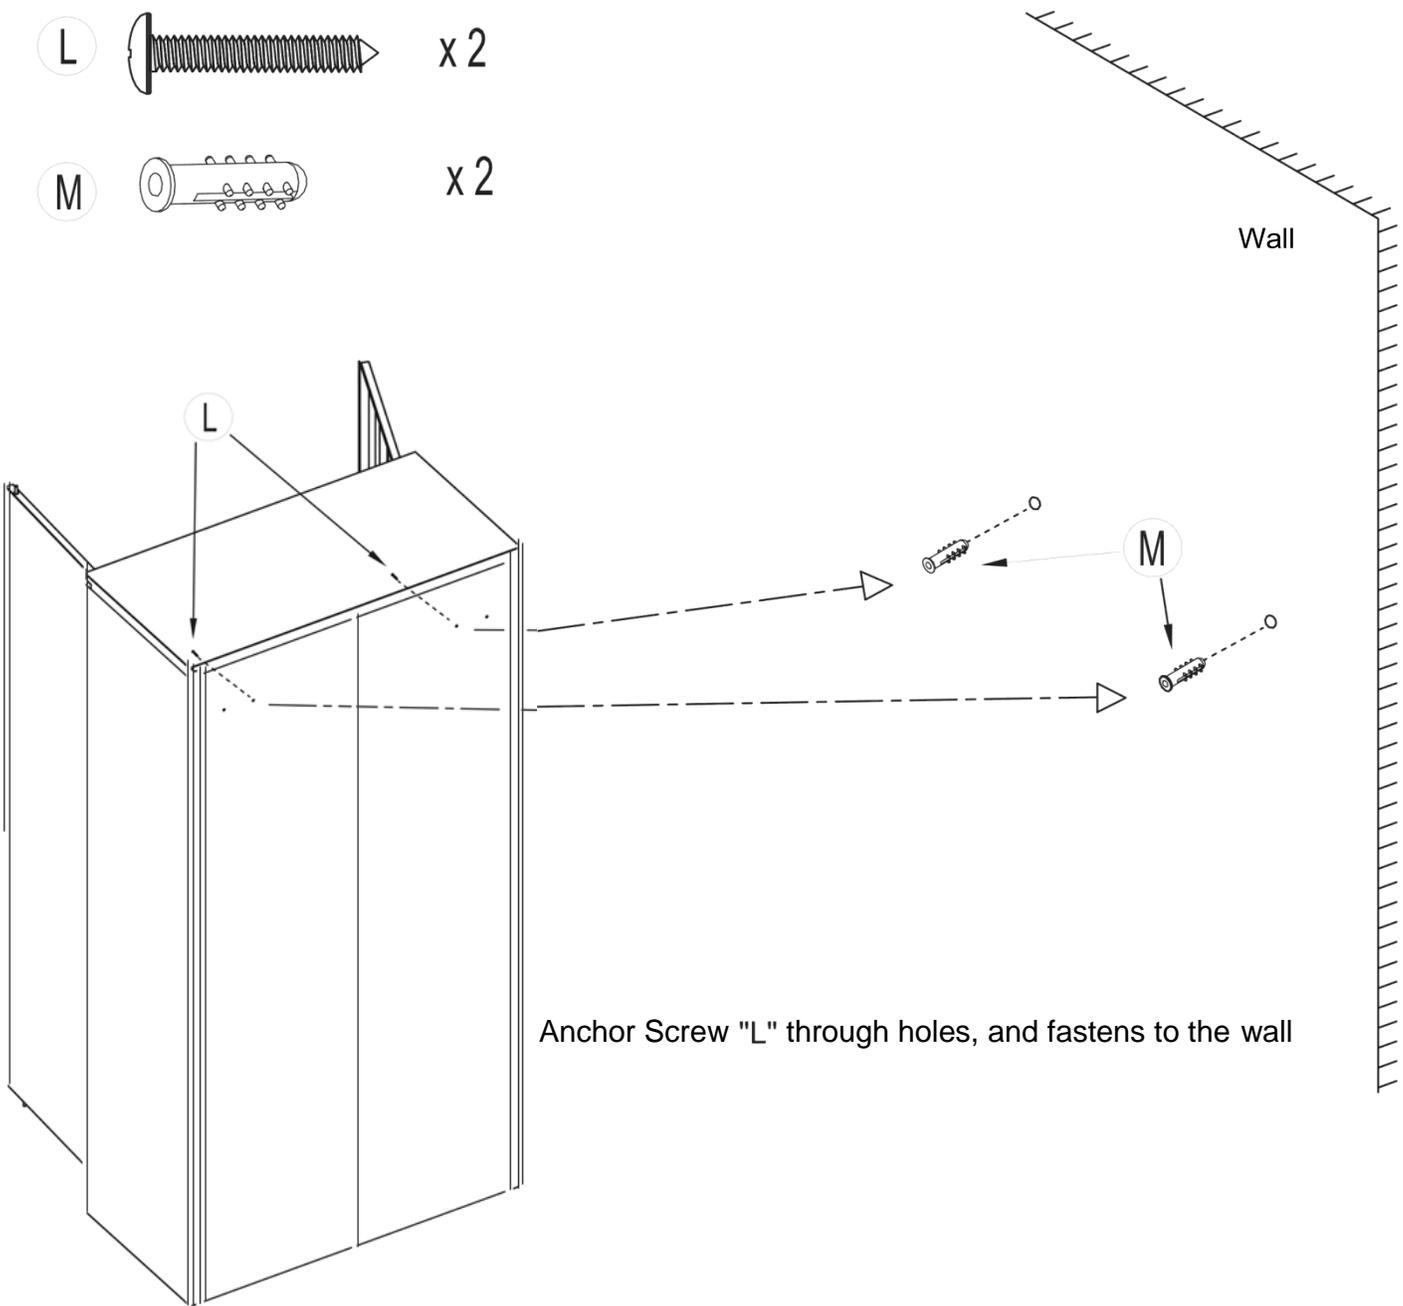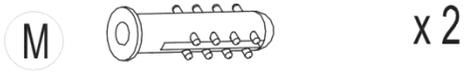

AFTER ASSEMBLY IS COMPLETE, THE UNIT MUST BE SECURED TO A WALL.

Step 11

This Product is designed for stationary use only.
Do not use it with any type of mobile cabinet conversion device.

