


Hall Tree

Assembly Instructions - Please keep for future reference

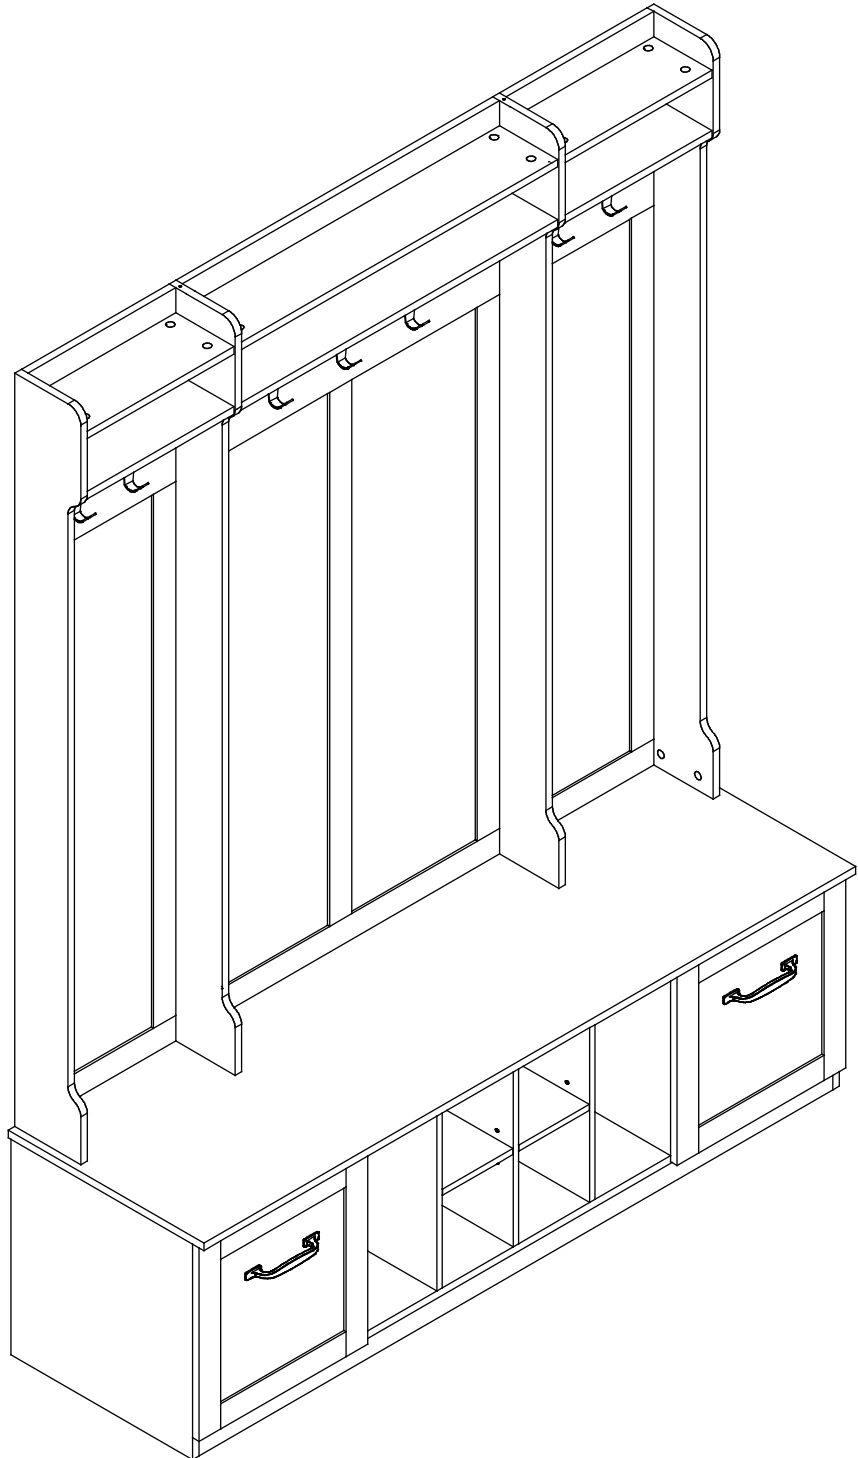

Dimensions

Width- 59inch

Depth-17.75inch

Height-77inch

Important – Please read these instructions fully before starting assembly



Safety and Care Advice

Important – Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- During assembly do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



power drill is set on a low torque setting.

- To reduce the likelihood of damaging your product please ensure that your

Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts
- Regularly check and ensure That all bolts and fittings are tightend properly.

WARNING
In order to help prevent overturning –
please follow these instructions











To help prevent product toppling over please follow the below steps:-

Use the anti tip stap or wall fixing method provided (if applicable)
Do not allow children to climb or hang on the furniture
Do not open more than one drawer at a time
Do not place heavy items in the top drawers
Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose


Components - Fittings

Please check you have all the panels listed below



Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required

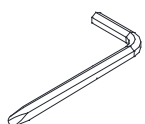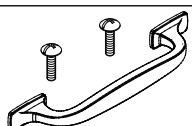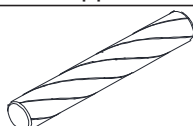 (A) Cam Bolt x 120+2	 (B) 6*30mm Dowel x 77+2	 (C) Cam lock x 120+2	 (D) 3*12mm Screw x 16+1
 (E) Allen key x 1	 (F) 4*40mm Screw x 10+1	 (G) 3*12mm Screw x 7set	 (H) Laminate support x 8+1
 (I) 4*30mm Screw x 8+1	 (J) 4*8mm Handle x 2set	 (K) x 2set	 (L) 6*50mm Dowel x 2
 (CL) runner x 2	 (CR) runner x 2	 (DR) runner x 2	 (DL) runner x 2
 (M) Foot pad x 8	 (N) Perfect fit x 28		

Tools required Not Included



Phillips screwdriver
(medium & large)

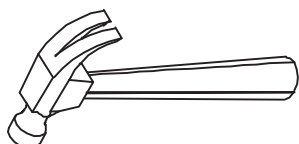


Using Camlocks

Step 1

Connect the male camlock as directed in the assembly instructions using a screwdriver.

1


DO NOT OVER TIGHTEN.
NE PAS SERRER EXCESSIVEMENT.

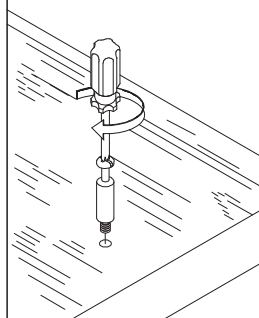

Step 2

Push the male camlock into the entry hole.

2

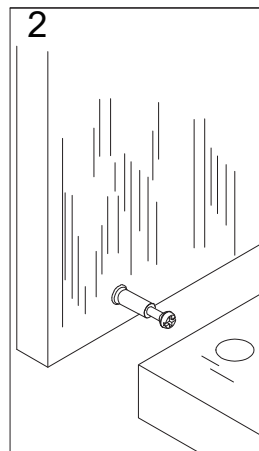


Step 3

Insert the female camlock as shown in the instruction.

Note: ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

3

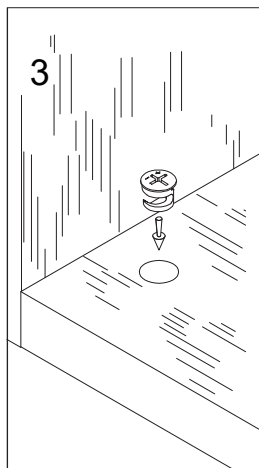


Step 4

Turn the female camlock clockwise with a screwdriver.


You should feel a click when the camlock is locked in place.

The joint is now secure.

4

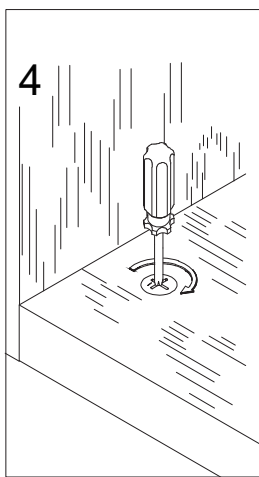















Assembly Instructions

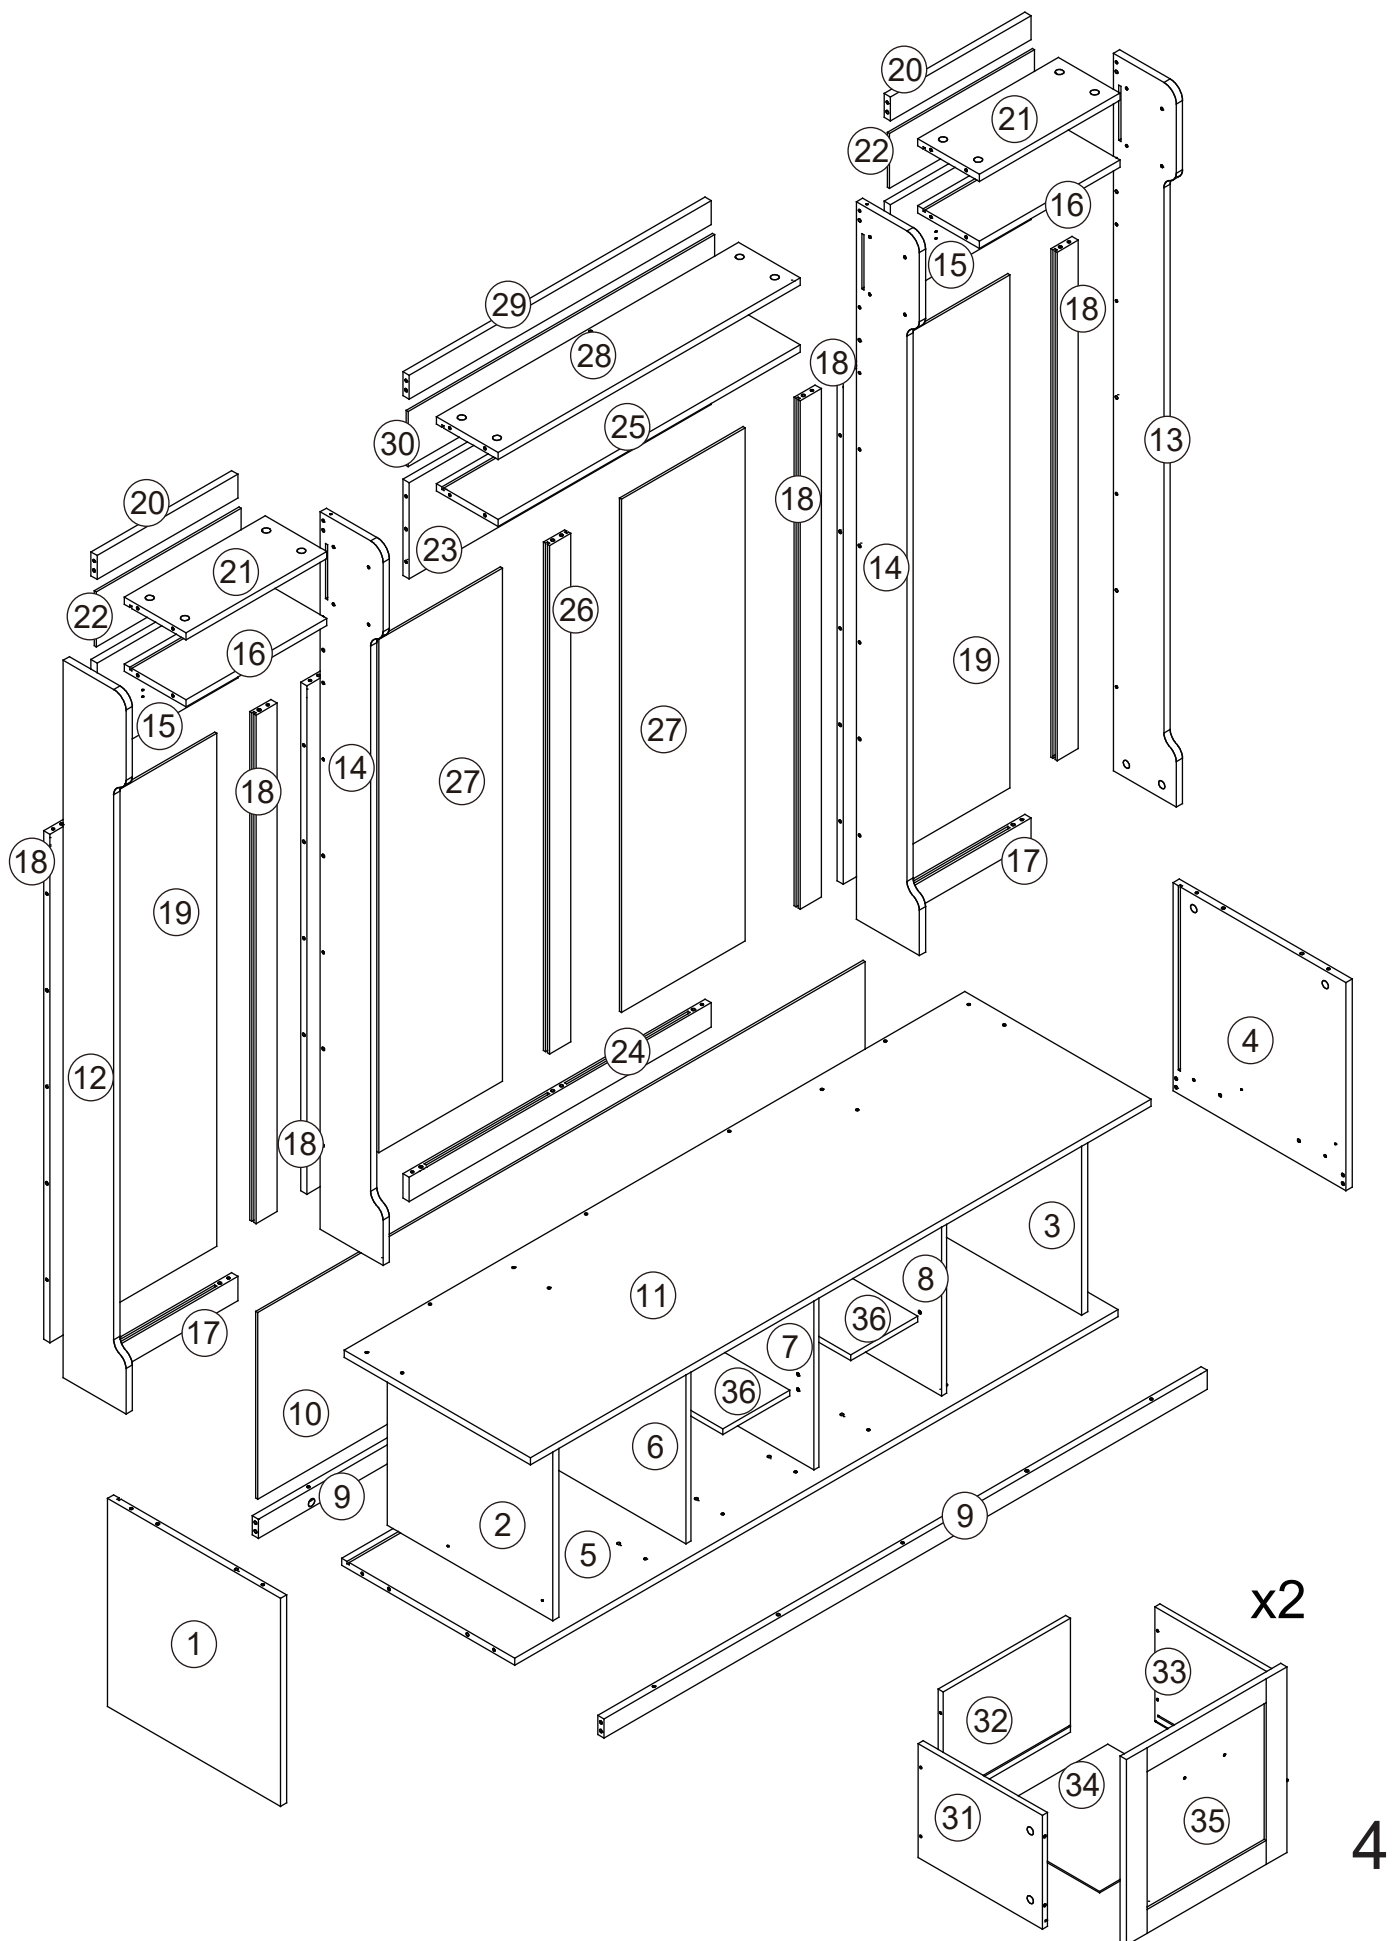

















PART LIST

This product comes in 1 box.

N724P235232

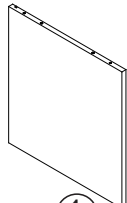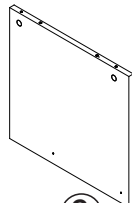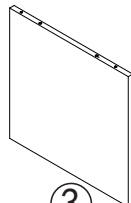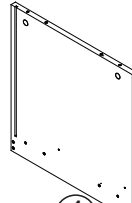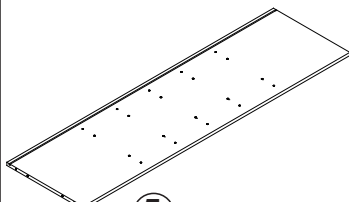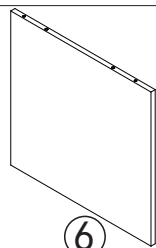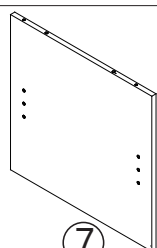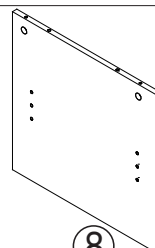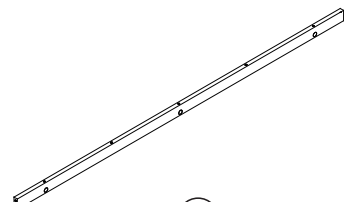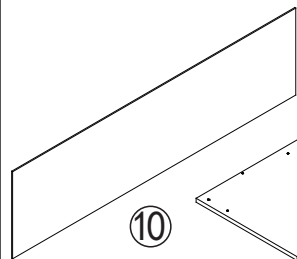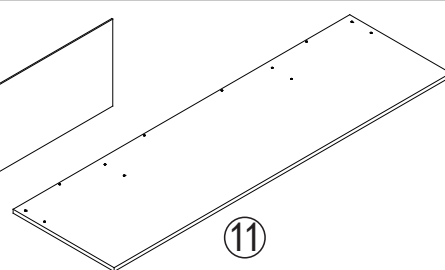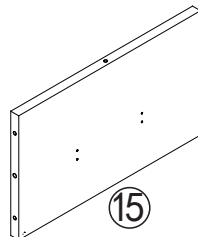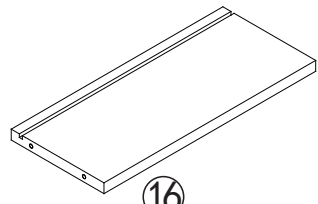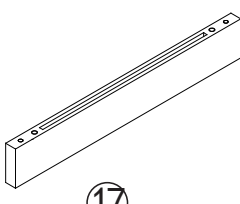
 ① x1 Side panel of lower cabinet 435x418x15mm	 ② x1 Lower Cabinet Vertical Board 378x400x15mm	 ③ x1 Lower Cabinet Vertical Board 378x400x15mm	 ④ x1 Side panel of lower cabinet 435x418x15mm	
 ⑤ x1 base plate 1458x418x15mm	 ⑥ x1 Lower Cabinet Vertical Board 378x400x15mm	 ⑦ x1 Lower Cabinet Vertical Board 378x400x15mm	 ⑧ x1 Lower Cabinet Vertical Board 378x400x15mm	 ⑨ x2 Drain 1458x42x12mm
 ⑩ x1 Lower back panel 1467x385x5mm	 ⑪ x1 kneading board 1500x450x15mm	 ⑫ x1 Upper Cabinet side panel 1501x152x15mm	 ⑬ x1 Upper Cabinet side panel 1501x152x15mm	 ⑭ x2 Upper cabinet in vertical plate 1501x152x15mm
 ⑮ x2 Back panel 340x201x15mm	 ⑯ x2 Fixed Laminate 340x149x15mm	 ⑰ x2 Under the bar 340x50x15mm	 ⑱ x6 Vertical bars 1065x50x15mm	 ⑲ x2 Backboard 1074x249x5mm

PART LIST

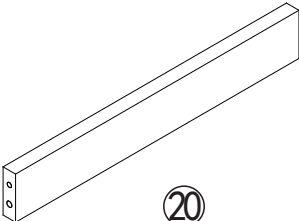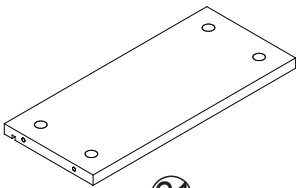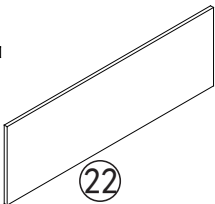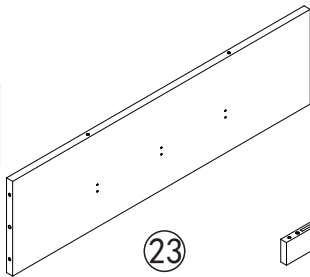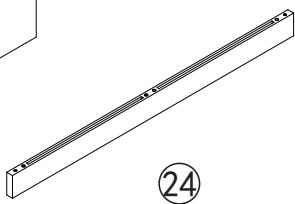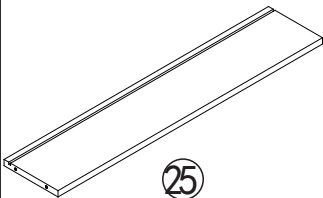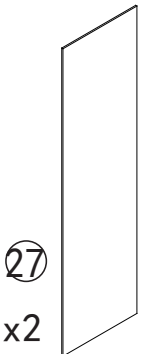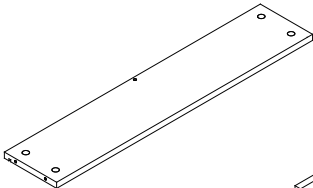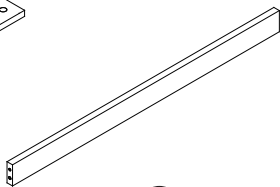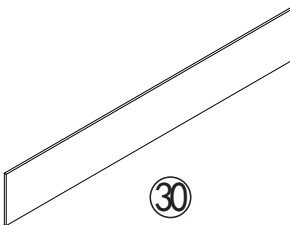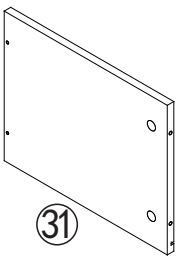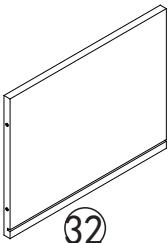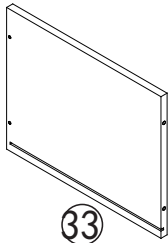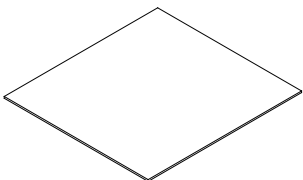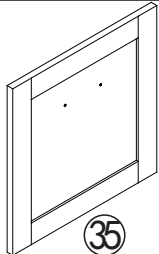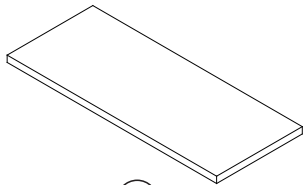
 ②0 x2 Roof Bar 340x50x15mm	 ②1 x2 Fixed Laminate 340x149x15mm	 ②2 x2 Backboard 349x114x5mm	 ②3 x1 Back panel 730x201x15mm	 ②4 x1 Under the bar 730x50x15mm
 ②5 x1 Fixed Laminate 730x149x15mm	 ②6 x1 Middle Bar 1065x50x15mm	 ②7 x2 Backboard 1074x299x5mm	 ②8 x1 Fixed Laminate 730x149x15mm	 ②9 x1 Roof Bar 730x50x15mm
 ③0 x1 Backboard 739x114x5mm	 ③1 x2 Draw the side plate 300x238x12mm	 ③2 x2 Draw back board 309x238x12mm	 ③3 x2 Draw the side plate 300x238x12mm	 ③4 x2 Backboard 318x297x3mm
 ③5 x2 Drawer Panel 388x388x15mm	 ③6 x2 Active laminate 397x162x12mm			

Assembly Instructions

Step 1

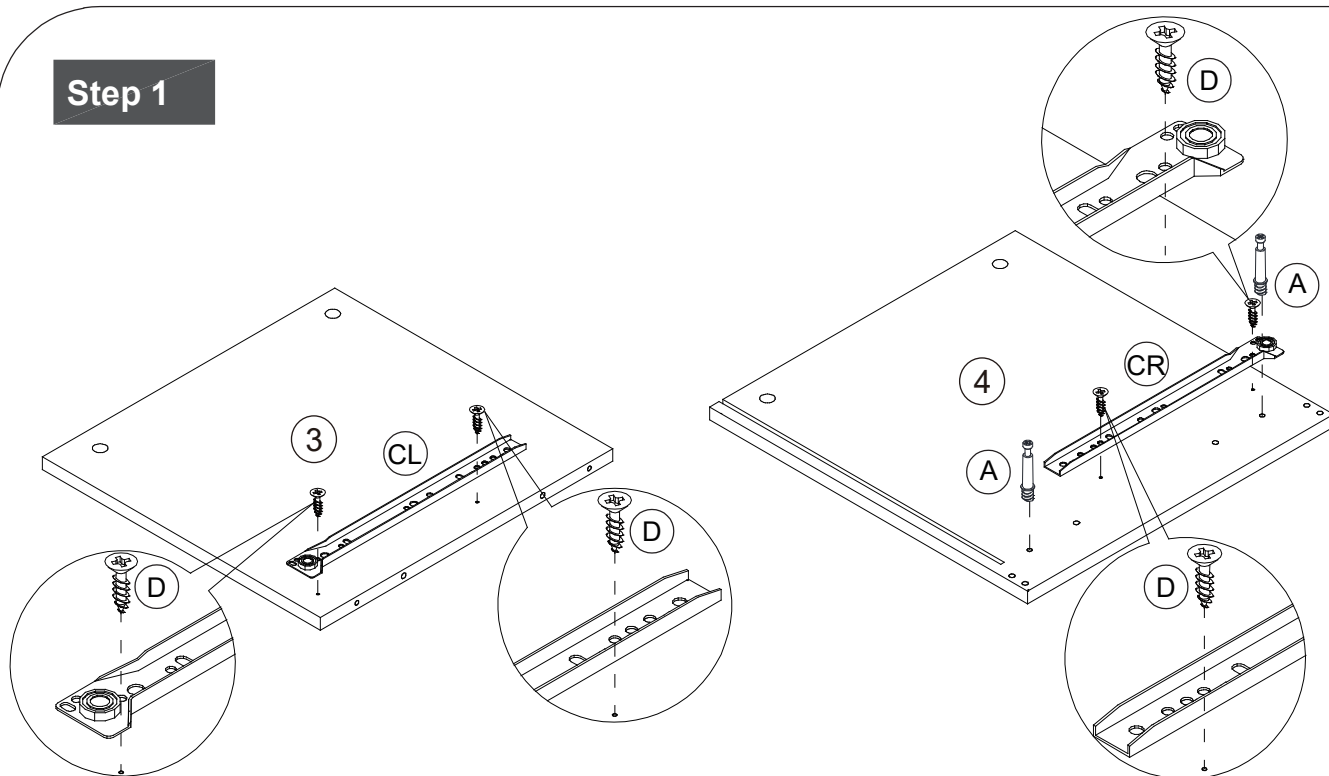

A




Cam Bolt x 2

D




3*12mm Screw x 4

CL



runner x 1


CR



runner x 1


Step 2

CL




runner x 1


CR



runner x 1

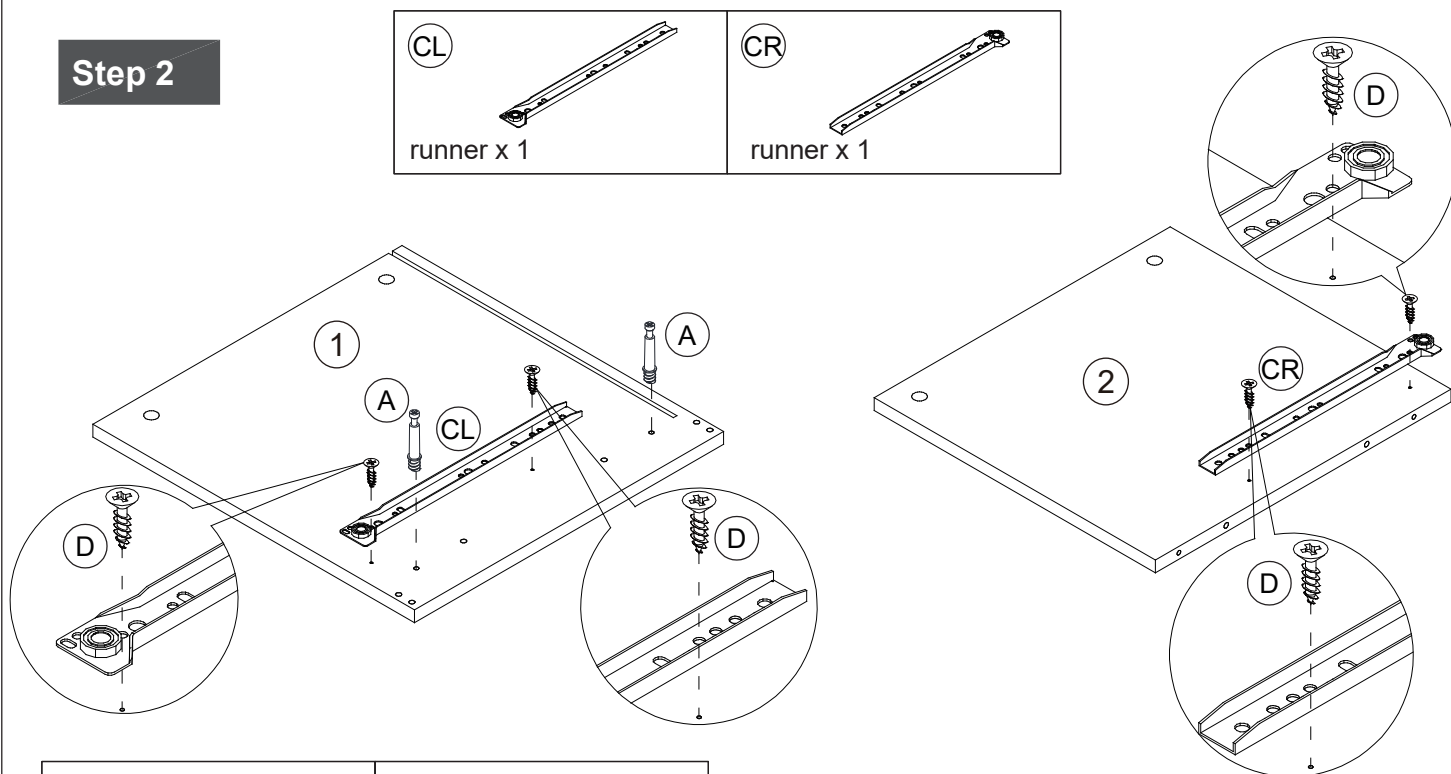

A



Cam Bolt x 2


D




3*12mm Screw x 4

Assembly Instructions

Step 3

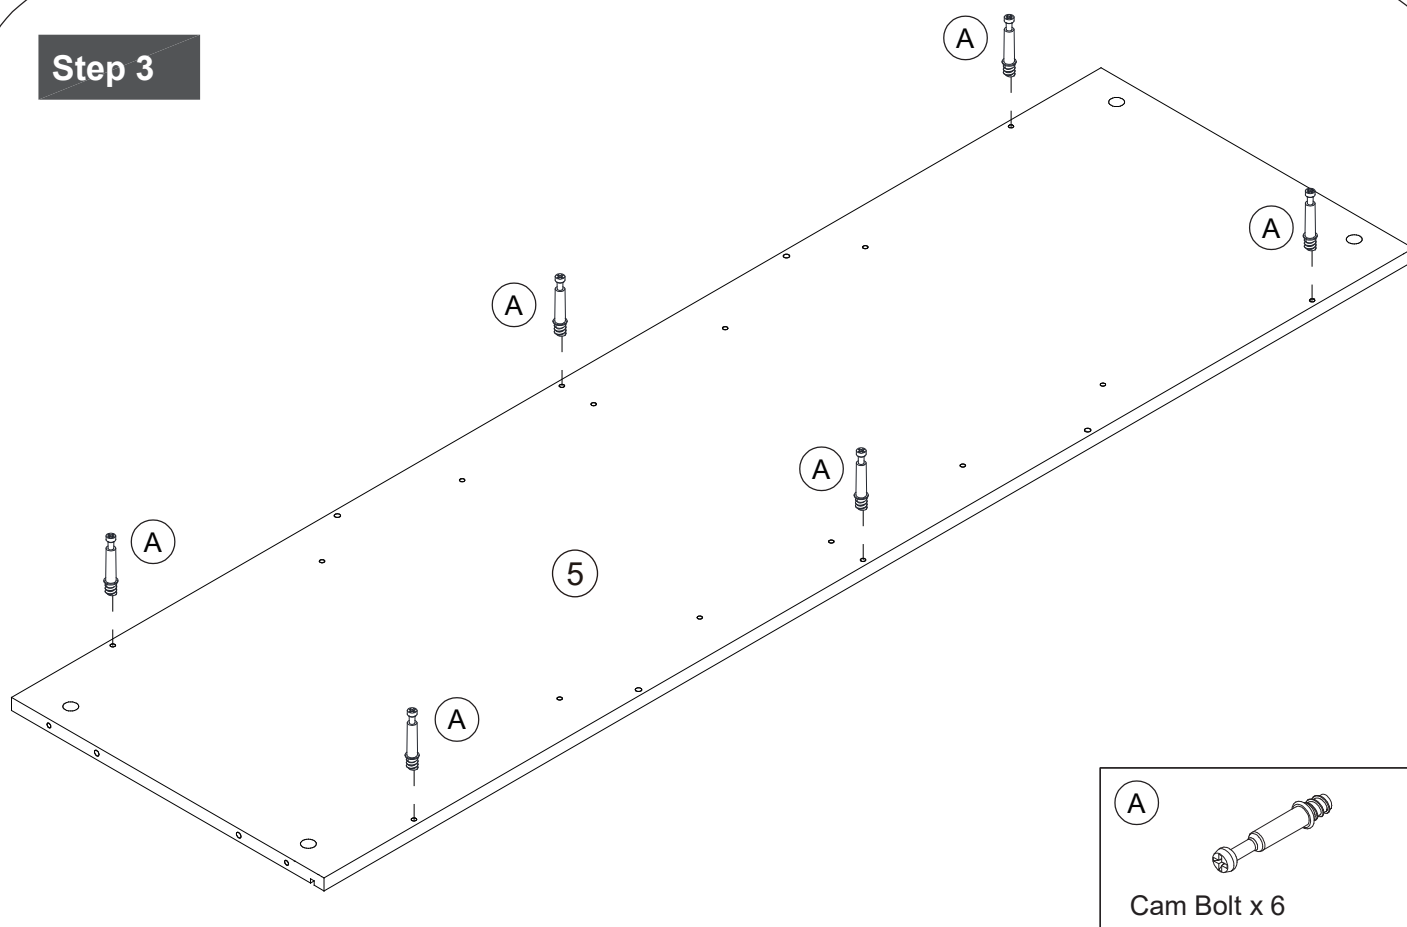


Step 4

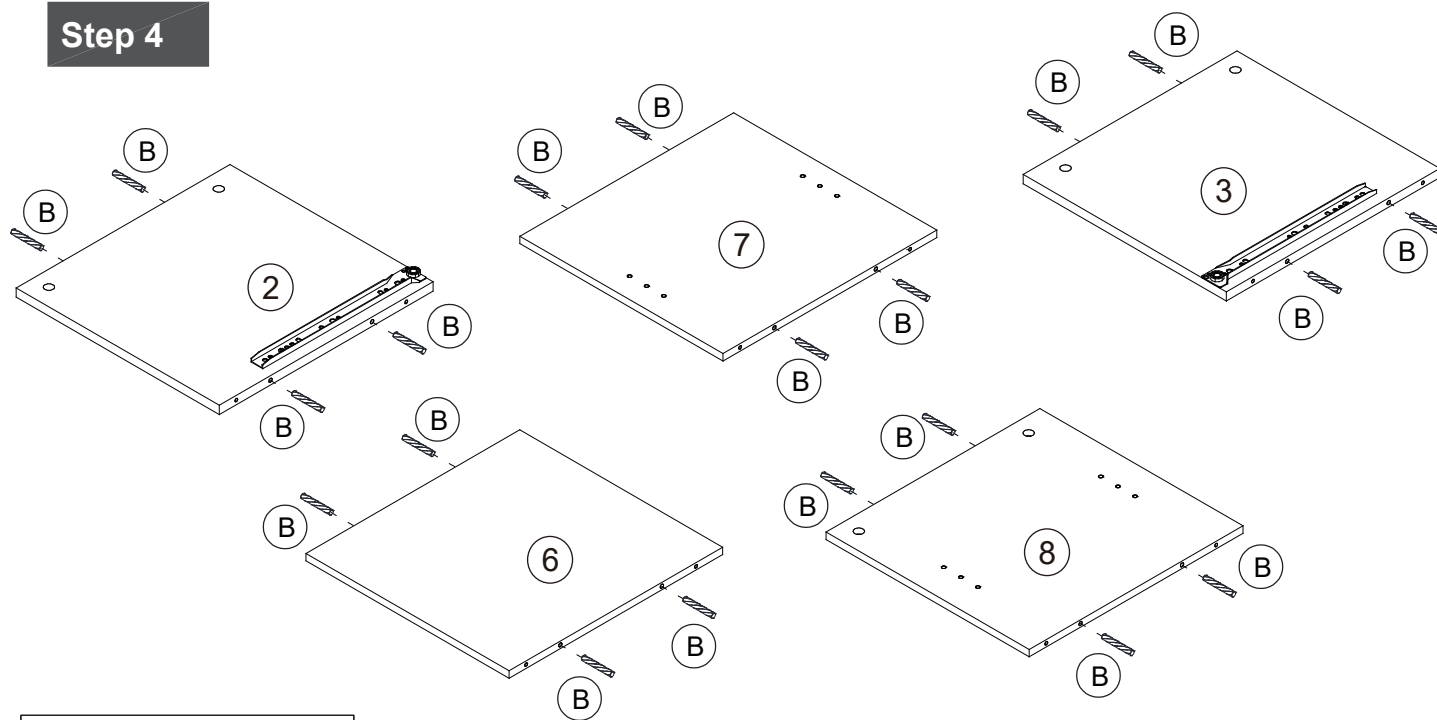


Assembly Instructions

Step 5

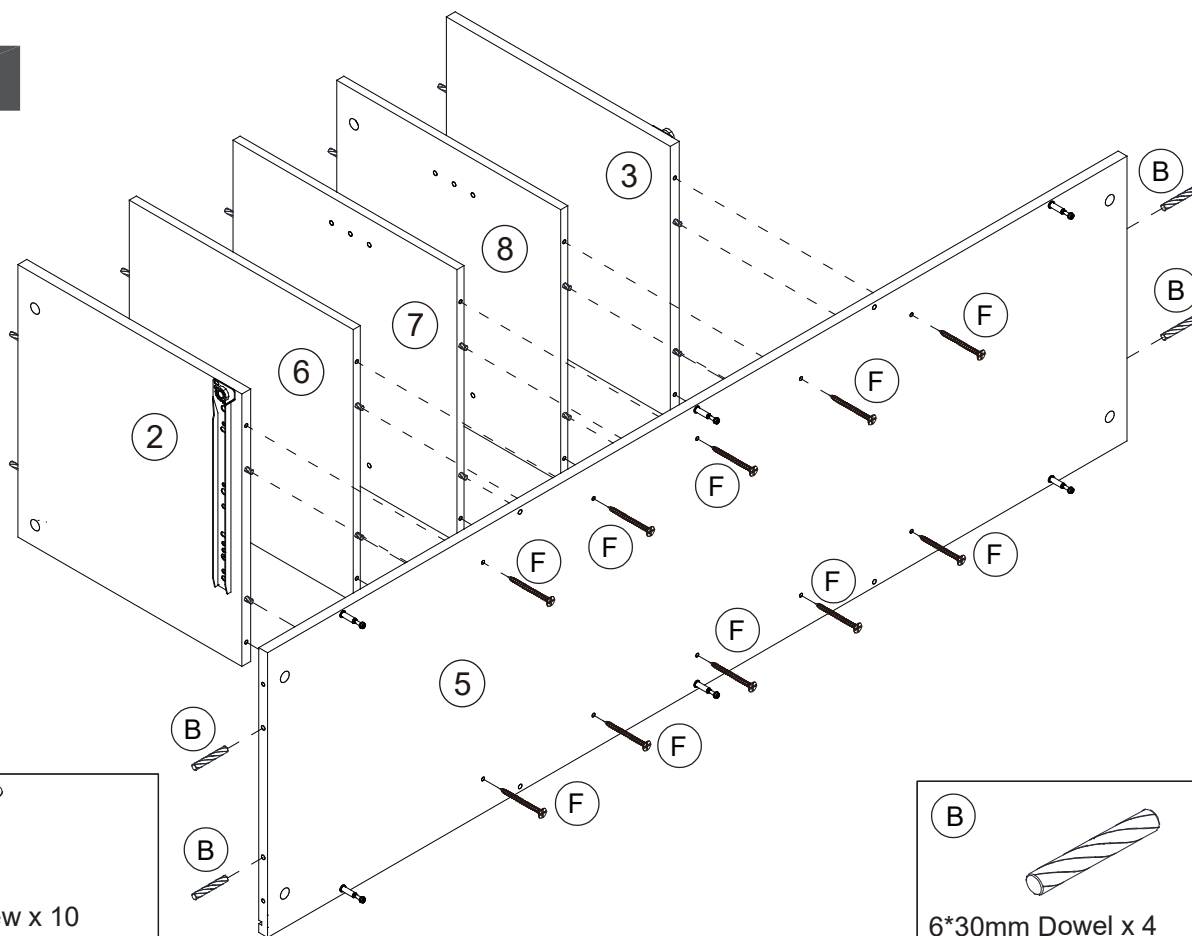


Step 6



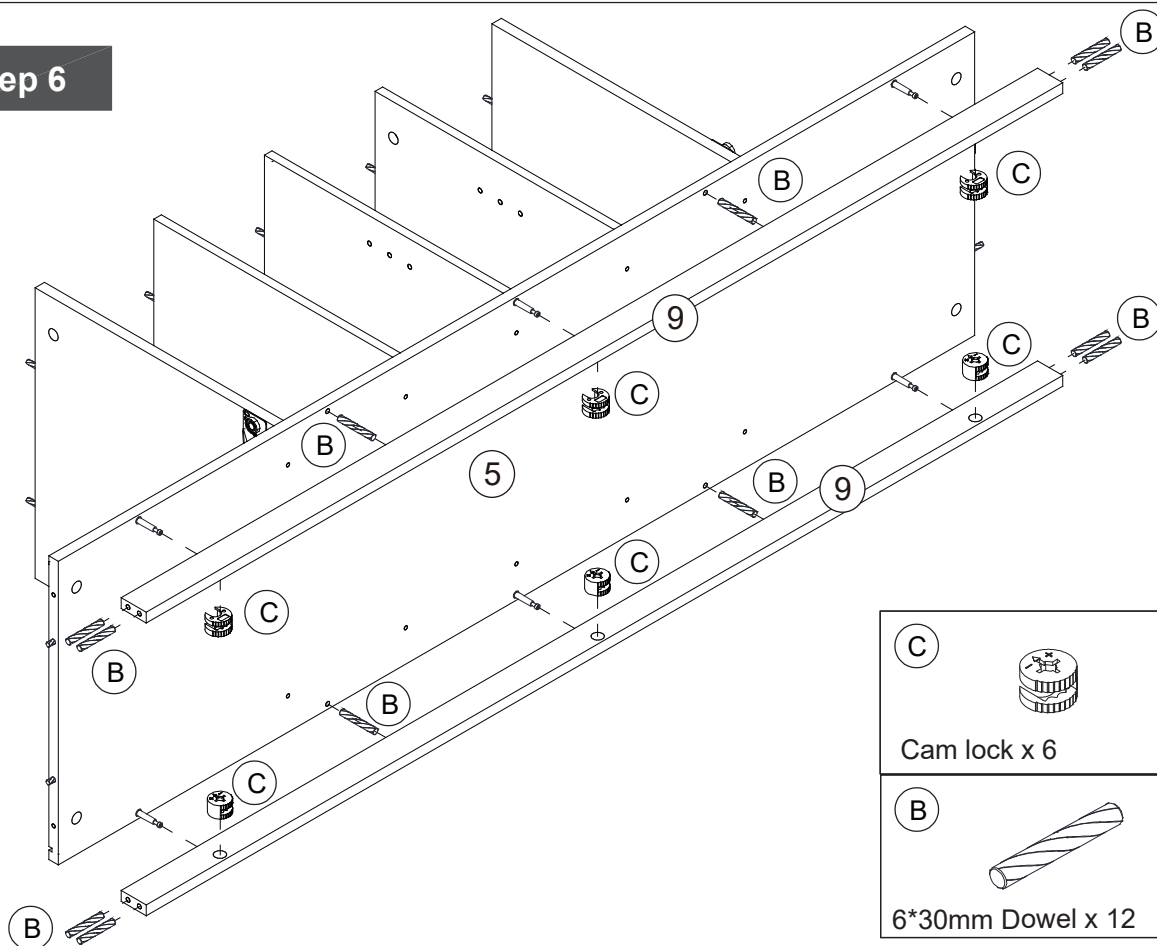


Assembly Instructions

Step 7


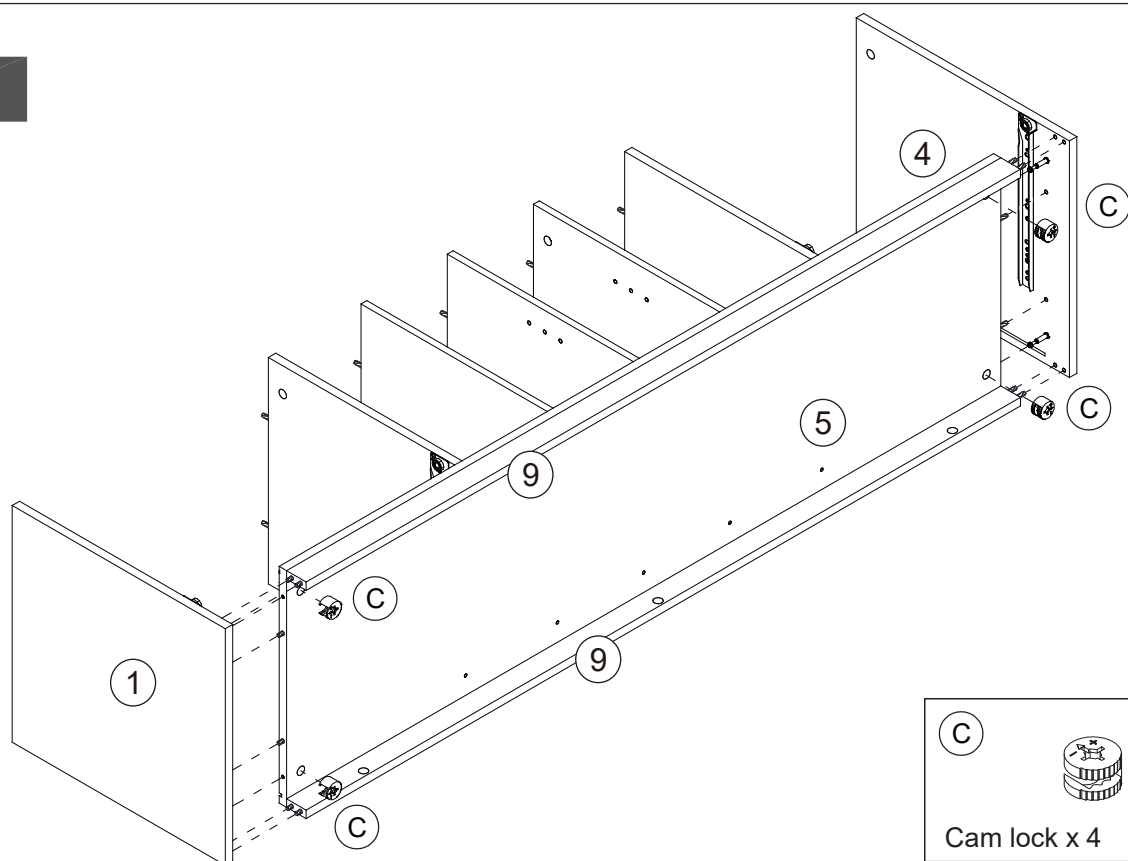


Step 8

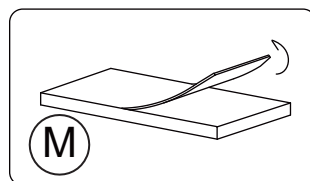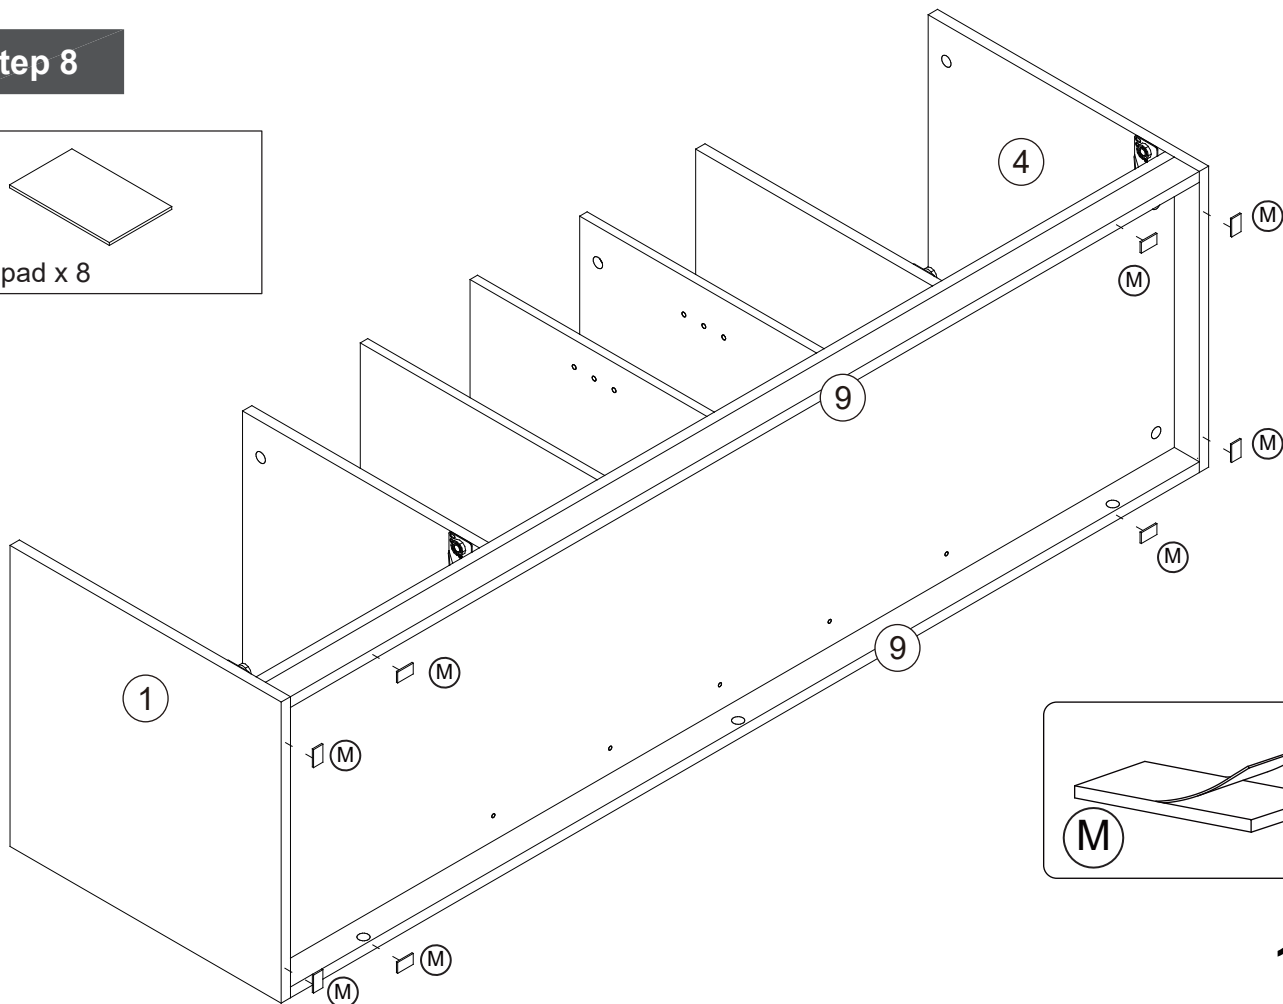
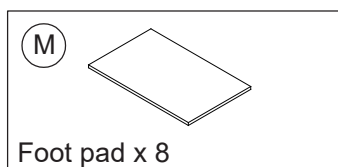


Assembly Instructions

Step 9

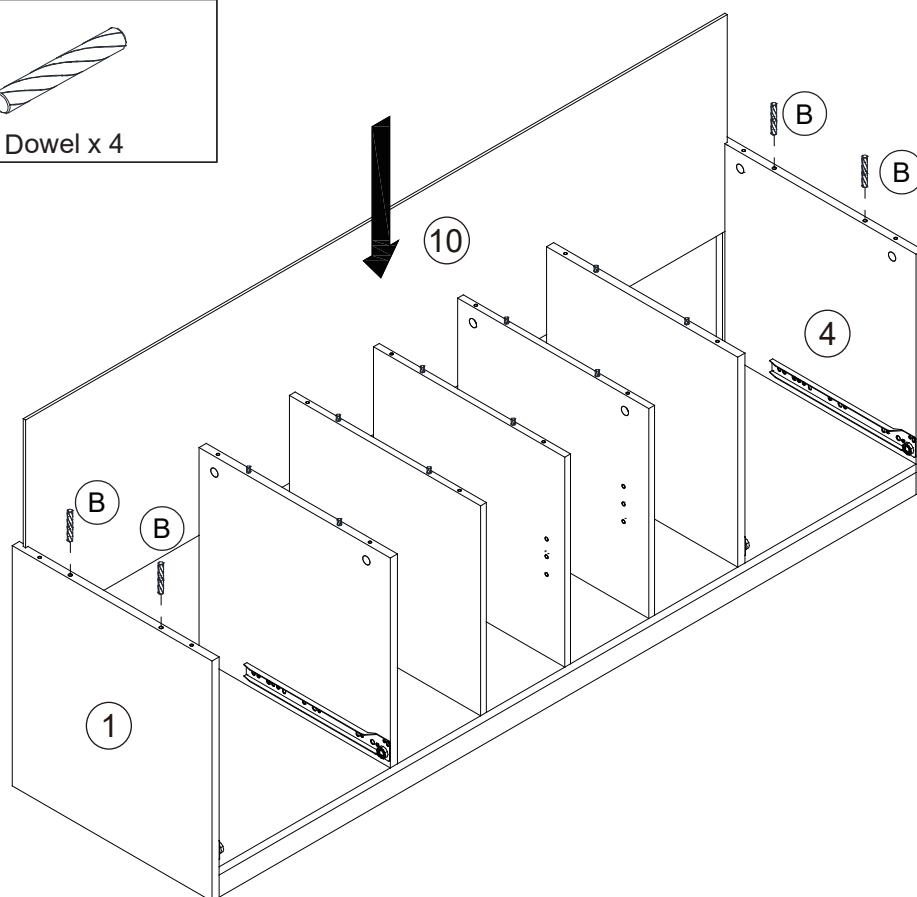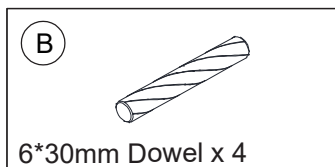


Step 10

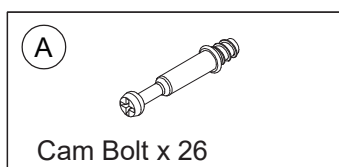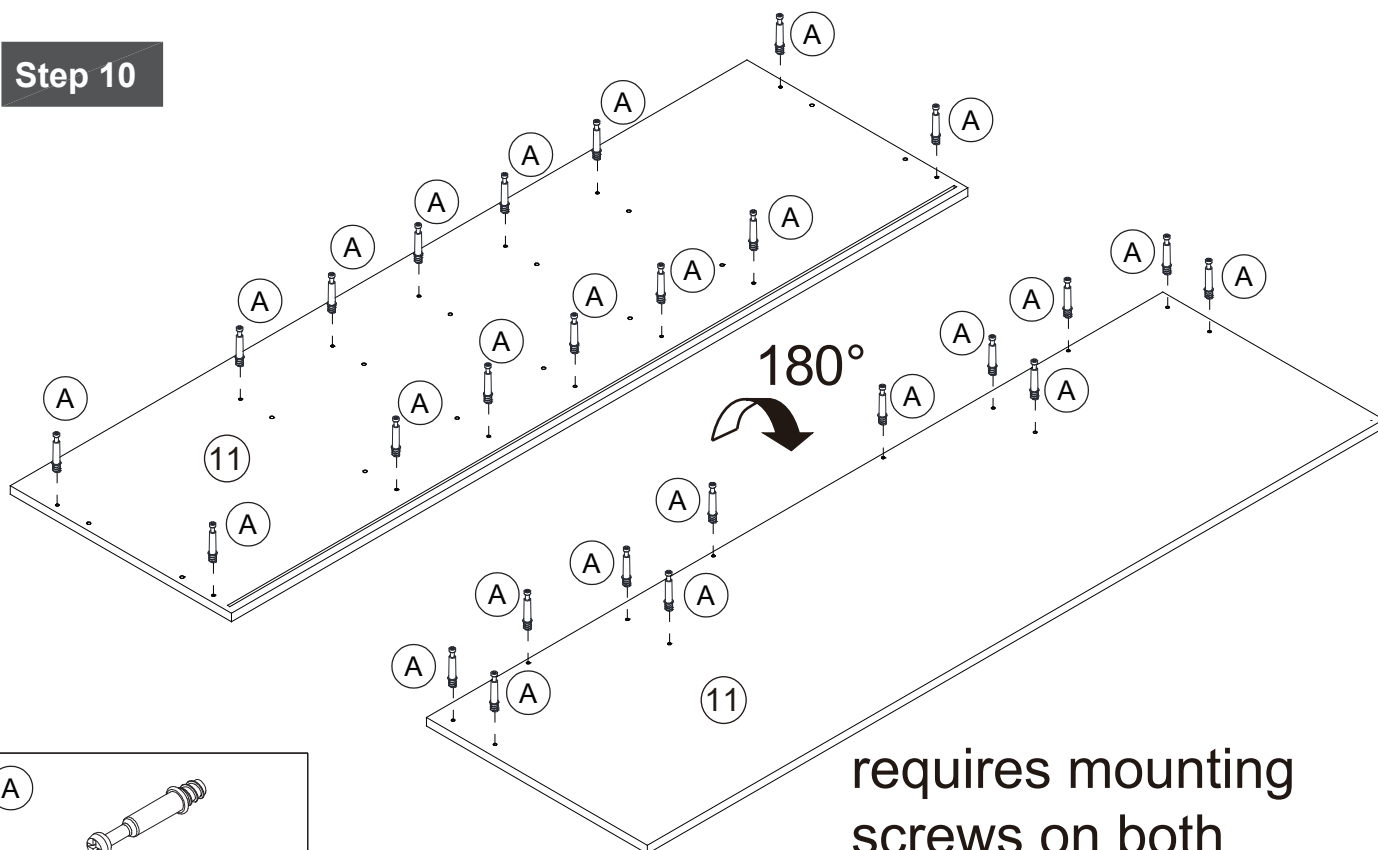

requires mounting
screws on both
sides

Assembly Instructions

Step 11

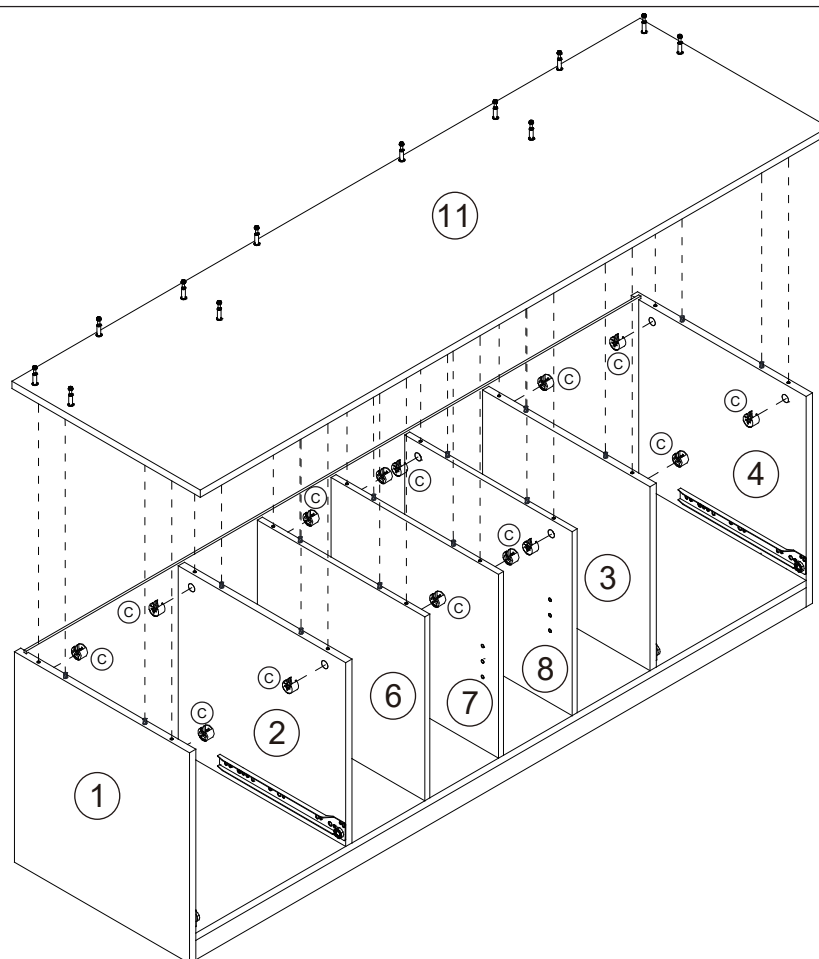


C




Cam lock x 14

Step 12

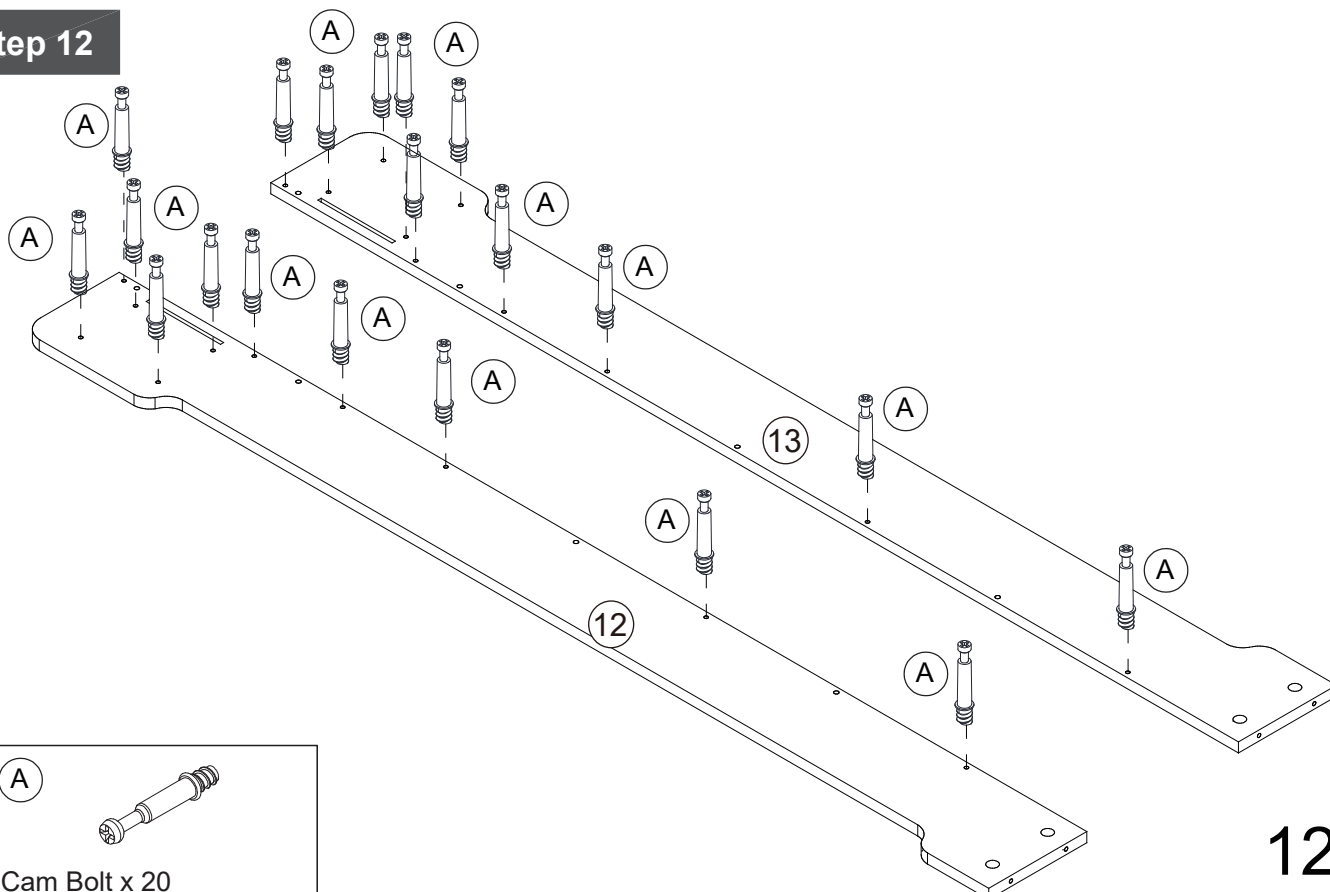

A




Cam Bolt x 20

Assembly Instructions


Step 13

x2

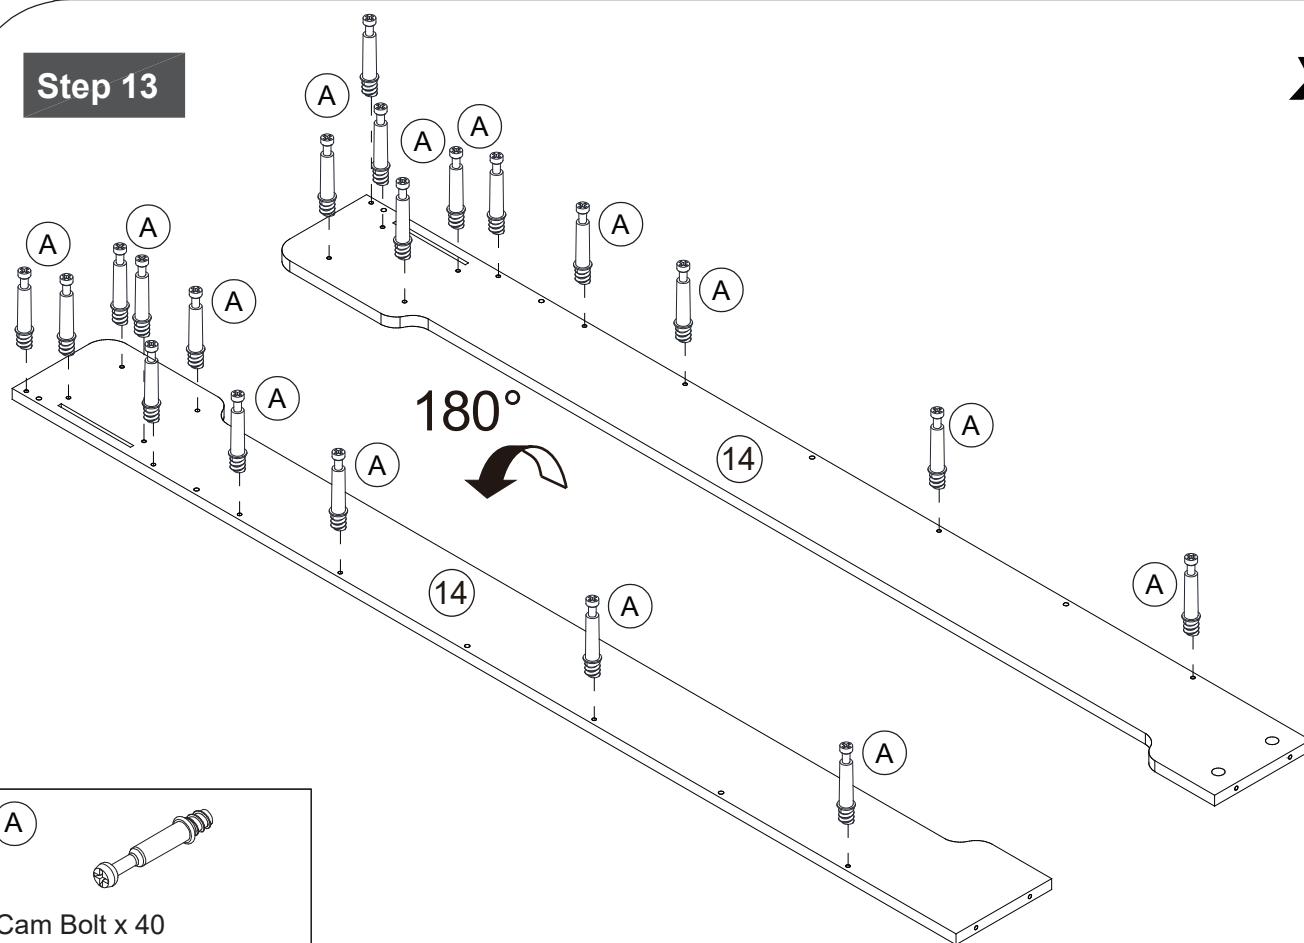

Step 14


x2

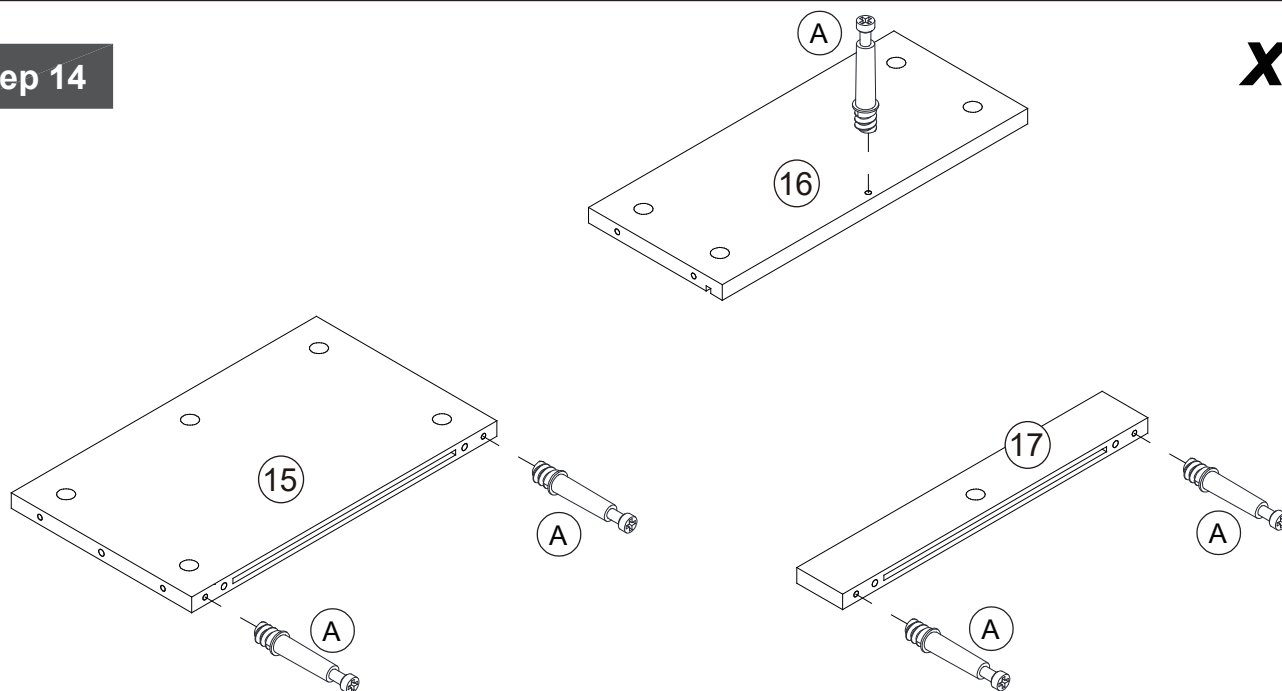


Assembly Instructions

Step 15

x2

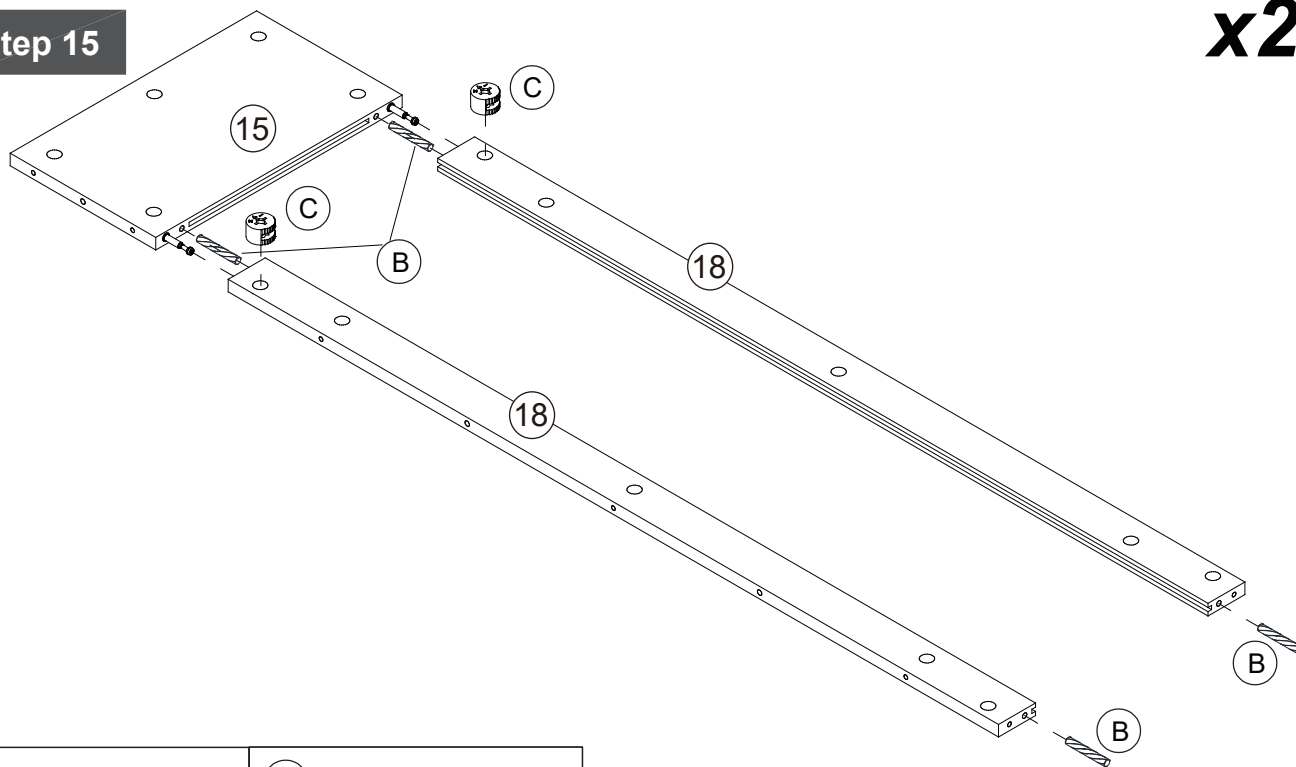

(B)



6*30mm Dowel x 8


(C)



Cam lock x 4

Step 16


x2

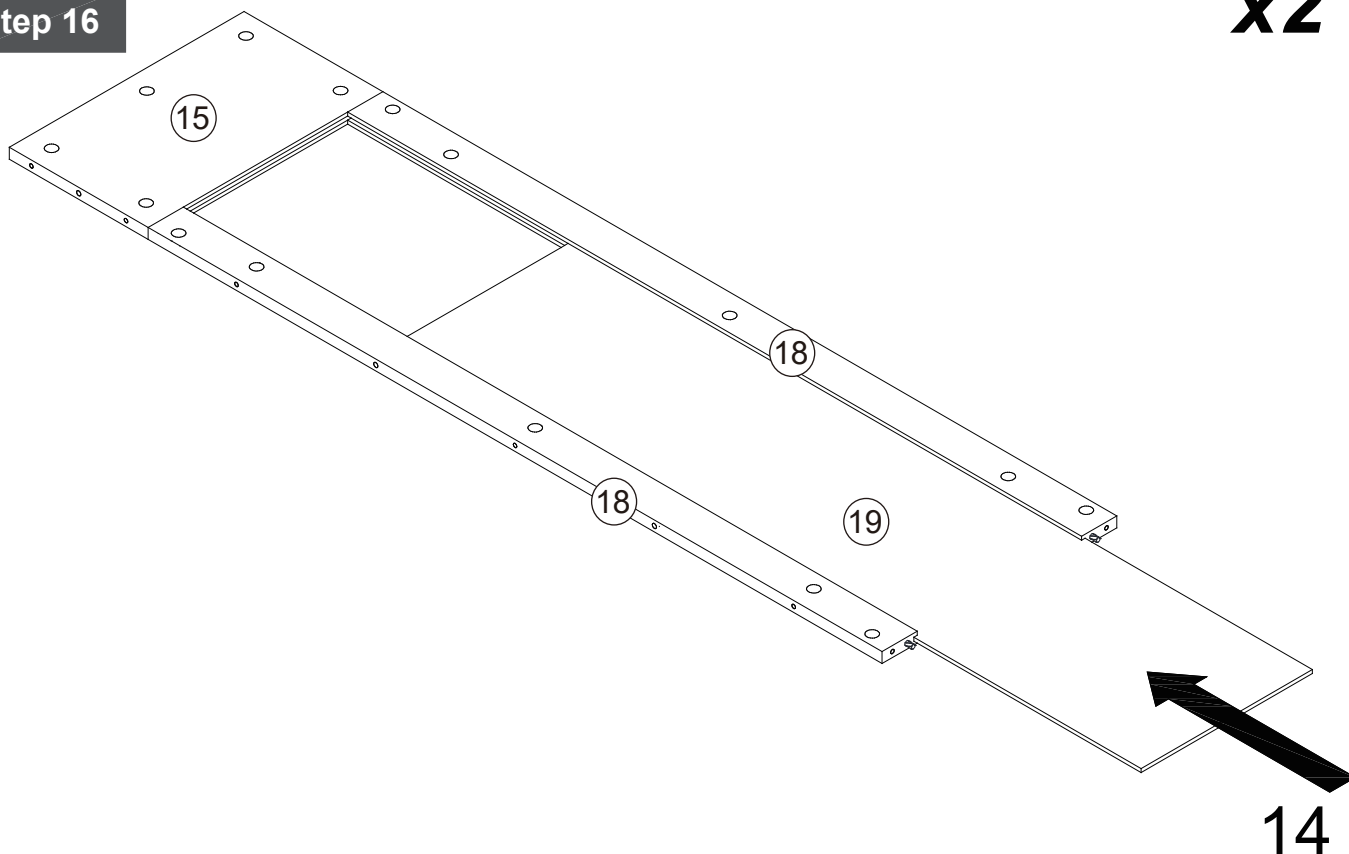

Assembly Instructions

Step 17

x2

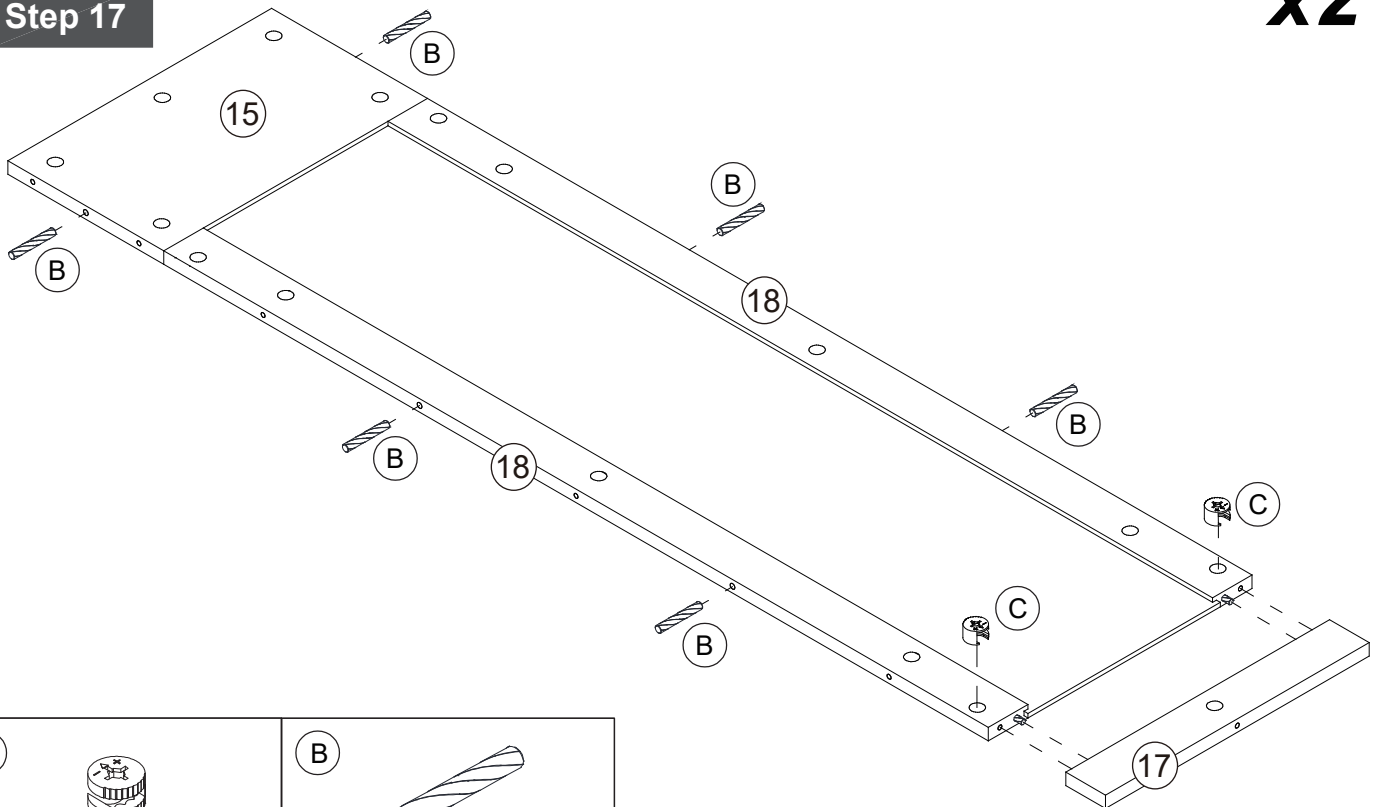


C



Cam lock x 4


B



6*30mm Dowel x 12

Step 18

x2

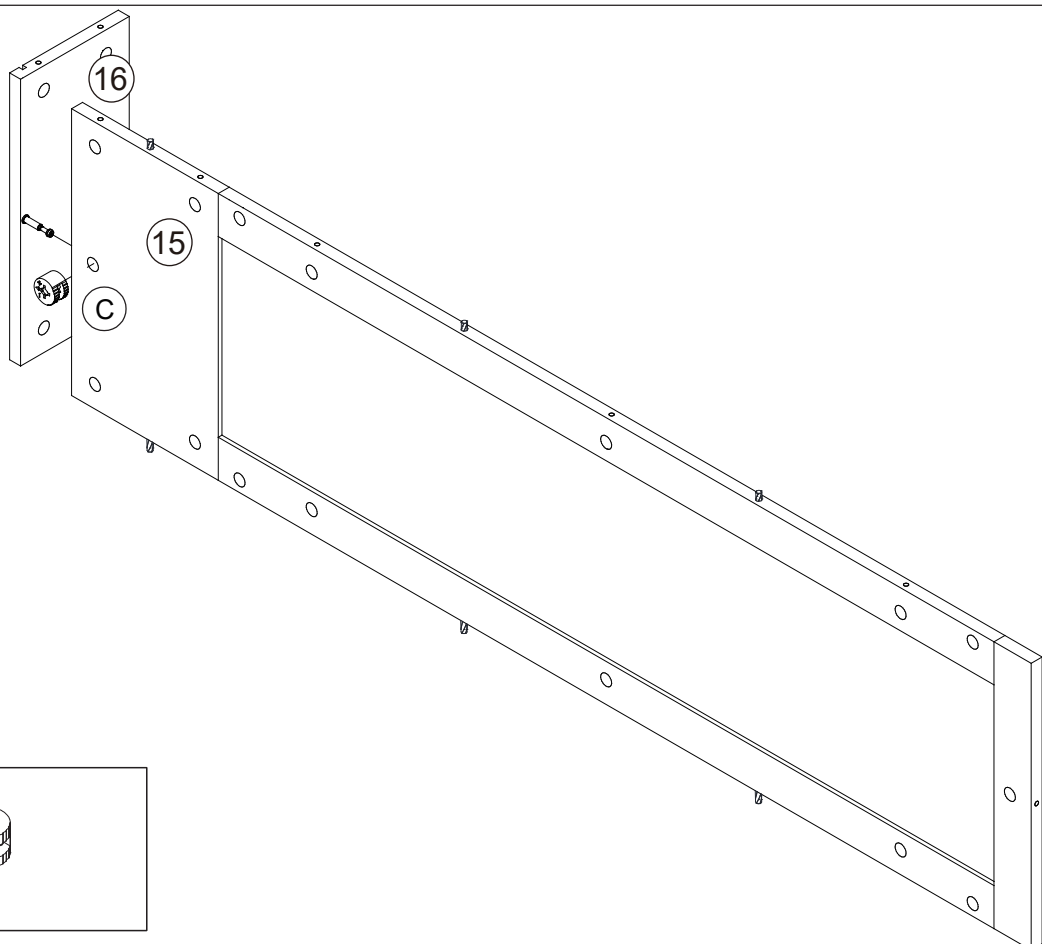

C




Cam lock x 2


15

Assembly Instructions

Step 19

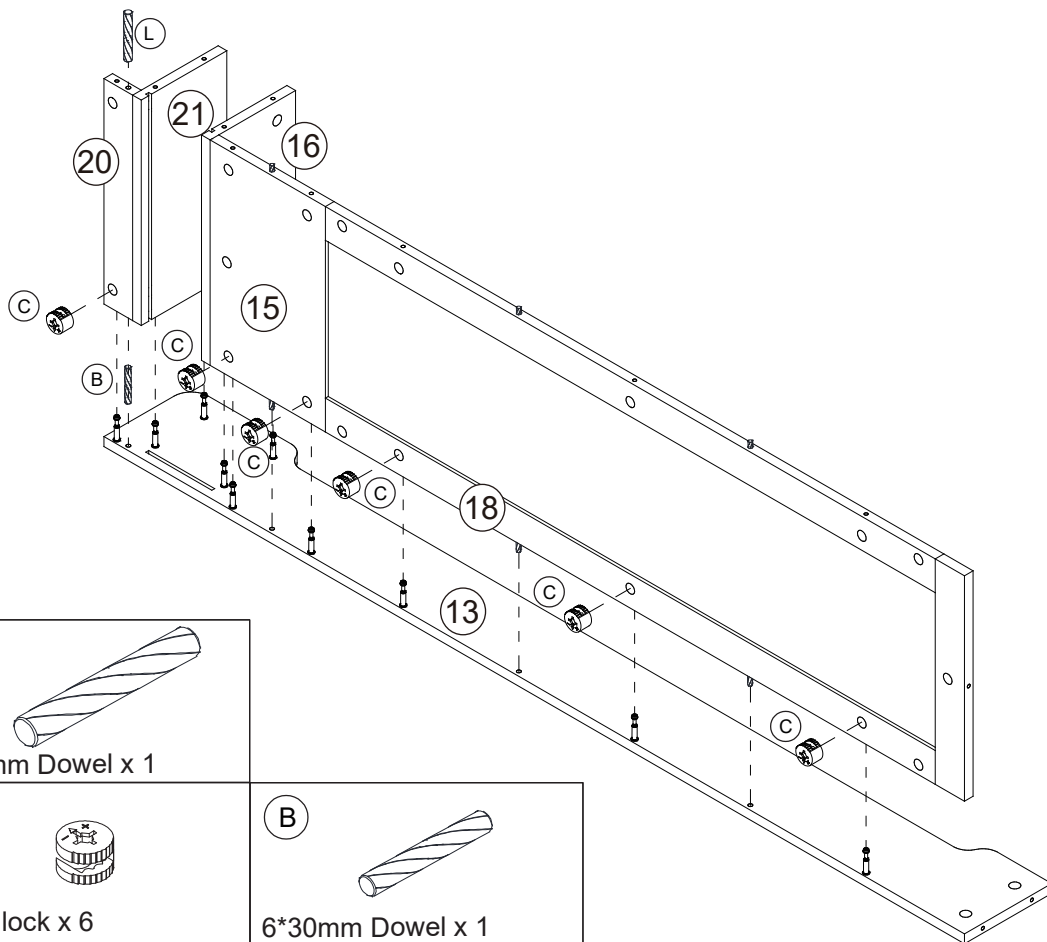


Step 20

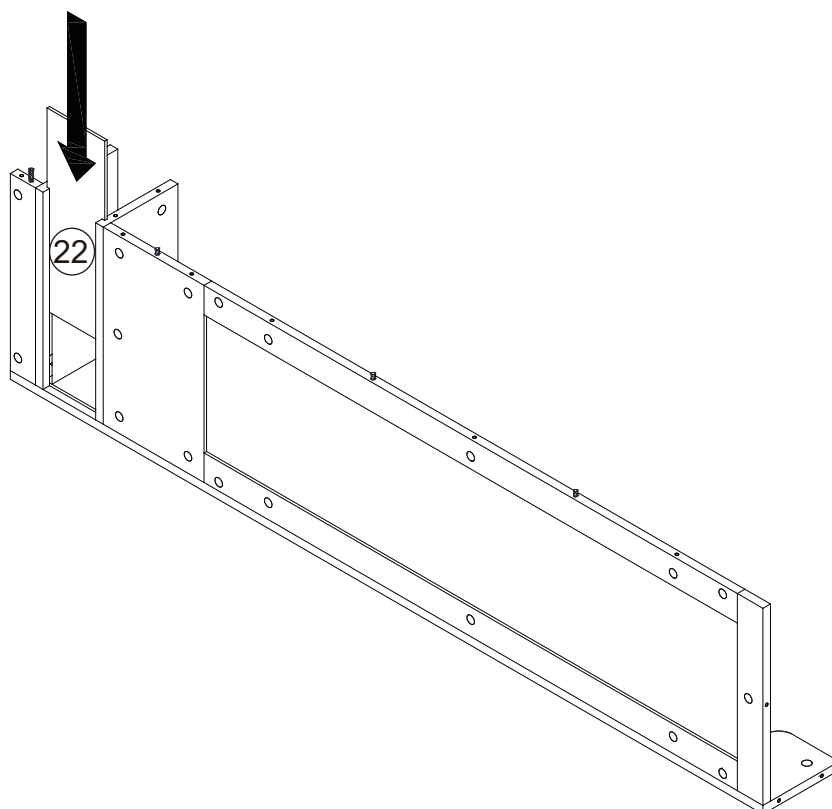


Assembly Instructions

Step 21

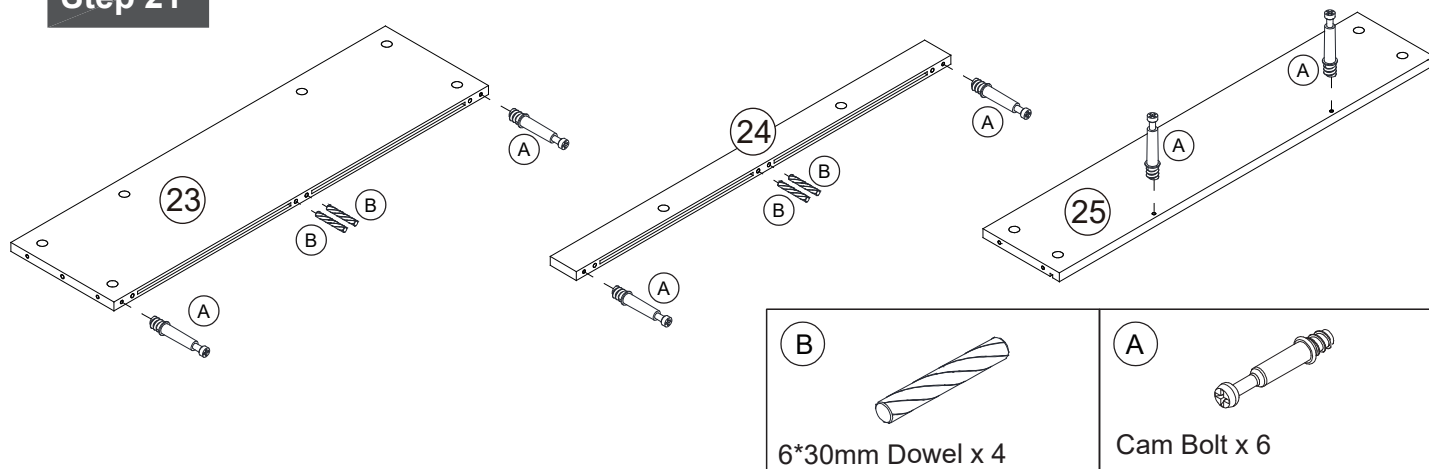


Step 22

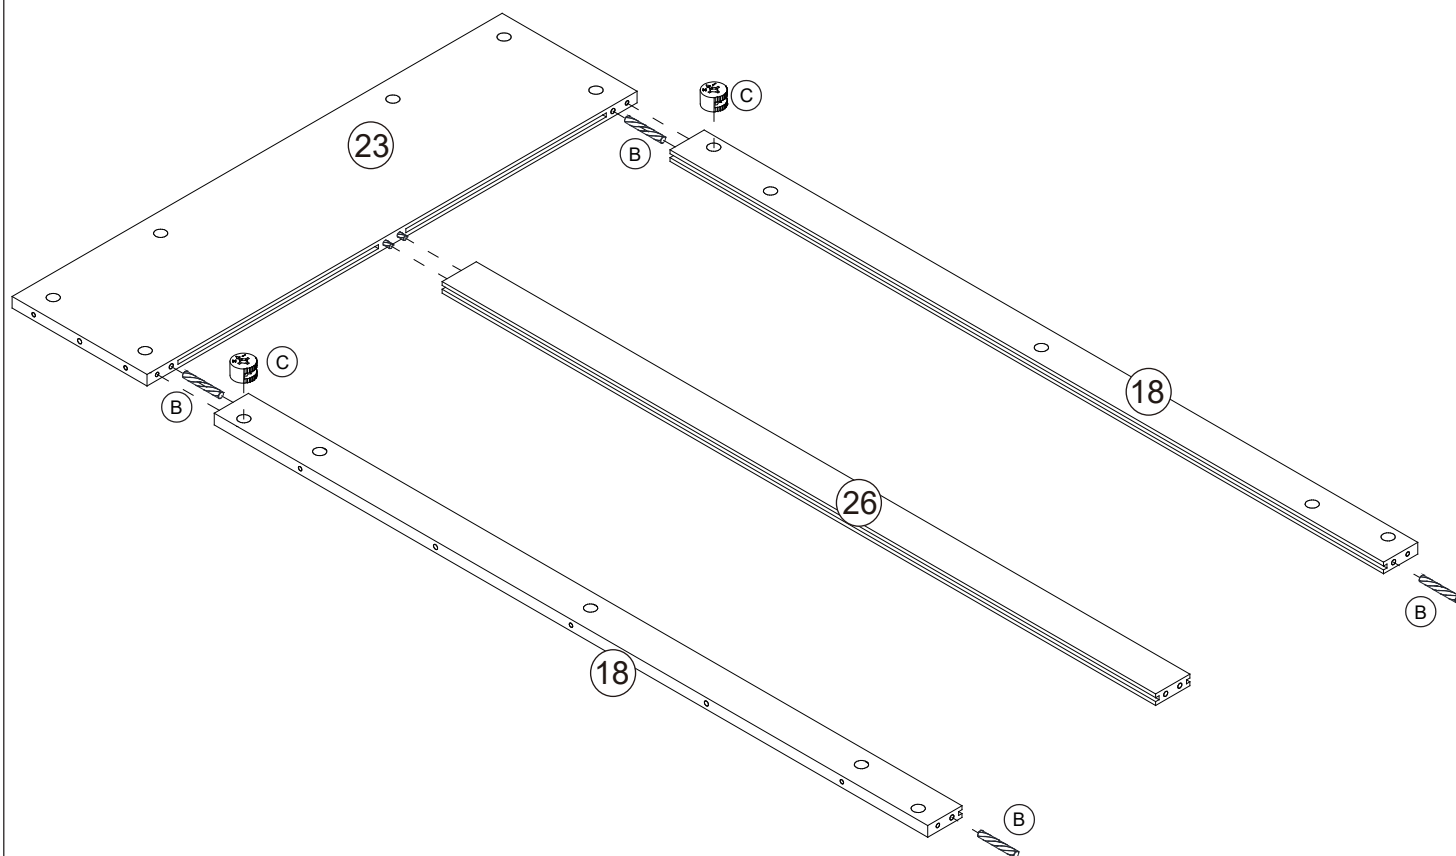

Assembly Instructions

Step 23

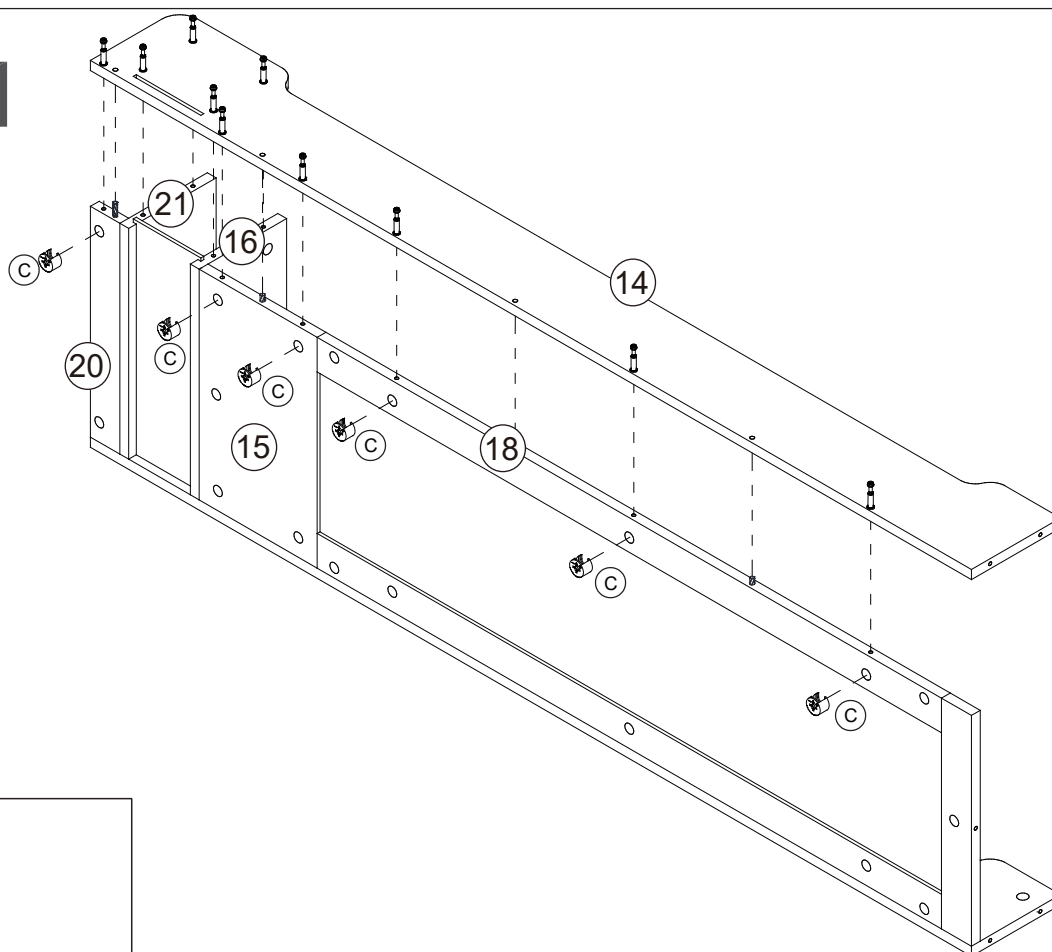


C






Cam lock x 6

Step 24


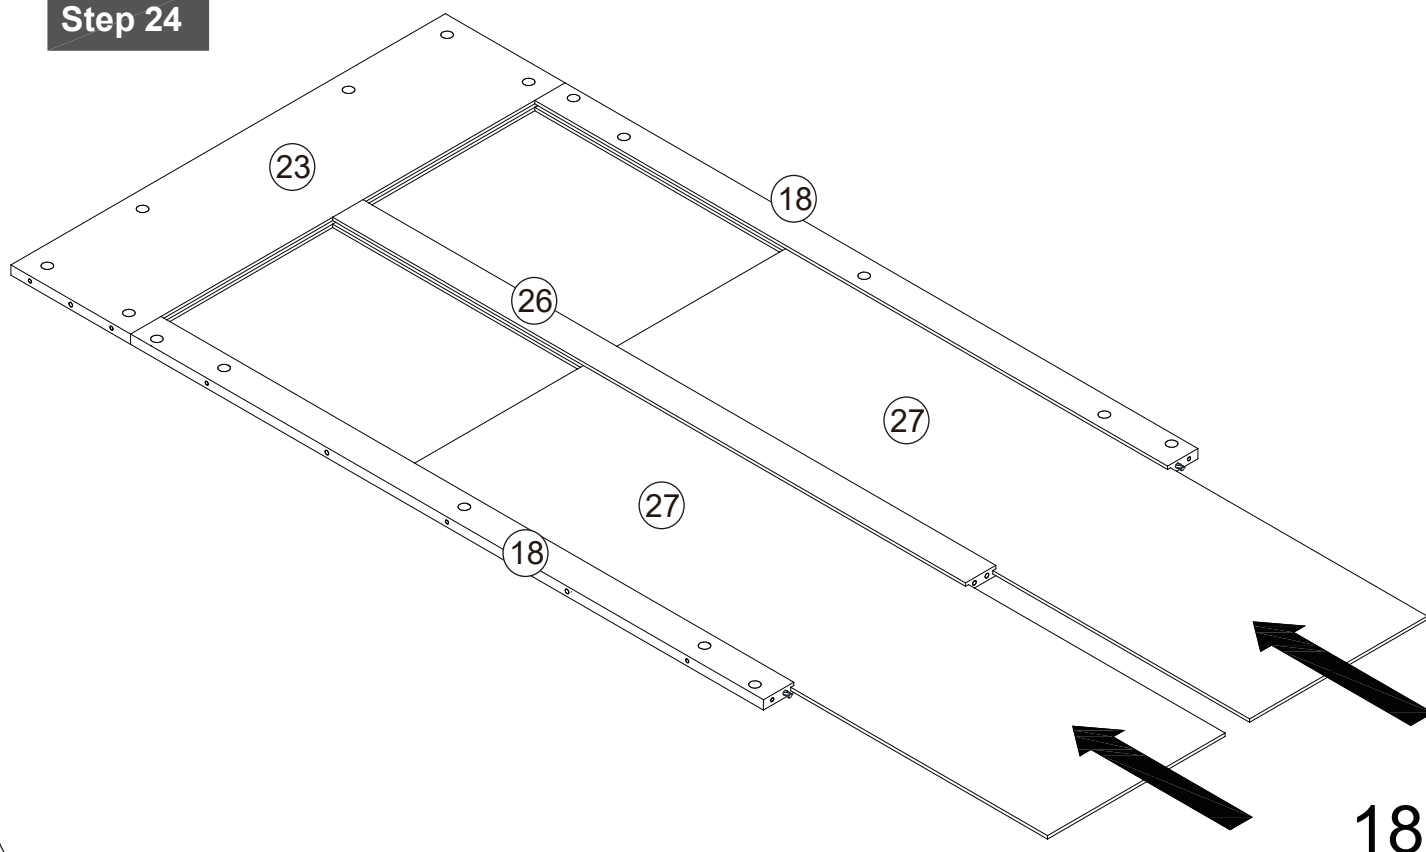


Assembly Instructions

Step 25

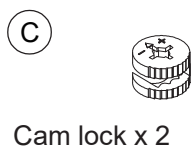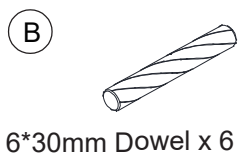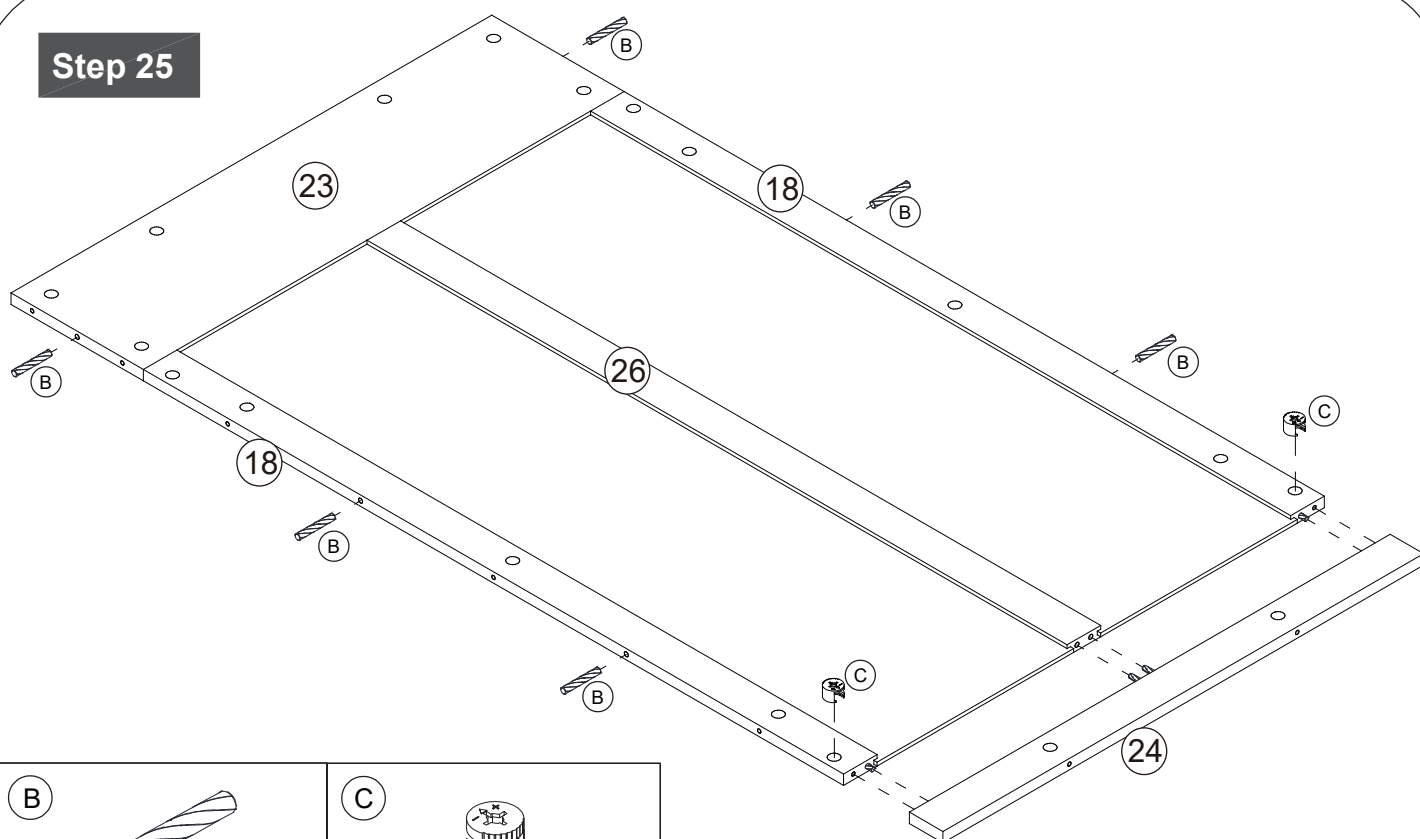


Step 26

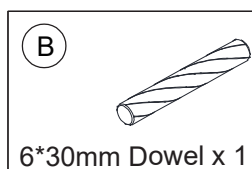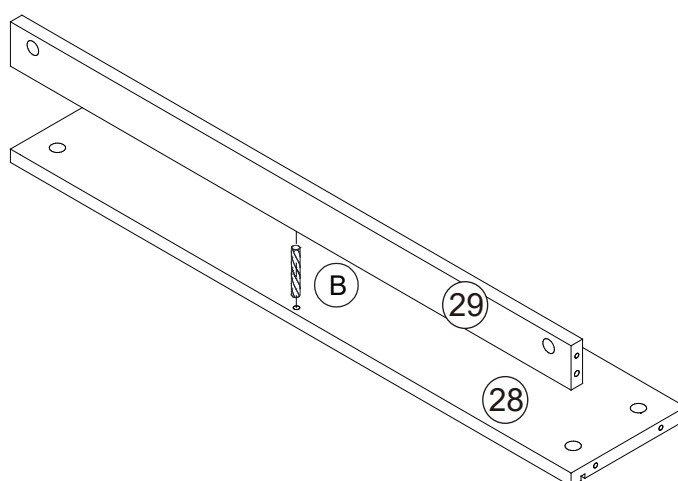

Assembly Instructions

Step 27

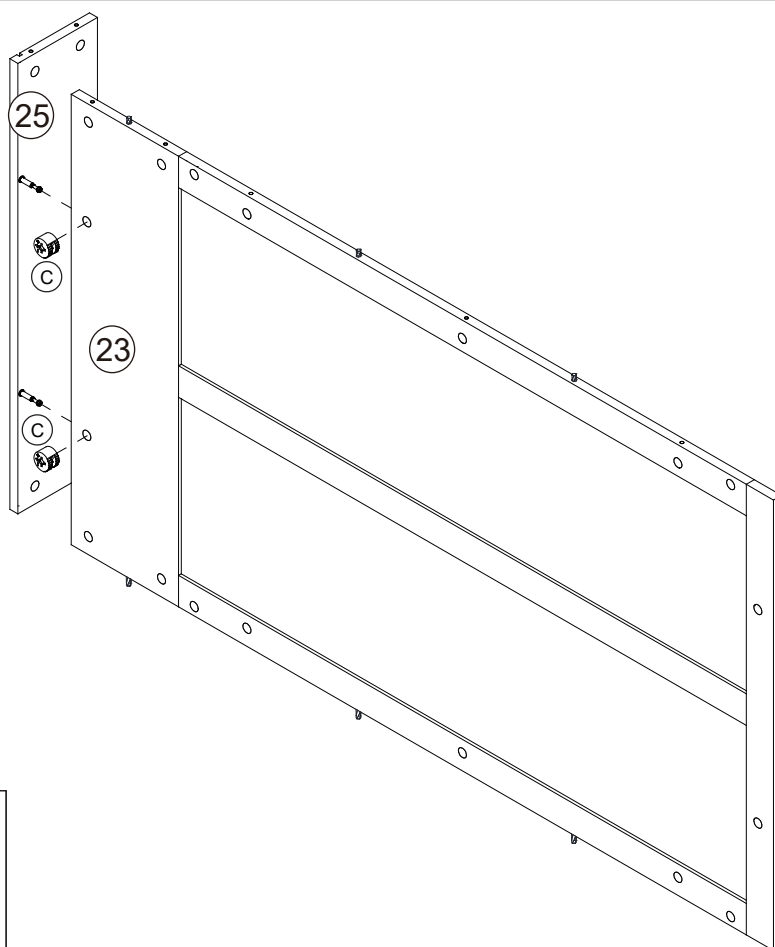


(C)




Cam lock x 2

Step 28

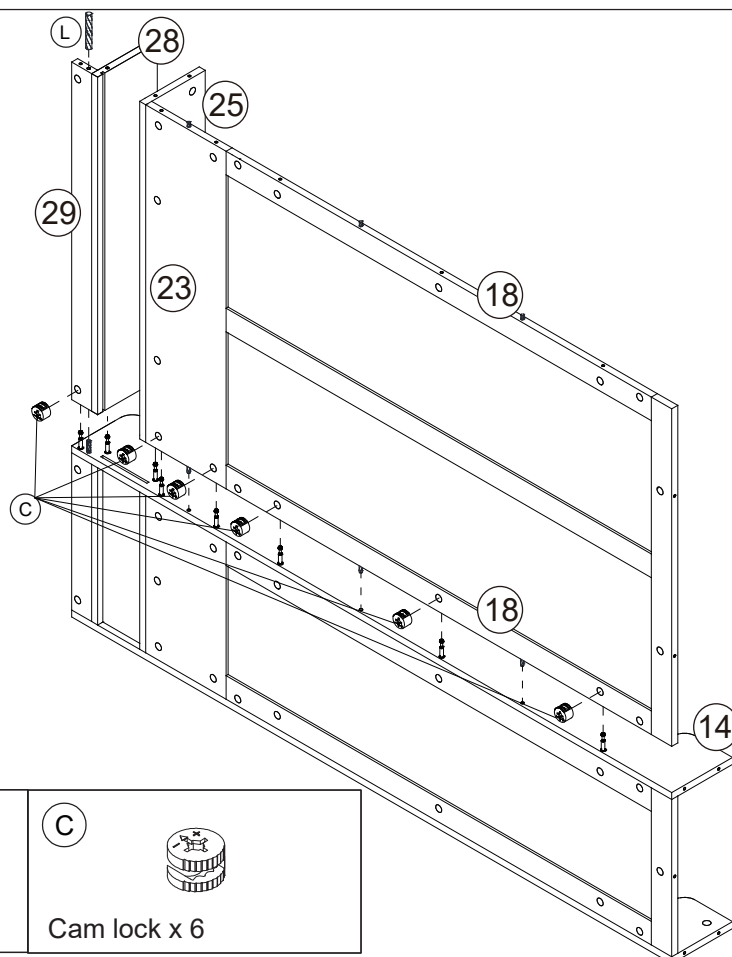

(L)



6*50mm Dowel x 1


(C)




Cam lock x 6

Assembly Instructions

Step 29

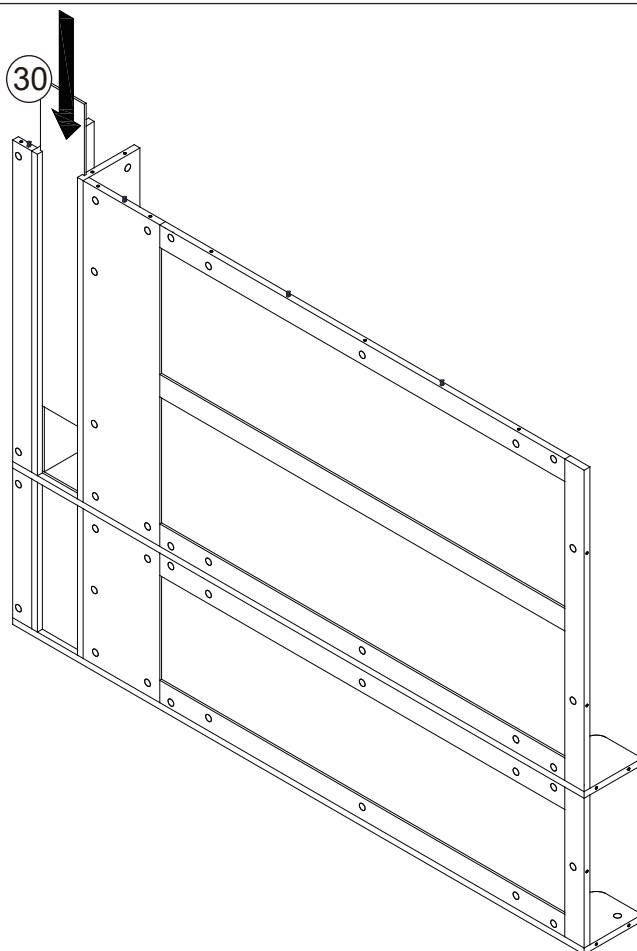

Step 30

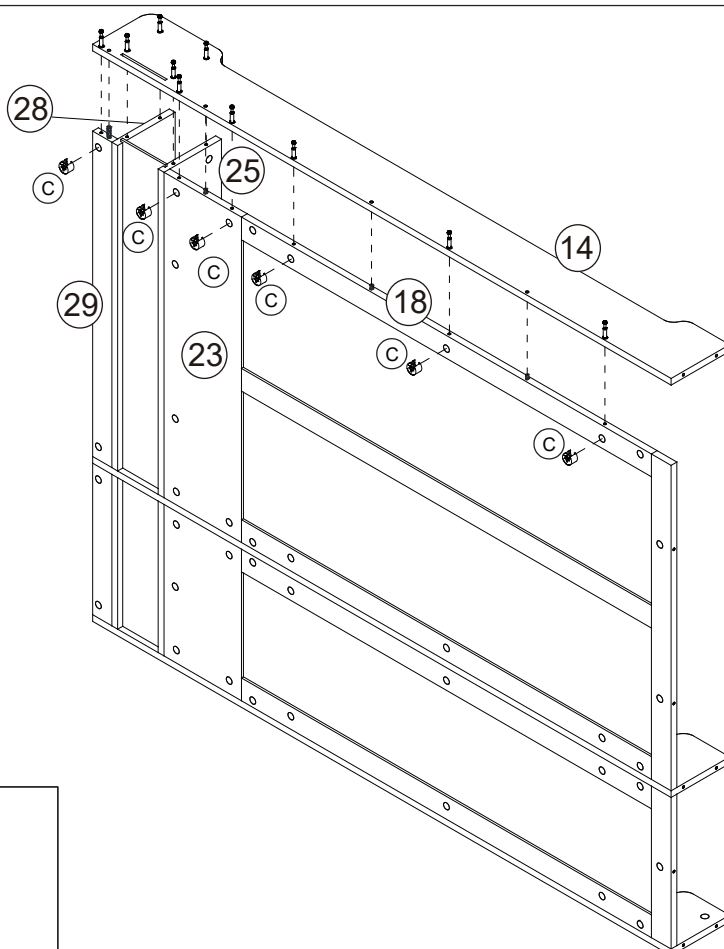


C



Cam lock x 6

Assembly Instructions

Step 31

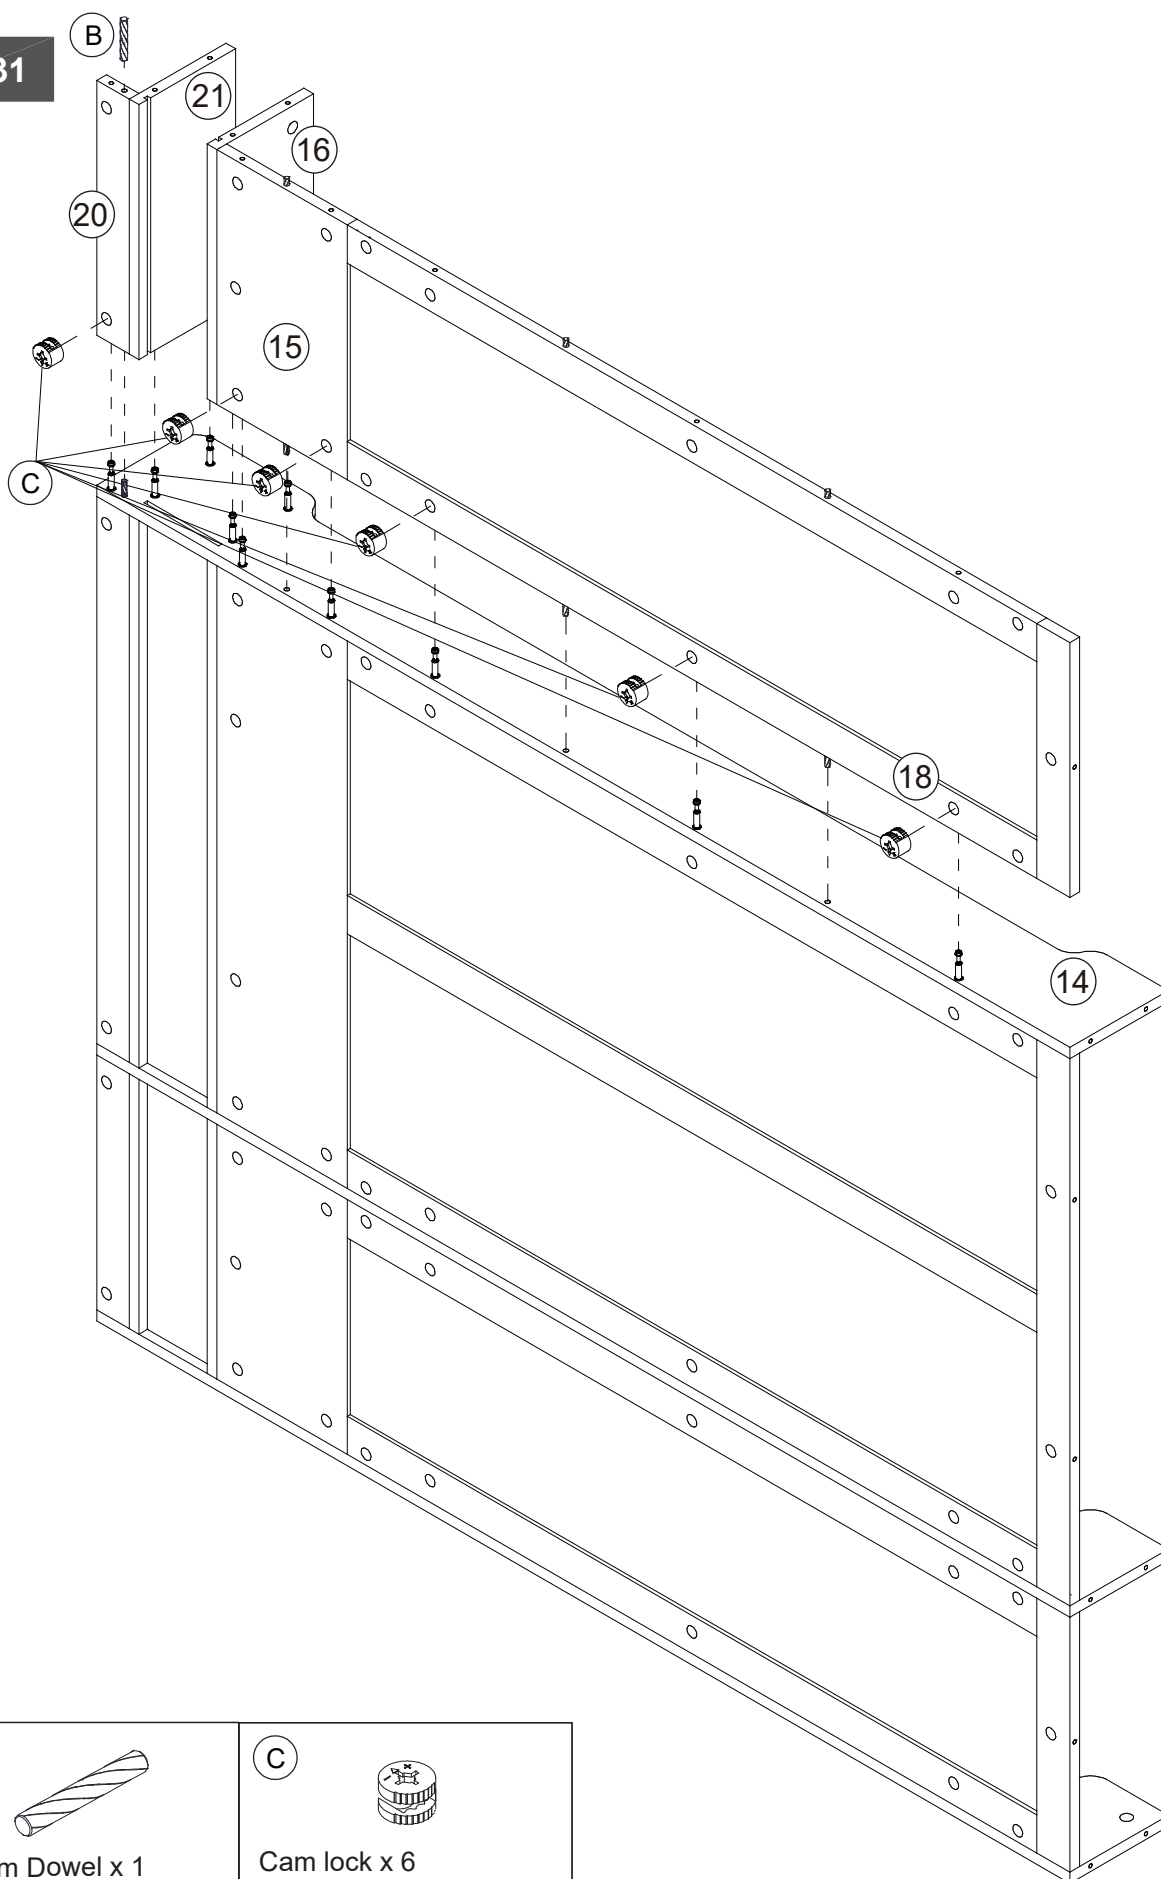

B



6*30mm Dowel x 1


C




Cam lock x 6

Assembly Instructions

Step 32

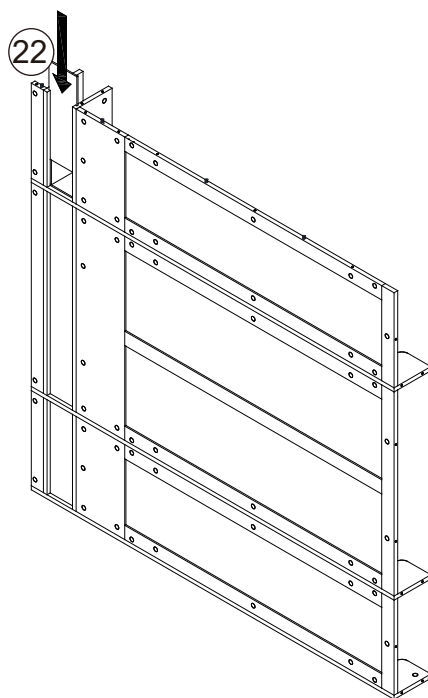

Step 33

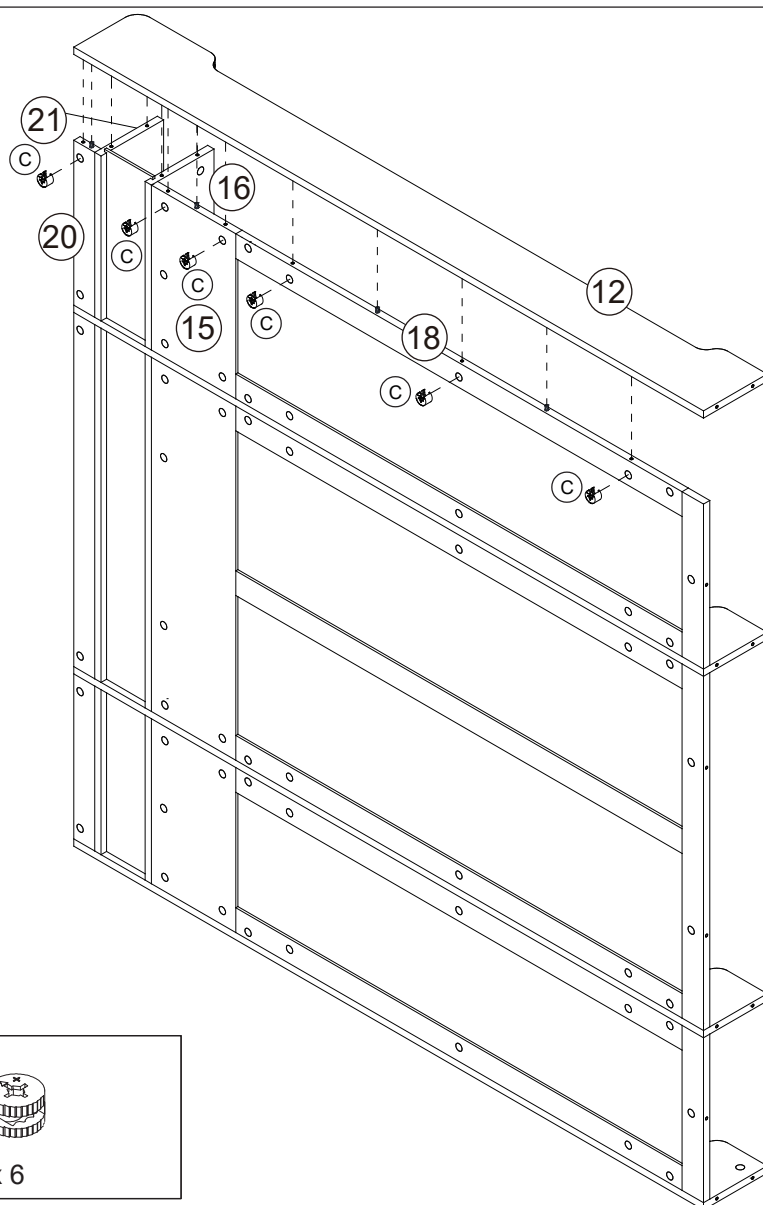


(C)



Cam lock x 6

Assembly Instructions

Step 34

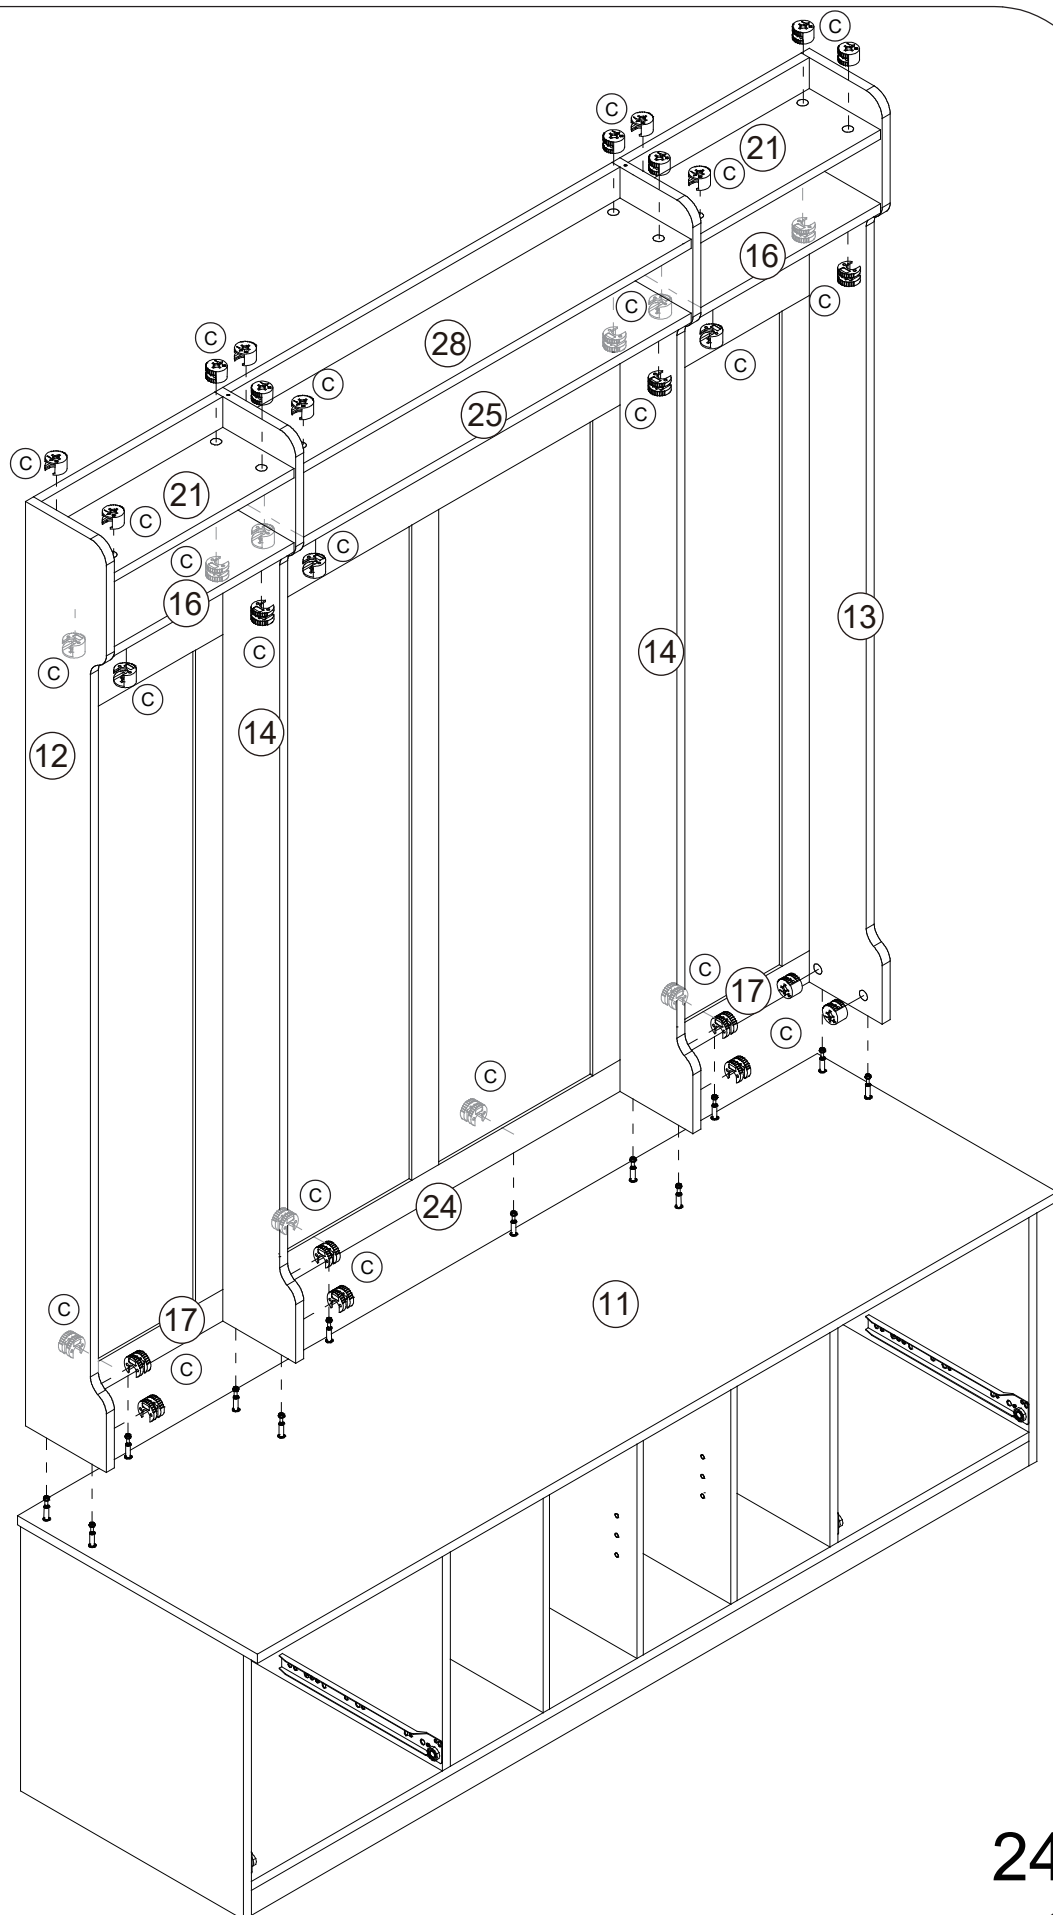


C



Cam lock x 36

Assembly Instructions

Step 35

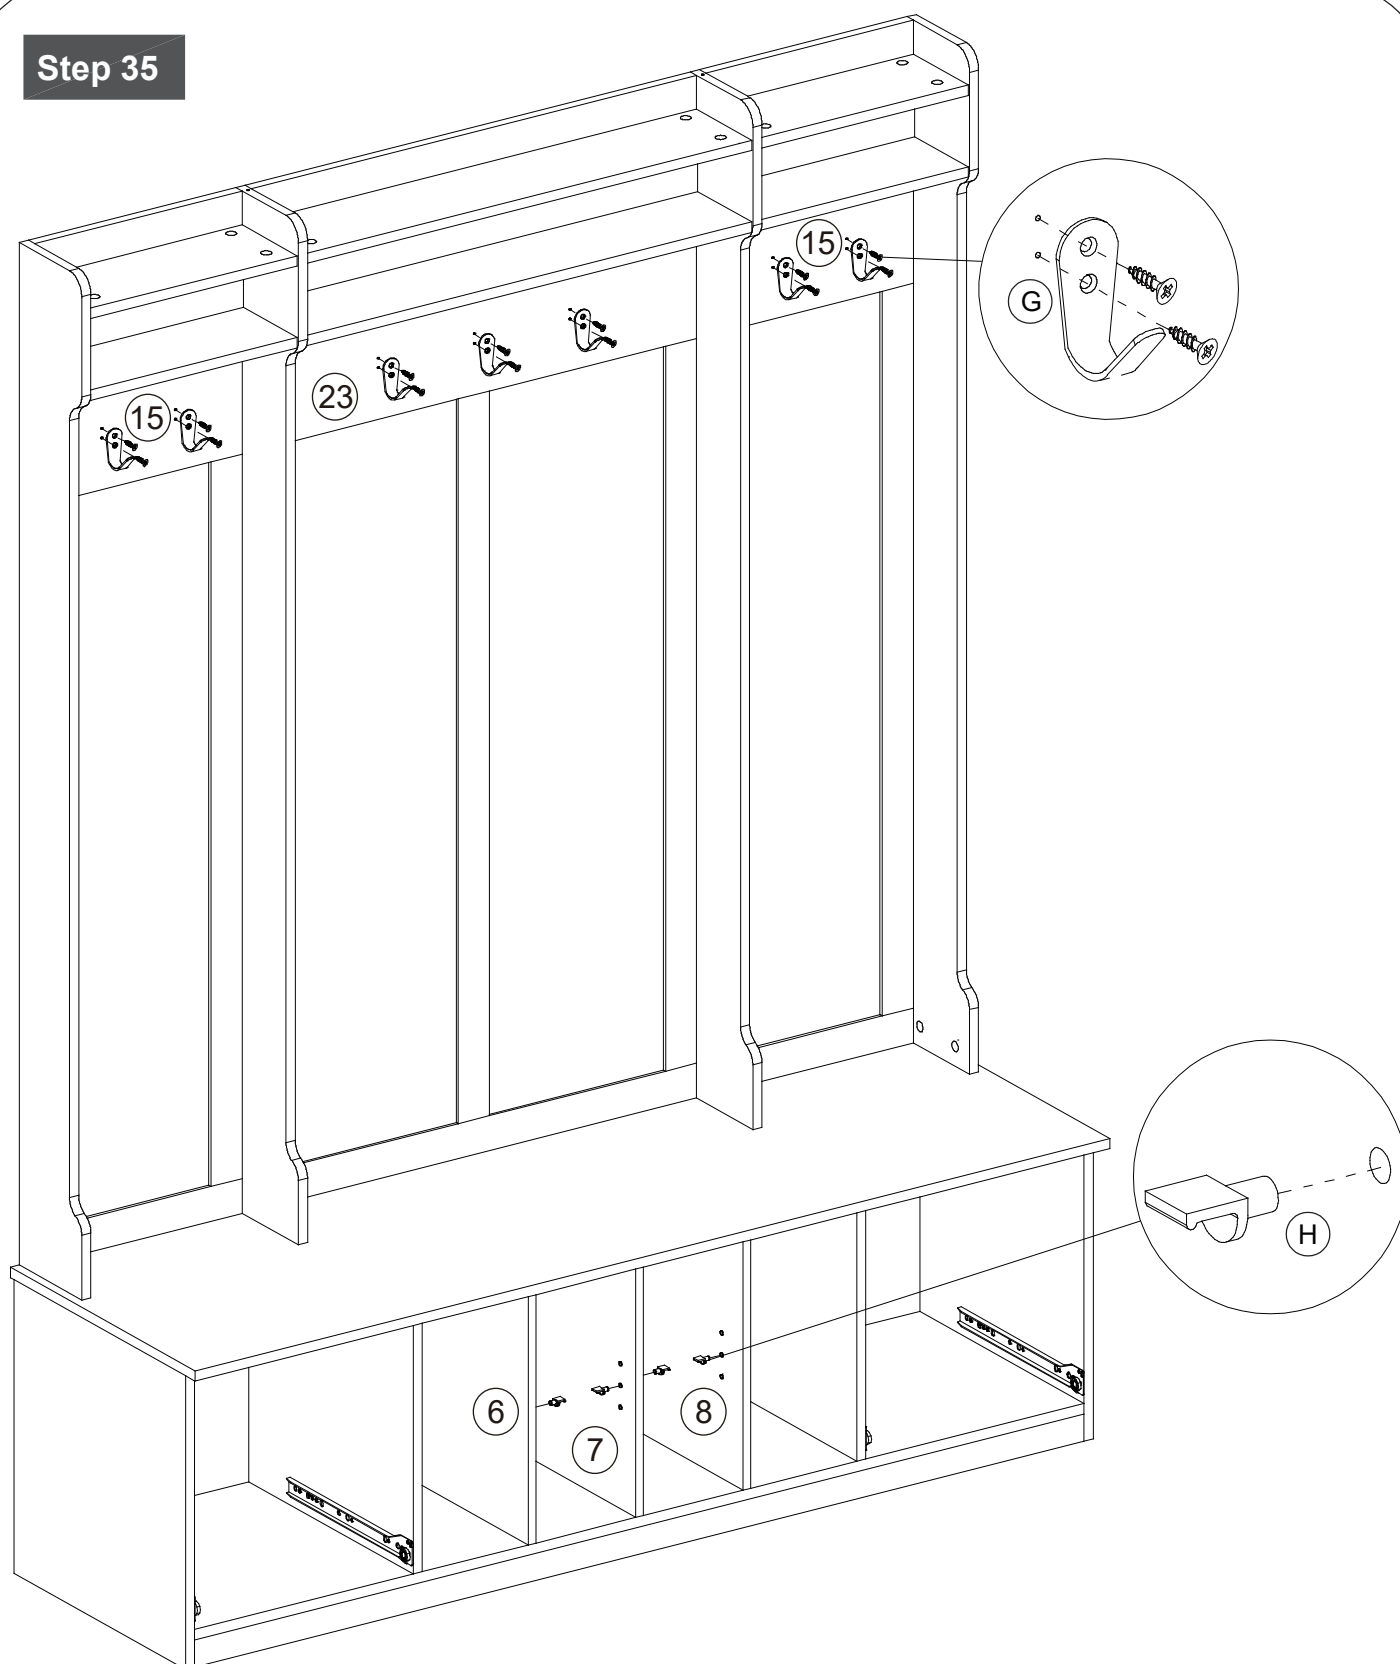


G
3*12mm Screw x 7set

H
Laminate support x 8

Assembly Instructions


Step 36

x2

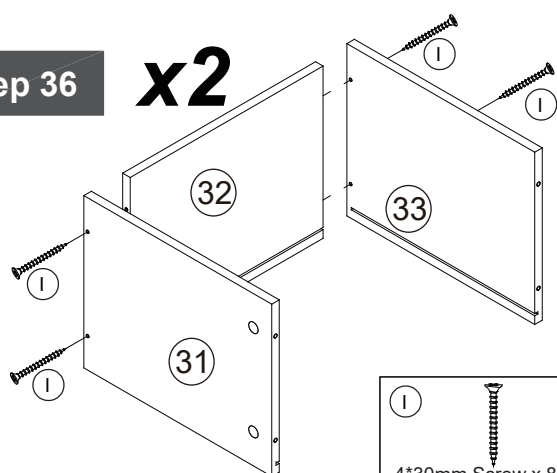


(I)
4*30mm Screw x 8

x2

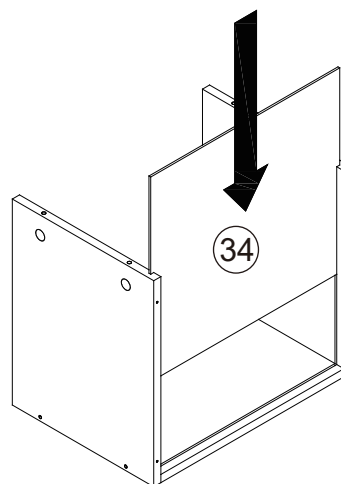


x2

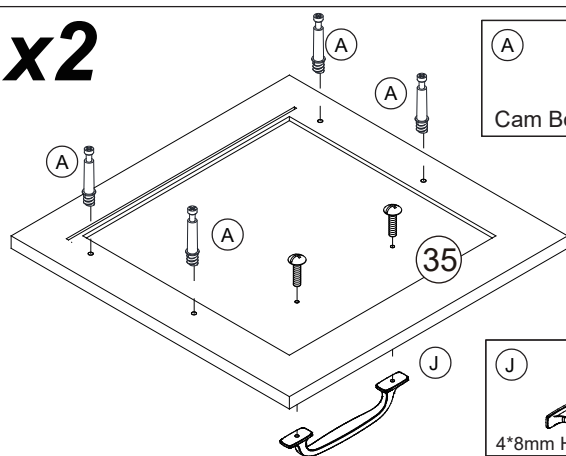

(A)
Cam Bolt x 8

(J)
4*8mm Handle x 2set


x2

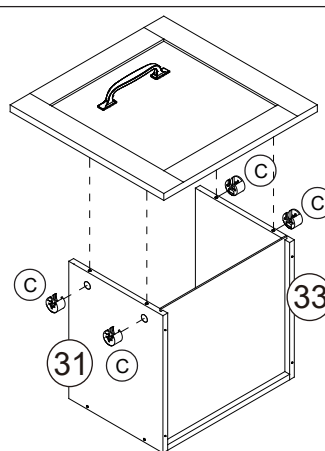

(C)
Cam lock x 8

Step 37

x2

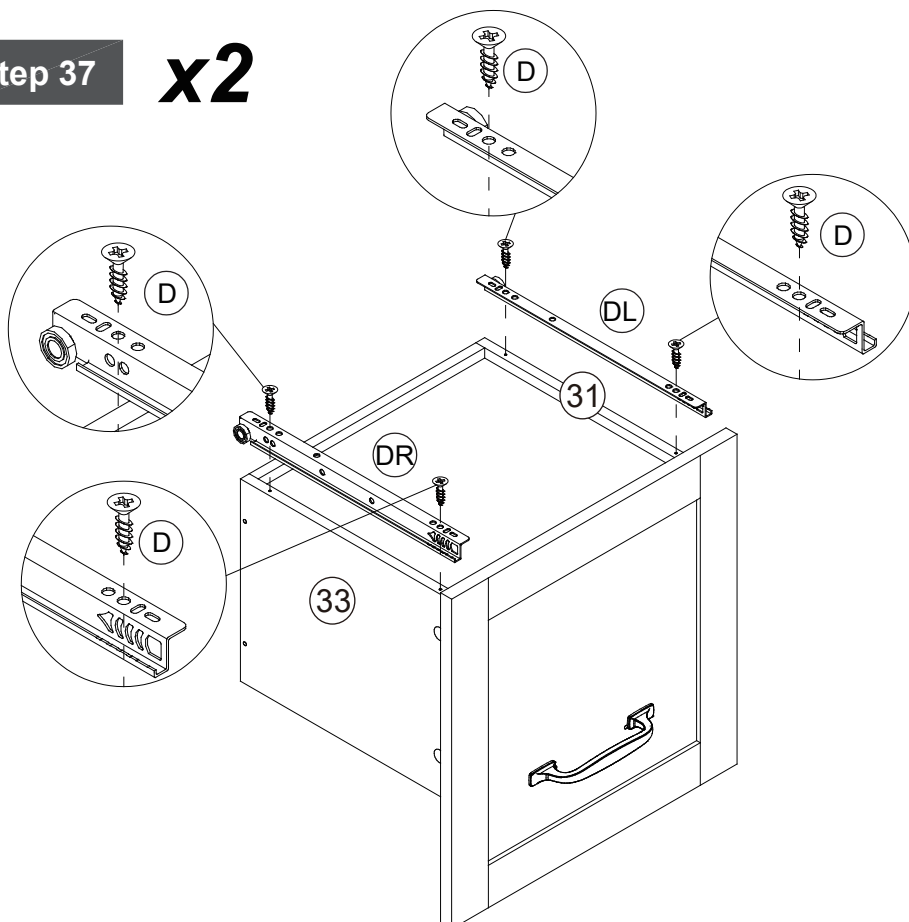

(DR)
runner x 2









(DL)
runner x 2

(D)
3*12mm Screw x 8

Assembly Instructions

Step 36

WALL

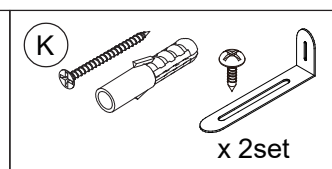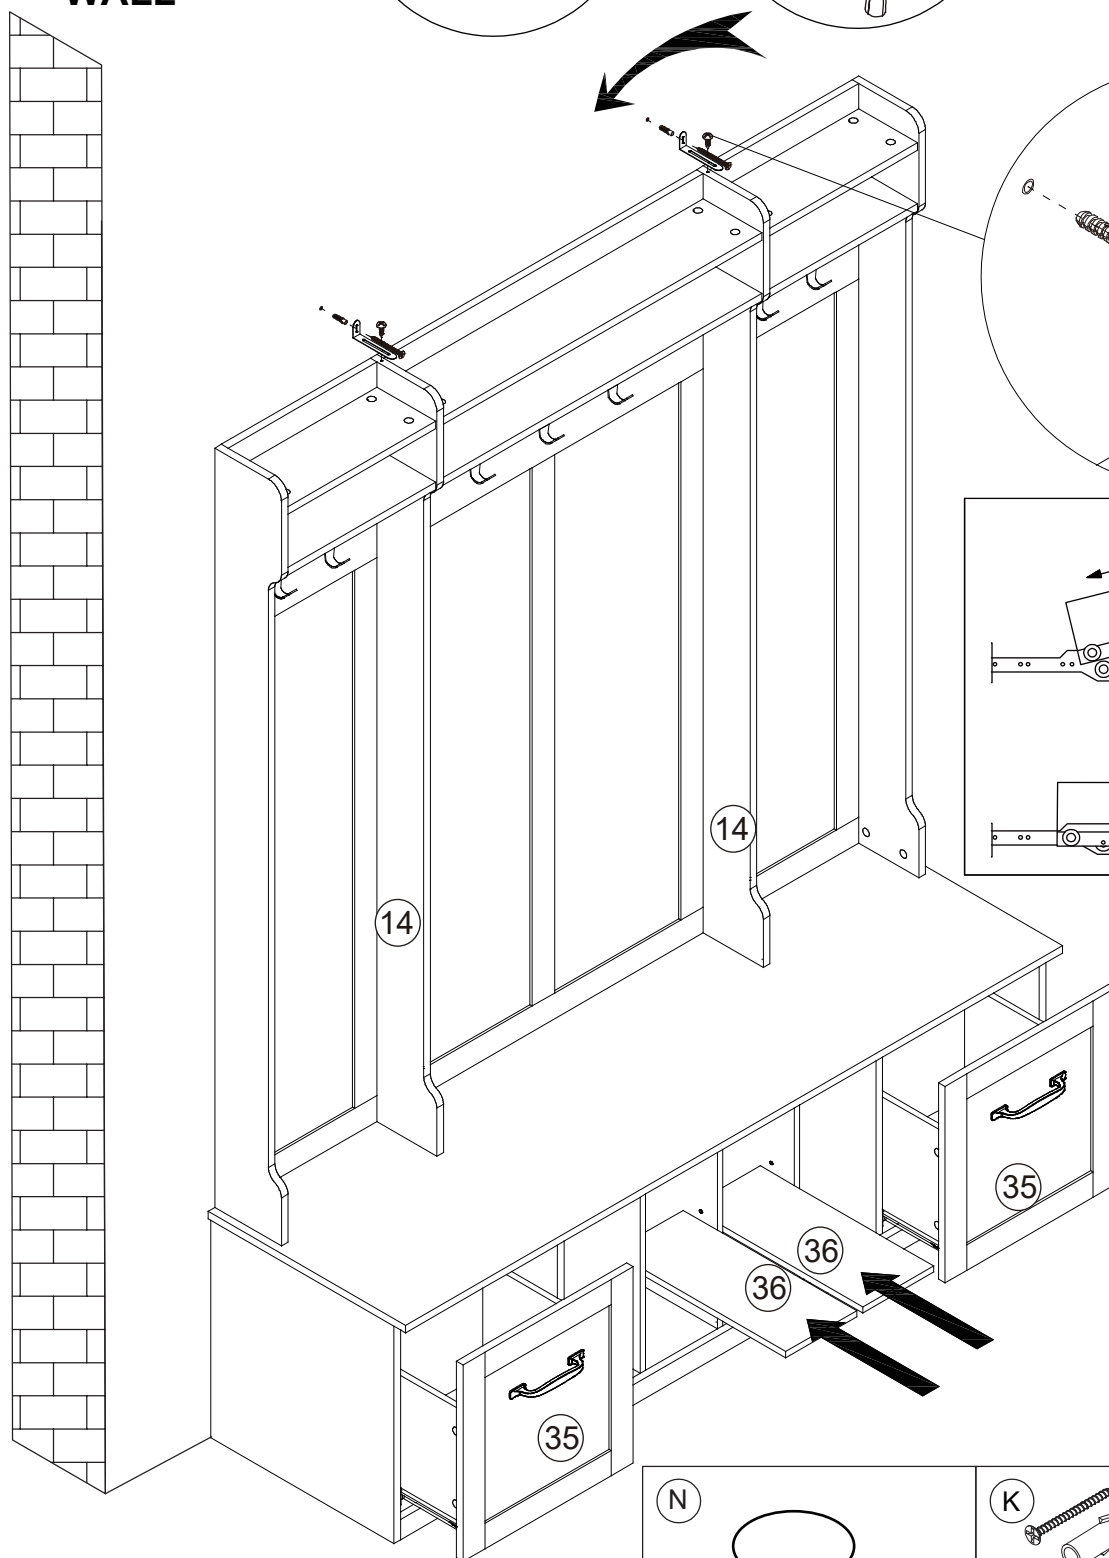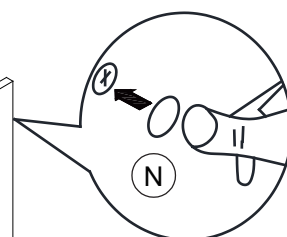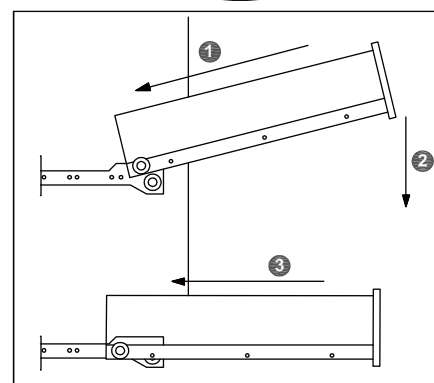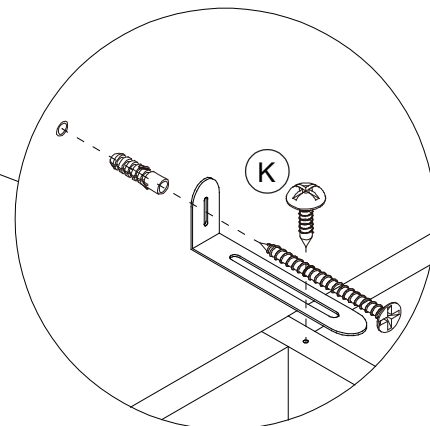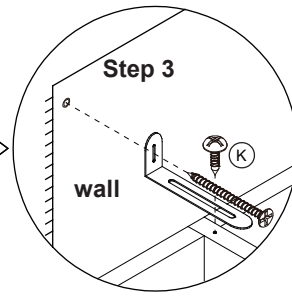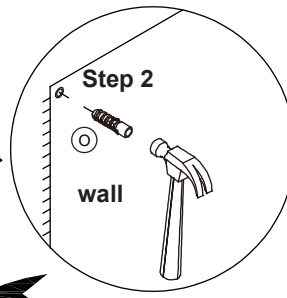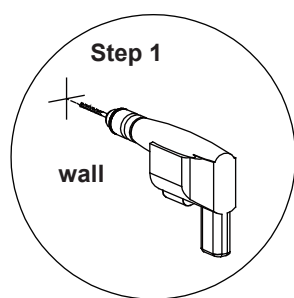

Assembly Instructions

Finish

