
oop tape portion of the the doorframe. The ightly higher in the top ure the screen's magnetic erly. Once the top of the owly peel off the white he two sides. Press the the frame moving from e sure the screen is loose he magnets line up and


Step 6:

Make sure the screen opens and closes properly. Make adjustments if necessary. Enjoy your new Magnetic Screen Door!

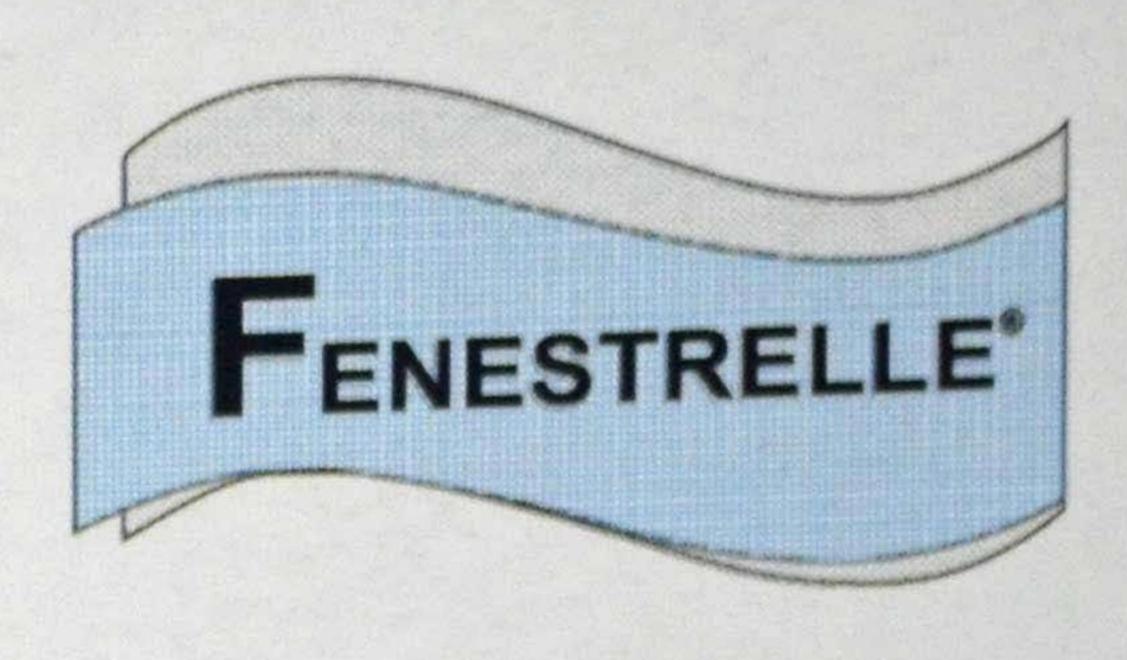



NJ 07727

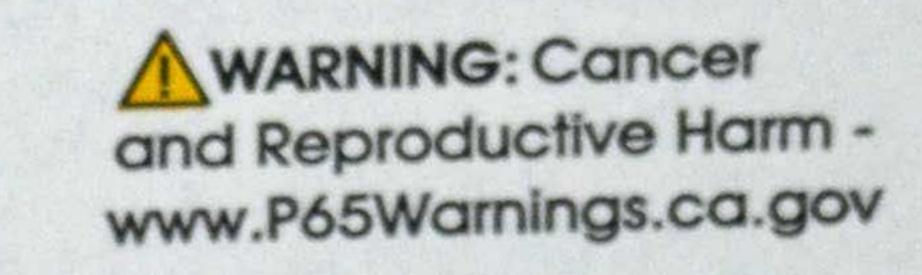

Made in China FEN 92520

