





---

# ASSEMBLY INSTRUCTIONS

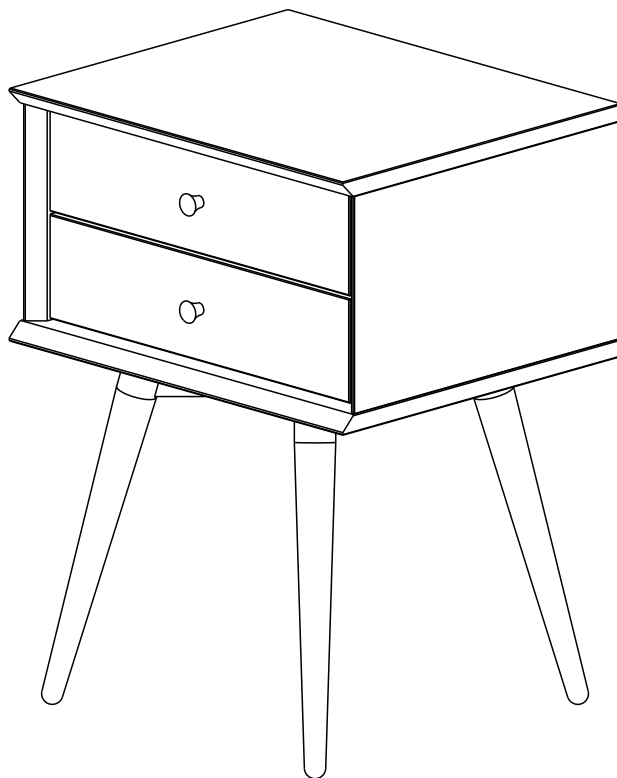

Mid-Century Night Stand 2 Drawers

01:00 Hs

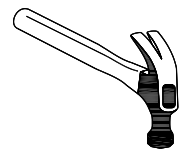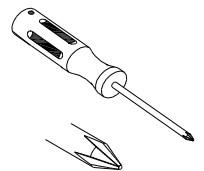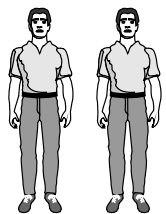


## HARDWARE INCLUDED

---




**A - 8,0x30 Wood Dowel**  
Qty. 16

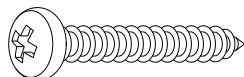


**B - 4,0x30 Screw**  
Qty. 08




**C - 3,5x14 Screw**  
Qty. 24

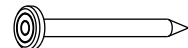


**D - 10x10 Nail**  
Qty. 12

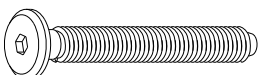


**E - 1/4x50 Screw**  
Qty. 05

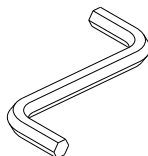

**F - Allen Key**  
Qty. 01

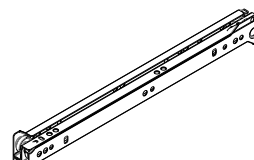


**G - Slide 300mm**  
Qty. 02

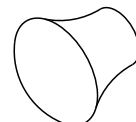


**H - Knob**  
Qty. 02



**I - M4x25 Screw**  
Qty. 02

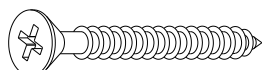

**J - 4,0x45 Screw**  
Qty. 04

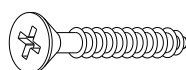


**K - 3,5x30 Screw**  
Qty. 08


---



# PARTS INCLUDED

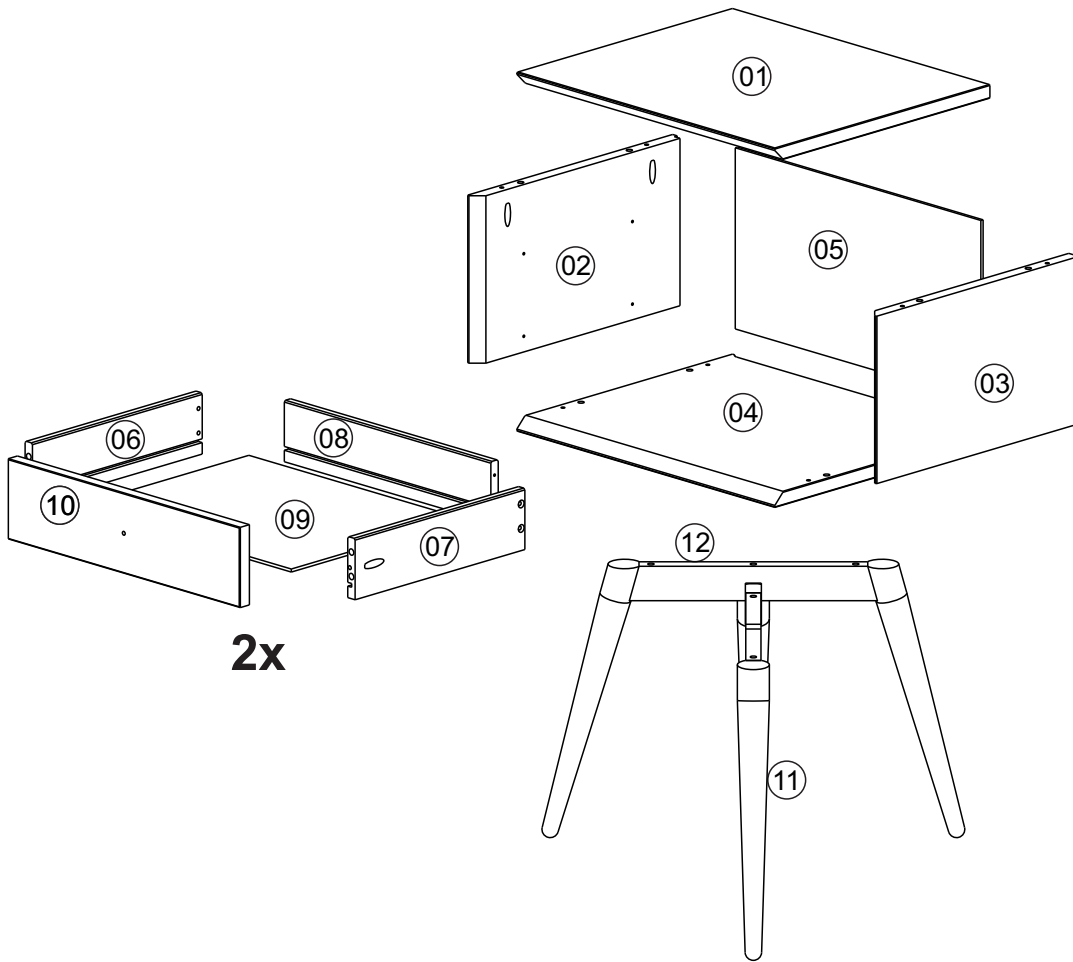


STEP 1

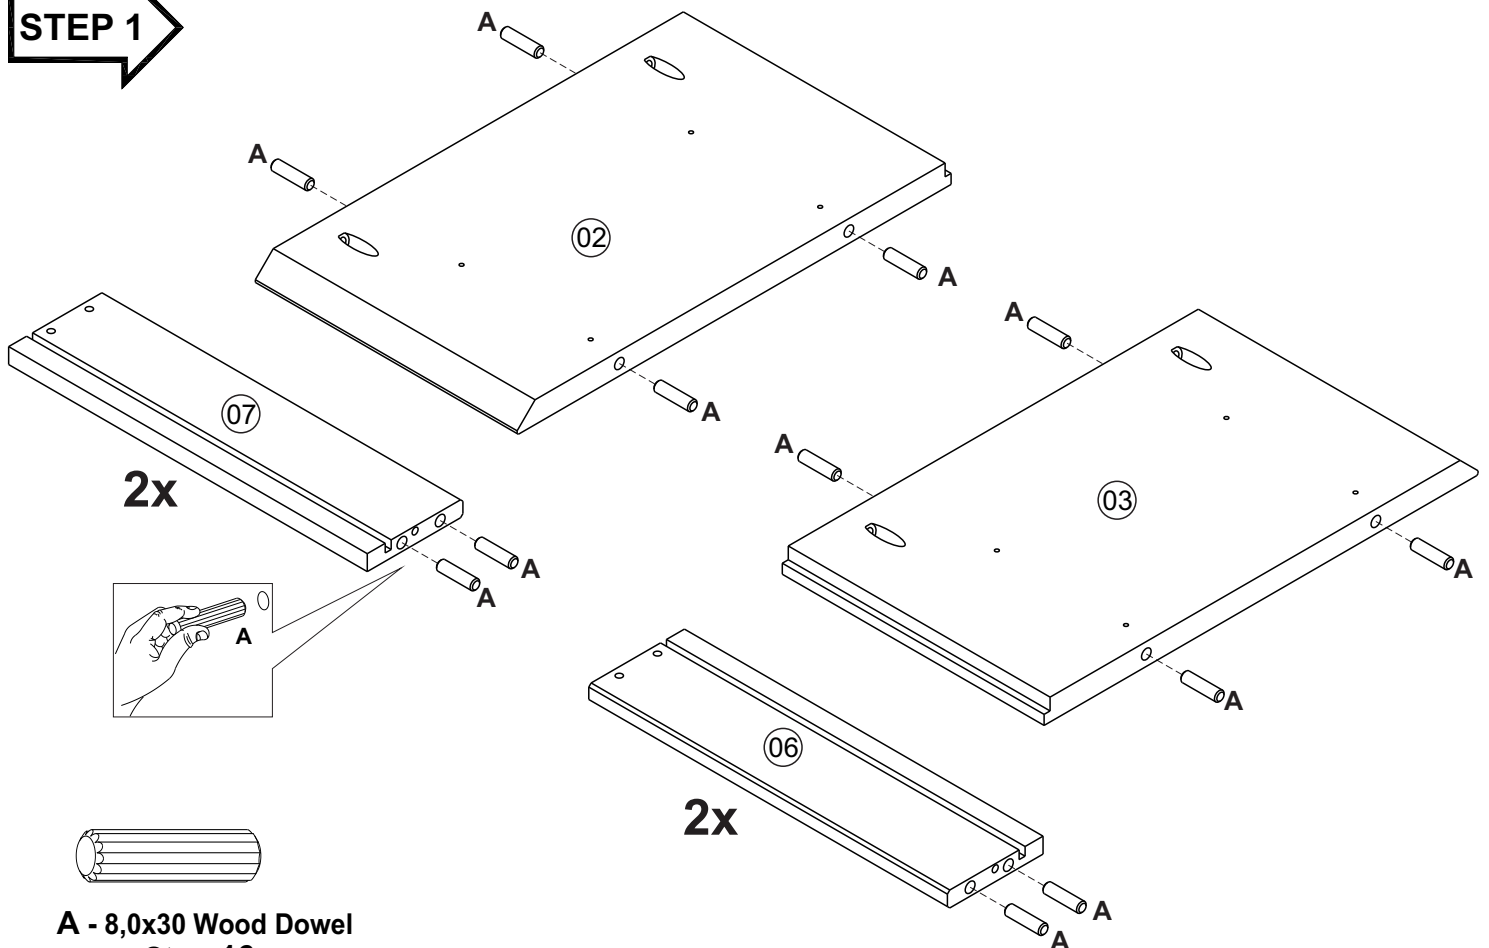


A - 8,0x30 Wood Dowel  
Qty. 16



## STEP 2

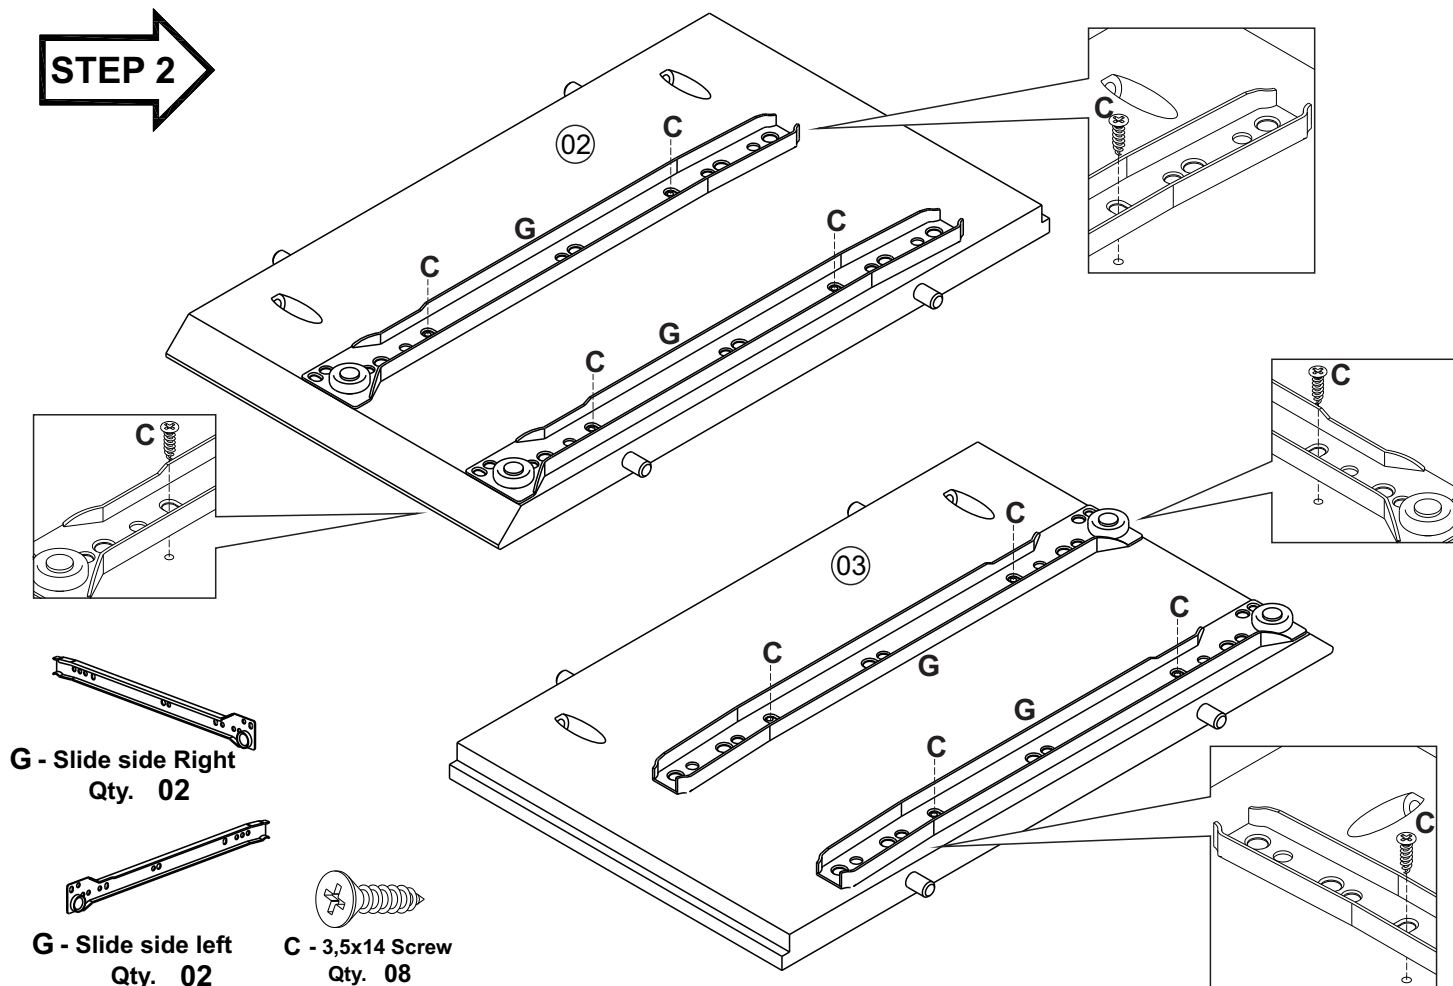


## STEP 3

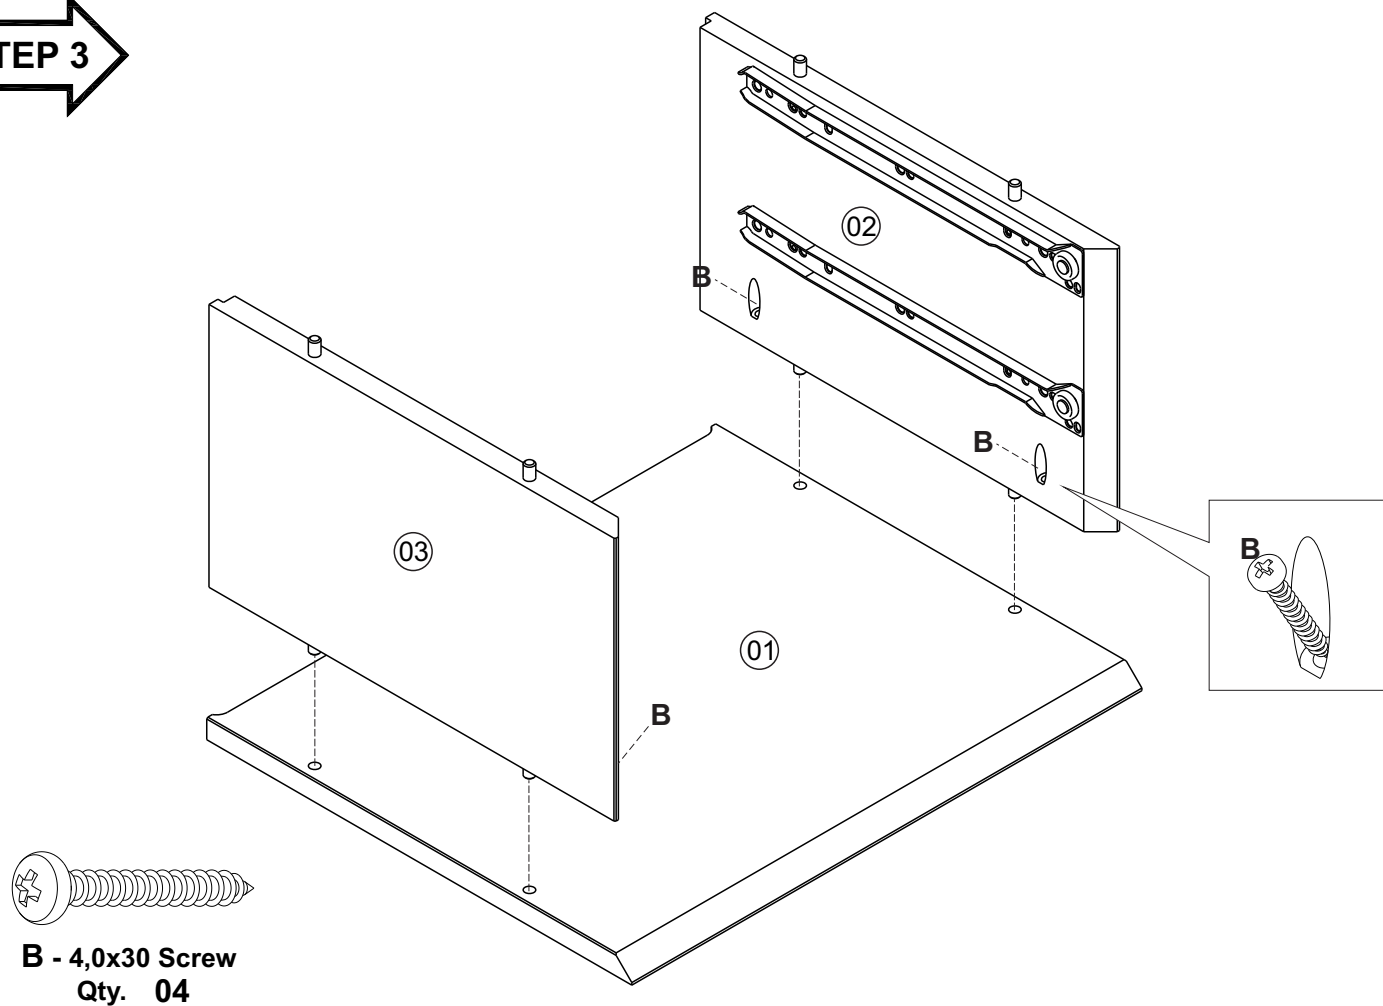





**STEP 4**

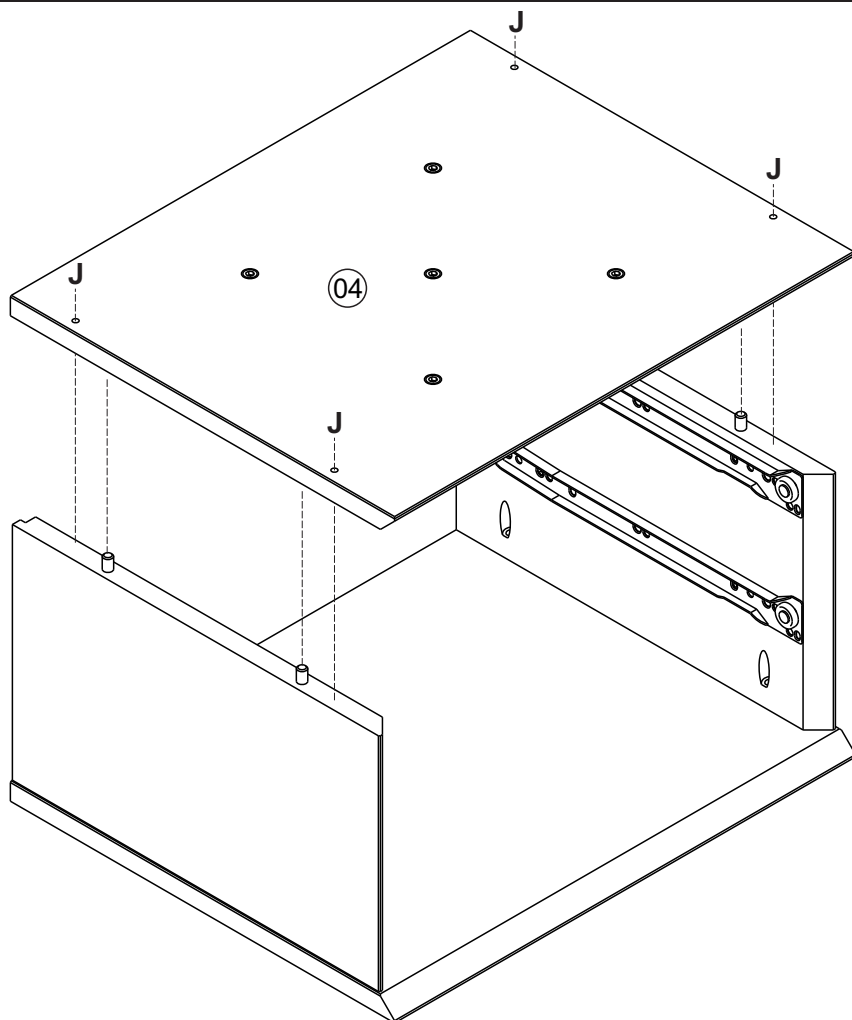

**J - 4,0x45 Screw**  
Qty. 04


**STEP 5**

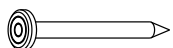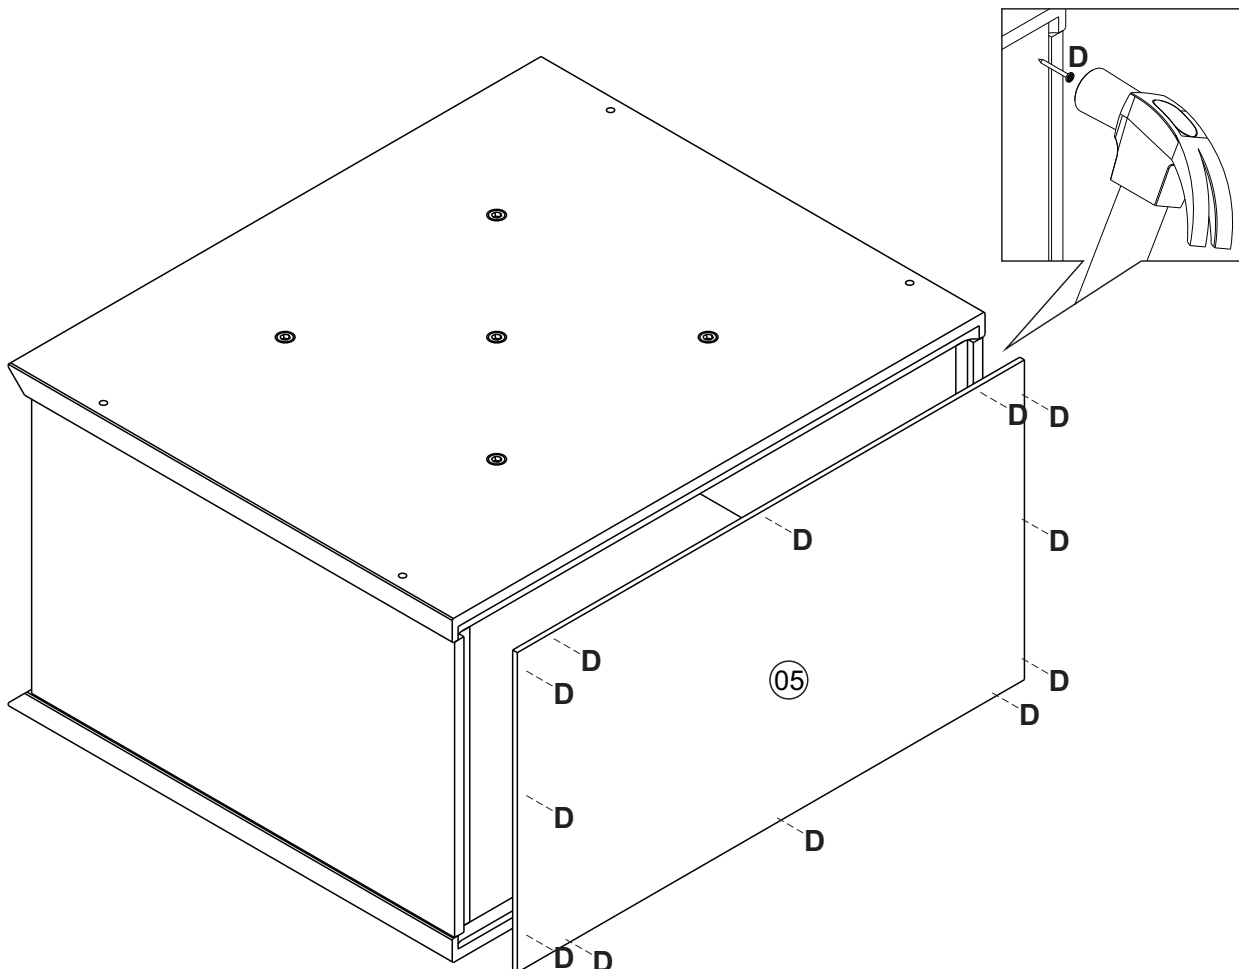


**D - 10x10 Nail**  
Qty. 12



## STEP 6

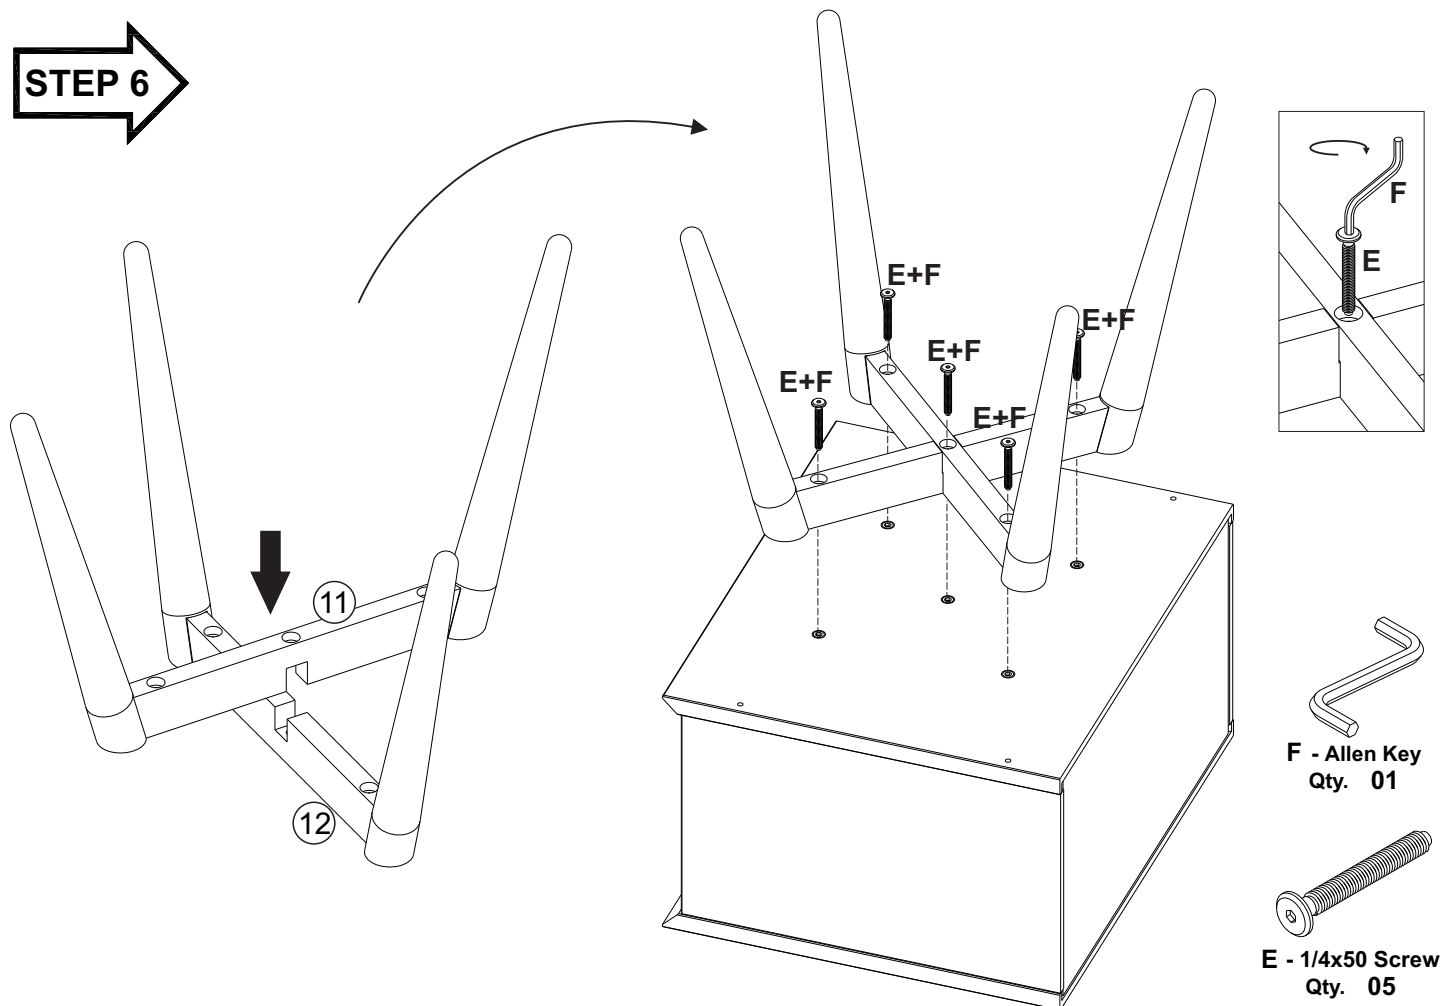

## STEP 7

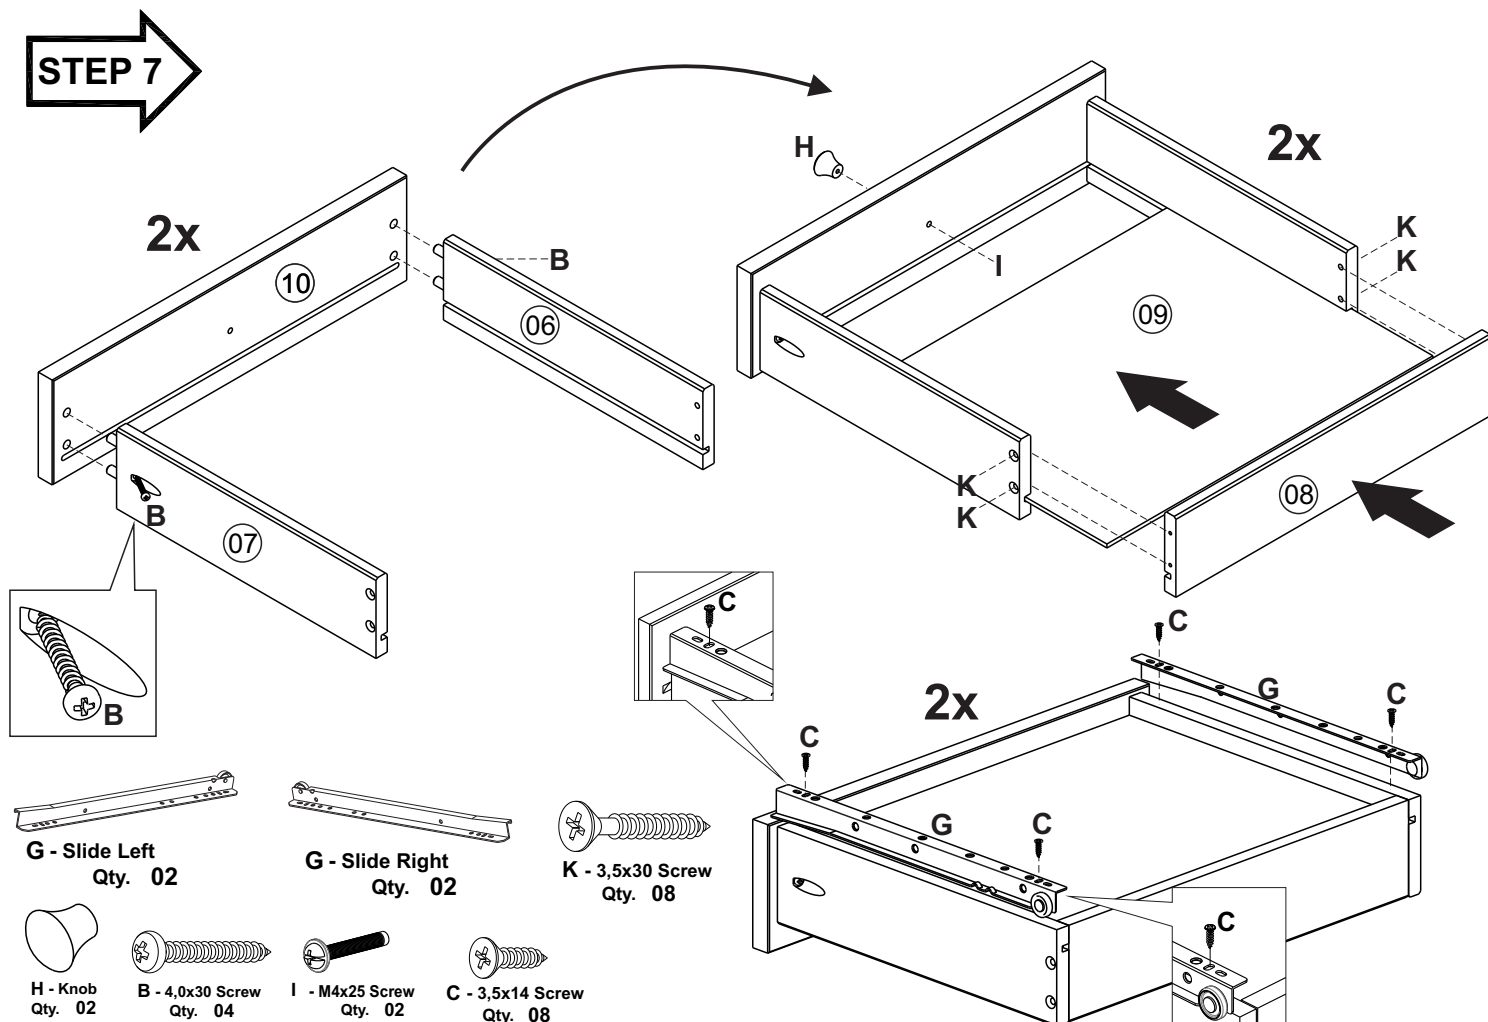




---

---

## STEP 8

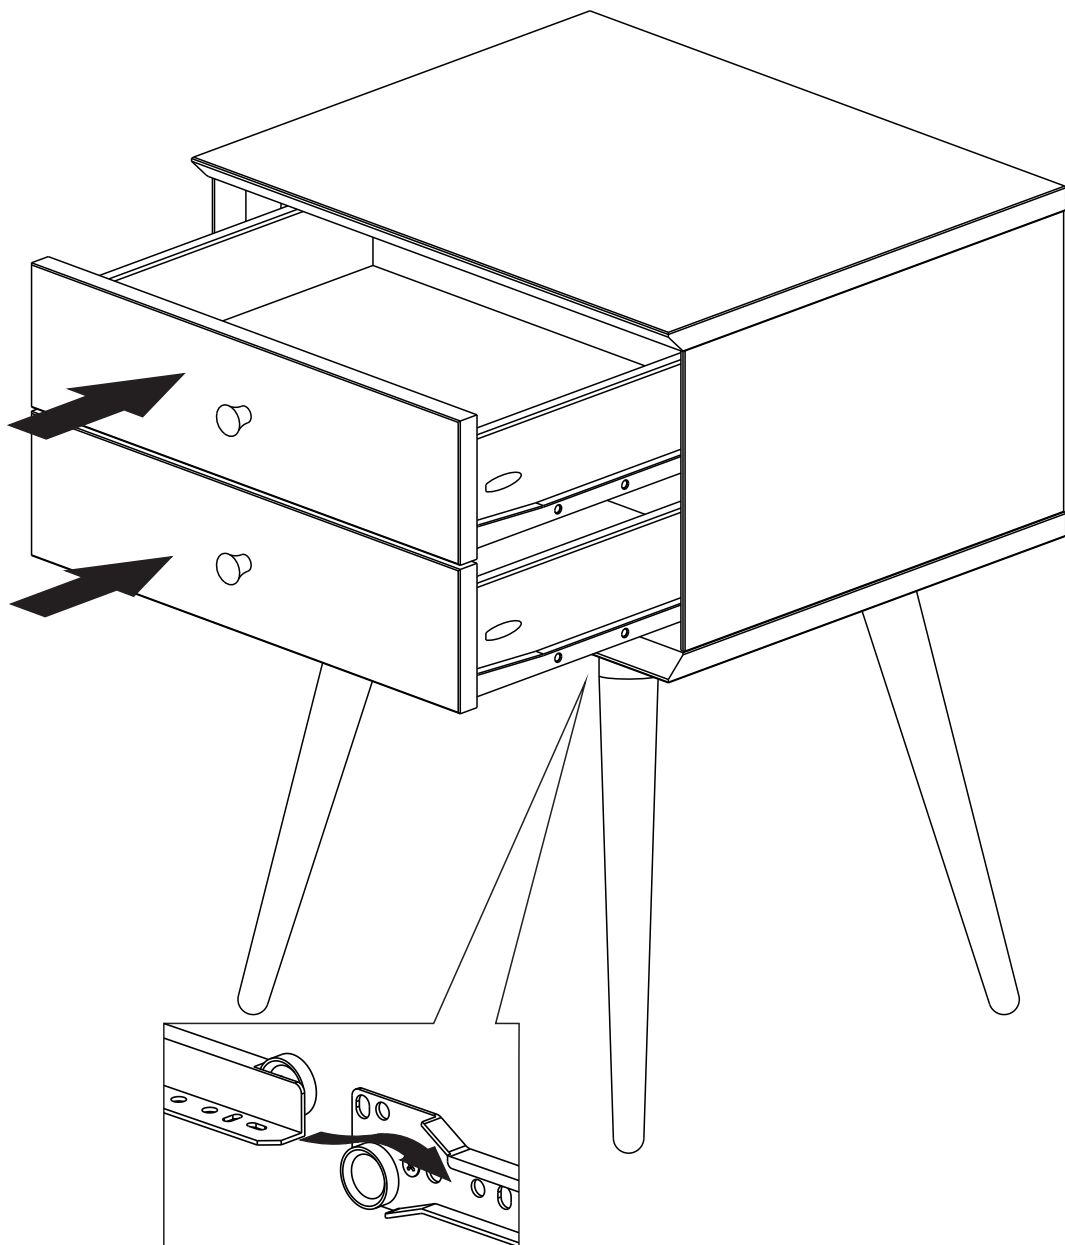


### Drawer Glide Adjustments:

The metal drawer glides are designed to allow for slight adjustments vertically and horizontally, if necessary.


#### Horizontal Glide Adjustment:

Remove drawer from chest. Loosen screws indicated on side of metal track. Make needed space adjustment and re-tighten screws and add 2 additional screws in holes as indicted in diagram below:

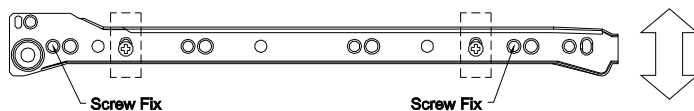

#### Vertical Glide Adjustment:

Remove drawer from chest. Loosen Screws on underside of metal track. Make needed space adjustment and re-tighten screws as indicated in diagram below:

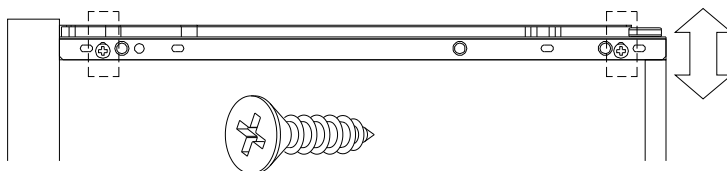

**C - 3,5x14 Screw**  
**Qty. 08**

---

---