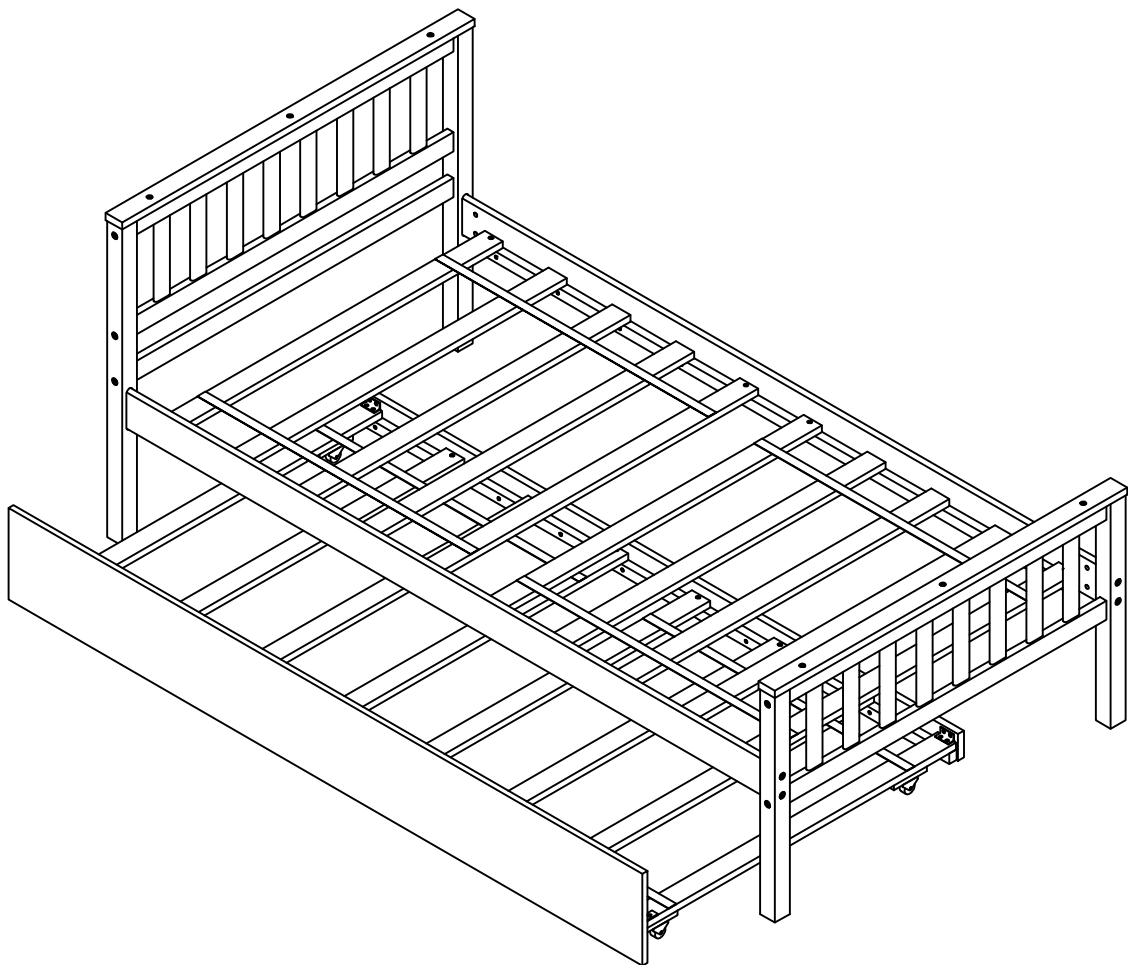



ASSEMBLY INSTRUCTIONS

TWIN BED WITH TRUNDLE















DN33703








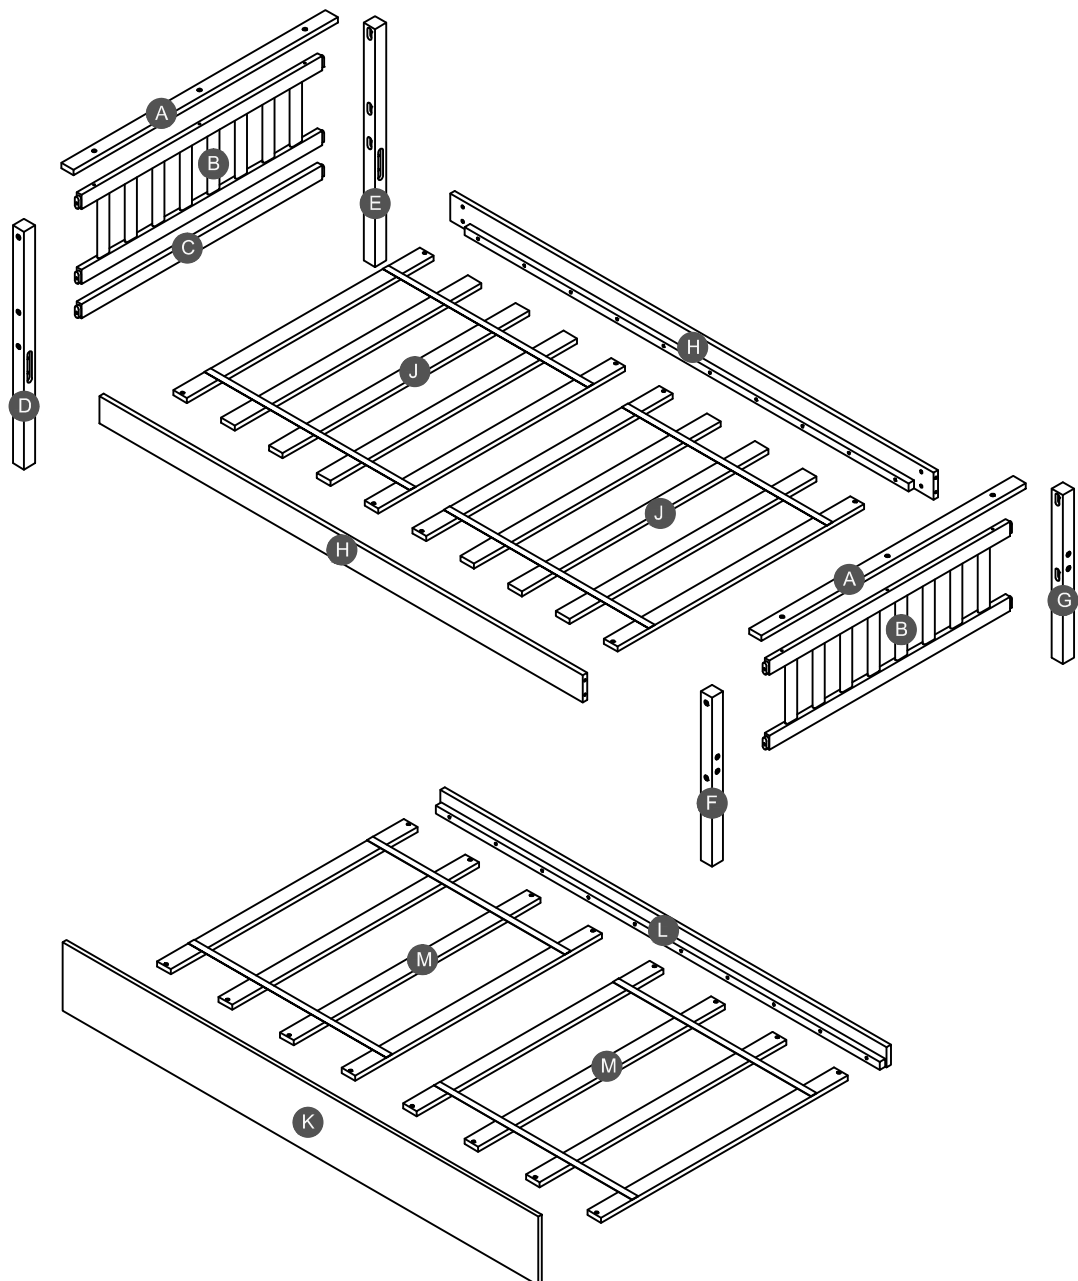


Detail View




Part List

A  Cap for HB & FB - 2pcs	B  HB & FB - 2pcs	C  HB horizontal - 1pc
D  HB leg (Left) - 1pc	E  HB leg (Right) - 1pc	F  FB leg (Left) - 1pc
G  FB leg (Right) - 1pc	H  Side rail - 2pcs	J  Slats - (10pcs)
K  Front panel of trundle - 1pc	L  Back panel side rail of trundle - 1pc	M  Trundle slats - (8pcs)

Hardware List


1  Ø4*30mm Wood screws (32pcs)	2  (Ø15)1/4"*100mm Hex-Head bolts (8pcs)	3  (Ø15)1/4"*80mm Hex-Head bolts (10pcs)
4  40*18*18*2mm Metal bracket (2pcs)	5  (Ø12)1/4"*40mm Wood screws (6pcs)	6  1/4"*15 (9.5mm) Horizontal-Hole bolts(18pcs)
7  100*63*20mm Wheels (4pcs)	8  95*95*18*3mm Metal bracket (2pcs)	9  Ø3.5*15mm Wood screws (16pcs)
10  (1/4")4.5*58mm Allen key (1pc)		



ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)





PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE POSITION WHEN YOU USE POWER TOOLS !

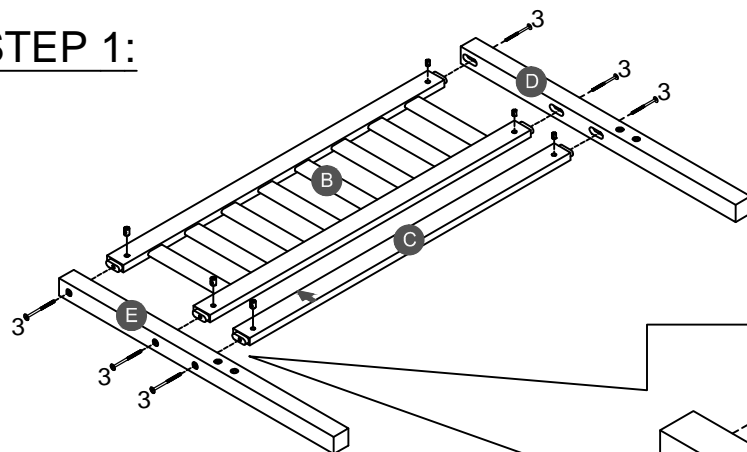STEP 1:




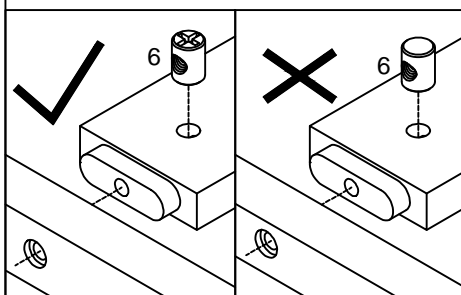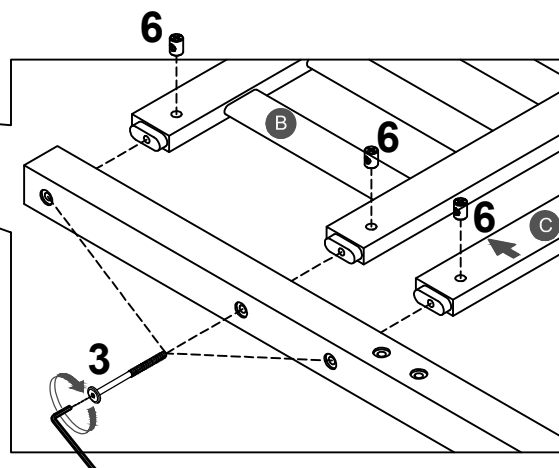

3		6	
6PCS		6PCS	





Note: Part 6 will face up with the "x" mark on it, otherwise it cannot be tightened

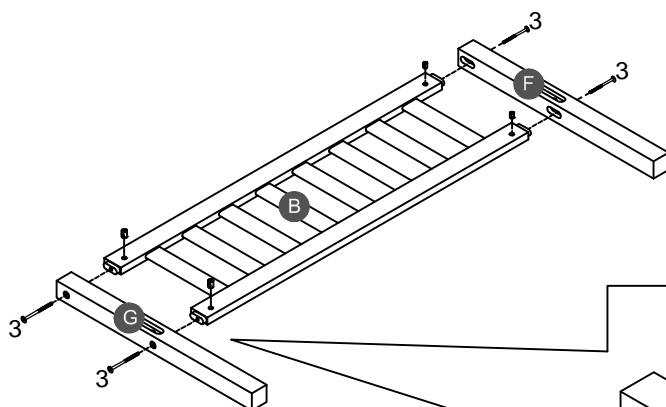STEP 2:




3		6	
4PCS		4PCS	

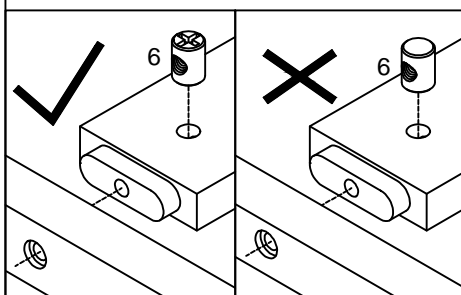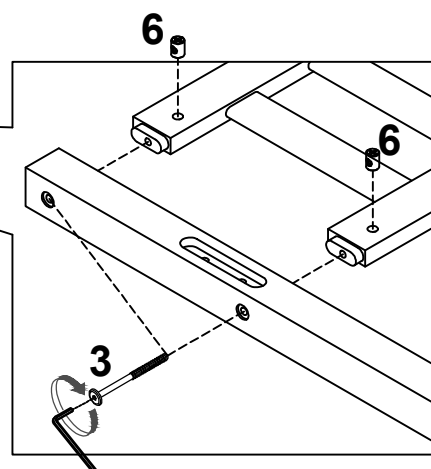


Note: Part 6 will face up with the "x" mark on it, otherwise it cannot be tightened

STEP 3:

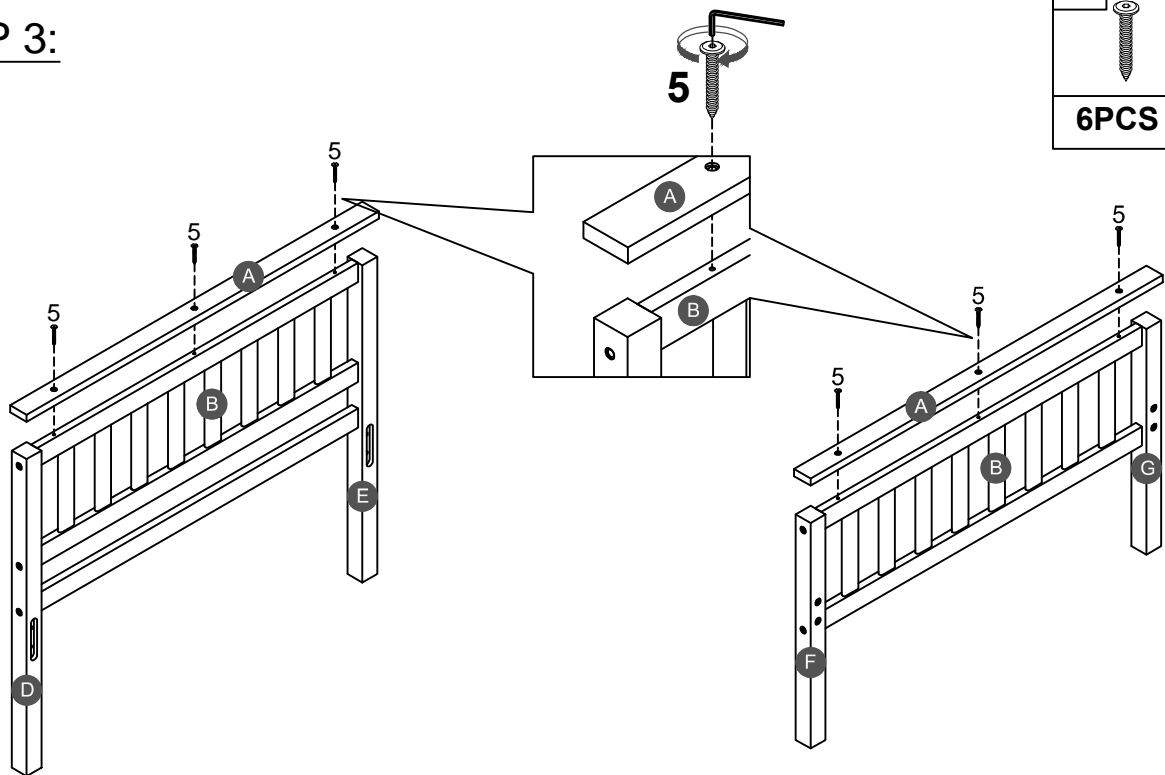

STEP 4:


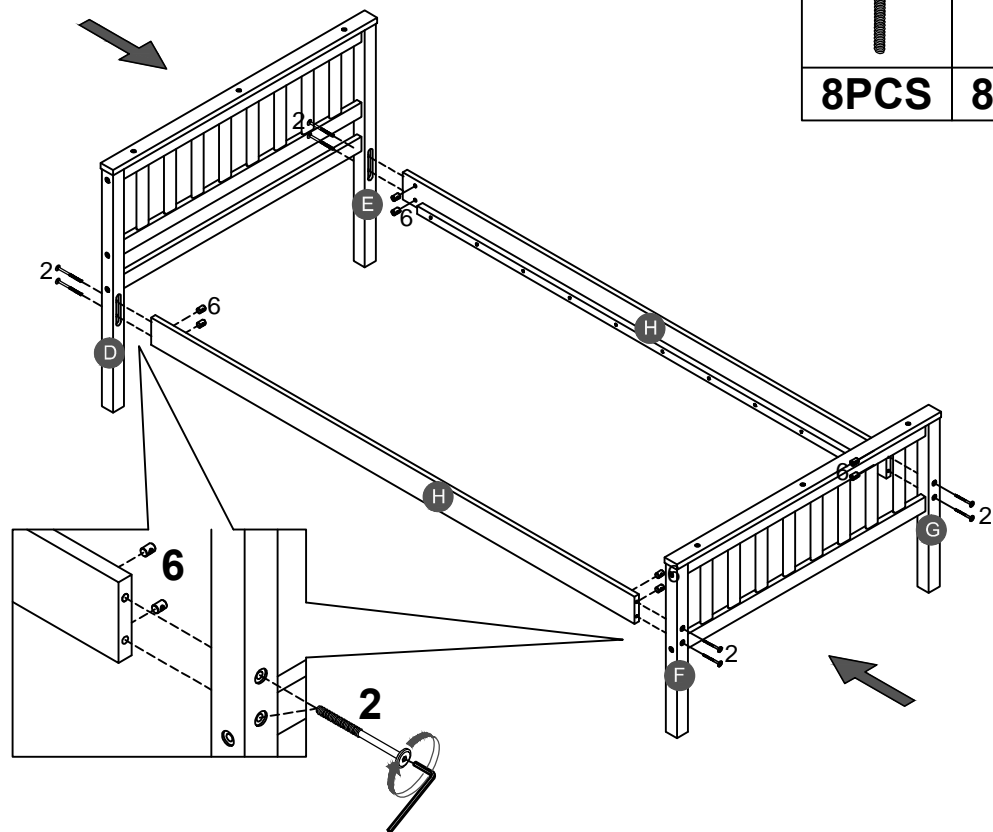


STEP 5:

1



8PCS

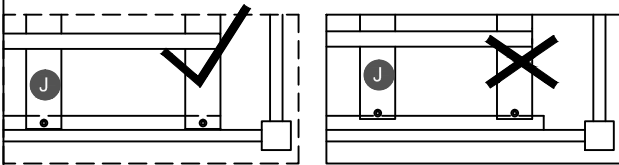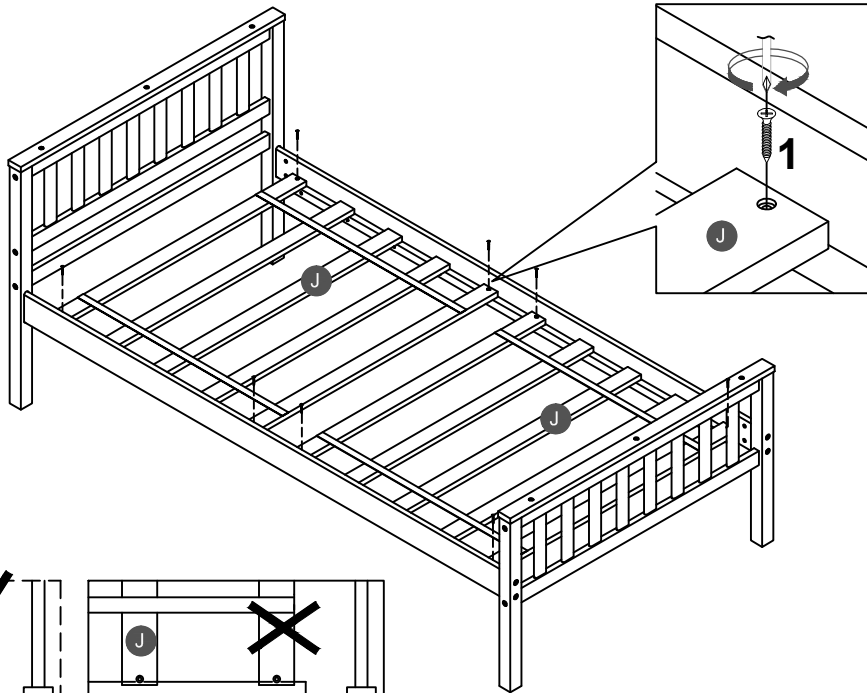

Note: Do not lock the screws of the bed slats to the outermost edge of the bed slats, you need to leave a certain space at the edges, otherwise it will cause the board to break

STEP 6:

7




4PCS


1



8PCS

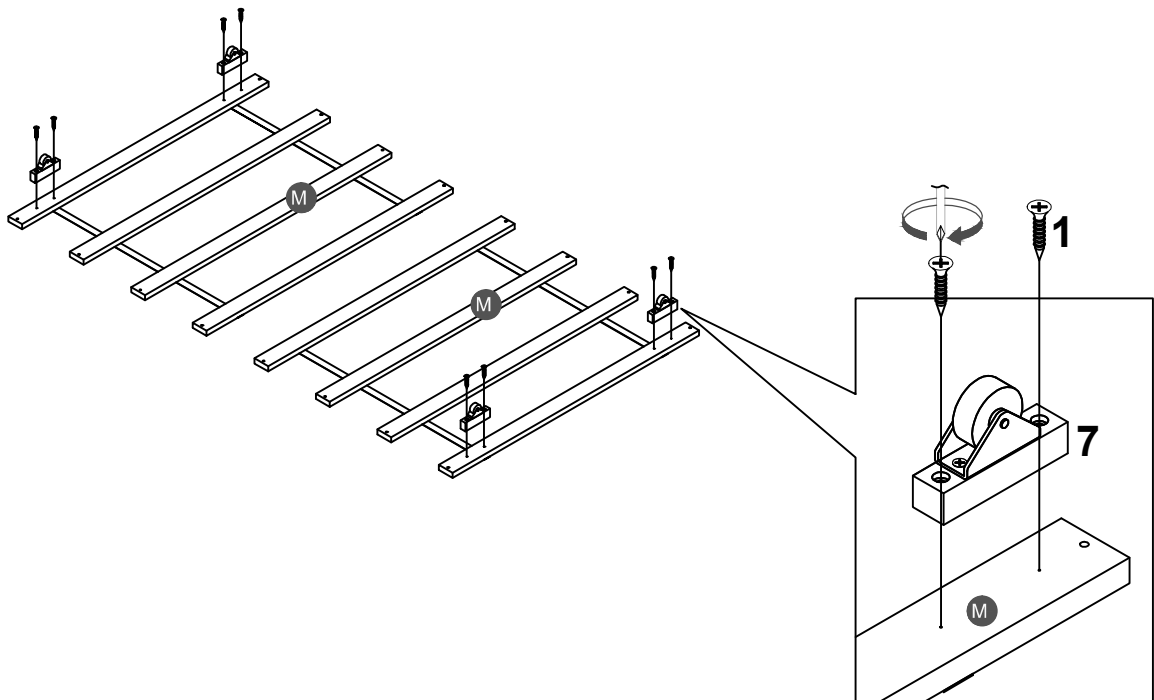




STEP 7:

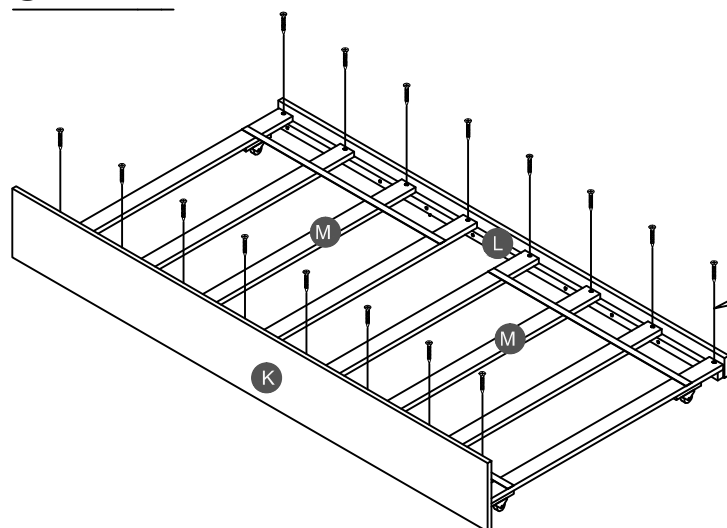

1




16PCS

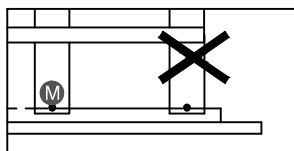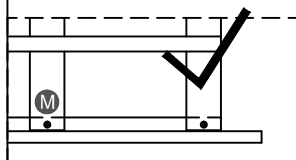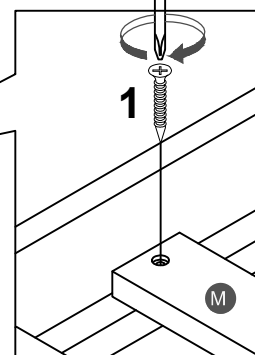

Note: Do not lock the screws of the bed slats to the outermost edge of the bed slats, you need to leave a certain space at the edges, otherwise it will cause the board to break

STEP 8:

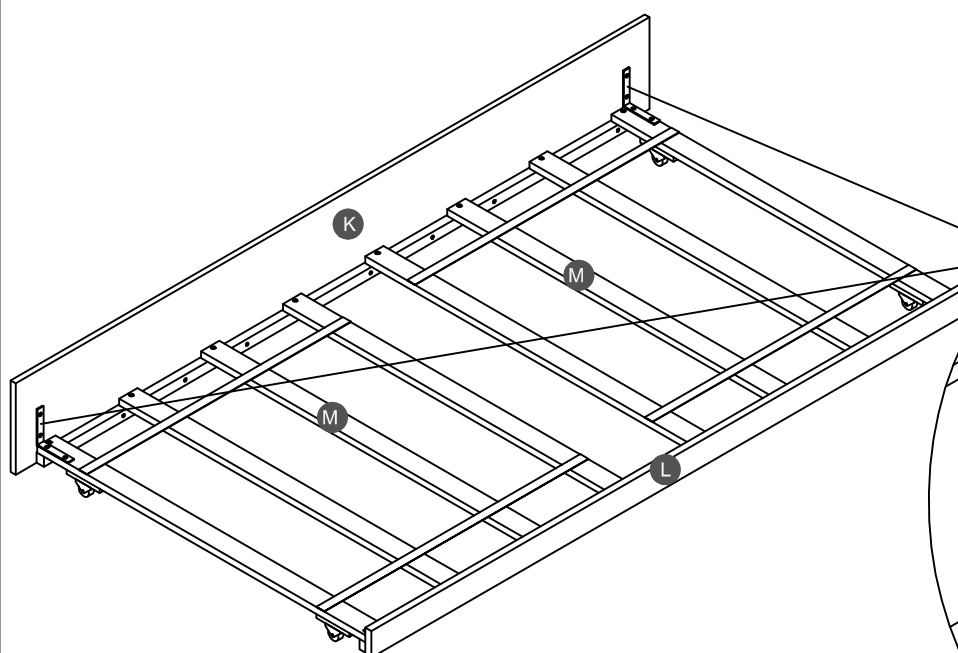

8




2PCS


9





8PCS

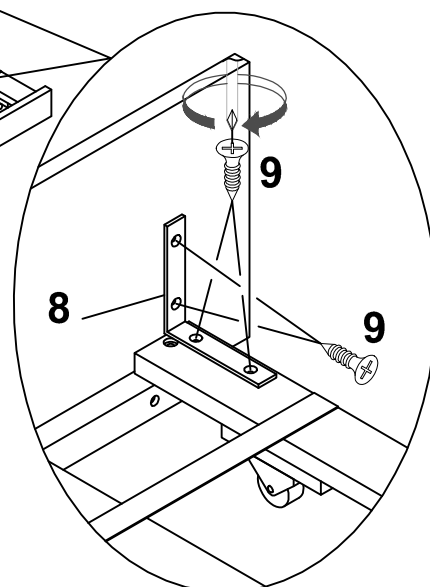


STEP 9:

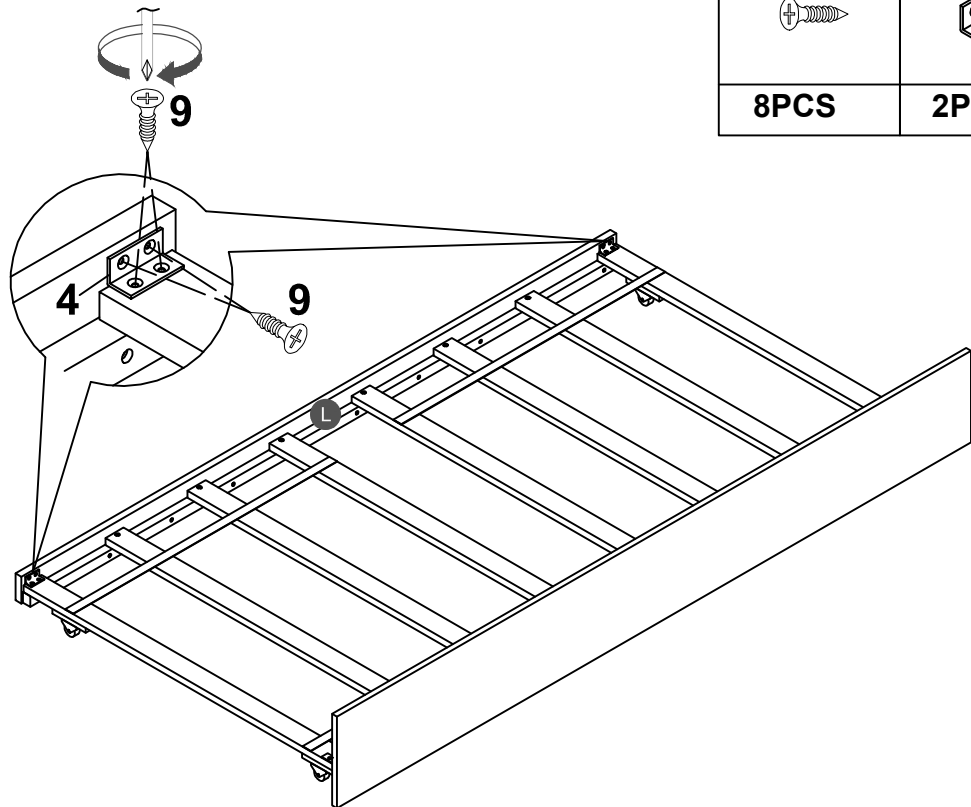

9	4
	
8PCS	2PCS

STEP 10:

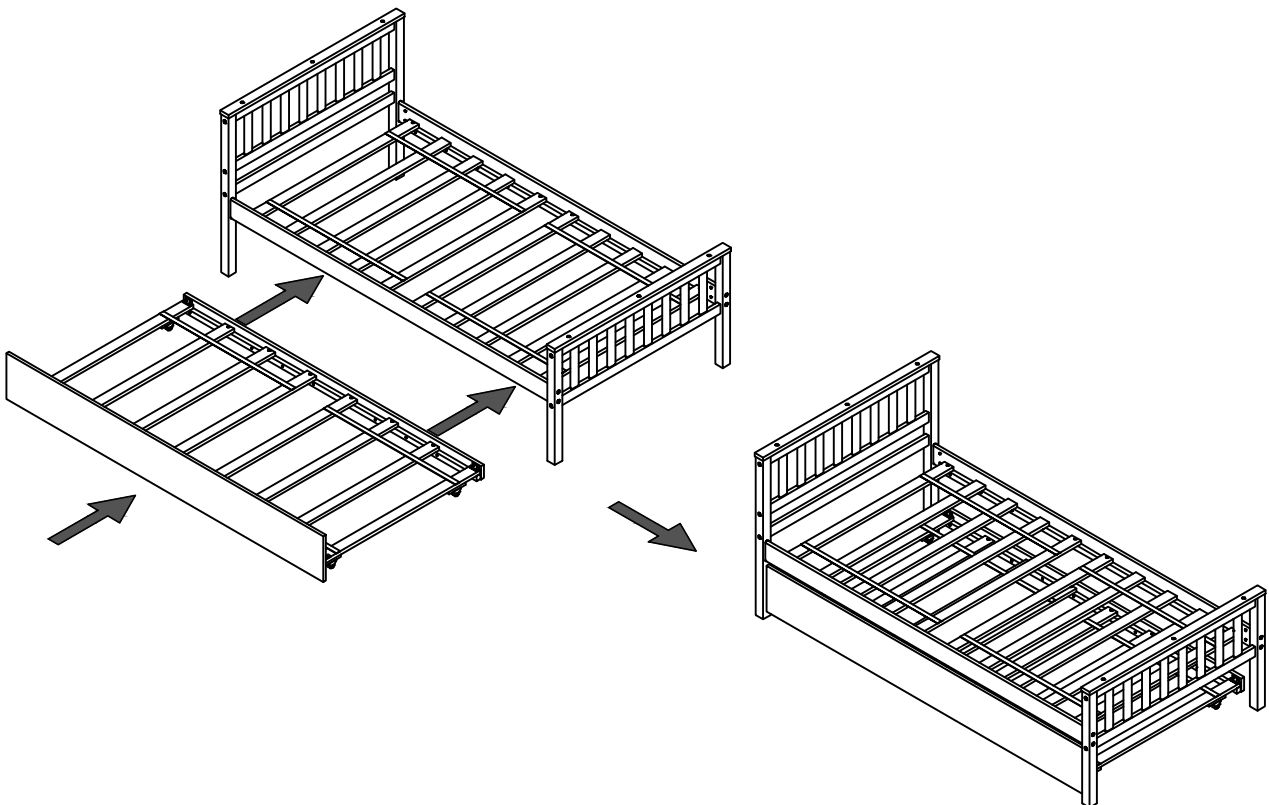

Push Trundle under the bottom of Twin Bed.