




# ASSEMBLY INSTRUCTIONS

## MODEL #: VL5 SERIES

QUESTIONS OR CONCERNS CONTACT WHITFIELD

Info@whitfieldlighting.com / www.whitfieldlighting.com

TOOLS AND MATERIALS REQUIRED:



Wrench



Pliers



Wire Cutters



Philips Screwdriver


Wiring supplies  
as required by  
electrical code

### SAFETY PRECAUTIONS:

1. Turn off power at main electrical service box before starting installation.
2. Electrical connections must comply with local code or national electrical codes.


### INSTALLATION:

(The drawing of parts may not look the same as the actual parts.)

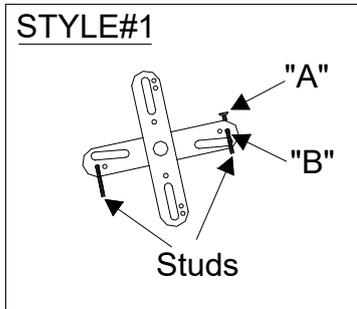


1. Note: Refer to the mounting bracket style that matches the bracket that is included with your fixture.


Style#1 (non-threaded holes)  
Loosen hex nut "A" and "B".  
Adjust stud so it clears the fixture once assembled.  
Hold in place with "A" and lock in place with "B"

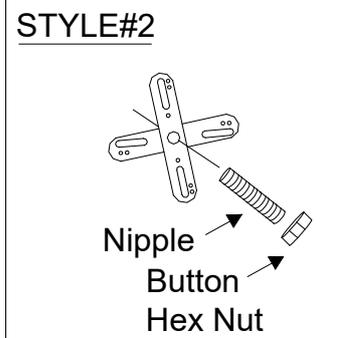

Style#2 (Nipple)  
Attach nipple to mounting bracket and adjust until it will clear fixture when assembled. Lock in place using hex nut.

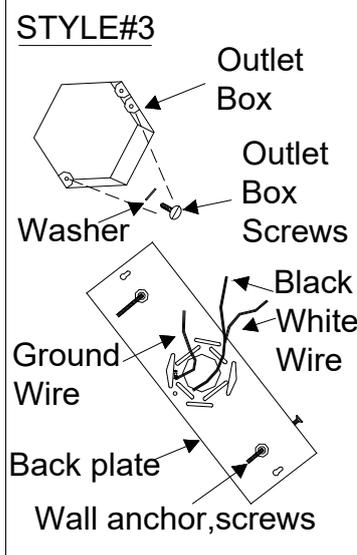


Style#3 Remove screws from outlet box. Attach full size back plate by putting the outlet box screws on screws included, through the backplate and tighten. For 2,3,4 light, use anchor screws through the key hole slots, and attach to the wall. Feed the black and white wire from outlet box through the backplate hole, then proceed with #4 instructions.

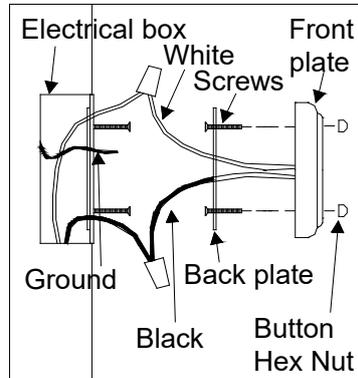


4. Connect the black wire from fixture to black wire in outlet box. Connect the white wire from outlet box to white wire on fixture. Connect ground wire to ground wire in outlet box.

(Note: Don't disconnect wires that are already connected.)

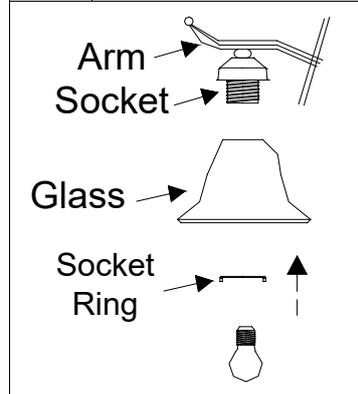

5. Take the front plate and attach to the back plate by using the studs on the back plate and line up with the front plate. Secure fixture by using the capnuts provided.

(Note: Remember to tuck all electrical wires into the outlet box.)

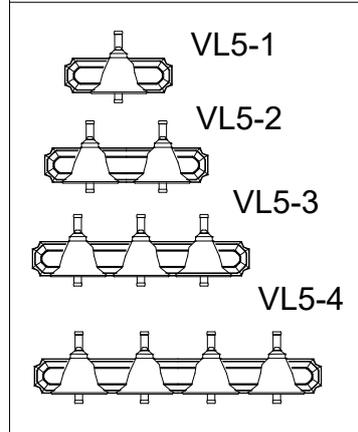


6. When back plate and front plate are secure, proceed with attaching glass. Put glass through the socket and attach by using the hoop provided and spin hoop onto socket to secure the glass. Install the proper bulb type and wattage.

# INSTRUCTIONS D'ASSEMBLAGE MODÈLE SÉRIE VL5

POUR TOUTE QUESTION, VEUILLEZ COMMUNIQUER AVEC WHITFIELD :

Info@whitfieldlighting.com / www.whitfieldlighting.com

OUTILS ET MATÉRIAUX REQUIS :




Clé



Pincés



Coupe-fil



Tournevis Phillips


Matériel de câblage exigé par le code de l'électricité

## MESURES DE SÉCURITÉ :

1. Coupez l'alimentation au coffret de branchement principal avant de commencer l'installation.
2. Les raccords électriques doivent être conformes au code de l'électricité local ou national.


## INSTALLATION :

(Les dessins des pièces peuvent différer de pièces réelles.)

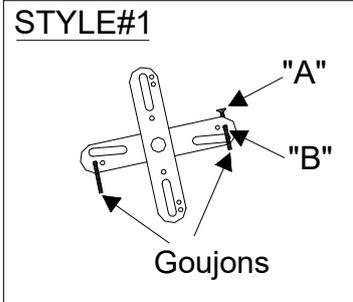


1. Remarque : Vérifiez quel style de support de montage correspond au support inclus avec votre luminaire.

Style 1 (trous non filetés)  
Desserrez les écrous hexagonaux « A » et « B ». Ajustez le goujon de manière à ce qu'il dépasse du luminaire une fois assemblé. Maintenez-le en place avec « A » et verrouillez-le avec « B ».

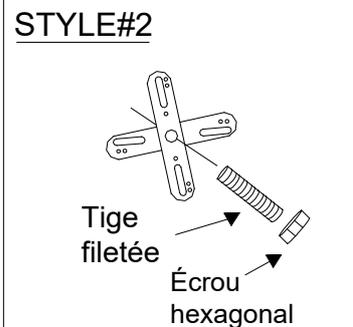


Style 2 (tige filetée)  
Fixez la tige filetée sur le support de montage et ajustez-la pour qu'elle dépasse du luminaire une fois assemblé. Fixez-la en place avec l'écrou hexagonal.

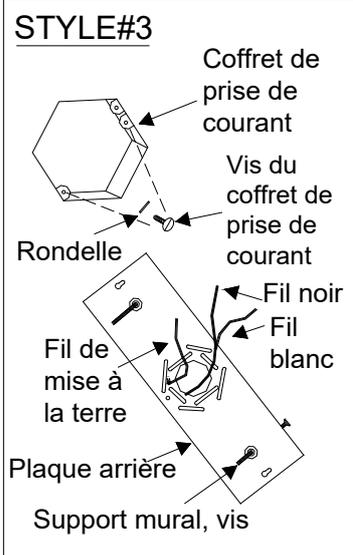


Style 3 Enlevez les vis du coffret de prise de courant. Installez une plaque arrière de pleines dimensions en utilisant les vis fournies avec le coffret de prise de courant et serrez les vis.

Remarque : pour 2, 3 ou 4 lumières. Vissez les vis d'ancrage dans les fentes en trou de serrure pour fixer la plaque au mur. Passez les fils blanc et noir du coffret de prise de courant par le trou de la plaque arrière, puis passez à l'étape 4 des instructions.

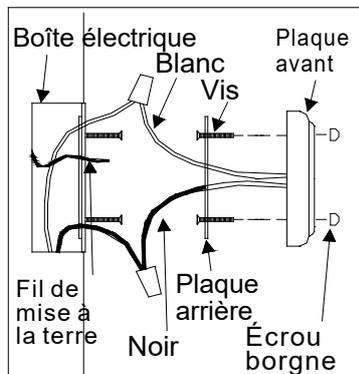


4. Connectez le fil noir du luminaire au fil noir du coffret de prise de courant et connectez le fil blanc du luminaire au fil blanc du coffret de prise de courant. Connectez le fil de mise à la terre au fil de mise à la terre du coffret de prise de courant.

(Remarque : Ne déconnectez pas les fils qui sont déjà raccordés.)

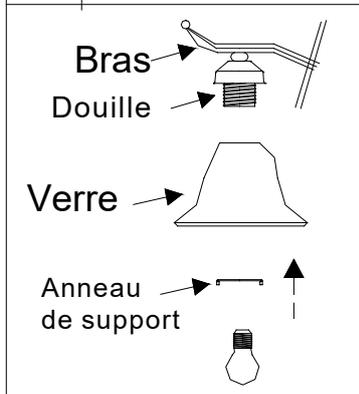

5. Installez la plaque avant sur la plaque arrière en alignant la plaque sur les goujons de la plaque arrière. Fixez le luminaire en utilisant les écrous borgnes fournis.

(Remarque : N'oubliez pas d'insérer tous les fils dans le boîtier électrique.)

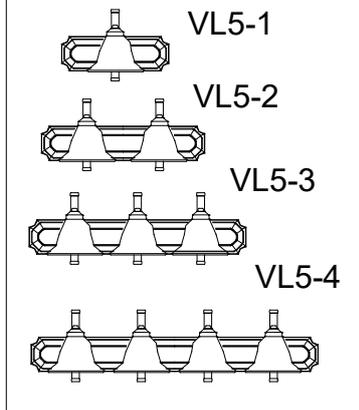

6. Lorsque la plaque à montage arrière et la plaque frontale sont sécurisées, continuez à fixer le verre. Mettez le verre à travers la douille et fixez-le en utilisant l'anneau fourni et faites pivoter l'anneau à l'intérieur de la douille pour sécuriser le verre. Installez le type approprié d'ampoule et de puissance.