

CONVENIENCE CONCEPTS

TRESTLE DESK

090207BL



090207W



ASSEMBLY INSTRUCTIONS

We have designed our furniture with you , the customer in mind . Our clear , easy to follow , step by step instructions will guide you through the project from start to finish .
Feel confident that this will be a fun and rewarding project . The final product will be a quality piece of furniture that will go together smoothly and give years of enjoyment .



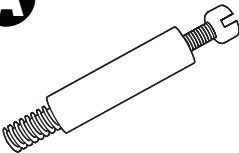

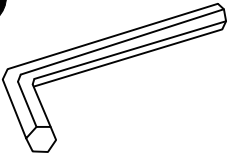



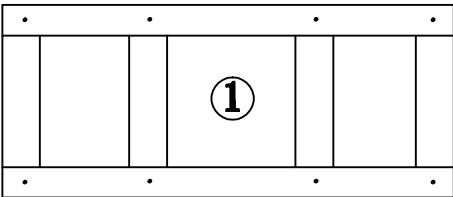







Please do not return to the store

Broken or missing parts?






Need help with assembly?

If you have any questions just call 1-800-468-6447 or email us at
parts@convenience-concepts.com

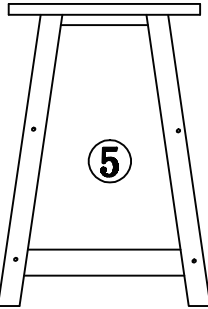Hardware List


A 	F 	G 	H 	I 
Cambolt (8pcs)	Hole sticker (16pcs)	Allen wrench (1pc)	Camlock (8pcs)	Lock nut (16pcs)
B 	<div><div>Part List</div><div><div><p>Desktop (1pc)</p></div><div><div><p>Middle Shelf (2pcs)</p></div><div><div><p>Bottom Shelf (2pcs)</p></div><div><div><p>Shelf Supports (8pcs)</p></div><div><div><p>Frame (4pcs)</p></div></div></div></div></div></div></div>			
Wood dowel (16pcs)				
C 				
Long Screw (16pcs)				
D 				
Screw (8pcs)				
E 				
Glue (1pc)				

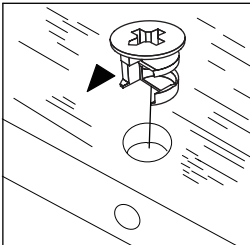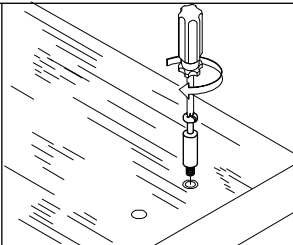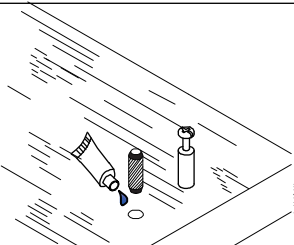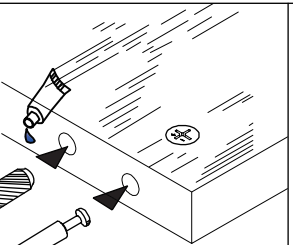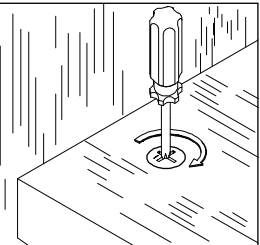Assembling the unit with camlocks and wood dowels.

				
Insert camlock, camlock arrow must face bolt hole	Gently screw cam dowel into the threaded anchor	Lightly glue one end of wood dowel and tap into hole.	Lightly glue dowel and connect to second panel by inserting dowels into holes	Gently screw the cam clockwise into locked position. Do not overtighten.

Step1

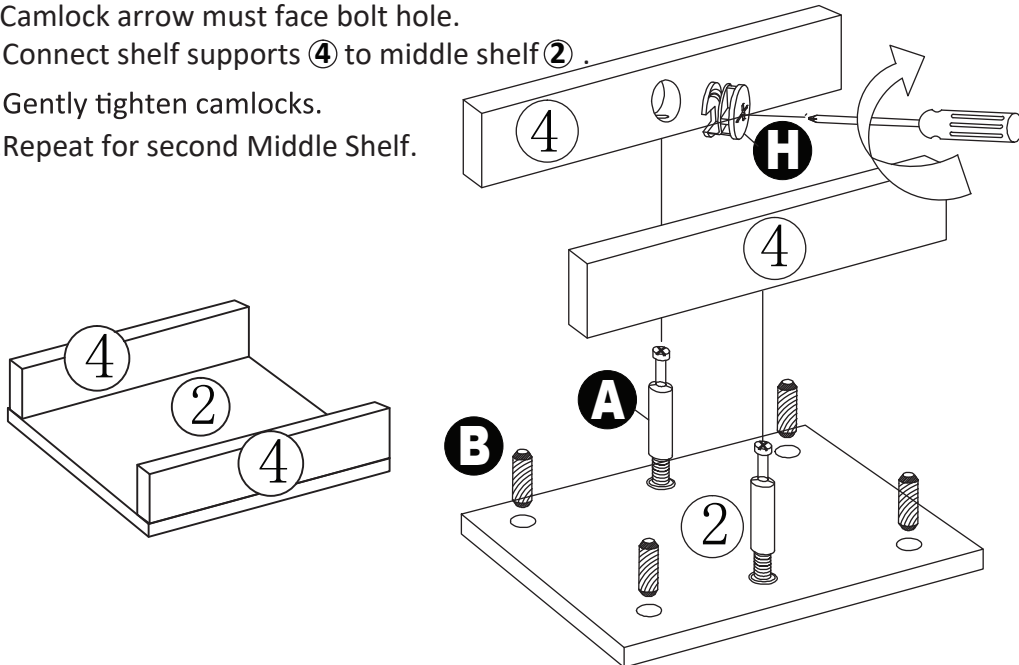
1. Insert wooden dowels (B) and screw cambolts (A) into middle shelf ② .
2. Insert camlocks(H) into holes in shelf supports ④ .
Camlock arrow must face bolt hole.
3. Connect shelf supports ④ to middle shelf ② .
4. Gently tighten camlocks.
5. Repeat for second Middle Shelf.



Refer to page 2 for dowel assembly.

Step2

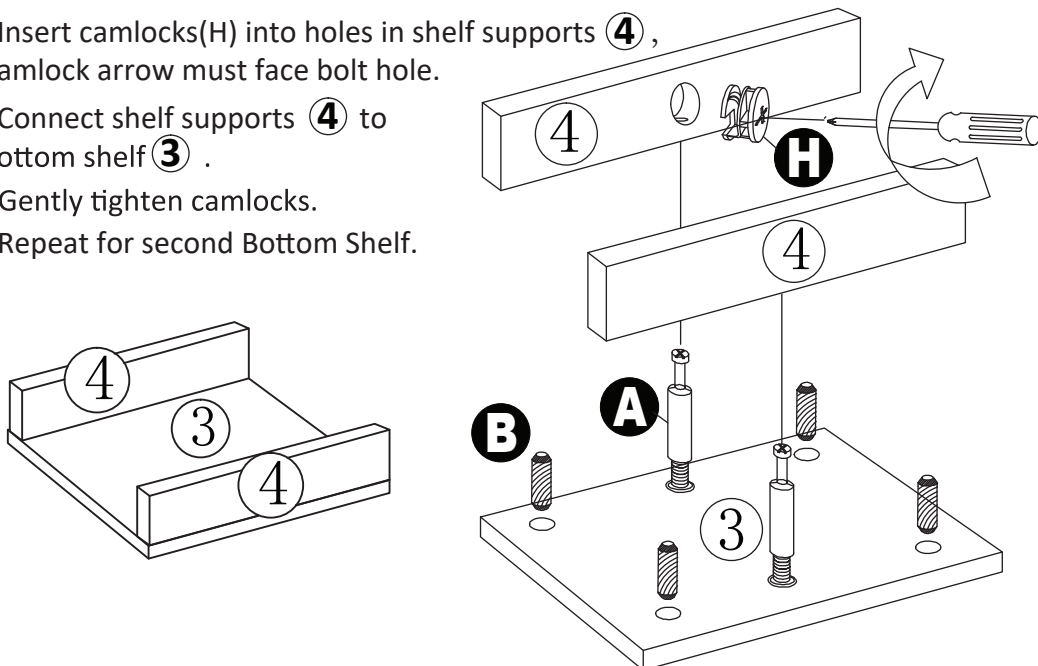1. Insert wooden dowels (B) and screw cambolts (A) into bottom shelf ③ .
2. Insert camlocks(H) into holes in shelf supports ④ ,
Camlock arrow must face bolt hole.
3. Connect shelf supports ④ to bottom shelf ③ .
4. Gently tighten camlocks.
5. Repeat for second Bottom Shelf.



Step3

1. Insert nuts (I) into middle shelf (2) and bottom shelf (3).
Make sure Nut hole faces to bolt hole.
(as seen in Diagram #1)
2. Carefully connect frames (5) to shelves (2) and (3).
(Long screw (C) goes through the frame . Line up holes and insert screws.)
3. Tighten long screws (C).
4. Repeat for second leg assembly.


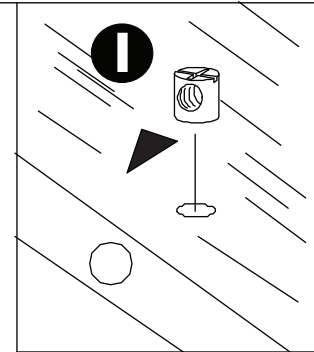



Diagram #1

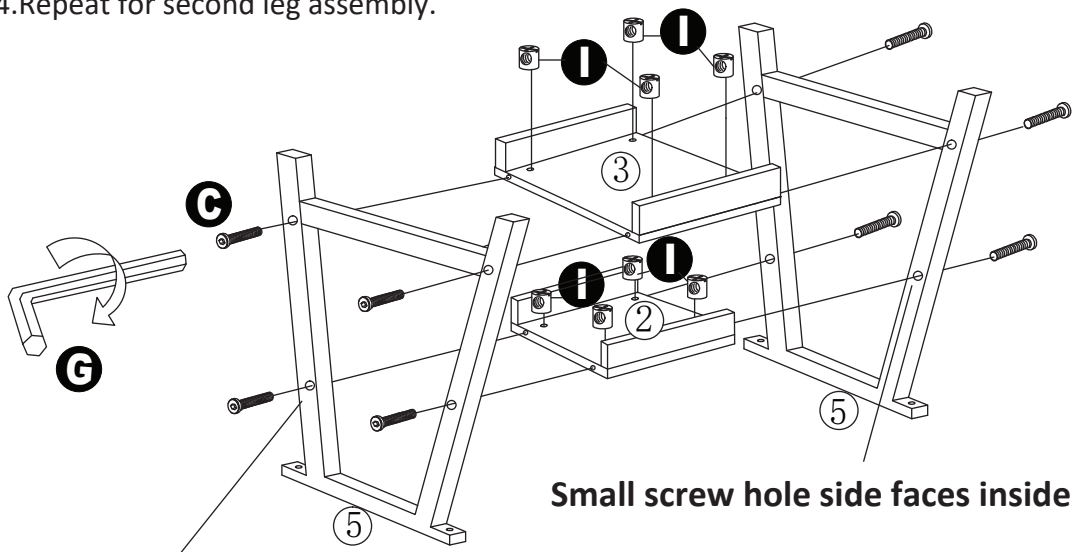

Large screw hole side faces outside


Step4

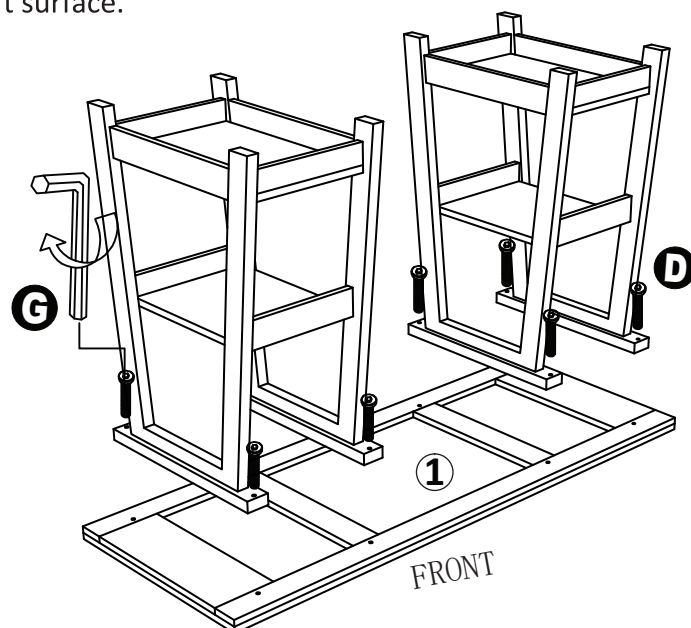1. Place desktop on carpet or soft surface.
2. Connect the assembly to desktop (1) with Screws (D) and allen wrench (G).
3. Tighten screws (D).



Step5

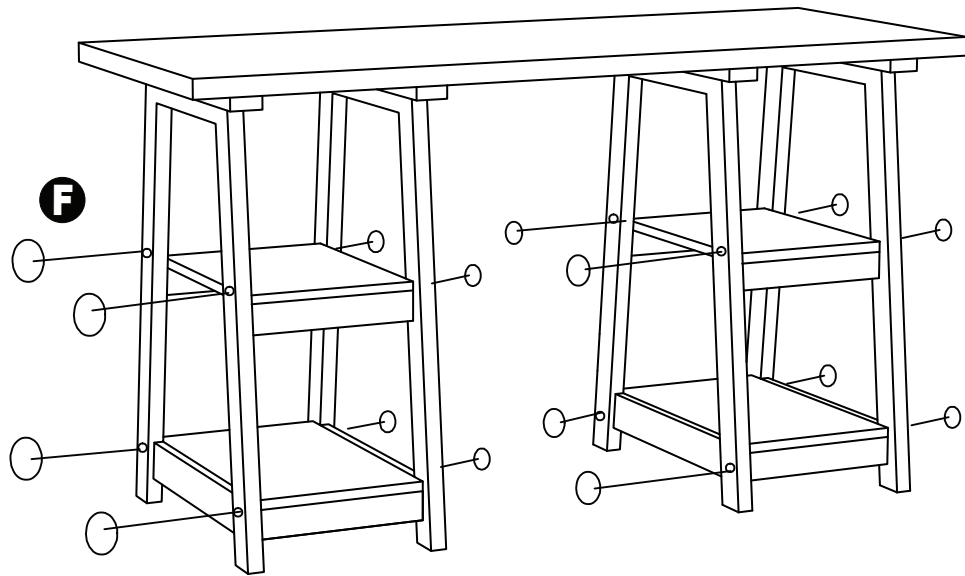1. Carefully turn the desk right side up.
2. Place hole stickers (F) over screw holes.



Enjoy.

