




1) Fix the door frame into the rough opening

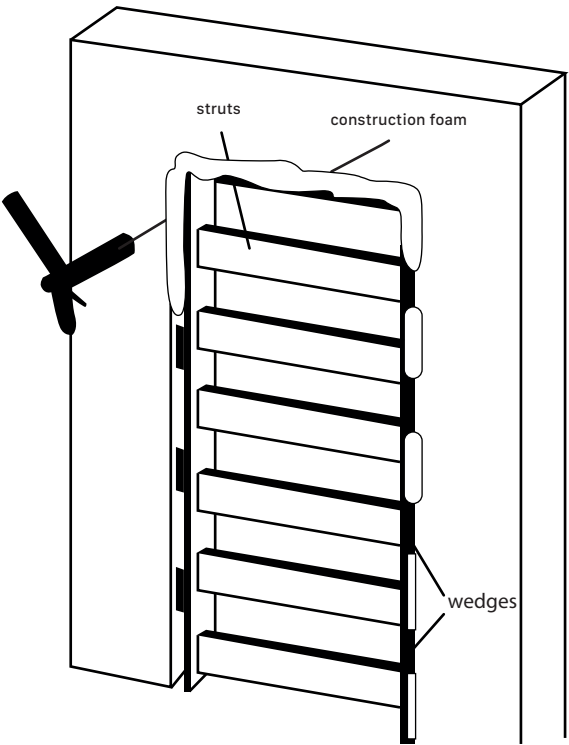


1) Valusso Design LLC Standard 2X4 wall stud installation manual

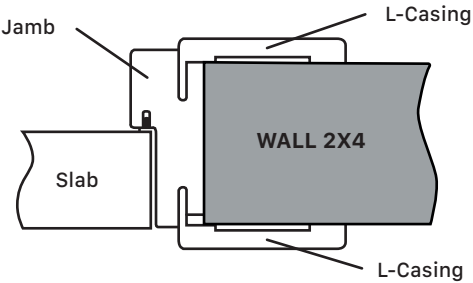


3) Valusso Design LLC Standard pocket, by-fold and bypass installation manual

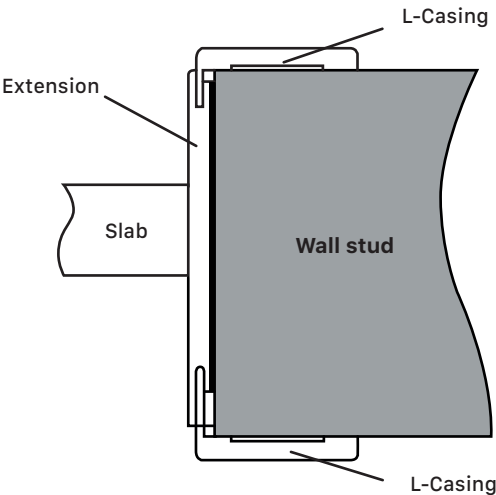


2) Valusso Design LLC Standard 2X6 wall stud installation manual

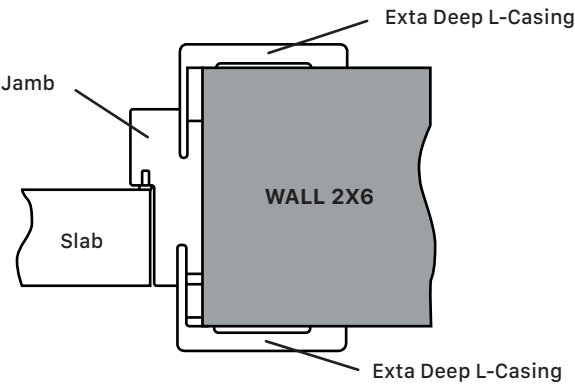


2) Fix the hinges into the jambs

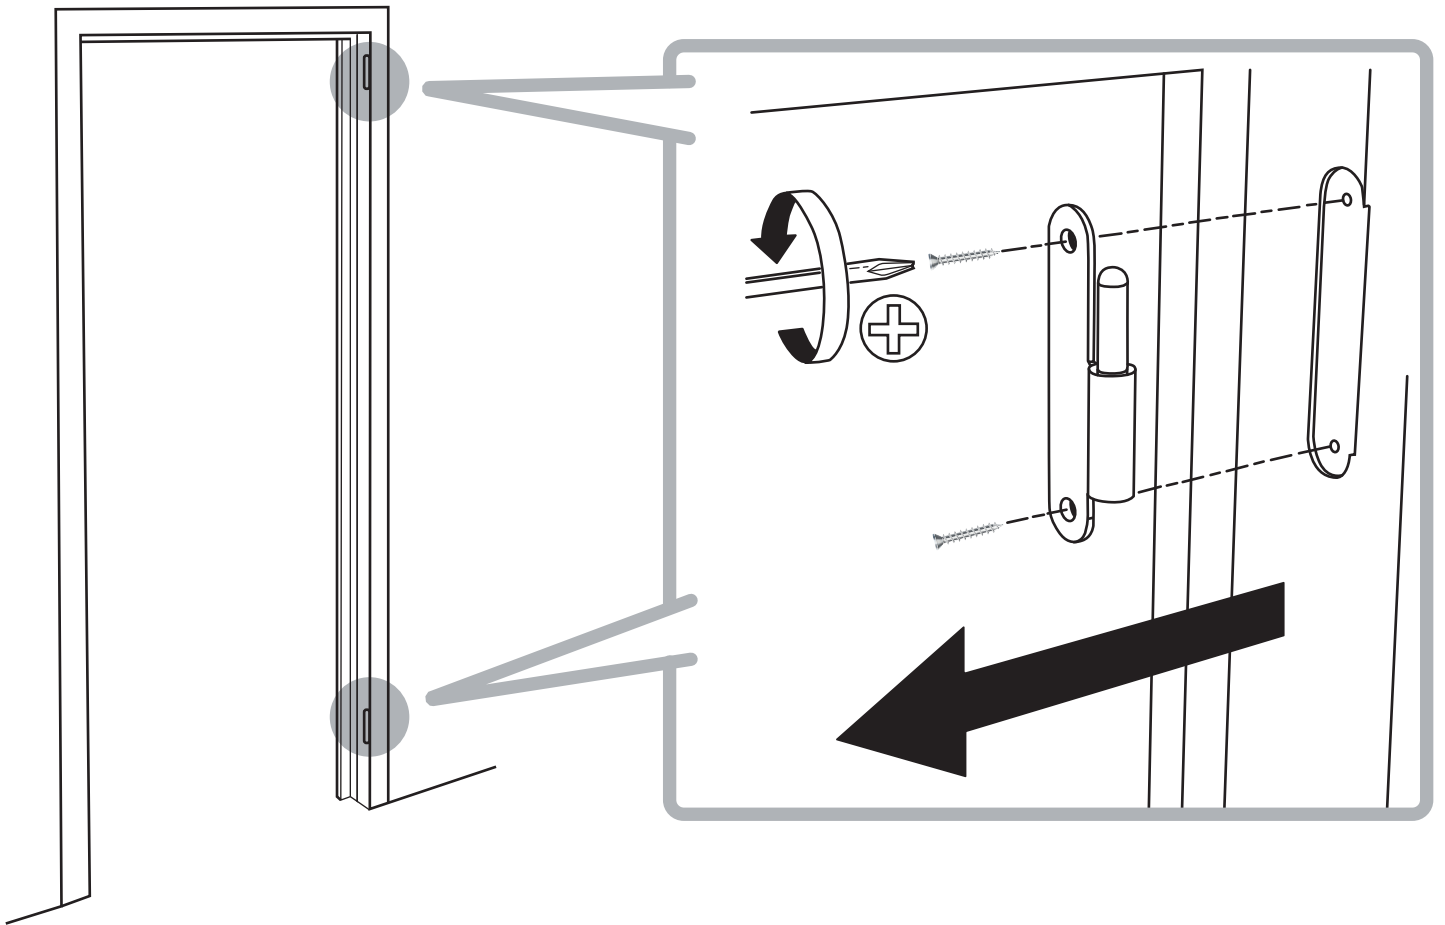


**3) Please, hang the door, after hardening for construction foam. Please note: different construction foams have different hardening levels. Read carefully the construction foam usage instructions!**

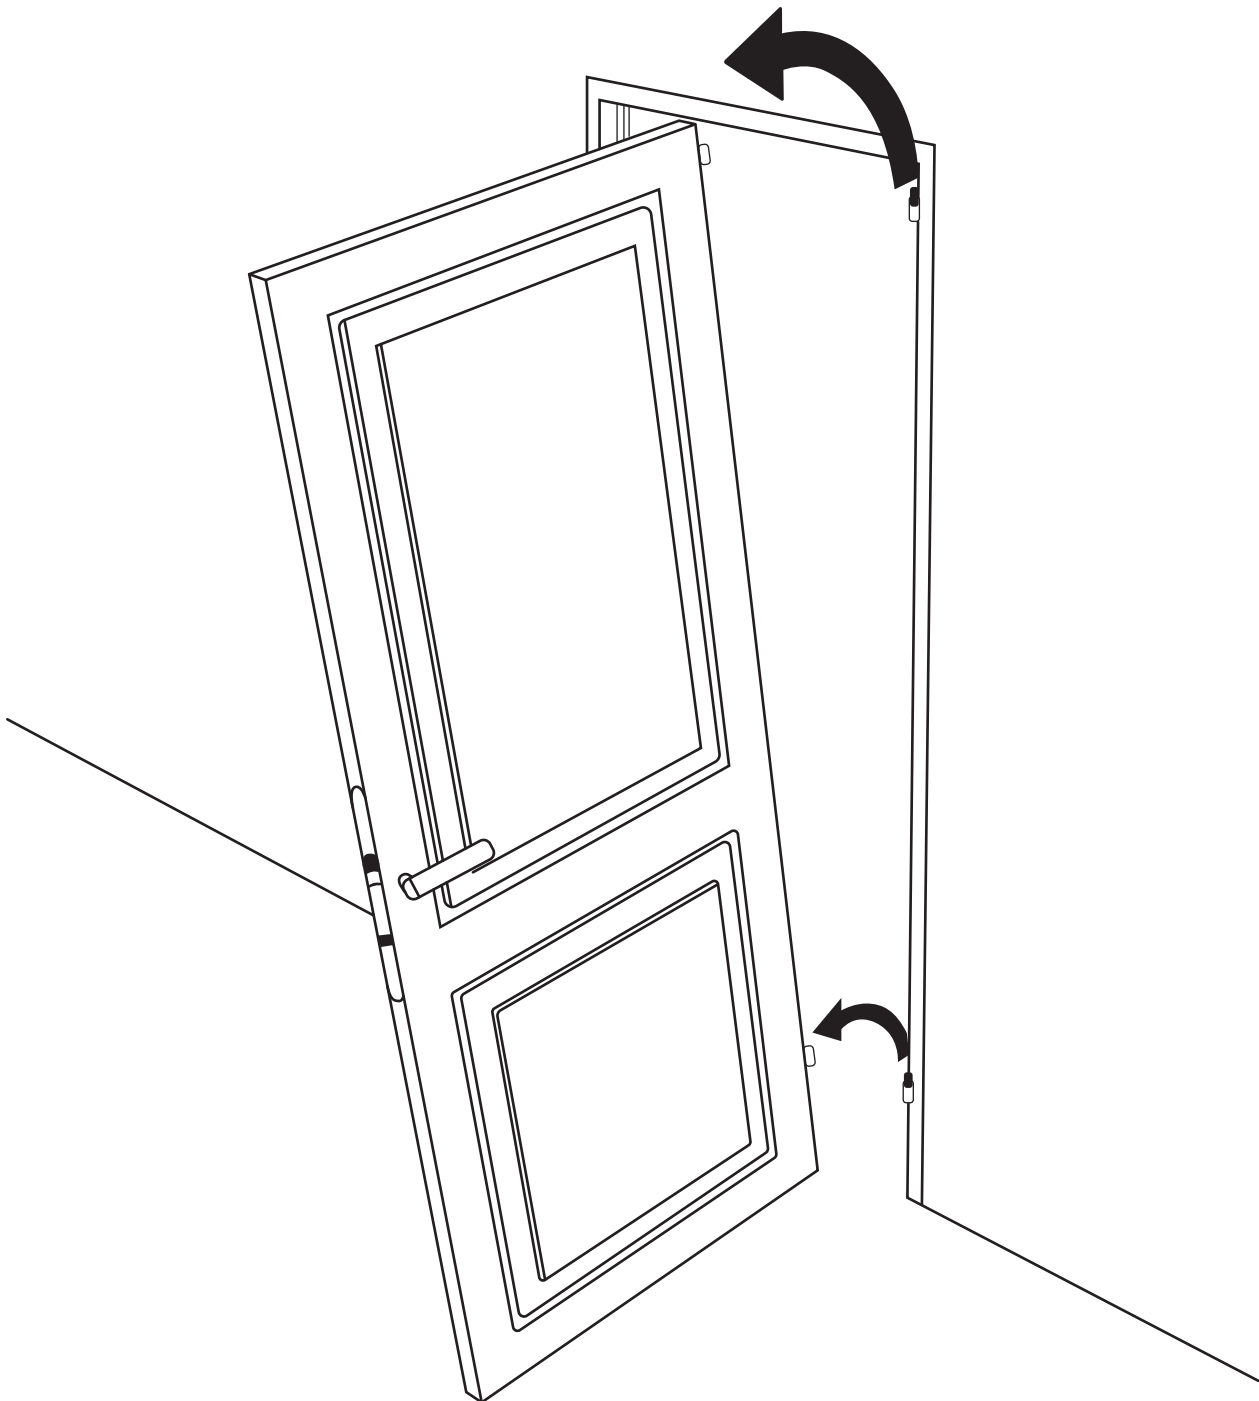


4) Fix the strike plate into the jamb

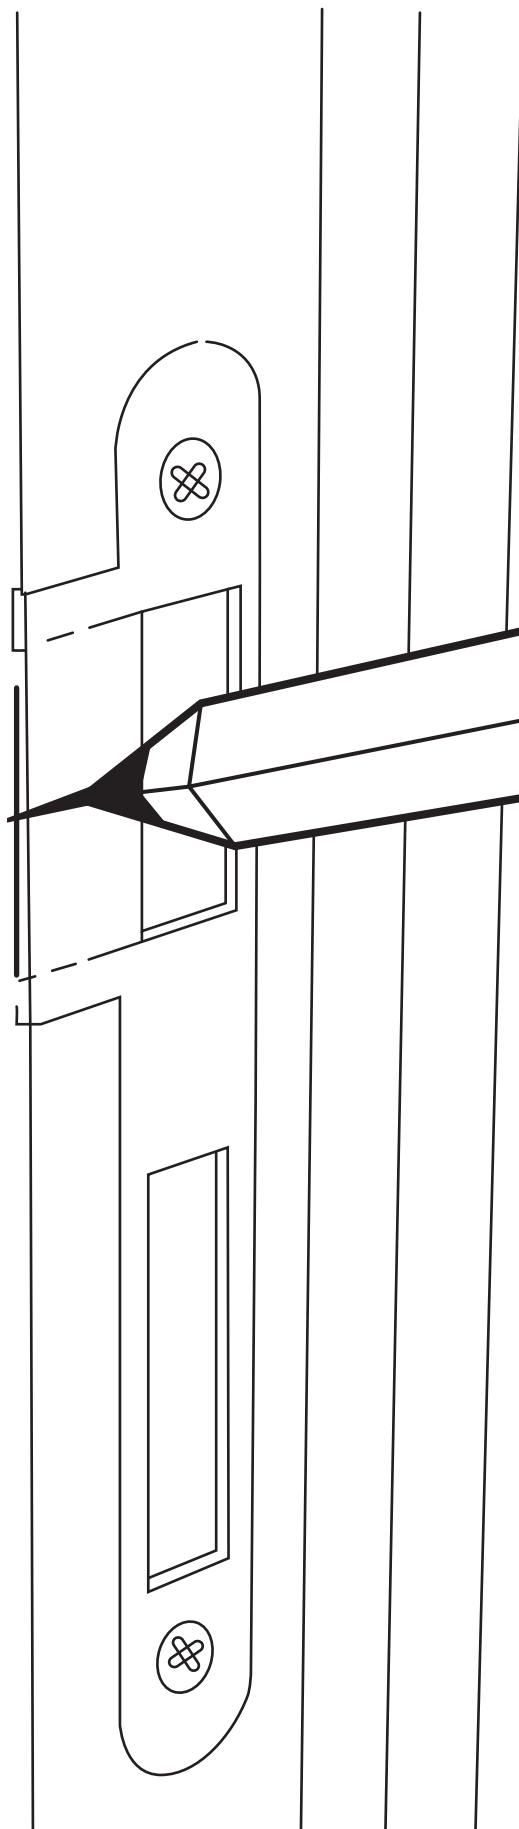


5) Fix the door lock into the door slab

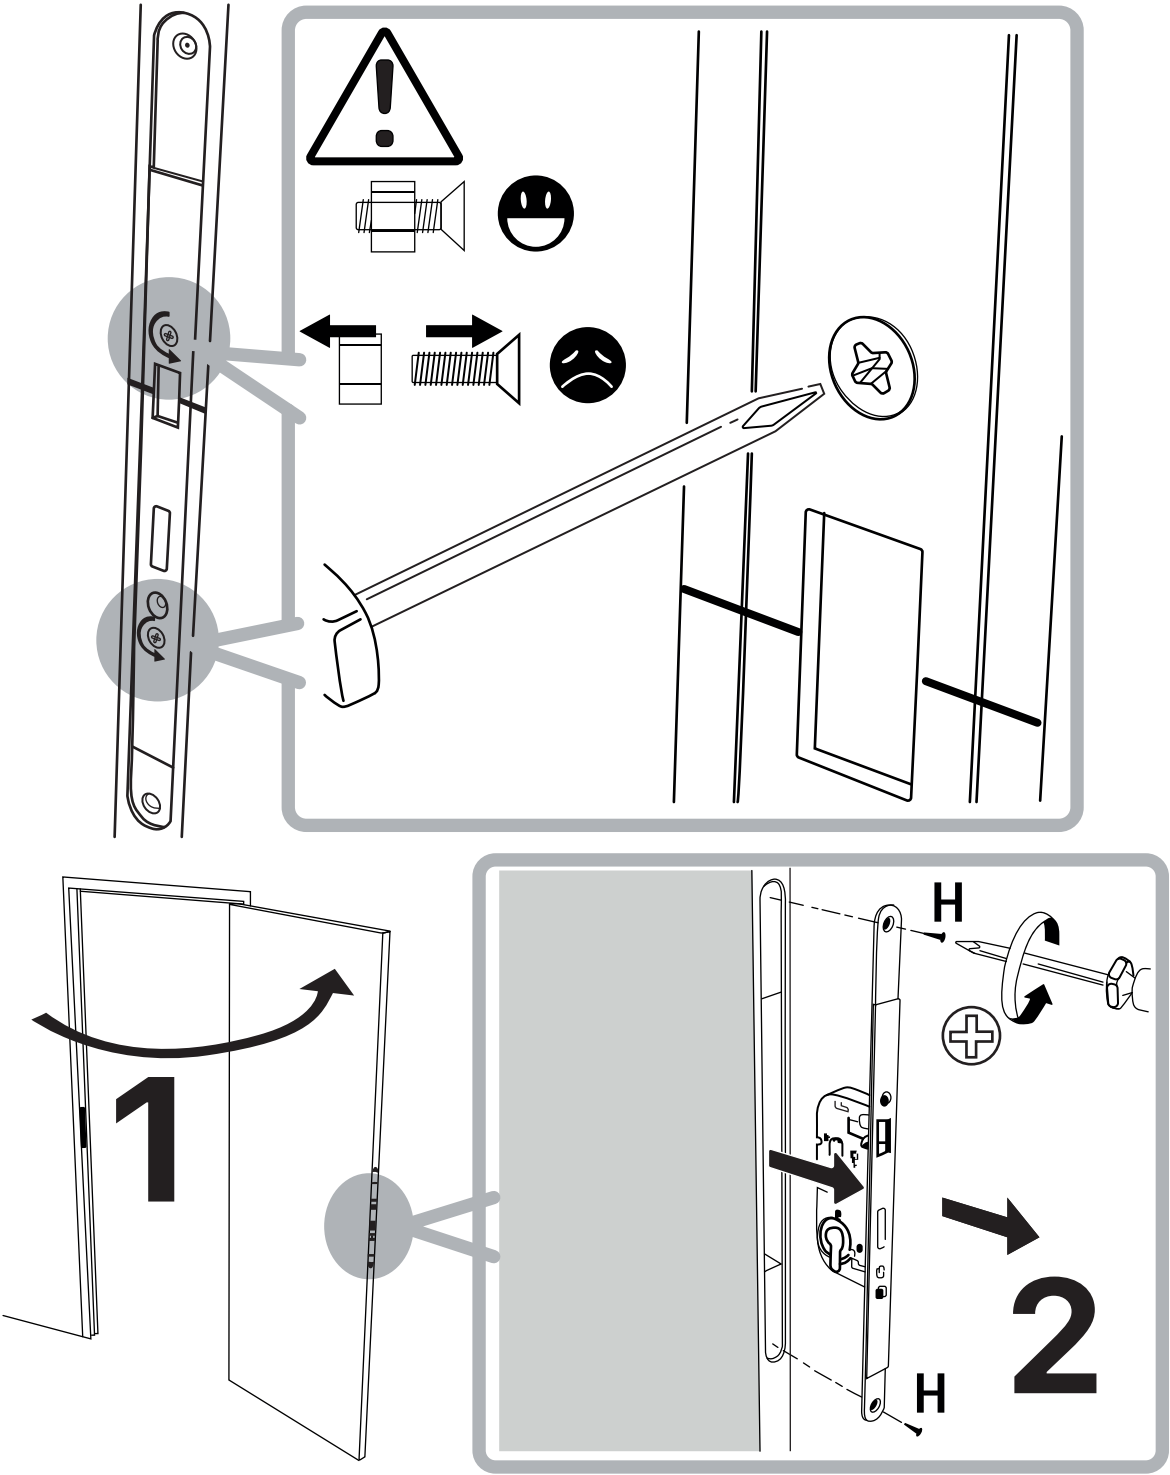


**6) Fix the door handle if you have Passage Lock Functionality**

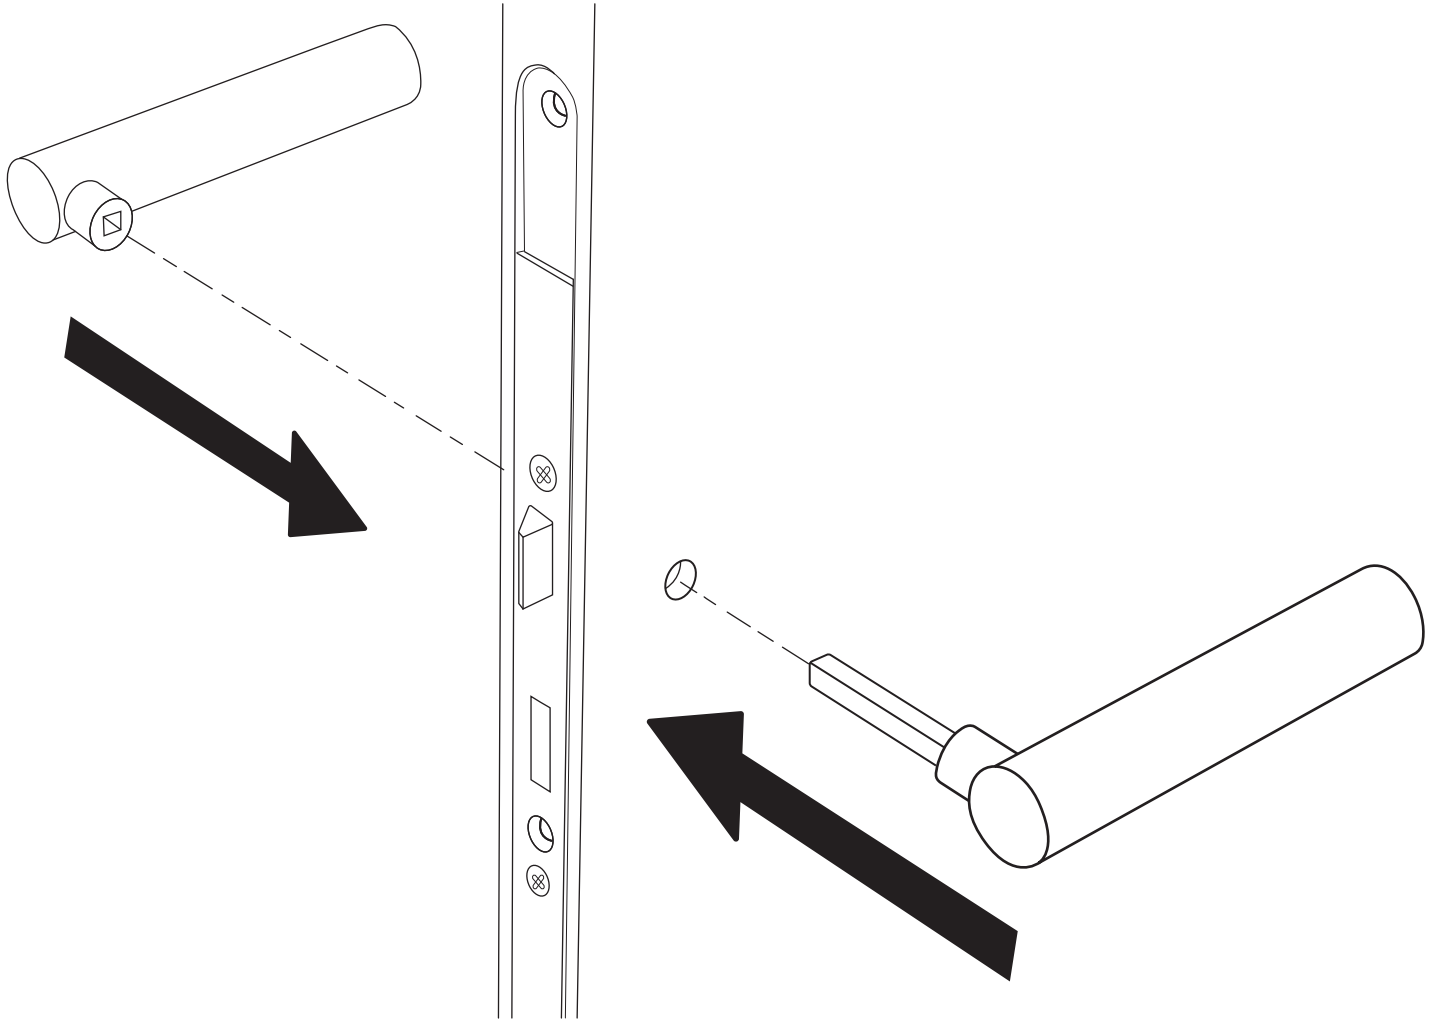

**7) Fix the handle and cover plates if you have Privacy Lock Functionality**

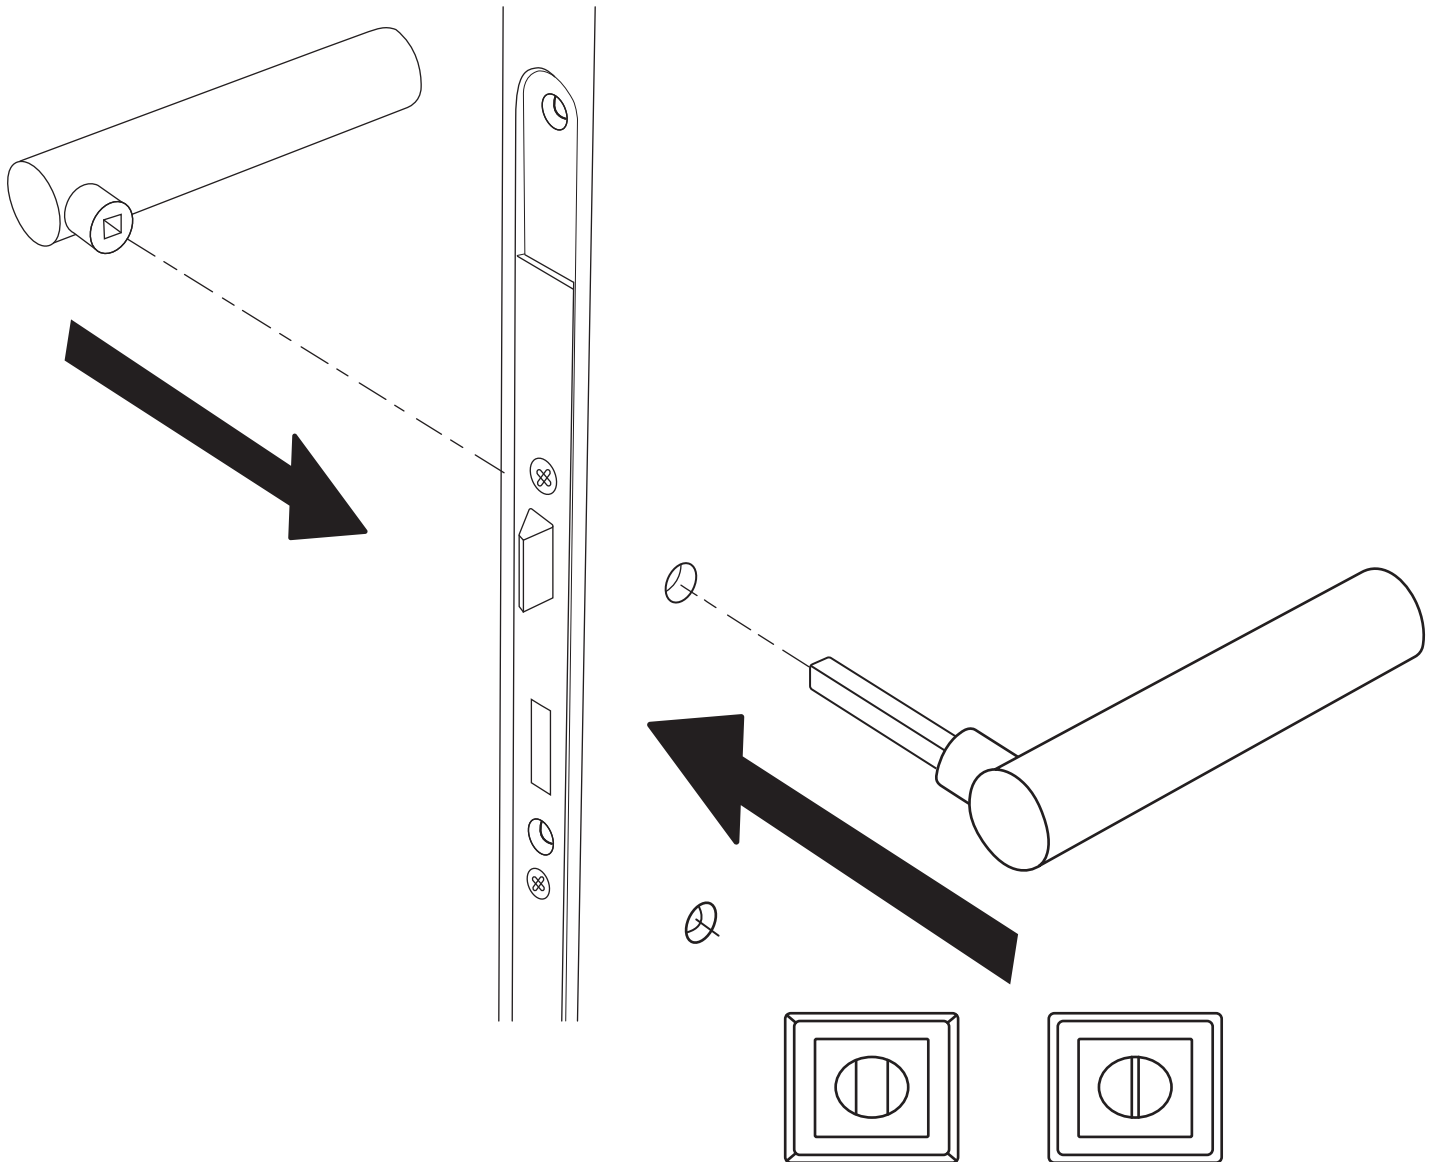

8) Fix the handle, then keyed mechanism and keyed cylinders into the pre-drillings

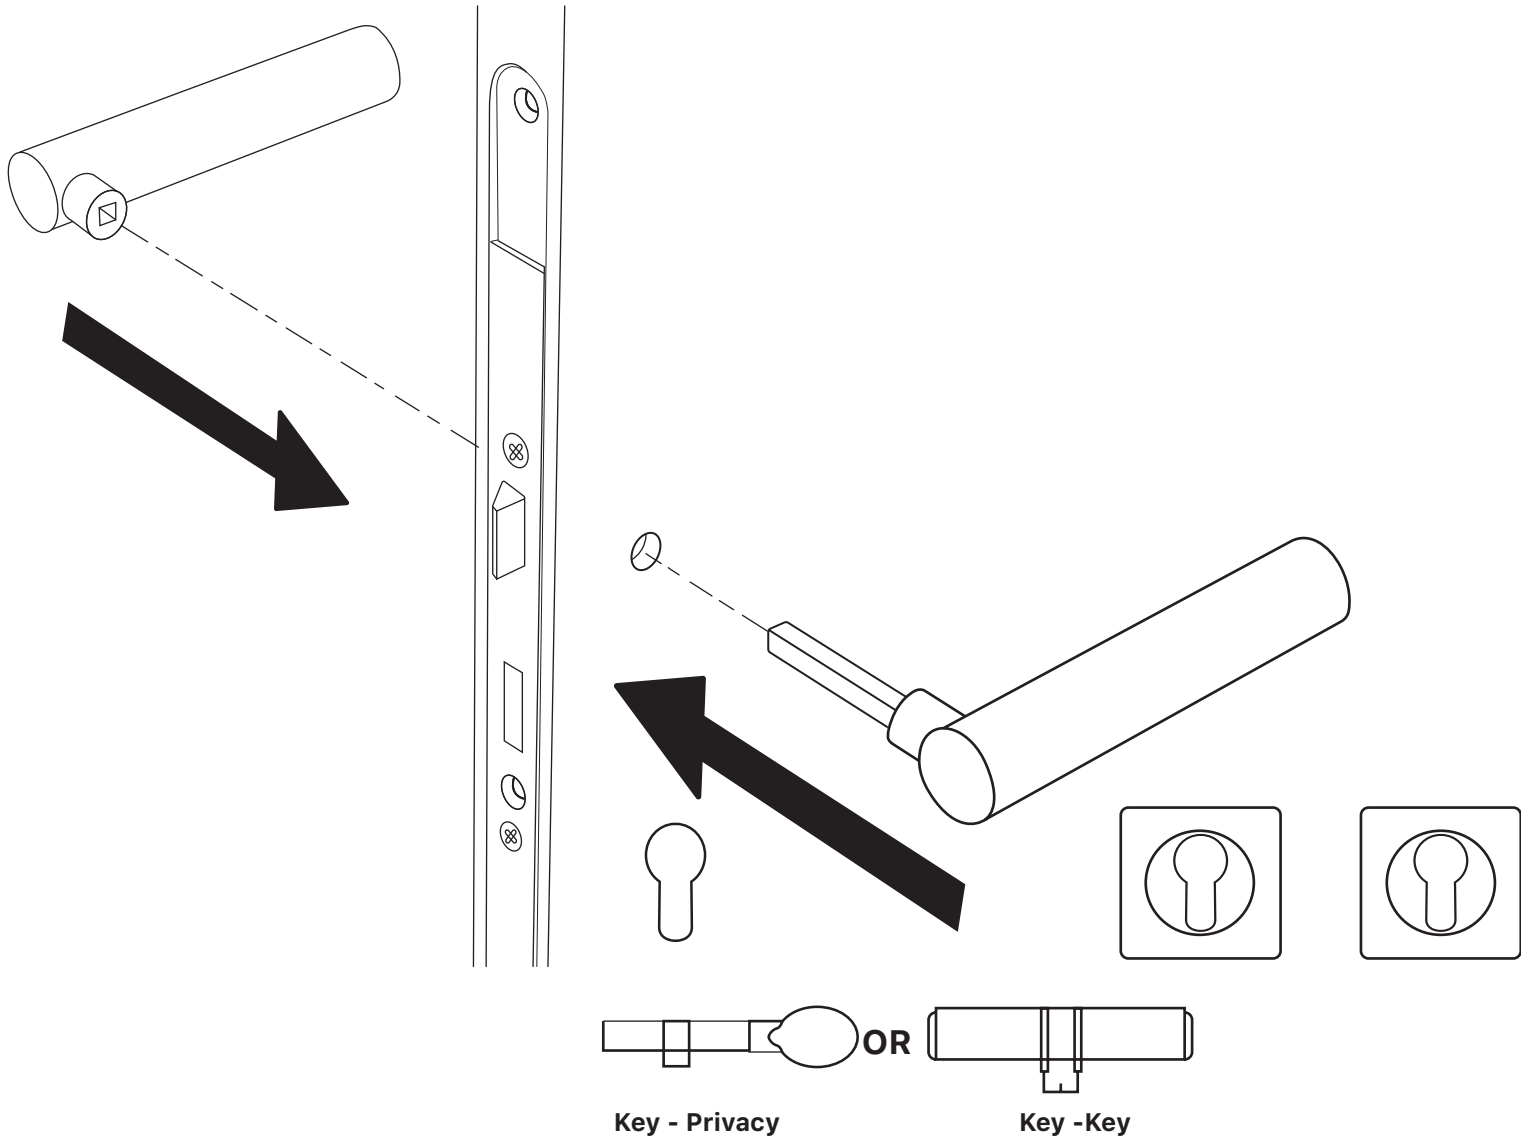

**Congratulations! Your door has already been installed for a long  
time period!  
Enjoy the usage of Valusso Design LLC doors!**



**VALUSSO**

