









CONVENIENCE CONCEPTS

MISSION DESK

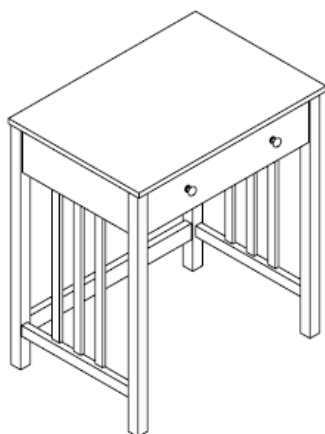







STYLE NO. 090102 MISSION OAK
090102W MISSION WHITE



HARDWARE LIST

CODE	NAME	FIGURE	Q'TY
a	WOOD DOWEL		12PCS
b	CAM BOLT		10PCS
c	CAM LOCK		10PCS
d	WOOD SCREW (1/2"L)		12PCS
e	KNOB BOLT		2PCS
f	FRONT PANEL KNOB		2PCS
g	GLUE		1PC

PARTS LIST

CODE	NAME	FIGURE	Q'TY
A	LEFT SIDE PANEL		1PC
B	RIGHT SIDE PANEL		1PC
C	TOP SUPPORT RAIL		1PC
D	BOTTOM SUPPORT RAIL		1PC
E	BACK PANEL		1PC
F	DESK TOP		1PC
G	KEYBOARD TRAY		1PC
H	FLIP DOWN FRONT PANEL		1PC



Please do not return to the store

. Broken or Missing Parts?

. Need help with Assembly?


If you have any questions just call 1-800-468-6447 or email us at

parts@convenience-concepts.com

STEP 1

Insert Cam Bolts (b) into Side Panels (A) & (B).


HARDWARE NEEDED	
b.	6 PCS

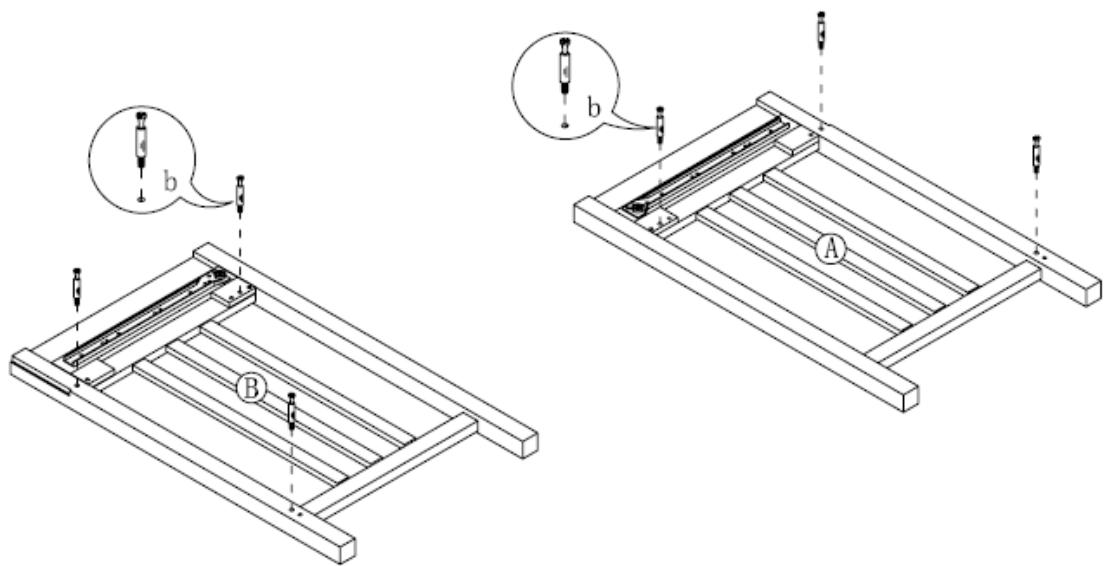

STEP 2

Install Wood Dowels (a) as shown below.
Connect Flip Down Front Panel (H) to Side Panel (B).
Gently tighten cam locks (C).
Repeat process for Top Support Rail (C) and Bottom Support Rail (D).
Fasten Side Panel (A) to unit assembly, gently tighten cam locks .

HARDWARE NEEDED	
a.	8 PCS
c.	6 PCS
g.	1 PC

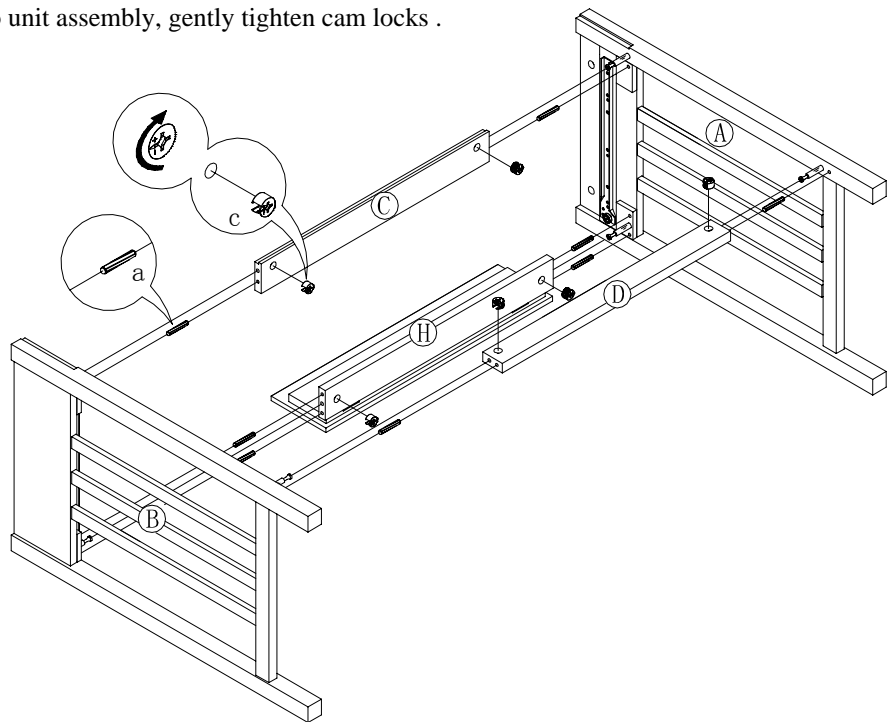


Assembling the unit with cam and wood dowels.

Gently screw cam dowel into the threaded anchor.	Lightly glue one end of the wood dowel and tap halfway into hole. Add 2nd drop of glue to top of dowel.	Connect to second panel by inserting dowels into holes.	Insert cam lock with arrow pointing down. Screw the cam firmly into locked position.

STEP 3

Insert Cam Bolts (b) into Desk Top (F).

HARDWARE NEEDED	
b.	4 PCS

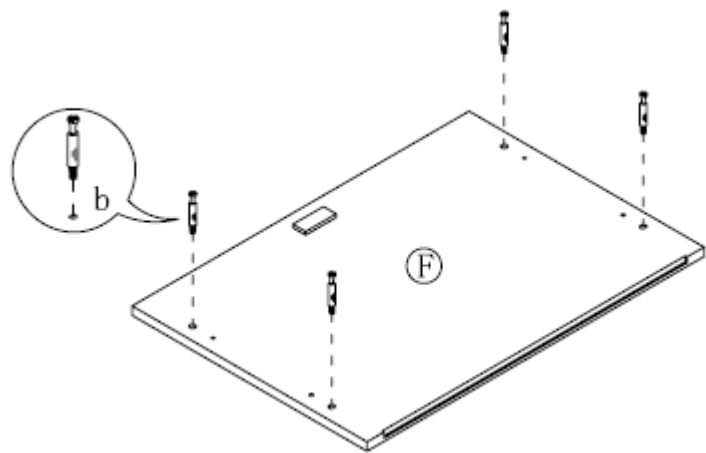


STEP 4





Insert Wood Dowels into assembly (a) as shown below.

Place Desk Top (F) onto unit assembly and gently tighten cam locks (c).

HARDWARE NEEDED	
a.	4 PCS
c.	4 PCS
g.	1 PC

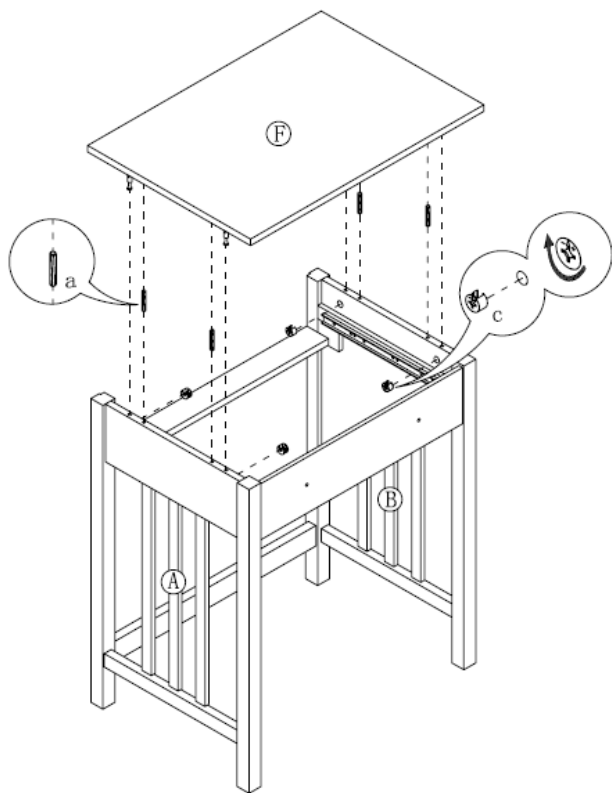


Assembling the unit with cam and wood dowels.

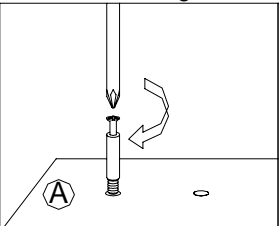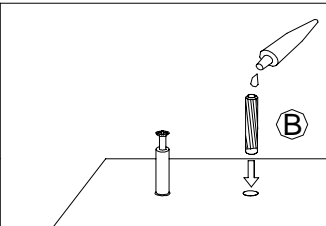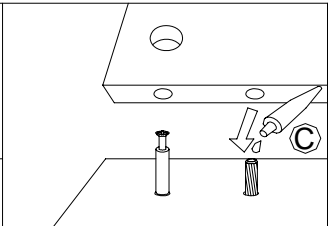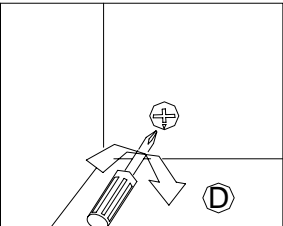			
Gently screw cam dowel into the threaded anchor.	Lightly glue one end of the wood dowel and tap halfway into hole. Add 2nd drop of glue to top of dowel.	Connect to second panel by inserting dowels into holes.	Insert cam lock with arrow pointing down. Screw the cam firmly into locked position.

STEP 5

Install Back Panel (E) to Back of Desk with Wood Screws (d).


HARDWARE NEEDED	
d.	12 PCS

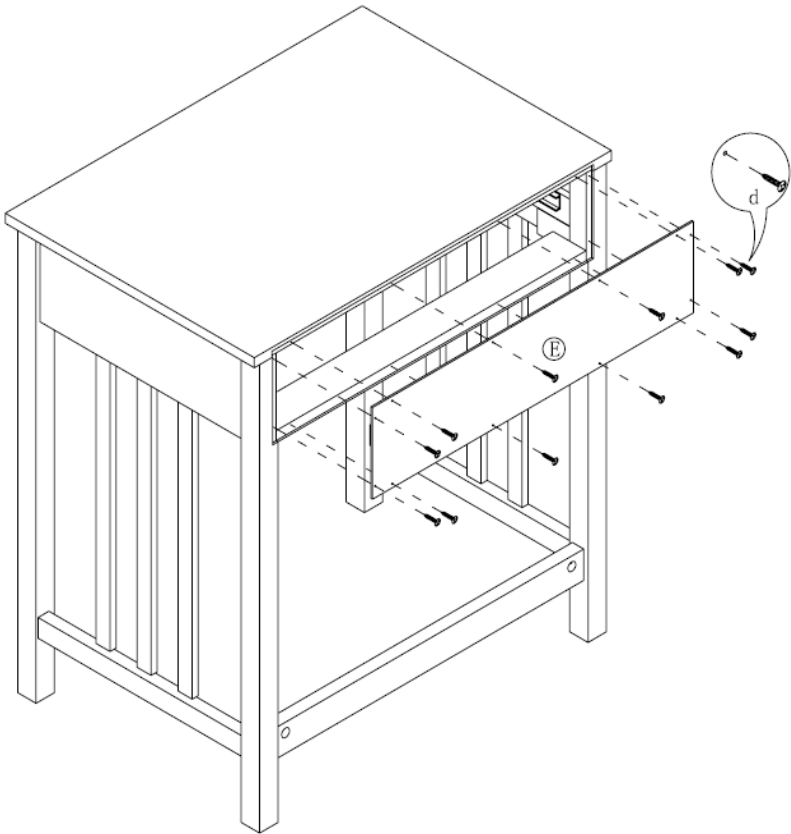

STEP 6

Install Front Panel Knobs (f) to Flip Down Front Panel (H) using the KnobBolts (e).

HARDWARE NEEDED	
e.	2 PCS
f.	2 PCS

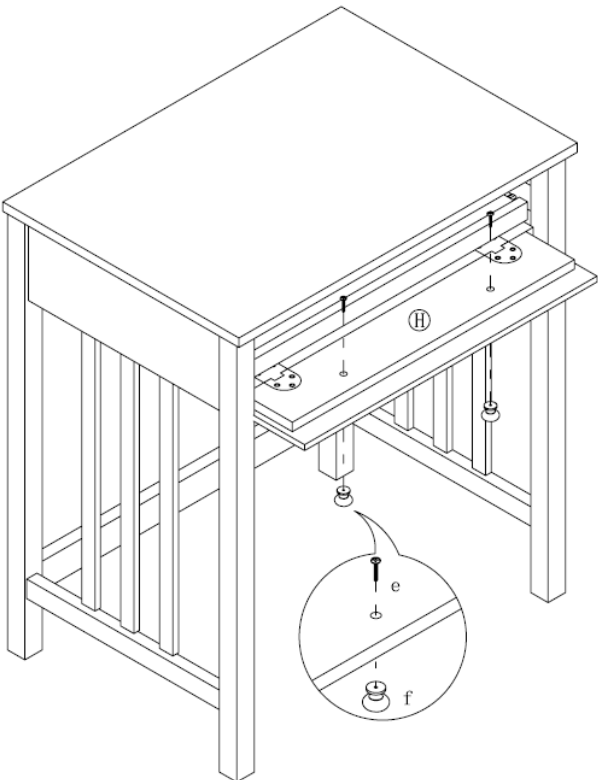

STEP 7

Carefully slide Key Board Tray (G) into Desk and Enjoy!

